

List of components 1:3

1/1	Battery	4/103	Remote Entry (RRX), Keyless vehicle
2/17	Relay, horn	4/109	Glow plug control module
2/22	Relay, climate control system	4/110	Trailer Module (TRM)
2/23	Relay fuel pump	4/111	Additive Dosing Module (ADM)
2/32	Main relay, engine management system	4/112	Control module, gas discharge lamp master, left
2/34	Relay, front fog lights	4/113	Control module, gas discharge lamp slave, right
2/35	Relay, starter motor		
2/80	Relay, reversing lights		
2/82	Relay, heated rear window	6/1	Wiper Motor Module (WMM)
2/142	Relay, pre-heater, fuel filter	6/25	Starter motor
2/159	Relay, infotainment	6/26	Generator
2/182	Relay, headlight washer motor	6/28	Motor, passenger compartment fan
2/193	Relay, comfort functions	6/29	Motor, electric cooling fan
3/1	Ignition switch	6/33	Fuel pump
3/4	Control unit, cruise control (SWS)	6/48	Damper Motor Module (DMM), recirculation
3/9	Contact brake light	6/62	Power rear-view mirror driver's door
3/10	Reversing light contact	6/63	Power rear-view mirror passenger door
3/26	Switch unit, power driver's seat	6/67	Pump, fuel leakage control
3/27	Switch unit, power passenger seat	6/71	Electrical Power Steering Module (EPS)
3/39	Contact clutch pedal, Gasoline	6/95	Damper Motor Module (DMM), temperature, left-hand side
3/39	Contact clutch pedal, Diesel	6/96	Damper Motor Module (DMM), temperature, right-hand side
3/62	Hood alarm contact	6/99	Engine EGR
3/74	Lock unit, driver's door	6/102	Damper Motor Module (DMM), defroster
3/75	Lock unit, passenger door	6/103	Damper Motor Module (DMM), floor/ventilation
3/76	Lock unit, left rear door		
3/77	Lock unit, right rear door		
3/78	Lock unit, trunk lid/tailgate	6/114	Vacuum pump
3/112	Climate Control Module (CCM)	6/117	Interior temperature sensor
3/117	Switch unit, ceiling light	6/120	Engine throttle body
3/126	Driver's Door Module (DDM)		
3/127	Passenger Door Module (PDM)	7/3	Temperature sensor battery
3/128	Left Rear Door Module (LDM)	7/6	Oil pressure switch, 4-cyl.
3/129	Right Rear Door Module (RDM)	7/6	Oil pressure monitor, Turbo
3/155	Program selector, automatic transmission	7/6	Oil pressure monitor, Diesel
3/156	Gear Selector Module (GSM)	7/8	Pressure sensor, climate control system
3/174	Switch, reduced alarm	7/12	Solar sensor, twilight sensor and indicator alarm
3/254	Steering Wheel Module (SWM)		
3/267	Control unit, telematics	7/15	Heated oxygen sensor, front
4/7	Combustion Preheater Module (CPM)	7/16	Sensor, coolant temperature
4/9	Supplemental Restraint System Module (SRS)	7/17	Mass air flow sensor MAF, Turbo
4/16	Brake Control Module (BCM)	7/17	Mass airflow sensor MAF, Diesel
4/28	Transmission Control Module (TCM)	7/21	Camshaft position sensor
4/31	Fan control module	7/24	Front knock sensor, 4-cyl.
4/46.1	Engine Control Module (ECM), 5-cyl.	7/24	Knock sensor front, Turbo
4/46.1	Engine Control Module (ECM), 5-cyl. Turbo	7/25	Impulse sensor, 4-cyl.
4/46.2	Engine Control Module (ECM), DW10	7/25	Impulse sensor, Turbo
4/46.3	Engine Control Module (ECM), 4-cyl. 1.6l	7/25	Impulse sensor, Diesel
4/46.4	Engine Control Module (ECM), DV6	7/41	Temperature sensor evaporator
4/46.5	Engine Control Module (ECM), 4-cyl. 1.8l.	7/51	Accelerator pedal sensor
4/56	Central Electronic Module (CEM)	7/61	Sensor input speed
4/71	Cooling fan control module	7/62	Sensor output speed
4/82	Differential Electronic Module (DEM)	7/71	Sensor boost pressure
4/83	Control module fuel pump	7/82	Heated oxygen sensor, rear
4/86	Control module, Parking Assistance Module (PAM)	7/86	Air temperature sensor, diesel
4/93	Keyless Vehicle Module (KVM)	7/122	Mass movement sensor, front
4/102	Steering Column Lock Module (SCL)	7/123	Sensor clutch pedal, Gasoline
4/103	Remote Entry (RRX)	7/123	Sensor clutch pedal, Diesel
		7/124	Sensor brake pedal
		7/149	Rain Sensor Module (RSM)
		7/154	Sensor fuel temperature
		7/156	Pressure and temperature sensor fuel, Turbo

List of components 2:3

7/158	Mass movement sensor rear	16/49	Traffic Message Channel Module (TMC)
7/159	Air Quality Sensor (AQS)	16/55	Treble speaker, driver's door
7/162	Pressure sensor, fuel line	16/60	Phone Module (PHM)
7/163	Camshaft position sensor 2	16/62	Hand unit, cellular phone
7/164	Body Sensor Cluster (BSC)	16/64	Antenna, cellular phone
7/165	Pressure and temperature sensor, intake manifold	16/98	Microphone
7/172	Position sensor camshaft, intake side	16/105	Audio Module (AUD)
7/173	Position sensor camshaft, exhaust side	16/107	Media Player Module (MPM)
7/174	Differential pressure sensor, particle filter	16/108	Multimedia Module (MMM)
7/182	Remote control IR sensor, RTI	16/136	Treble speaker, left rear door
7/190	Temperature sensor, exhaust gases upstream of particle filter	16/137	Treble speaker, right rear door
7/191	Temperature sensor, exhaust gases downstream of particle filter	16/138	Rear window antenna, right
7/192	Water detection sensor	16/139	Global Positioning System Module (GPS)
		16/140	SIM card reader
8/3	Electromagnetic clutch, climate control system	17/13	Data link connector
8/6-10	Injection valves	18/4	Contact reel
8/18	EVAP valve	20/3-7	Spark plug and ignition coil
8/19	Solenoid, variable valve timing, intake	20/17	Transformer, ignition coils
8/28	Turbocharger control valve	20/22-25	Glow plug
8/45	Water detection sensor	31/3	Ground connection, Left strut tower
8/81	Solenoid, variable valve timing outlet	31/4	Ground connection, Engine
8/82	Solenoid, variable turbo geometry	31/10	Ground connection, A-pillar passenger side
8/84	Switch, vacuum pump	31/11	Ground connection, Left side rear, S40
8/111	Water detection sensor	31/11	Ground connection, Left side rear, V50
8/119	Pressure monitor, climate control system	31/12	Ground connection, Right side rear, S40
8/120	EGR valve	31/12	Ground connection, Right side rear, V50
8/120	EGR valve, Diesel	31/52	Ground connection, Left strut tower
8/122	Bypass valve, intercooler	31/67	Ground connection, Right B-pillar
8/127	Pressure switch, climate control system	31/83	Ground connection, A-pillar driver side
9/32	PTC resistor, oil trap	31/84	Ground connection, A-pillar passenger side
9/38	Electrically heated fuel filter	31/88	Ground connection, Engine
10/17	Lamp housing, rear right	31/89	Ground connection, Engine
10/18	Lamp housing, rear left	31/110	Ground connection, Right strut tower
10/48	Reversing light, right	31/114	Ground connection, Left strut tower
10/55	Reversing light, left	31/115	Ground connection, Left A-pillar
15/31	Distribution box in engine compartment	31/116	Ground connection, Right A-pillar
16/1	Infotainment Control Module (ICM)	64/40	Connector
16/3	Speaker, passenger door	64/41	Connector
16/4	Speaker, driver's door	64/43	Connector
16/5	Speaker, right rear door	64/45	Connector
16/6	Speaker, left rear door	64/47	Connector
16/9	Window antenna	64/48	Connector S40
16/16	Window antenna amplifier	64/48	Connector V50
16/26	Speaker, dashboard middle	64/50	Connector
16/26	Speaker, dashboard middle, RTI	64/51	Connector
16/35	Siren (SCM), S40	64/81	Connector
16/35	Siren (SCM), V50	64/90	Connector
16/46	RTI Display	64/111	Connector
16/47	GPS antenna RTI	64/112	Connector
		64/113	Connector
		64/322	Connector
		64/545	Connector
		64/600	Connector
		64/977A	Connector
		64/978	Connector

List of components 3:3

F/no.	Fuse, engine compartment	R/no.	Relay, engine compartment
F/no.	Fuse, passenger compartment	10X/17	Connector interface, original car
FH/no.	Fuse in holder	10X/18	Connector interface, original car
PF/no.	Main fuse by battery	16X/105	Connector interface, original car
R/no.	Relay, soldered	17X/19	Connector interface, original car
R/no.	Relay, passenger compartment	64X/12	Connector interface, original car
		64X/322	Connector interface, original car