

2004 ELECTRICAL


Fuses & Circuit Breakers - TSX

IDENTIFICATION

CAUTION: When battery is disconnected, vehicle computer and memory systems may lose memory data. Driveability problems may exist until computer systems have completed a relearn cycle. See appropriate **COMPUTER RELEARN PROCEDURES** articles in **GENERAL INFORMATION** before disconnecting battery.


DRIVER'S UNDER-DASH FUSE/RELAY BOX

NOTE: Driver's under-dash fuse/relay box is located under driver's side of instrument panel. See Fig. 1 .

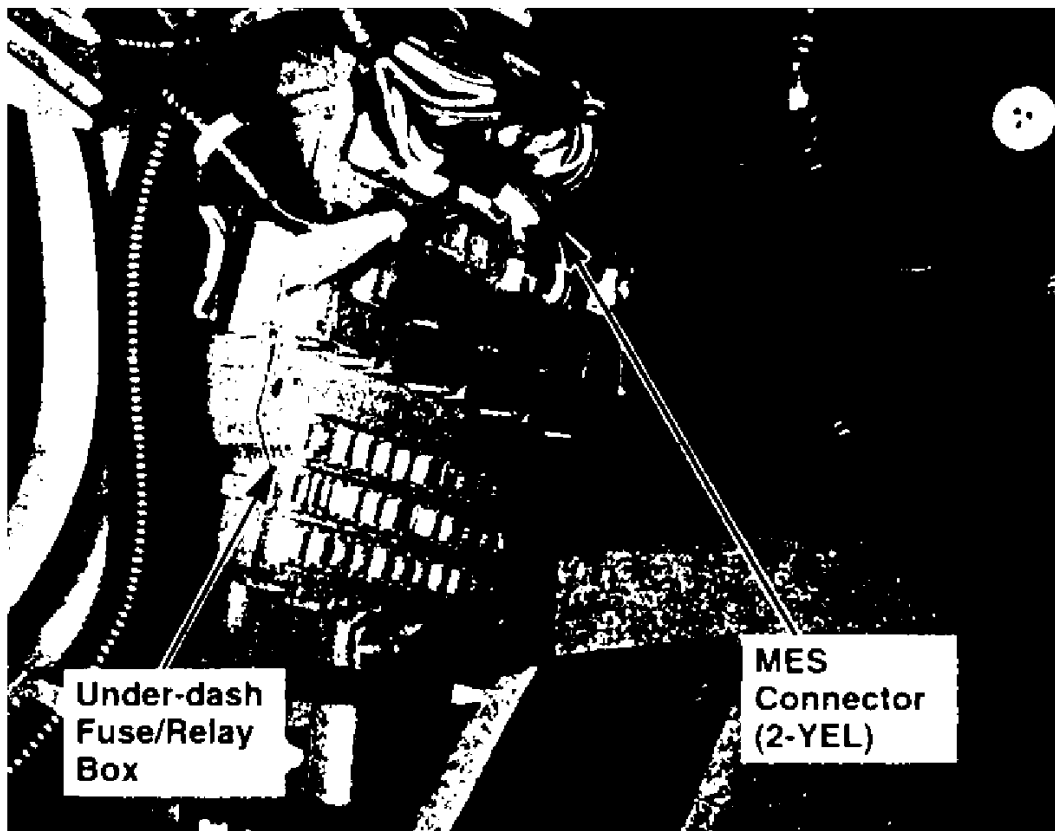

G00302659

Fig. 1: Locating Driver's Under-Dash Fuse/Relay Box
Courtesy of AMERICAN HONDA MOTOR CO., INC.

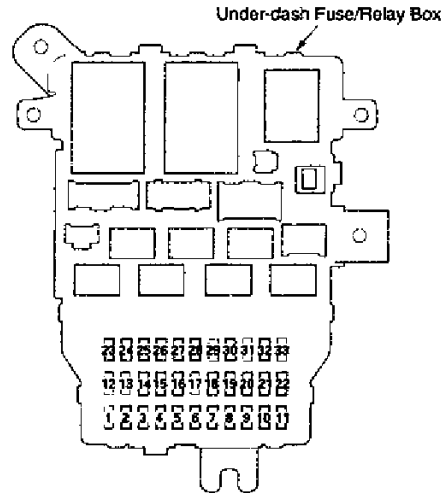

Fuse Number	Fuse Name	Amps	Component or Circuit Protected
1	D8W	15A	Throttle actuator control module relay
2	IG COIL	15A	Ignition coil relay
3	DAY LT	10A	DRL relay (Canada), MICU
4	LAF	10A	A/F sensor relay
5	AUDIO AMP	20A	Stereo amplifier
6	INTR LIGHT	10A	Ambient light, Audio Unit, Ceiling light, Driver's vanity mirror light, Driver's door courtesy light, Front passenger's vanity mirror light, Front passenger's door courtesy light, Individual map lights, Trunk light
7	BACK UP	10A	Gauge control module, Immobilizer control unit-receiver, MICU, Navigation display unit (Navigation), Navigation unit (Navigation), Wiper/washer switch
8	DOOR LOCK	20A	MICU
9	FR ACC SOCKET	15A	Accessory power socket relay
10	IG OPDS	7.5A	OPDS unit, SRS unit
11	IG WIPER	30A	Windshield wiper motor
12	—	—	Not used
13	—	—	Not used
14	DR P/SEAT (SLIDE)	20A	Driver's power seat adjustment switch
15	H/SEAT	20A	Seat heater relay
16	DR P/SEAT (REC)	20A	Driver's power seat adjustment switch
17	—	—	Not used
18	IG ACG	15A	Alternator, Brake pedal position switch, CMP Sensor A, ELD unit, Engine mount control solenoid valve, EVAP canister purge valve, EVAP canister vent shut valve, Reverse lockout solenoid (M/T), Secondary HO2S, VSA modulator-control unit

G00302660

Fig. 2: Identifying Driver's Under-Dash Fuse/Relay Box Components (1 Of 2)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

2004 Acura TSX

2004 ELECTRICAL Fuses & Circuit Breakers - TSX


Fuse Number	Fuse Name	Amps	Component or Circuit Protected
19	IG FUEL PUMP	15A	ECM/PCM, Immobilizer control unit-receiver, PGM-FI main relay 2
20	IG WASHER	7.5A	Windshield washer motor
21	IG METER	7.5A	Automatic dimming inside mirror, Back-up light switch (M/T), Gauge control module, MICU, Power window master switch, Relay module, Wiper/washer switch
22	IG SRS	10A	SRS unit
23	IGP	7.5A	A/F sensor relay
24	P/W RR L	20A	Left rear power window switch
25	P/W RR R	20A	Right rear power window switch
26	P/W AS	20A	Front passenger's power window switch
27	P/W DR	20A	Power window master switch
28	SUNROOF	20A	Moonroof close relay, Moonroof open relay
29	—	—	Not used
30	IG HAC	7.5A	A/C compressor clutch relay, A/C condenser fan relay, Blower motor relay, Climate control unit, Power mirror switch, Radiator fan relay, Rear window defogger relay, Recirculation control motor, Seat heater relay
31	—	—	Not used
32	ACC	7.5A	Accessory power socket relay, Audio unit, MICU, Navigation display unit (Navigation), Navigation unit (Navigation), Shift lock solenoid (A/T), Stereo Amplifier
33	HAC OP	7.5A	Option Connector

G00302661

Fig. 3: Identifying Driver's Under-Dash Fuse/Relay Box Components (2 Of 2)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.


UNDER-HOOD FUSE/RELAY BOX

NOTE: Under-hood fuse/relay box is located in right side of engine compartment. See Fig. 4 .

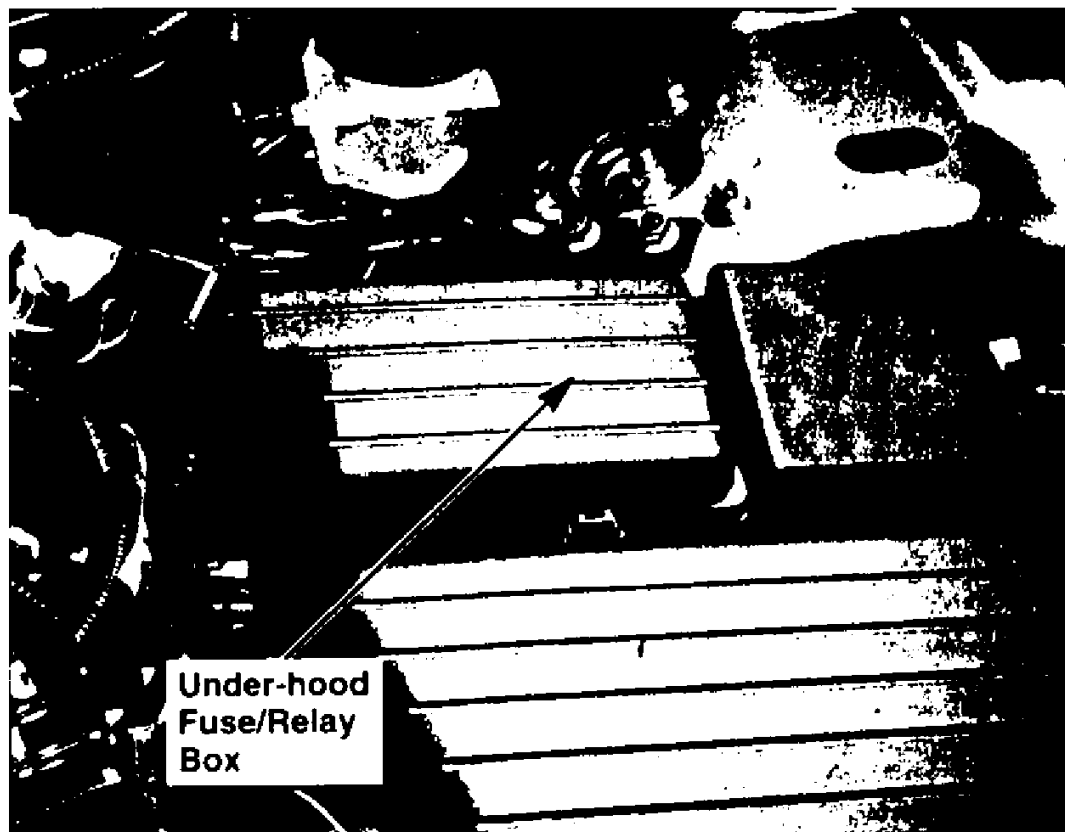

G00302662

Fig. 4: Locating Under-Hood Fuse/Relay Box
Courtesy of AMERICAN HONDA MOTOR CO., INC.

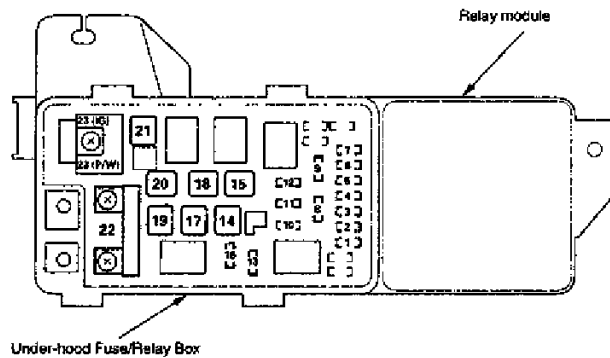

Fuse Number	Fuse Name	Amps	Component or Circuit Protected
1	L-H/L LO	15A	Left low beam headlight
2	RR DEFROSTER COIL	30A	Relay module
3	L-H/L HI	10A	Left high beam headlight
4	SMALL LIGHT	15A	Taillight relay
5	R-H/L HI	10A	Right high beam headlight
6	R-H/L LO	15A	Right low beam headlight
7	BACK UP	7.5A	Relay module
8	FI ECU	15A	PGM-FI main relay 1, DLC
9	CONDENSER FAN	20A	A/C compressor clutch relay, Condenser fan relay
10	FR FOG LIGHT	20A	Not used
11	COOLING FAN	20A	Radiator fan relay
12	—	—	Not used
13	HORN, STOP	20A	Brake pedal position switch, Horn relay, Ignition key switch/key light
14	RR DEFROSTER	40A	Rear window defogger relay
15	BACK UP, ACC	40A	Fuse 7 in under-hood fuse/relay box, Fuses 5, 6, 7, 8, and 9 in under-dash fuse/relay box
16	HAZARD	15A	Hazard warning switch, Turn signal/hazard relay
17	VSA MOTOR	30A	VSA modulator-control unit
18	VSA	40A	VSA modulator-control unit
19	OPTION	40A	Fuses 1, 2, 3, and 4 in under-dash fuse/relay box
20	OPTION	40A	Fuses 12, 13, 14, 15, 16, and 17 in under-dash fuse/relay box
21	HEATER MOTOR	40A	Blower motor relay
22	—	—	Not used
22	BATTERY	100A	Battery, Power distribution
23	B IG1 MAIN	50A	Fuse 33 in under-dash fuse/relay box, Ignition switch
23	POWER WINDOW	50A	Fuses 27 and 28 in under-dash fuse/relay box, Power window relay

G00302683

Fig. 5: Identifying Under-Hood Fuse/Relay Box Components
 Courtesy of AMERICAN HONDA MOTOR CO., INC.