

ELECTRICAL WIRING ROUTING


General Information

This section introduces location information of vehicle wire harness and electrical components in the form of graphic. Each part of the whole vehicle wire harness is given a specific color for distinguishing different wire harness easily. However, the color does not indicate the real color of wire harness. The whole vehicle wire harnesses are divided into the following parts and listed in the table below:

Wire Harness	See Page
Engine Wire Harness (For 2.0 Model)	08-3
Engine Wire Harness (For E4T15 Model)	08-5
Engine Wire Harness (For E4T15B Model)	08-7
Front Bumper Wire Harness	08-9
Instrument Panel Wire Harness	08-11
Body Wire Harness (For 2.0 Model)	08-14
Body Wire Harness (For 1.5TCI Model)	08-18
Rear Bumper Wire Harness	08-22
DCT Transmission Wiring Harness	08-23
Front Left Door Wire Harness	08-24
Front Right Door Wire Harness	08-25
Rear Left Door Wire Harness	08-26
Rear Right Door Wire Harness	08-27
Back Door Wire Harness	08-28
Electrical A/C System Wire Harness	08-29
Automatic A/C System Wire Harness	08-30
Battery/Ground Wire Harness	08-31


Vehicle Wire Harness Layout

Entire Vehicle Wire Harness Layout

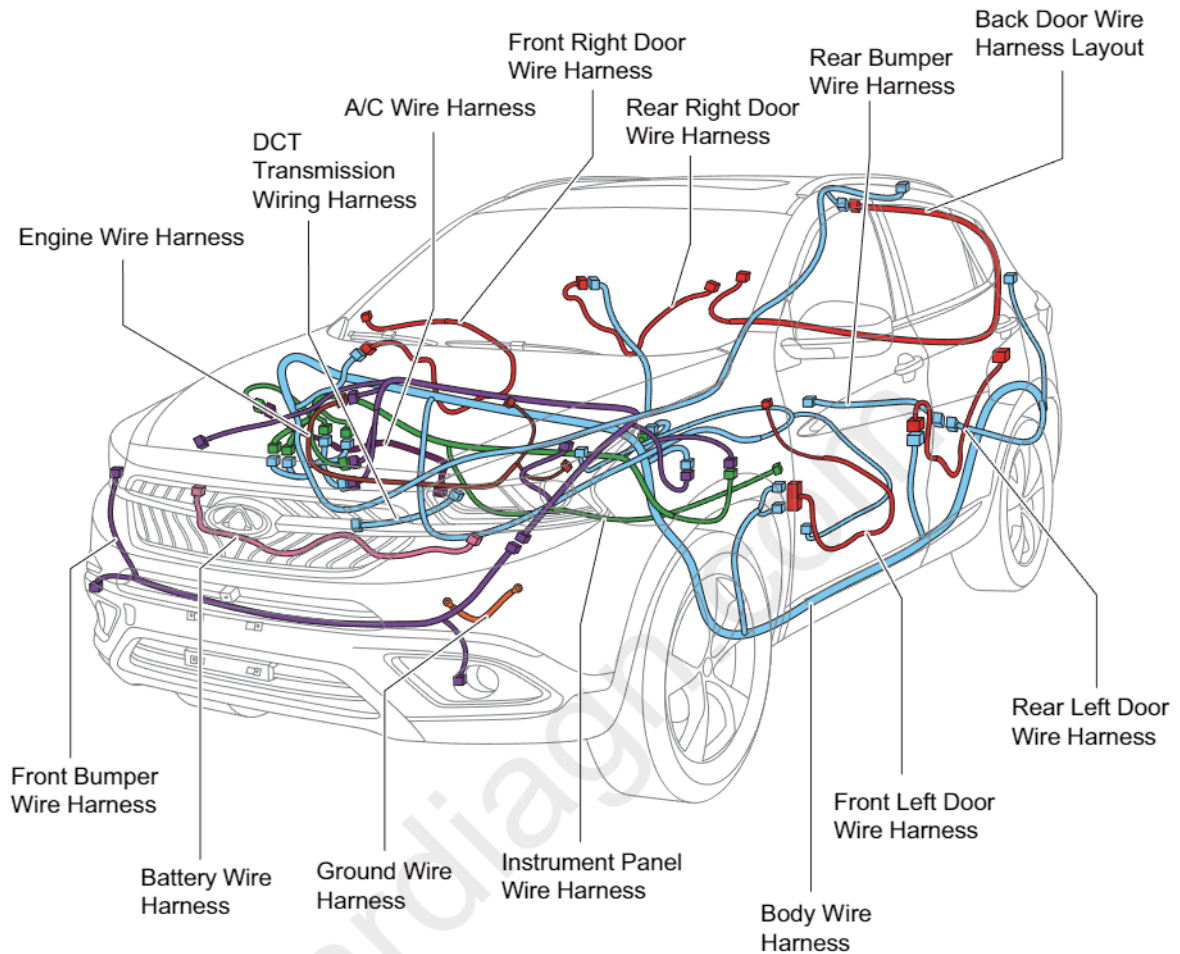

ET15080010

Engine Wire Harness (For 2.0 Model)

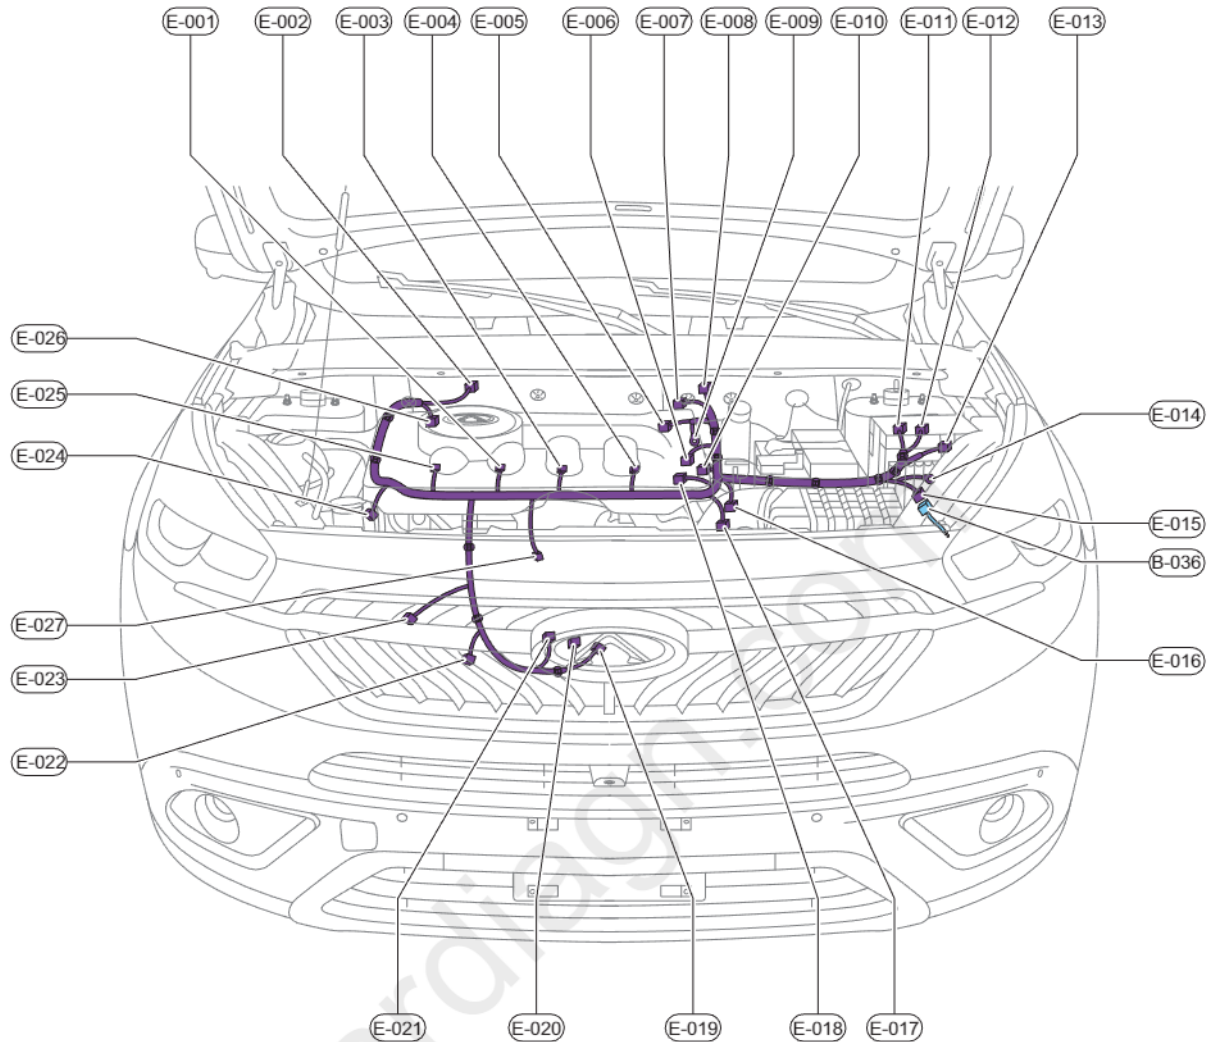


ET15080021

08

Connector Code	Connector Color/Pin	Connector Name
E-001	B/2	Injector 2
E-002	B/4	Downstream Oxygen Sensor
E-003	B/2	Injector 3
E-004	B/2	Injector 4
E-005	B/3	Camshaft Position Sensor (Exhaust)
E-006	B/2	Ignition Coil
E-007	B/3	Engine Speed Sensor
E-008	B/4	Upstream Oxygen Sensor
E-009	-	Ground G401
E-010	B/2	Coolant Temperature Sensor
E-011	W/16	Engine Compartment Fuse and Relay Box (B)

Connector Code	Connector Color/Pin	Connector Name
E-012	W/18	Engine Compartment Fuse and Relay Box (A)
E-013	B/48	ECU-A
E-014	-	Ground G402
E-015	B/8	to Body Wire Harness Connector B-036
E-016	B/3	Knock Sensor
E-017	B/6	Electronic Throttle
E-018	B/3	Camshaft Position Sensor (Intake)
E-019	B/1	Oil Pressure Switch
E-020	B/1	Starter Control
E-021	B/2	A/C Compressor
E-022	B/4	Intake Pressure/Temperature Sensor
E-023	B/3	Alternator
E-024	B/2	Variable Camshaft Timing (Intake)
E-025	B/2	Injector 1
E-026	B/2	Variable Camshaft Timing (Exhaust)
E-027	B/2	Canister Solenoid Valve

Engine Wire Harness (For E4T15 Model)

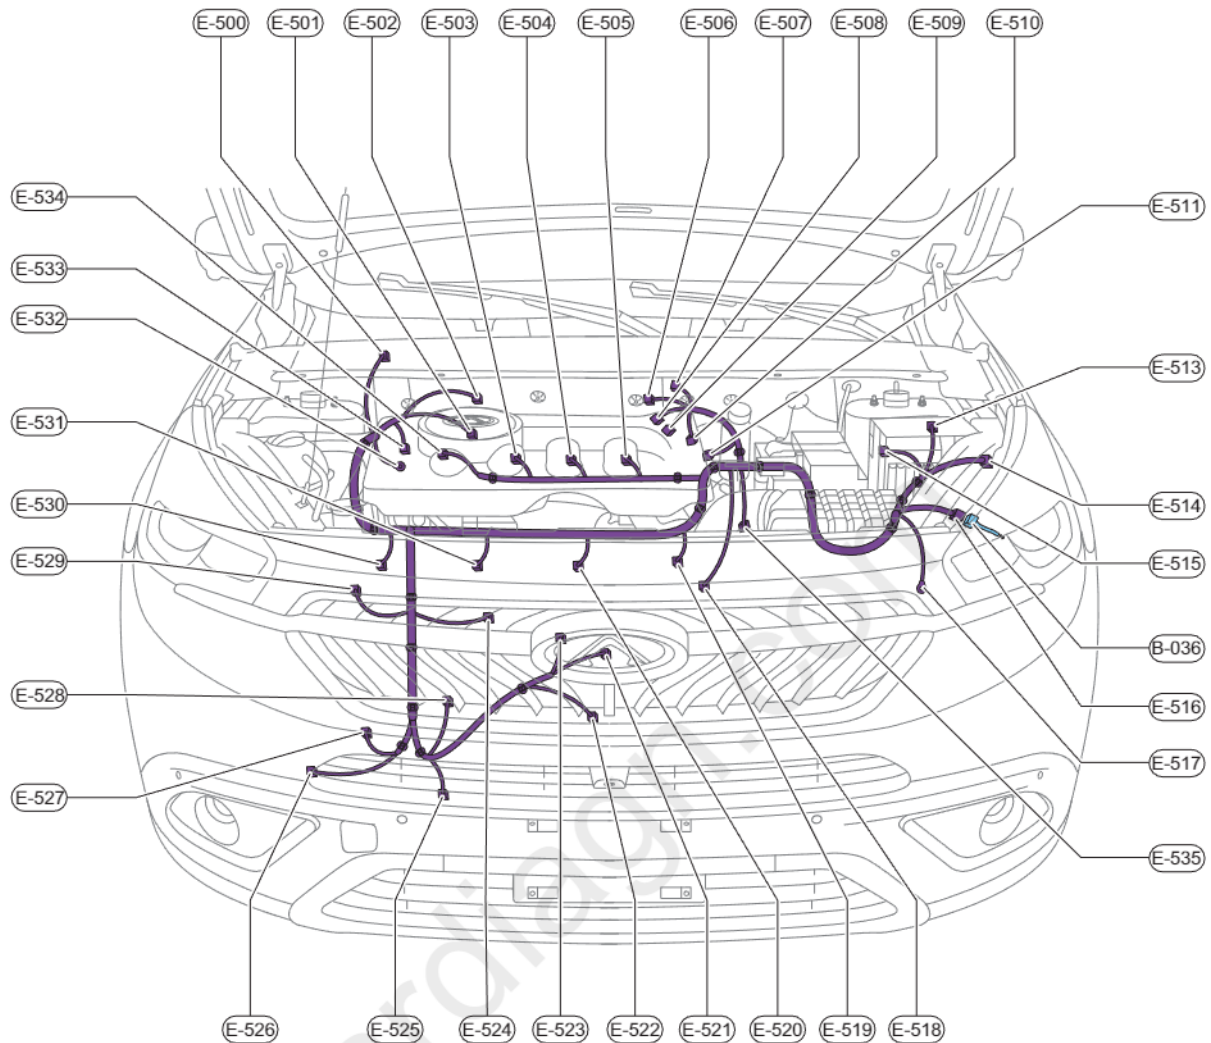


ET15080020

08

Connector Code	Connector Color/Pin	Connector Name
E-500	B/4	Upstream Oxygen Sensor
E-501	B/4	Downstream Oxygen Sensor
E-502	B/1	Oil Pressure Switch
E-503	B/3	Ignition Coil 2
E-504	B/3	Ignition Coil 3
E-505	B/3	Ignition Coil 4
E-506	B/2	Engine Speed Sensor
E-507	B/2	ERCV Relief Valve
E-508	B/2	Engine Crankcase Ventilation Heating
E-509	B/3	Camshaft Position Sensor (Exhaust)
E-510	B/2	Exhaust Gas Control Valve

Connector Code	Connector Color/Pin	Connector Name
E-511	B/2	Coolant Temperature Sensor
E-513	W/16	Engine Compartment Fuse and Relay Box (B)
E-514	B/48	ECU-A
E-515	W/18	Engine Compartment Fuse and Relay Box (A)
E-516	B/8	to Body Wire Harness Connector B-036
E-517	-	Ground G402
E-518	B/2	Canister Solenoid Valve
E-519	B/2	Injector 4
E-520	B/2	Injector 3
E-521	B/6	Electronic Throttle
E-522	B/2	Electrical Water Pump
E-523	B/1	Starter Control
E-524	B/4	Intake Pressure/Temperature Sensor
E-525	B/2	Vacuum Pump
E-526	B/2	A/C Compressor
E-527	B/3	Alternator
E-528	B/2	Knock Sensor
E-529	B/2	Variable Camshaft Timing (Intake)
E-530	B/2	Injector 1
E-531	B/2	Injector 2
E-532	-	Ground G401
E-533	B/2	Variable Camshaft Timing (Exhaust)
E-534	B/3	Ignition Coil 1
E-535	B/3	Camshaft Position Sensor (Intake)

Engine Wire Harness (For E4T15B Model)

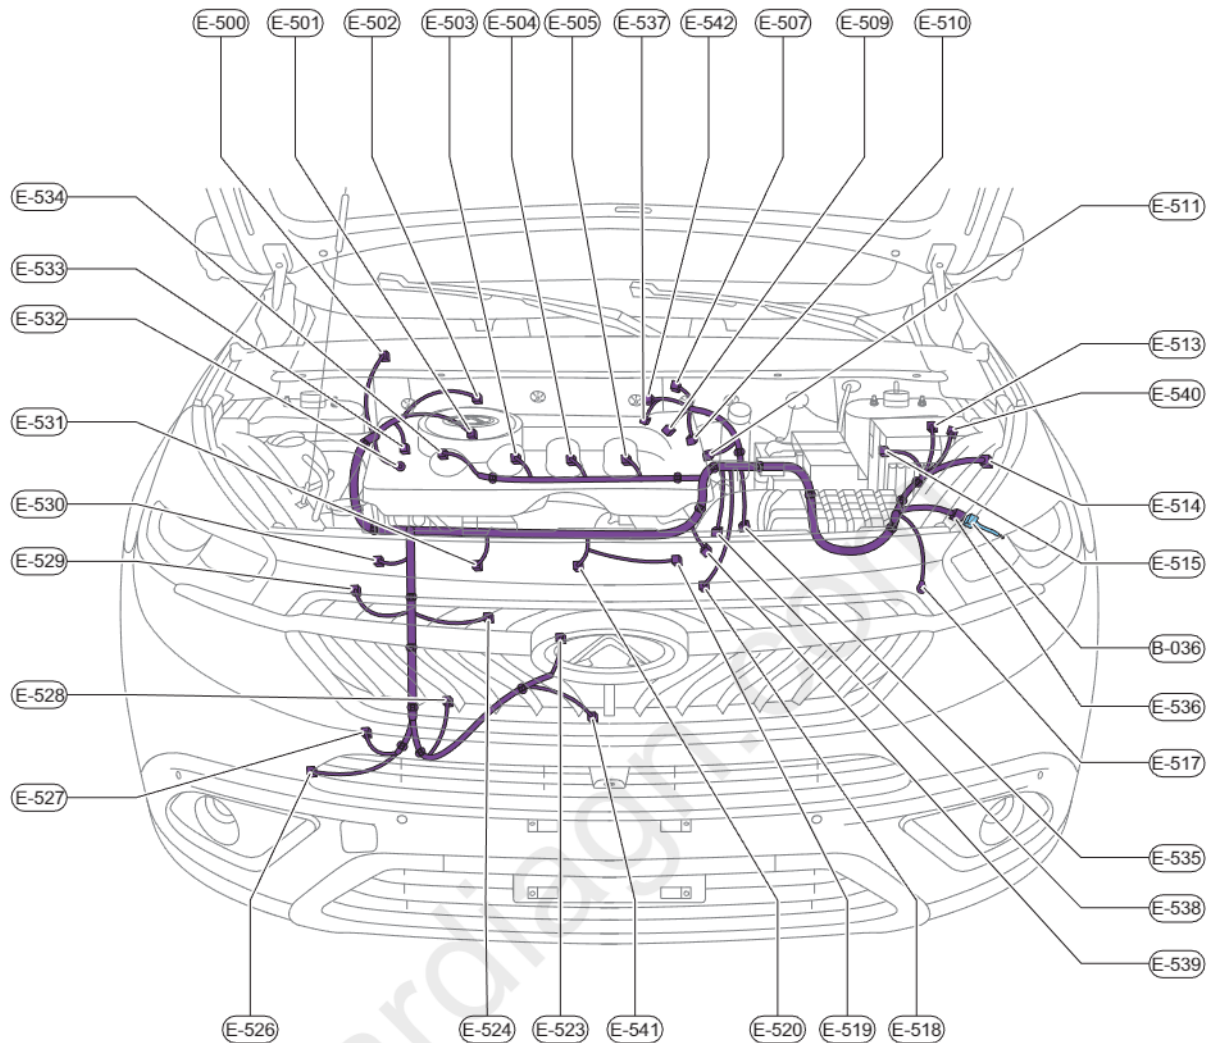


ET15080025

08

Connector Code	Connector Color/Pin	Connector Name
E-500	B/4	Upstream Oxygen Sensor
E-501	B/4	Downstream Oxygen Sensor
E-502	B/1	Oil Pressure Switch
E-503	B/3	Ignition Coil 2
E-504	B/3	Ignition Coil 3
E-505	B/3	Ignition Coil 4
E-507	B/2	ERCV Relief Valve
E-509	B/3	Camshaft Position Sensor (Exhaust)
E-510	B/2	Exhaust Gas Control Valve
E-511	B/2	Coolant Temperature Sensor
E-513	W/16	Engine Compartment Fuse and Relay Box (B)

Connector Code	Connector Color/Pin	Connector Name
E-514	B/48	ECU-A
E-515	W/18	Engine Compartment Fuse and Relay Box (A)
E-517	-	Ground G402
E-518	B/2	Canister Solenoid Valve
E-519	B/2	Injector 4
E-520	B/2	Injector 3
E-523	B/1	Starter Control
E-524	B/4	Intake Pressure/Temperature Sensor
E-526	B/2	A/C Compressor
E-527	B/3	Alternator
E-528	B/2	Knock Sensor
E-529	B/2	Variable Camshaft Timing (Intake)
E-530	B/2	Injector 1
E-531	B/2	Injector 2
E-532	-	Ground G401
E-533	B/2	Variable Camshaft Timing (Exhaust)
E-534	B/3	Ignition Coil 1
E-535	B/3	Camshaft Position Sensor (Intake)
E-536	B/20	to Body Wire Harness Connector B-100
E-537	B/2	Electronic Thermostat
E-538	B/6	Electronic Throttle
E-539	B/4	Boost Pressure Sensor
E-540	B/2	Engine Compartment Fuse and Relay Box (F)
E-541	B/4	Electrical Water Pump
E-542	B/3	Engine Speed Sensor

Front Bumper Wire Harness

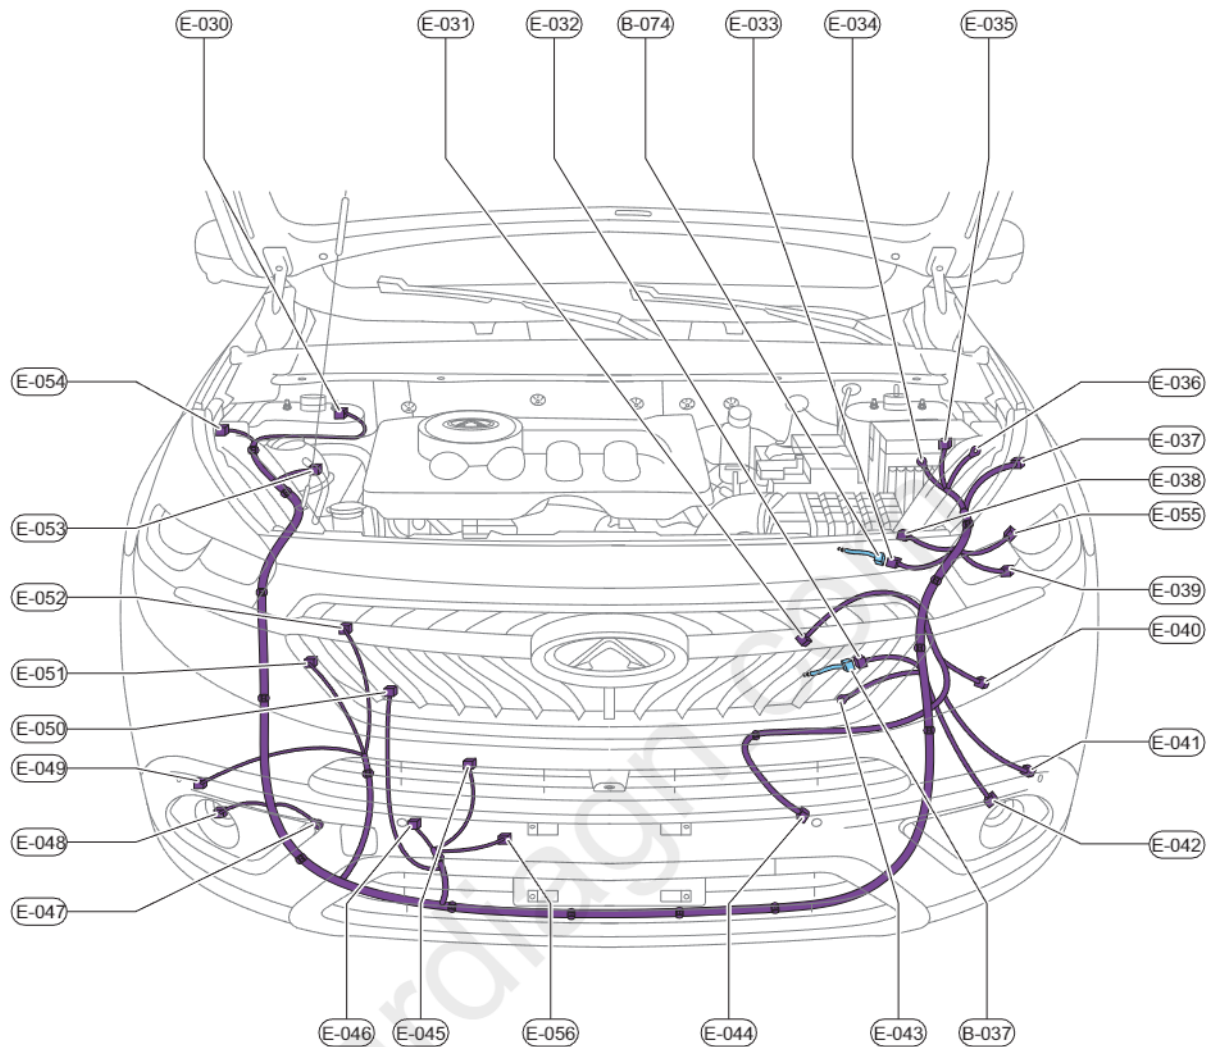


ET15080031

08

Connector Code	Connector Color/Pin	Connector Name
E-030	B/2	Front Right Wheel Speed Sensor
E-031	B/3	Cooling Fan Motor
E-032	B/20	to Body Wire Harness Connector B-037
E-033	B/20	to Body Wire Harness Connector B-074
E-034	-	High-speed Fan Power Supply
E-035	W/14	Engine Compartment Fuse and Relay Box (C)
E-036	-	Low-speed Fan Power Supply
E-037	B/3	Front Left Height Adjustment
E-038	B/10	Front Left Headlight
E-039	Gr /2	High Horn
E-040	B/4	Front Camera

Connector Code	Connector Color/Pin	Connector Name
E-041	B/3	Front Left Radar Sensor
E-042	B/2	Front Left Fog Light
E-043	-	Ground G102
E-044	B/3	Front Left Middle Radar Sensor
E-045	Gr /2	Outside Atmo Sphere Temperature Sensor
E-046	B/3	Front Right Middle Radar Sensor
E-047	-	Ground G101
E-048	B/2	Front Right Fog Light
E-049	B/3	Front Right Radar Sensor
E-050	Gr /4	High/Low Pressure Switch
E-051	Gr /2	Washer Motor
E-052	Gr /2	Low Horn
E-053	B/10	Front Right Headlight
E-054	B/3	Front Right Height Adjustment
E-055	B/3	Absolute Environment Pressure Sensor (1.5TCI)
E-056	B/4	Boost Pressure Sensor (1.5TCI)

Instrument Panel Wire Harness

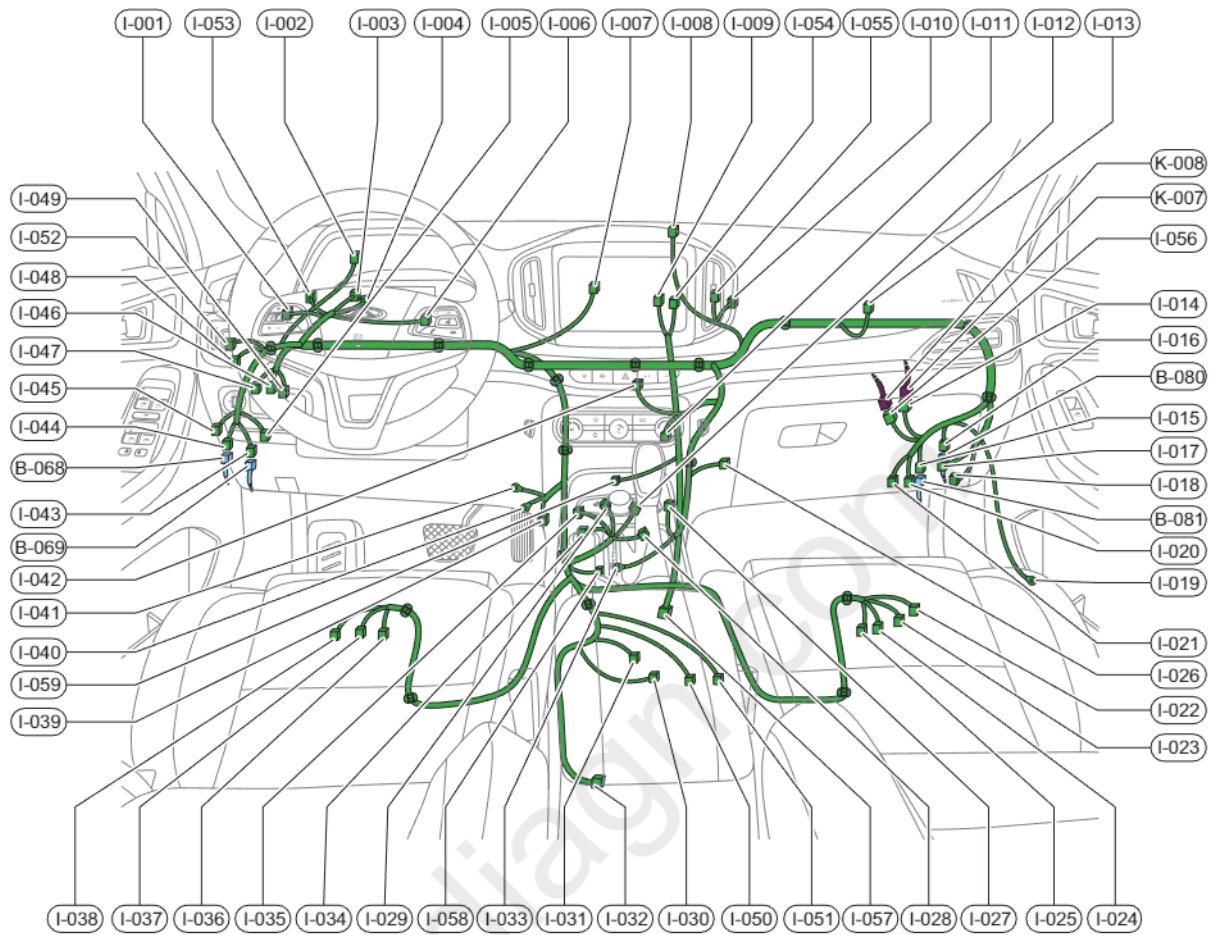

ET15080070


08

Connector Code	Connector Color/Pin	Connector Name
I-001	B/10	Combination Light Switch
I-002	L/32	Instrument Cluster
I-003	B/6	Steering Angle Sensor
I-004	W/16	Clock Spring
I-005	B/10	EPS
I-006	B/10	Wiper Switch
I-007	B/40	Audio
I-008	B/4	Solar Sensor
I-009	W/1	GPS Antenna
I-010	P/1	Radio Antenna
I-011	B/16	Automatic A/C Control Panel

Connector Code	Connector Color/Pin	Connector Name
I-012	W/8	Engine Switch
I-013	G/2	Front Passenger Airbag
I-014	Lg/22	to A/C Wire Harness Connector K-007
I-015	W/14	to Body Wire Harness Connector B-081
I-016	W/10	to Body Wire Harness Connector B-080
I-017	B/16	PEPS (J2)
I-018	B/10	PEPS (J4)
I-019	-	Ground G501
I-020	W/1	Radio Antenna
I-021	P/1	GPS Antenna
I-022	Y/2	Right Front Side Airbag
I-023	W/2	Front Passenger Seat Belt Reminder Switch
I-024	W/6	Front Passenger Seat Heater
I-025	B/2	Front Passenger Seat Belt Switch
I-026	B/2	Backup Power Supply
I-027	Br/50	SRS Control Module
I-028	W/2	CVT Gear Backlight Indicator (CVT)
I-029	O/6	Passenger Seat Heater Switch
I-030	W/1	Parking Brake Switch
I-031	W/2	Cigarette Lighter
I-032	B/2	Low Frequency Antenna 2
I-033	-	Ground G504
I-034	W/2	Atmosphere Light
I-035	B/6	Driver Seat Heater Switch
I-036	B/2	Driver Seat Belt Switch
I-037	W/6	Driver Seat Heater
I-038	Y/2	Left Front Side Airbag
I-039	B/2	Low Frequency Antenna 1
I-040	-	Ground G503
I-041	-	Ground G502
I-042	B/10	Control Panel Switch
I-043	W/26	to Body Wire Harness Connector B-069
I-044	W/40	to Body Wire Harness Connector B-068
I-045	B/16	Diagnostic Interface
I-046	B/10	Rear View Mirror Adjustment Switch
I-047	W/6	Headlight & Backlight Adjustment Switch
I-048	-	Instrument Panel Fuse And Relay Box

Connector Code	Connector Color/Pin	Connector Name
I-049	W/8	Rear View Mirror Fold Switch
I-050	W/11	Command Gear Shift (CVT)
I-051	G/2	Backup Antenna
I-052	W/24	BCM (B)
I-053	W/4	Electronic Steering Column Lock (MT)
I-054	B/4	USB
I-055	L/4	USB
I-056	Lg/22	to A/C Wire Harness Connector K-013
I-057	B/4	USB
I-058	B/12	DCT Gear Shift Handle (DCT)
I-059	B/4	USB


Body Wire Harness (For 2.0 Model)

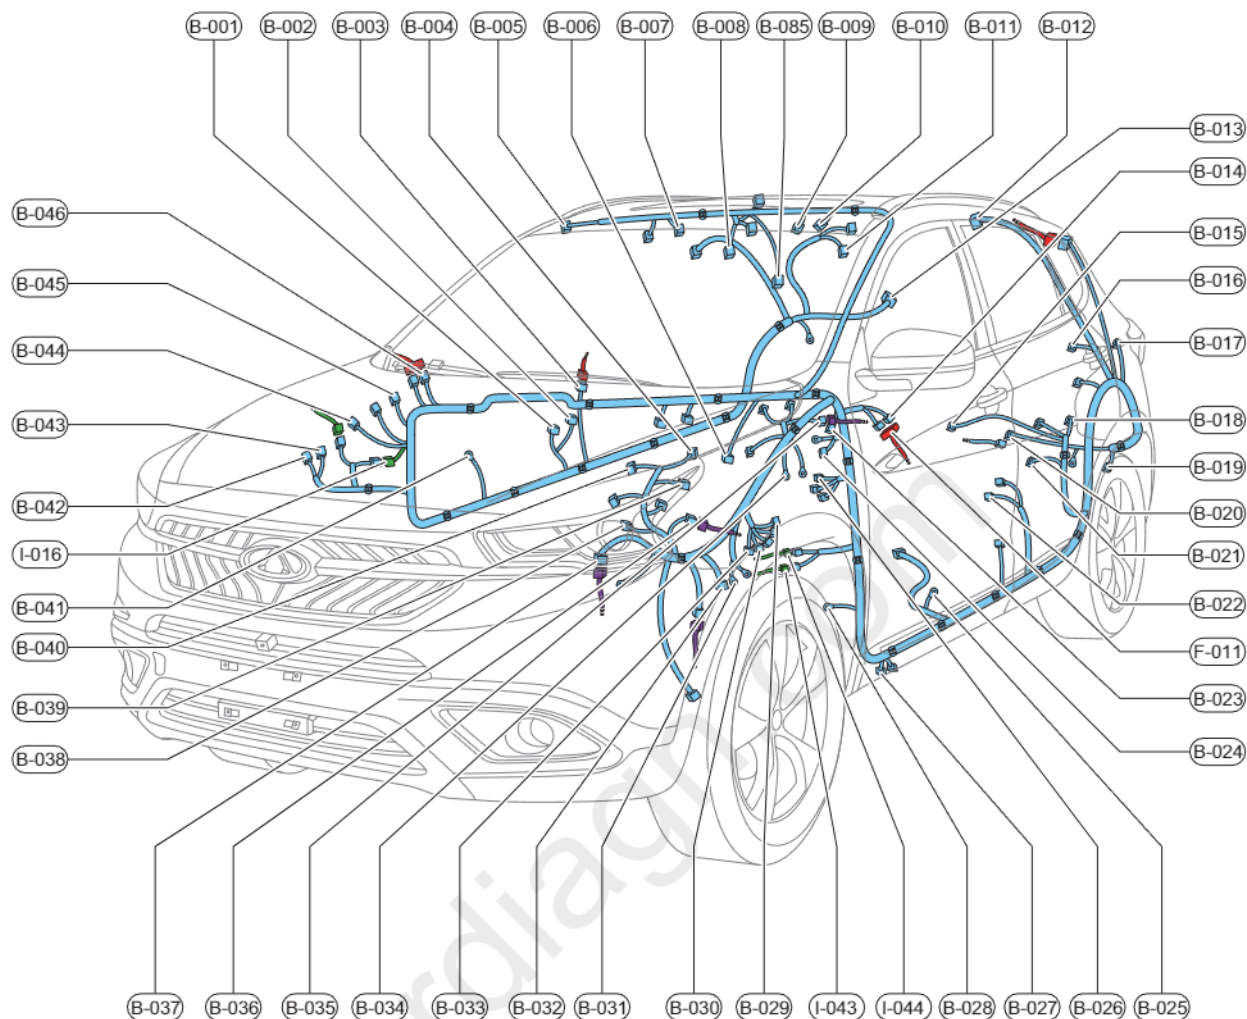

ET15080040

Connector Code	Connector Color/Pin	Connector Name
B-001	Y/2	Right Front Seat Belt Pretensioner
B-002	B/2	Right Side Collision Sensor
B-003	O/16	to Rear Right Door Wire Harness Connector R-006
B-004	B/3	Primary Shaft Pressure Sensor (CVT)
B-005	Gr/2	Right Vanity Mirror Switch
B-006	B/56	TCU (CVT)
B-007	W/2	Microphone 2
B-008	Gr/14	Sunroof Module
B-009	Gr/2	Left Vanity Mirror Light
B-010	W/2	Left Vanity Mirror Switch
B-011	R/1	GPS Antenna

Connector Code	Connector Color/Pin	Connector Name
B-012	Y/2	Left front side curtain airbag
B-013	W/6	Rear Right Tail Light
B-014	W/18	to Front Left Door Wire Harness Connector F-011
B-015	B/2	Rear Right Wheel Speed Sensor
B-016	Y/2	Left Rear Seat Belt Pretensioner
B-017	W/6	Rear Left Tail Light
B-018	B/2	Rear Left Wheel Speed Sensor
B-019	W/16	Reverse Radar Module (4 Sensors)
B-020	W/14	to Rear Bumper Wire Harness Connector B-097
B-021	B/5	Fuel Pump Motor
B-022	Y/2	Left Front Seat Belt Pretensioner
B-023	B/52	BCM 1
B-024	W/14	BCM 3
B-025	-	Ground G607
B-026	W/20	BCM 5
B-027	-	Ground G203
B-028	-	Ground G201
B-029	W/12	Engine Compartment Fuse and Relay Box (J)
B-030	W/14	Engine Compartment Fuse and Relay Box (G)
B-031	-	Instrument Panel Fuse and Relay Box (R2)
B-032	B/64	ECM-B
B-033	W/12	Engine Compartment Fuse and Relay Box (D)
B-034	-	Ground G113
B-035	B/8	ESP Module
B-036	B/8	to Engine Compartment Wire Harness Connector E-015
B-037	B/20	to Front Bumper Wire Harness E-032
B-038	B/10	Gear Range Switch (CVT)
B-039	B/3	Primary Shaft Speed Sensor (CVT)
B-040	B/3	Secondary Shaft Speed Sensor (CVT)
B-041	-	Ground G204
B-042	W/1	Radio Antenna
B-043	R/1	GPS Antenna
B-044	W/40	Around View Monitoring System Module
B-045	B/16	PEPS 1
B-046	W/18	to Front Right Door Wire Harness Connector H-011
B-085	B/3	Rain Sensor

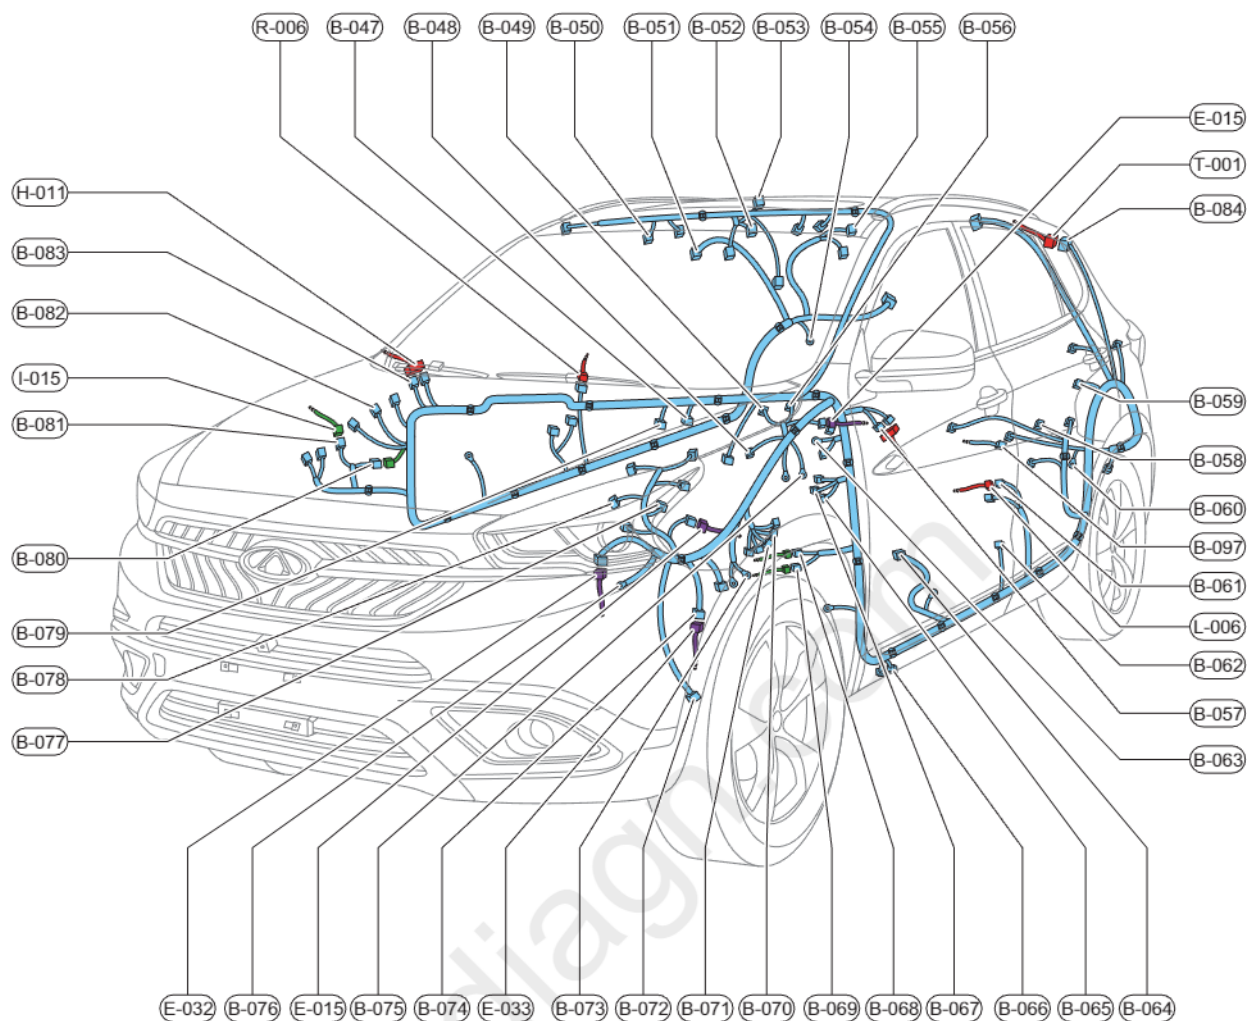


ET15080041

Connector Code	Connector Color/Pin	Connector Name
B-047	Gr/4	Brake Switch
B-048	B/2	Front Left Wheel Speed Sensor
B-049	B/2	Brake Fluid Level Sensor
B-050	Gr/2	Right Vanity Mirror Light
B-051	Y/2	Right Front Side Curtain Airbag
B-052	W/10	Front Room Light
B-053	W/2	Microphone 1
B-054	-	Ground G609
B-055	W/1	Radio Antenna
B-056	W/4	Front Wiper Motor
B-057	Gr/18	to Front Left Door Wire Harness Connector F-011
B-058	B/2	Low Frequency Antenna 3

B-059	B/2	Luggage Compartment Light
B-060	-	Ground G608
B-061	O/16	to Rear Left Door Wire Harness Connector L-006
B-062	B/2	left side Collision Sensor
B-063	-	IEC-R Instrument Panel Fuse and Relay Box
B-064	Br/5	Driver Seat Power Adjustment Switch
B-065	Br/2	EPS
B-066	-	Ground G205
B-067	W/12	BCM 4
B-068	W/40	to Instrument Panel Wire Harness Connector I-044
B-069	W/26	to Instrument Panel Wire Harness Connector I-043
B-070	W/40	Engine Compartment Fuse and Relay Box (H)
B-071	W/16	Engine Compartment Fuse and Relay Box (E)
B-072	B/3	Secondary Shaft Pressure Sensor (CVT)
B-073	-	Instrument Panel Fuse and Relay Box (R4)
B-074	B/20	to Front Bumper Wire Harness E-033
B-075	-	Ground G115
B-076	-	Ground G101
B-077	B/10	Gearbox (CVT)
B-078	B/3	Clutch Speed Sensor (CVT)
B-079	B/6	Electronic Accelerator Pedal
B-080	W/10	to Instrument Panel Wire Harness Connector I-016
B-081	W/14	to Instrument Panel Wire Harness Connector I-015
B-082	B/8	PEPS 3
B-083	Gr/18	to Front Right Door Wire Harness Connector H-011
B-084	W/16	to Back Door Wire Harness Connector T-001


Body Wire Harness (For 1.5TCI Model)

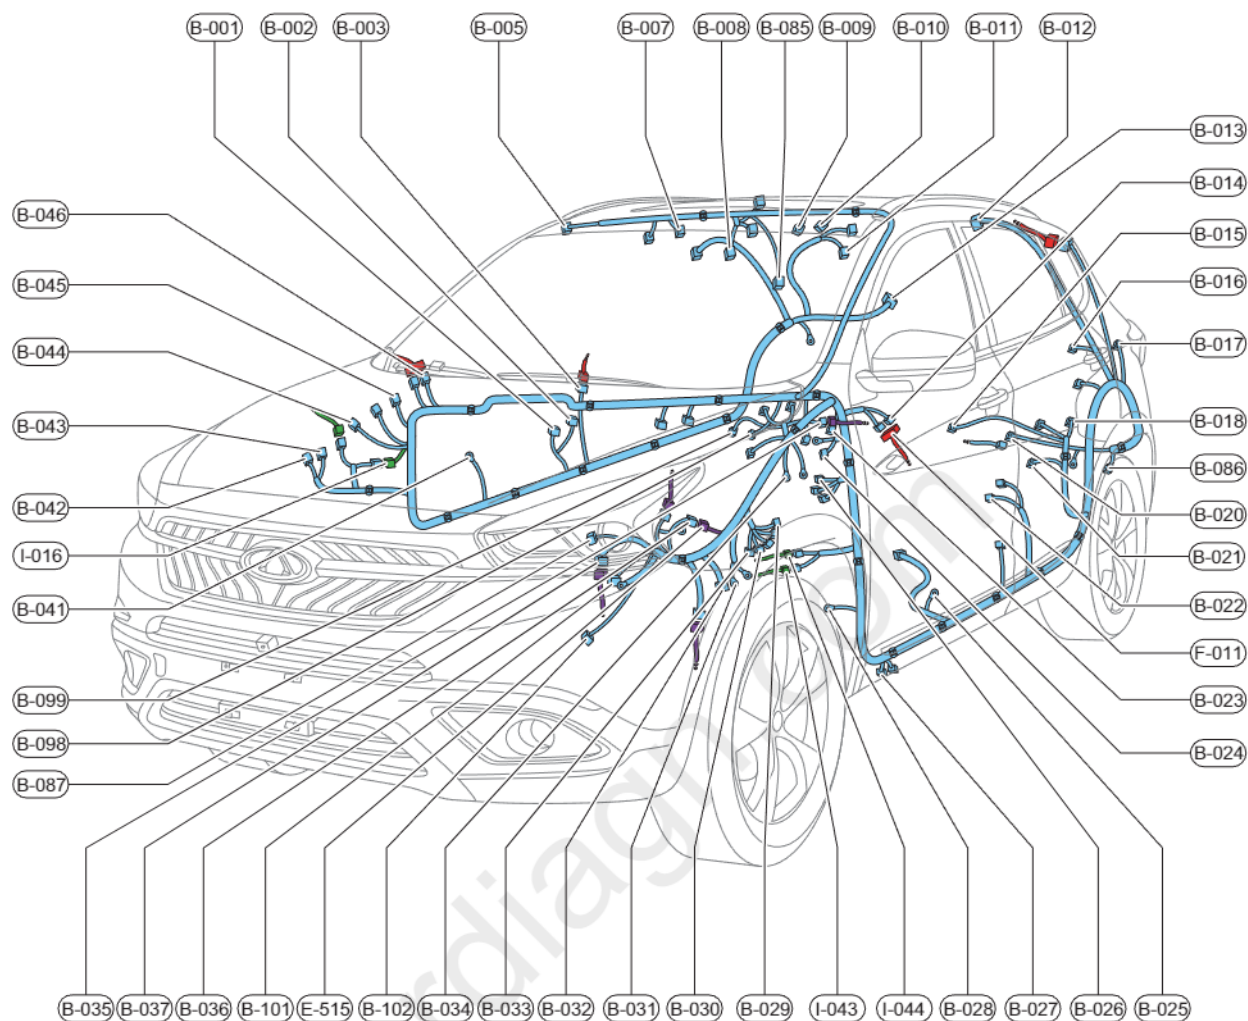

ET15080043

Connector Code	Connector Color/Pin	Connector Name
B-001	Y/2	Right Front Seat Belt Pretensioner
B-002	B/2	Right Side Collision Sensor
B-003	O/16	to Rear Right Door Wire Harness Connector R-006
B-005	Gr/2	Right Vanity Mirror Switch
B-007	W/2	Microphone 2
B-008	Gr/14	Sunroof Module
B-009	Gr/2	Left Vanity Mirror Light
B-010	W/2	Left Vanity Mirror Switch
B-011	R/1	GPS Antenna
B-012	Y/2	Left front side curtain airbag
B-013	W/6	Rear Right Tail Light

B-014	W/18	to Front Left Door Wire Harness Connector F-011
B-015	B/2	Rear Right Wheel Speed Sensor
B-016	Y/2	Left Rear Seat Belt Pretensioner
B-017	W/6	Rear Left Tail Light
B-018	B/2	Rear Left Wheel Speed Sensor
B-020	W/14	to Rear Bumper Wire Harness Connector B-097
B-021	B/5	Fuel Pump Motor
B-022	Y/2	Left Front Seat Belt Pretensioner
B-023	B/52	BCM 1
B-024	W/14	BCM 3
B-025	-	Ground G607
B-026	W/20	BCM 5
B-027	-	Ground G203
B-028	-	Ground G201
B-029	W/12	Engine Compartment Fuse and Relay Box (J)
B-030	W/14	Engine Compartment Fuse and Relay Box (G)
B-031	-	Instrument Panel Fuse and Relay Box (R2)
B-032	B/64	ECM-B
B-033	W/12	Engine Compartment Fuse and Relay Box (D)
B-034	-	Ground G113
B-035	B/38	ESP Module
B-036	B/8	to Engine Compartment Wire Harness Connector E-516
B-037	B/20	to Front Bumper Wire Harness E-032
B-041	-	Ground G204
B-042	W/1	Radio Antenna
B-043	R/1	GPS Antenna
B-044	W/40	Around View Monitor Module
B-045	B/16	PEPS 1
B-046	W/18	to Front Right Door Wire Harness Connector H-011
B-085	B/3	Rain Sensor
B-086	W/24	Reverse Radar Module (4 Sensors)
B-087	B/2	Back-Up Light Switch
B-098	W/8	Clutch Bottom Switch
B-099	B/3	Absolute Vacuum Sensor
B-101	B/58	TCU(DCT)
B-102	B/2	Vacuum Pump

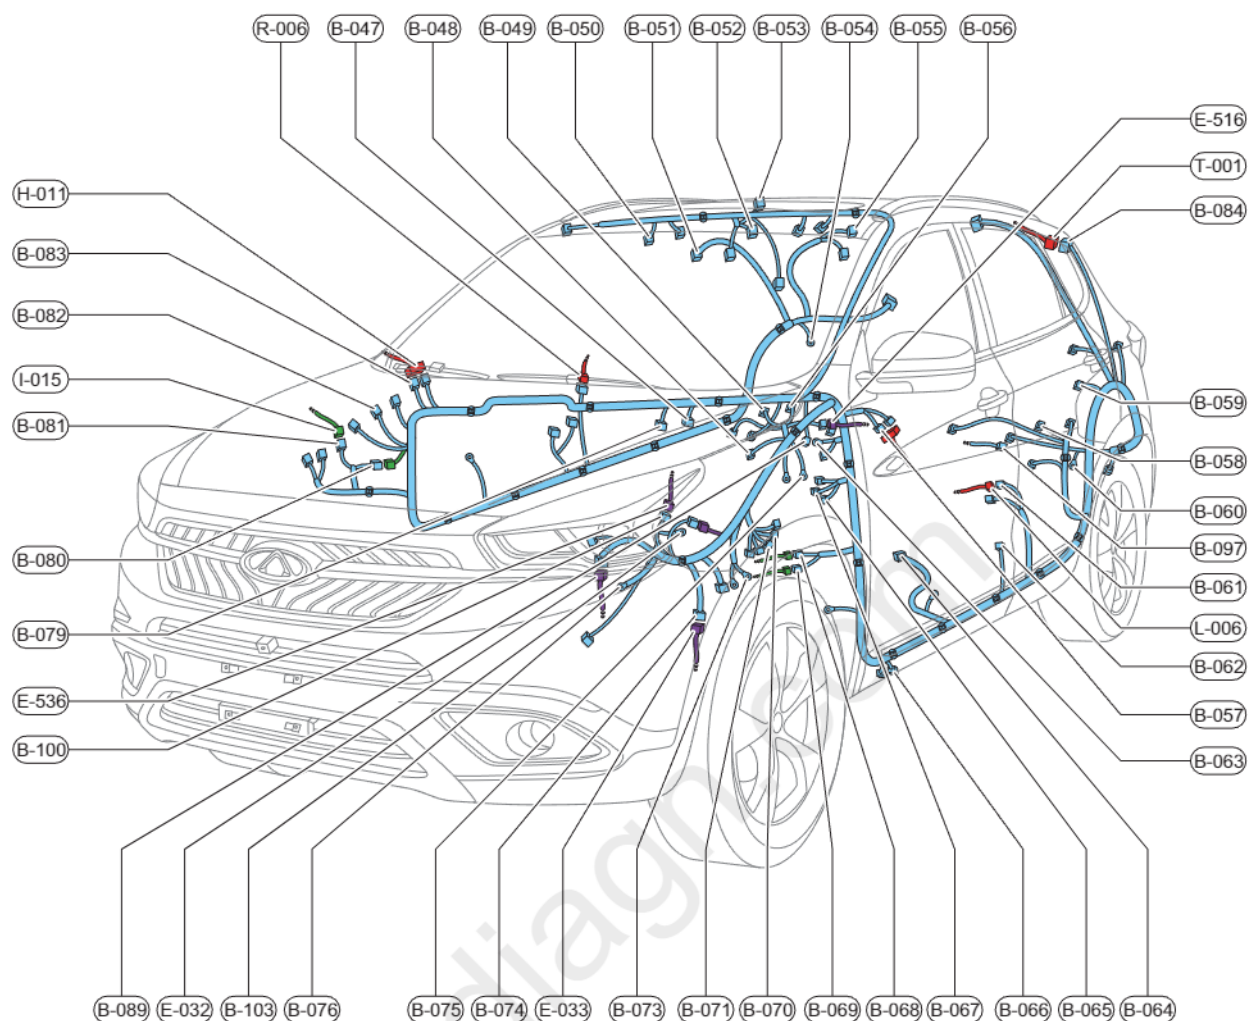


ET15080044

Connector Code	Connector Color/Pin	Connector Name
B-047	Gr/4	Brake Switch
B-048	B/2	Front Left Wheel Speed Sensor
B-049	B/2	Brake Fluid Level Sensor
B-050	Gr/2	Right Vanity Mirror Light
B-051	Y/2	Right Front Side Curtain Airbag
B-052	W/10	Front Room Light
B-053	W/2	Microphone 1
B-054	-	Ground G609
B-055	W/1	Radio Antenna
B-056	W/4	Front Wiper Motor
B-057	Gr/18	to Front Left Door Wire Harness Connector F-011
B-058	B/2	Low Frequency Antenna 3

B-059	B/2	Luggage Compartment Light
B-060	-	Ground G608
B-061	O/16	to Rear Left Door Wire Harness Connector L-006
B-062	B/2	left side Collision Sensor
B-063	-	IEC-R Instrument Panel Fuse and Relay Box
B-064	Br/5	Driver Seat Power Adjustment Switch
B-065	Br/2	EPSP
B-066	-	Ground G205
B-067	W/12	BCM 4
B-068	W/40	to Instrument Panel Wire Harness Connector I-044
B-069	W/26	to Instrument Panel Wire Harness Connector I-043
B-070	W/40	Engine Compartment Fuse and Relay Box (H)
B-071	W/16	Engine Compartment Fuse and Relay Box (E)
B-073	-	Instrument Panel Fuse and Relay Box (R4)
B-074	B/20	to Front Bumper Wire Harness E-033
B-075	-	Ground G115
B-076	-	Ground G101
B-079	B/6	Electronic Accelerator Pedal
B-080	W/10	to Instrument Panel Wire Harness Connector I-016
B-081	W/14	to Instrument Panel Wire Harness Connector I-015
B-082	B/8	PEPS 3
B-083	Gr/18	to Front Right Door Wire Harness Connector H-011
B-084	W/16	to Back Door Wire Harness Connector T-001
B-085	B/3	Rain Sensor
B-089	B/2	Clutch Switch
B-100	B/20	to Engine Compartment Wire Harness Connector E-536
B-103	-	Ground G604 (DCT)

Rear Bumper Wire Harness

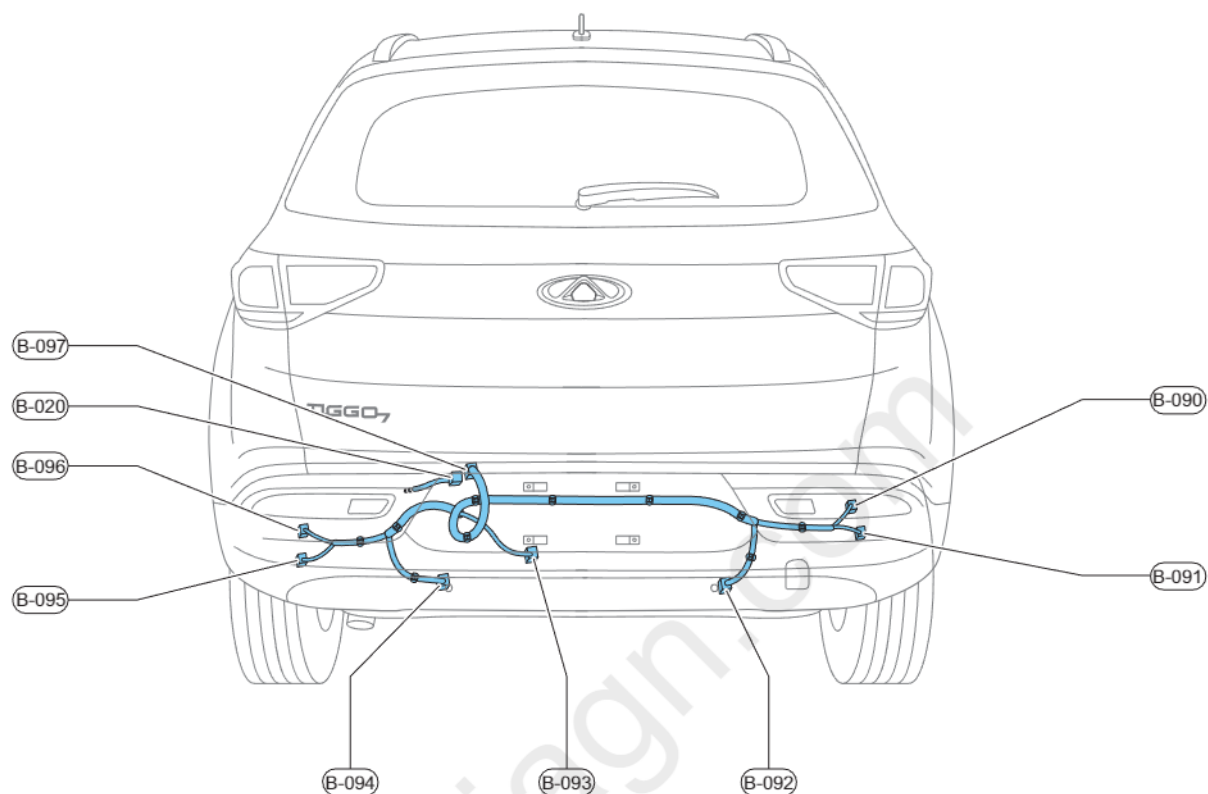


08

ET15080050

Connector Code	Connector Color/Pin	Connector Name
B-090	B/4	Rear Right Fog Light
B-091	B/3	RearRight Radar Sensor
B-092	B/3	Rear Right Middle Radar Sensor
B-093	B/2	Rear Bumper Low Frequency Antenna 4
B-094	B/3	Rear Left Middle Radar Sensor
B-095	B/3	Rear Left Radar Sensor
B-096	B/4	Rear Left Fog Light
B-097	W/14	to Rear Bumper Wire Harness B-020

DCT Transmission Wiring Harness

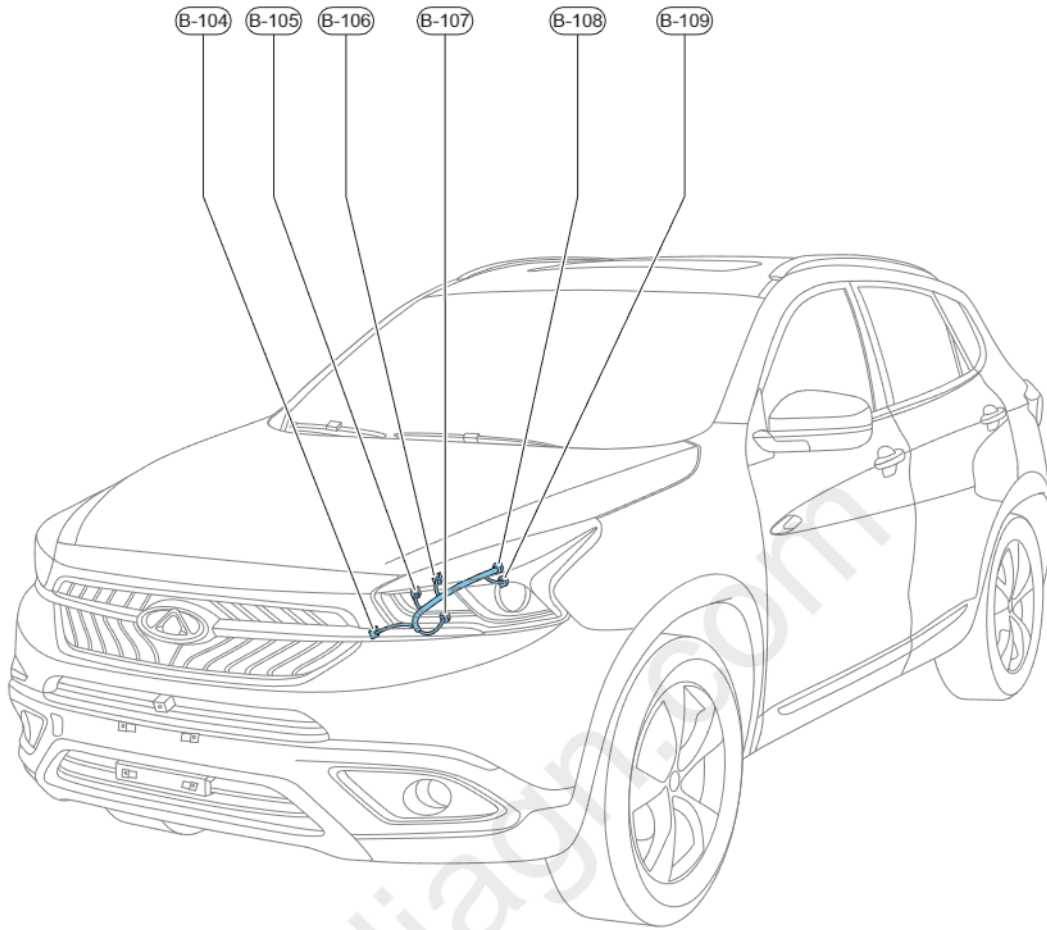


08

ET15080045

Connector Code	Connector Color/Pin	Connector Name
B-104	B/8	Clutch Actuator Motor 1
B-105	B/8	Clutch Actuator Motor 2
B-106	B/4	Gear Position Sensor
B-107	B/58	TCU-A
B-108	Gr/2	Input Shaft Speed Sensor 1
B-109	B/2	Input Shaft Speed Sensor 2


Front Left Door Wire Harness

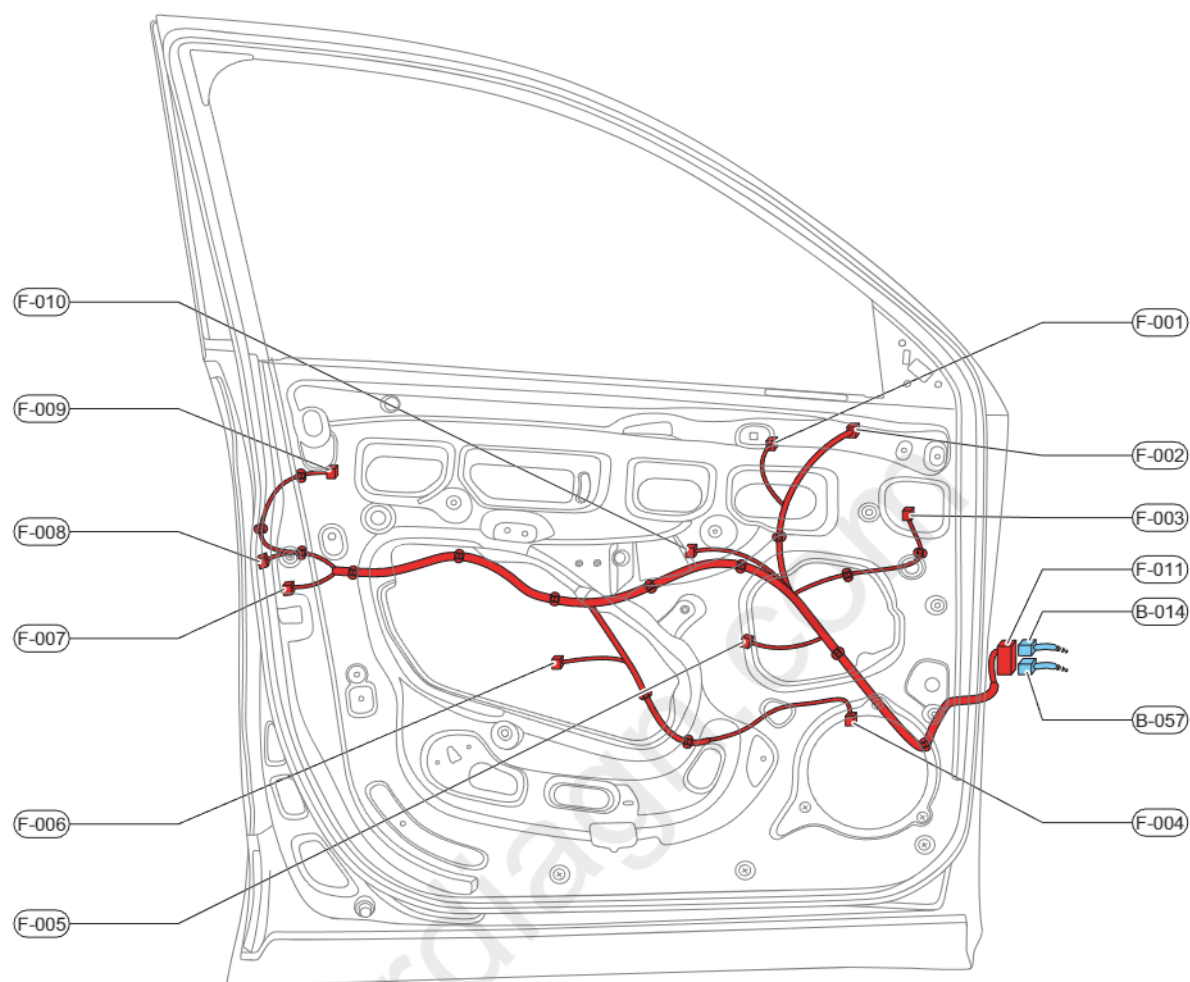

ET15080100

Connector Code	Connector Color/Pin	Connector Name
F-001	B/2	Front Left Speaker
F-002	W/16	Left Power Rear View Mirror Connector
F-003	B/2	Left Turn Signal Light
F-004	B/2	Front Left Door Speaker
F-005	B/2	Front Left Power Window Regulator Motor
F-006	B/2	Front Left Door Light
F-007	Gr/4	Front Left Door Contact Switch
F-008	B/4	Front Left Door Lock Motor
F-009	B/2	Left Handle Switch Unit
F-010	Br/16	Front Left Power Window Switch
F-011	W/36	to Body Wire Harness Connector B-014, B-057

Front Right Door Wire Harness

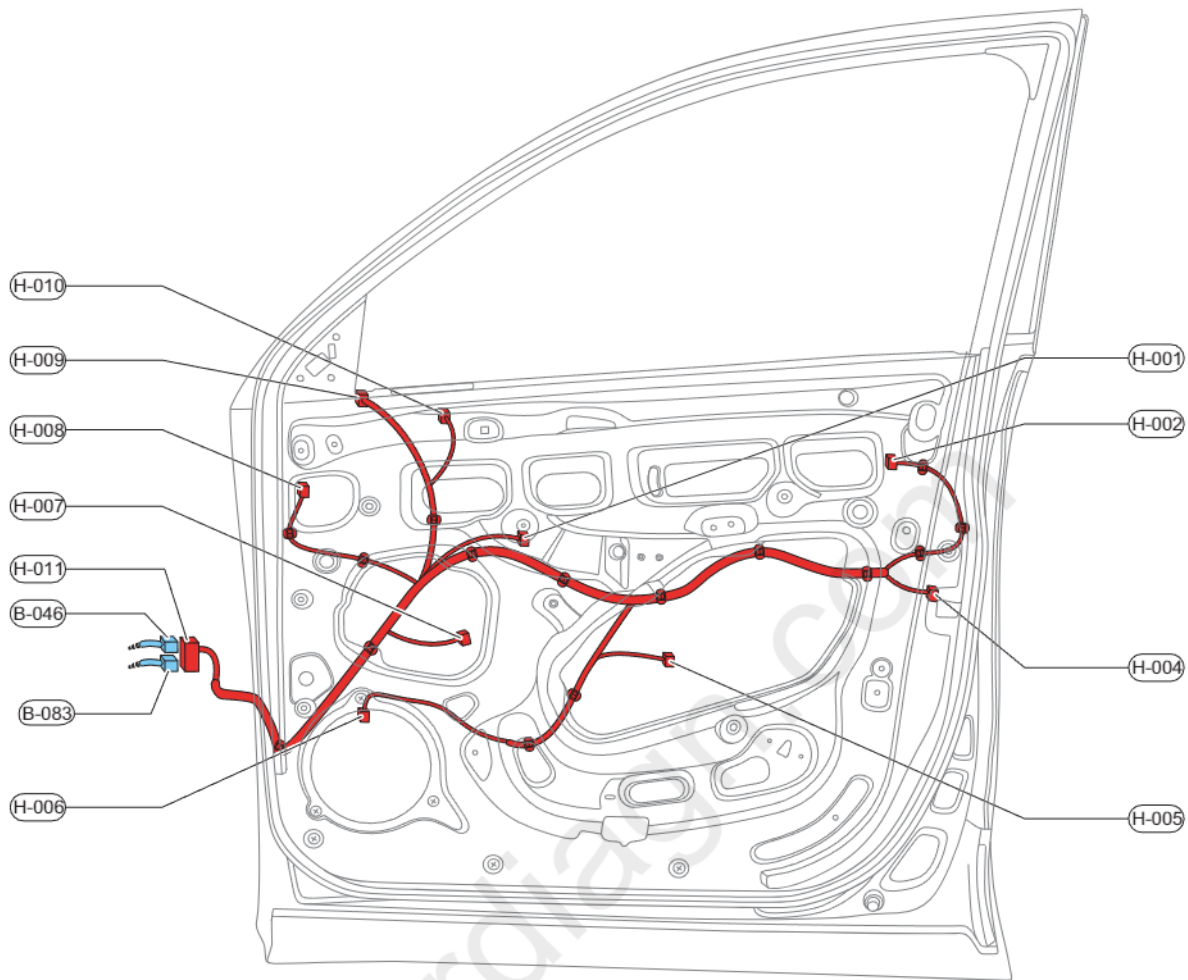


ET15080110

08

Connector Code	Connector Color/Pin	Connector Name
H-001	Br/4	Front Right Power Window Switch
H-002	B/2	Right Handle Switch Unit
H-004	B/2	Front Right Door Contact Switch
H-005	B/2	Front Right Door Light
H-006	B/2	Front Right Door Speaker
H-007	B/2	FRONT Right Power Window Regulator Motor
H-008	B/2	Right Turn Signal Light
H-009	W/16	Right Power Rear View Mirror Motor
H-010	B/2	Front Right Speaker
H-011	W/36	to Body Wire Harness Connector B-046, B-083


Rear Left Door Wire Harness

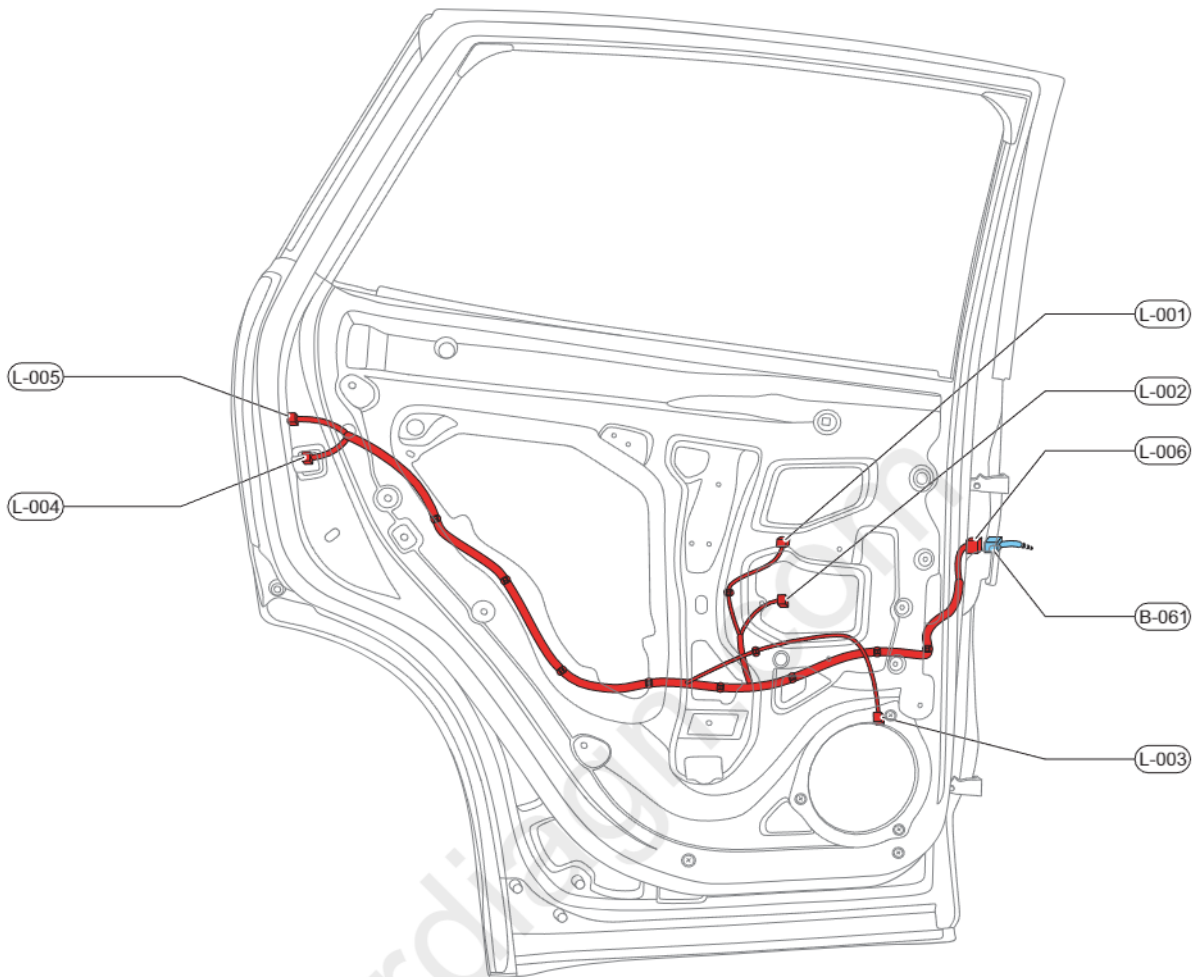

ET15080120

Connector Code	Connector Color/Pin	Connector Name
L-001	B/4	Rear Left Power Window Switch
L-002	B/2	Rear Left Power Window Regulator Motor
L-003	B/2	Rear Left Door Speaker
L-004	B/2	Rear Left Door Lock Motor
L-005	B/4	Rear Left Door Contact Switch
L-006	W/16	to Body Wire Harness Connector B-061

Rear Right Door Wire Harness

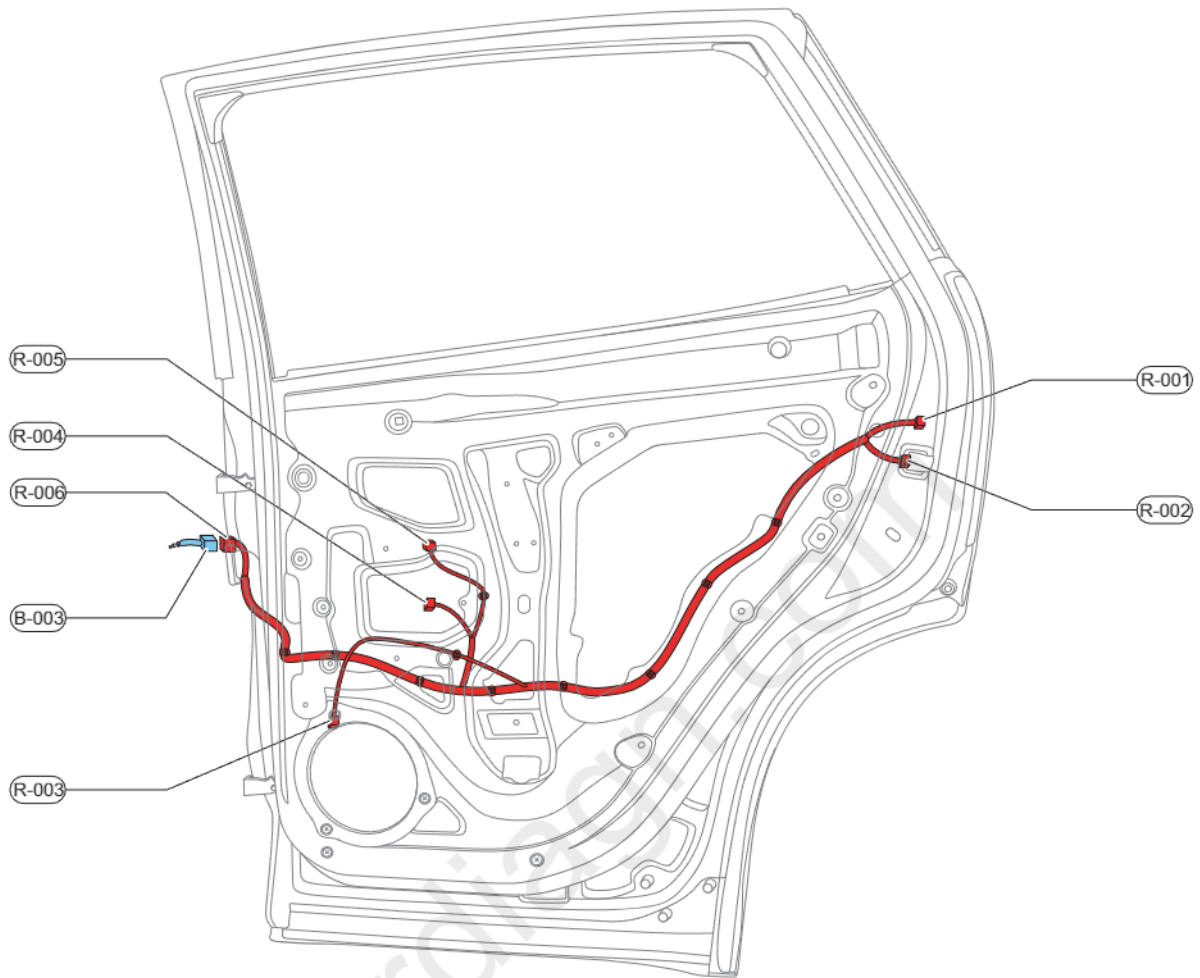


ET15080130

08

Connector Code	Connector Color/Pin	Connector Name
R-001	B/4	Rear Right Door Contact Switch
R-002	B/2	Rear Right Door Lock Motor
R-003	B/2	REAR RIGHT DOOR SPEAKER
R-004	B/2	Rear Right Power Window Regulator Motor
R-005	B/2	Rear Right Power Window Switch
R-006	W/16	to Body Wire Harness Connector B-003

Back Door Wire Harness

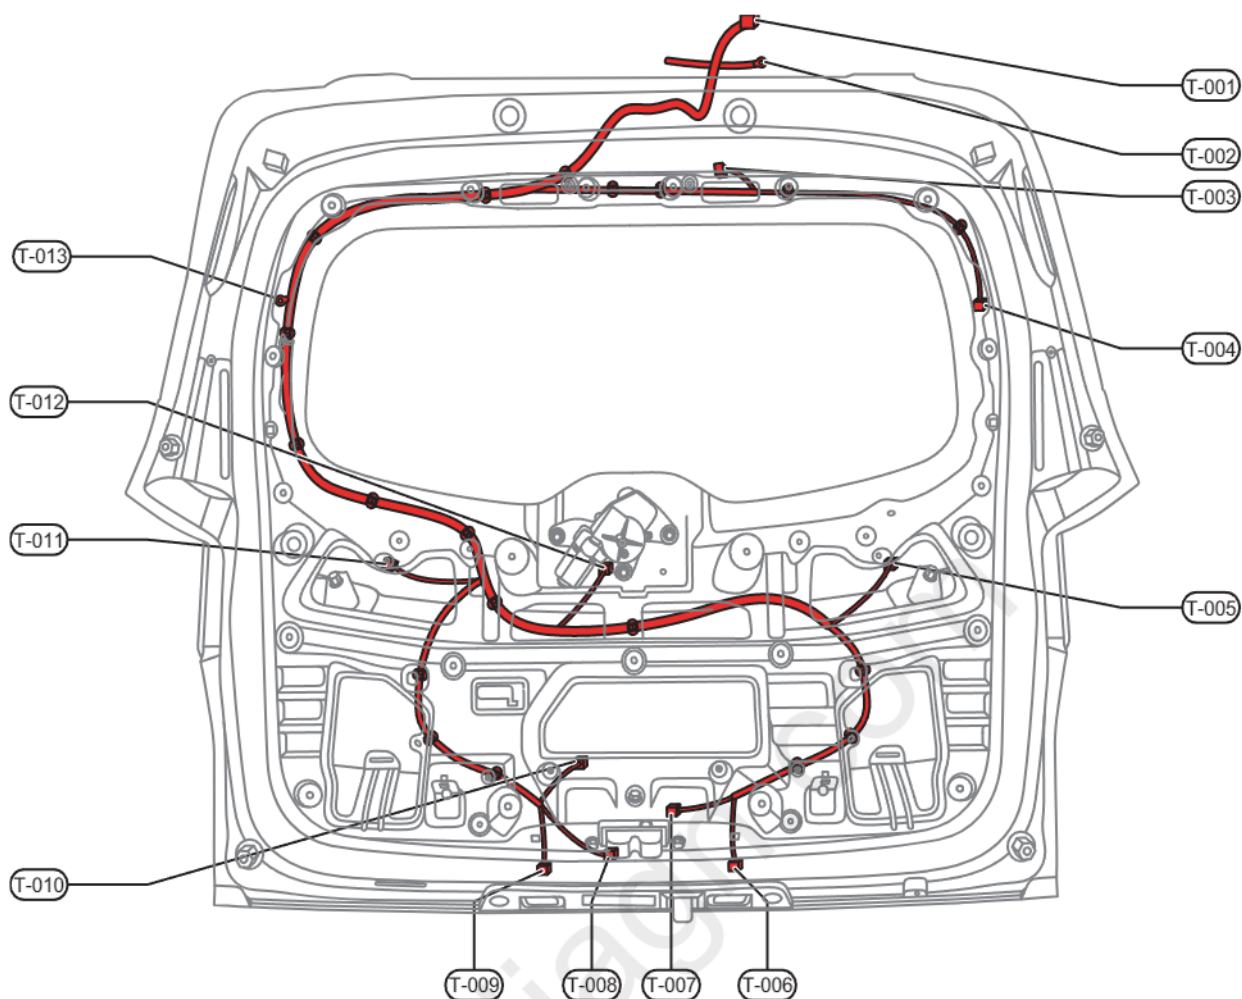


08

ET15080140

Connector Code	Connector Color/Pin	Connector Name
T-001	W/16	to Body Wire Harness Connector B-084
T-002	-	Body Ground
T-003	W/2	High Mounted Stop Light
T-004	-	Defroster+
T-005	W/3	Rear Left Tail Light
T-006	B/2	Left License Plate Light
T-007	B/4	Rear Camera
T-008	B/2	Back Door Switch
T-009	B/2	Right License Plate Light
T-010	W/6	Back Door Lock Motor
T-011	W/3	Rear Right Tail Light
T-012	W/3	Rear Wiper Motor
T-013	-	Defroster-

Electrical A/C System Wire Harness

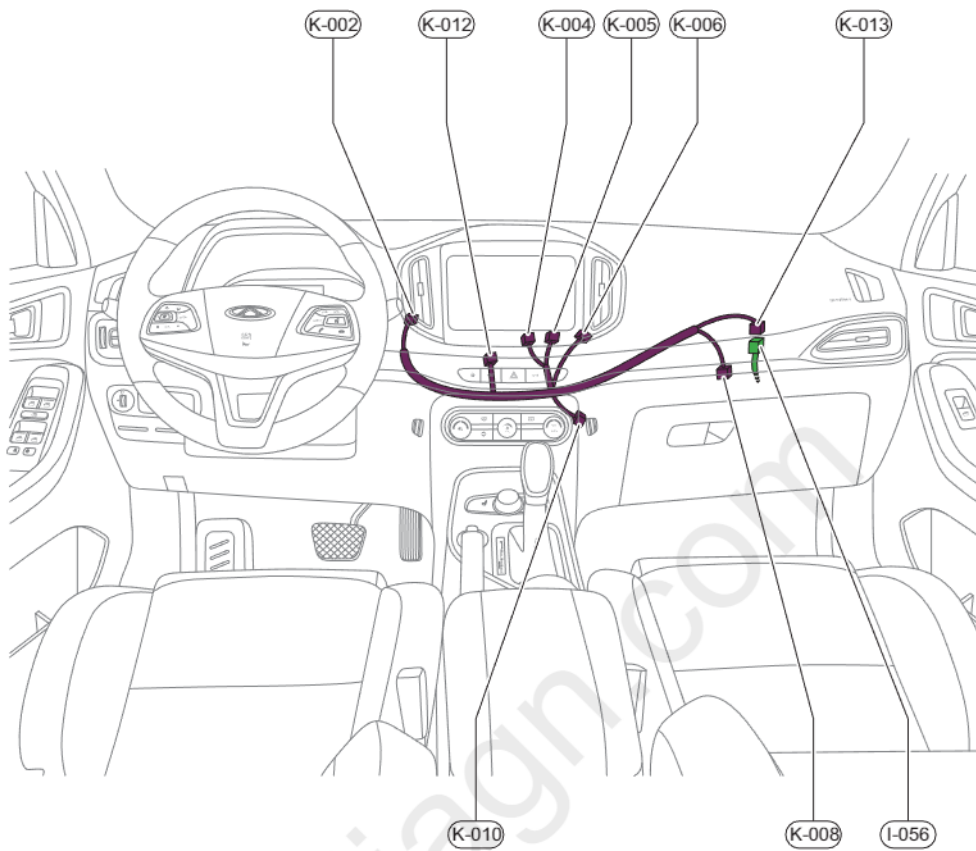


ET15080160

08

Connector Code	Connector Color/Pin	Connector Name
K-002	B/6	Mode Damper Motor
K-004	B/6	Right Mixed Damper Motor
K-005	B/6	Speed Resistor
K-006	W/2	Evaporator Temperature Sensor
K-008	W/2	Blower
K-010	B/6	Inner And Outer Circulation Motor
K-012	W/32	Electrical A/C Control Panel
K-013	Lg/22	to Instrument Panel Wire Harness Connector I-056

Automatic A/C System Wire Harness

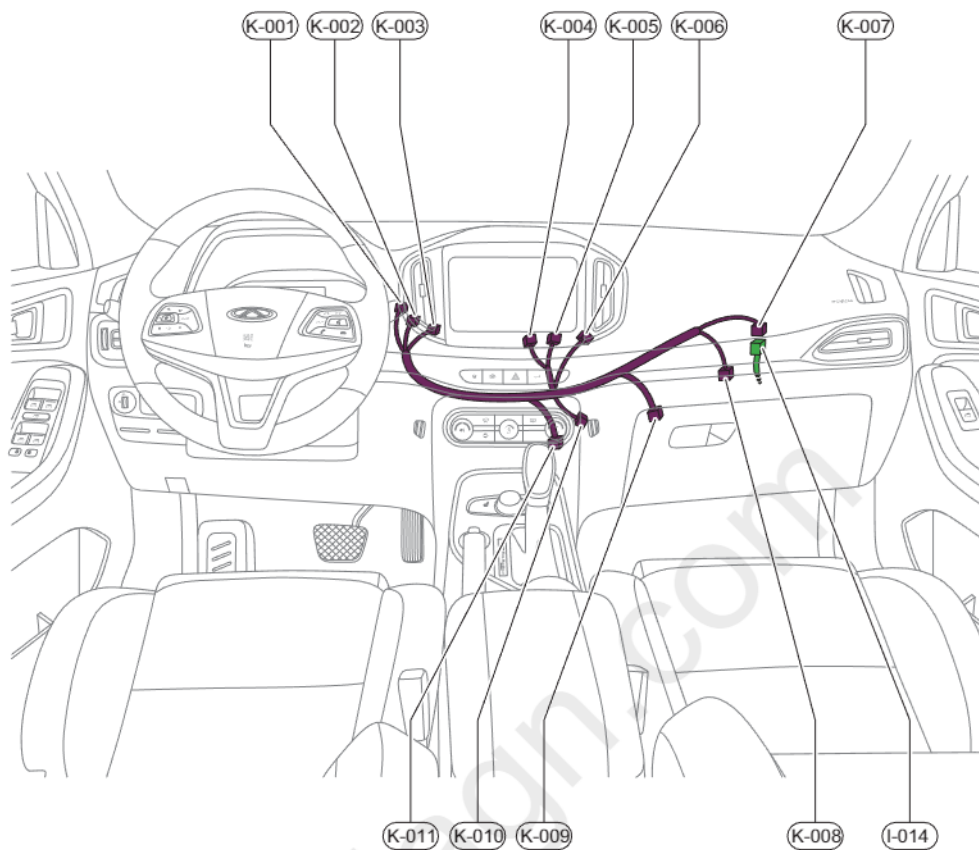


08

ET15080080

Connector Code	Connector Color/Pin	Connector Name
K-001	B/6	Left Mixed Damper Motor
K-002	B/6	Mode Damper Motor
K-003	Lg/2	Left Room Temperature Sensor
K-004	B/6	Right Mixed Damper Motor
K-005	B/6	Speed Resistor
K-006	W/2	Evaporator Temperature Sensor
K-007	Lg/22	to Instrument Panel Wire Harness Connector I-014
K-008	W/2	Blower
K-009	W/34	Automatic A/C Control Module
K-010	B/6	Inner And Outer Circulation Motor
K-011	Lg/2	Right Room Temperature Sensor

Battery/Ground Wire Harness

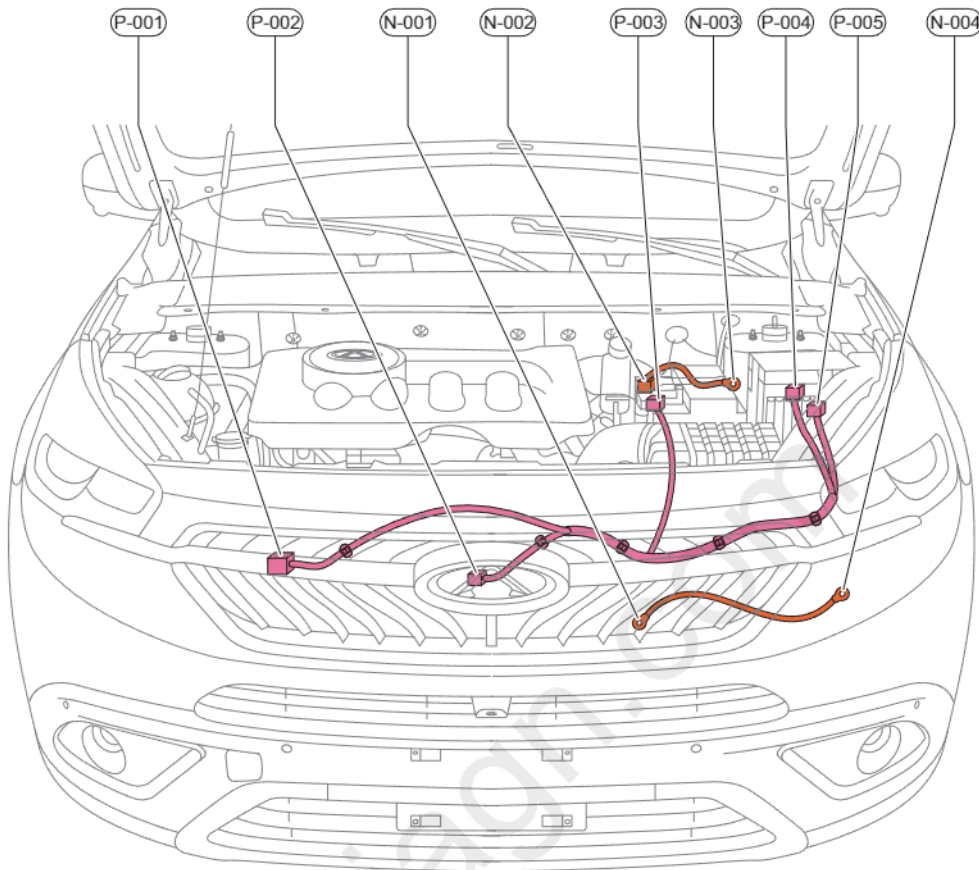

ET15080150

08

Connector Code	Connector Color/Pin	Connector Name
P-001	-	Alternator
P-002	-	Starter
P-003	-	Battery Positive
P-004	-	Engine Compartment Fuse and Relay Box Power Supply
P-005	-	Alternator Power Supply
N-001	-	Engine Ground
N-002	-	Battery Negative
N-003	-	Body Ground
N-004	-	Body Ground

cardiagn.com

