


Seat heating , (4A3)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Onboard supply control unit, Fuse holder C, Front left seat heating

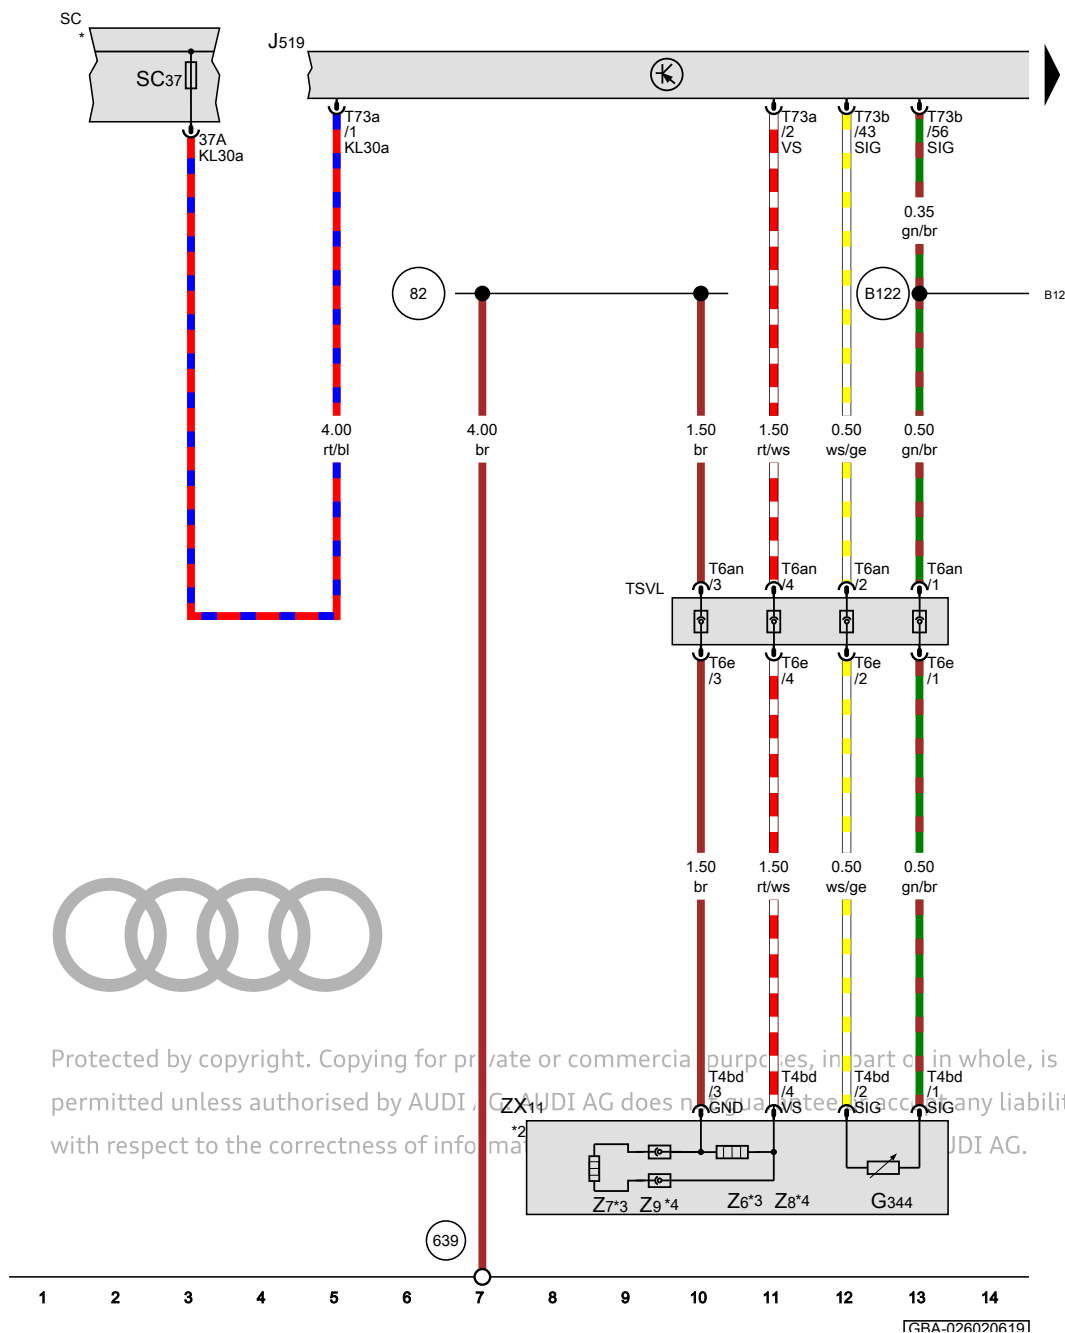

- G344 Front left seat temperature sender
- J519 Onboard supply control unit
- SC Fuse holder C
- SC37 Fuse 37 on fuse holder C
- T4bd 4-pin connector, black
- T6an 6-pin connector, green
- T6e 6-pin connector, green
- T73a 73-pin connector, black
- T73b 73-pin connector, black
- TSVL Coupling point for front left seat
- Z6 Heated seat cushion for driver seat
- Z7 Heated backrest for driver seat
- Z8 Heated seat cushion for front passenger seat
- Z9 Heated backrest for front passenger seat
- ZX11 Front left seat heating
- 82 Earth connection 1, in front left wiring harness
- 639 Earth point, left A-pillar
- B122 Connection (75, seat heating), in interior wiring harness
- * see applicable current flow diagram for fuses in interior
- *2 Pre-wired component
- *3 For left-hand drive models
- *4 For right-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information.

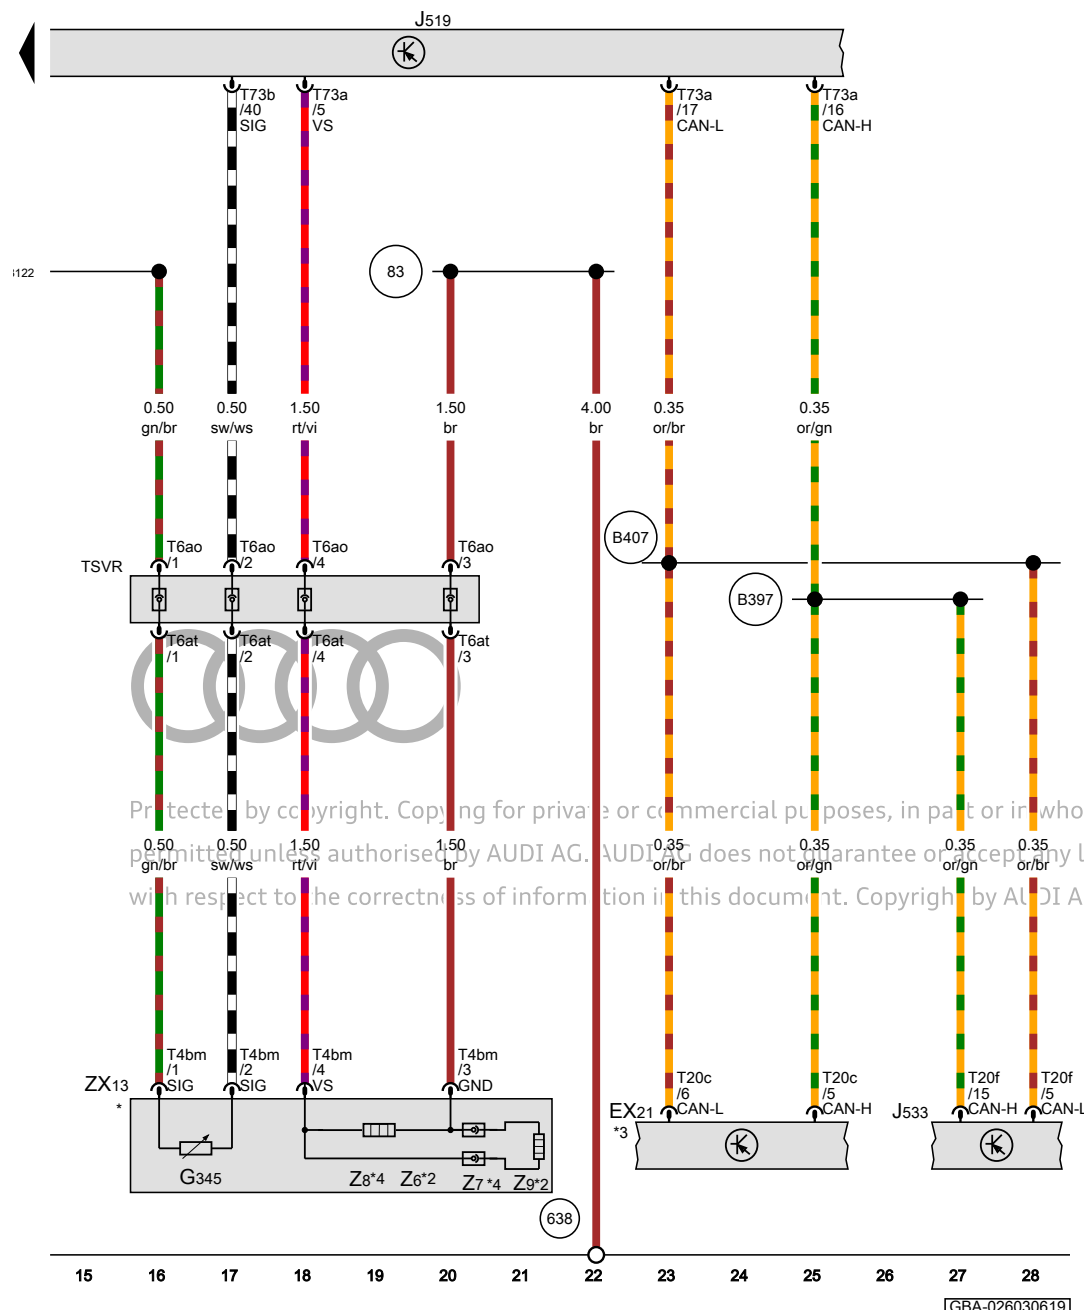

Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Front right seat heating

- EX21 Heater and air conditioning controls
- G345 Front right seat temperature sender
- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- T4bm 4-pin connector, black
- T6ao 6-pin connector, green
- T6at 6-pin connector, green
- T20c 20-pin connector, black
- T20f 20-pin connector, red
- T73a 73-pin connector, black
- T73b 73-pin connector, black
- TSVR Coupling point for front right seat
- Z6 Heated seat cushion for driver seat
- Z7 Heated backrest for driver seat
- Z8 Heated seat cushion for front passenger seat
- Z9 Heated backrest for front passenger seat
- ZX13 Front right seat heating

- 83 Earth connection 1, in front right wiring harness
- 638 Earth point, on right A-pillar
- B122 Connection (75, seat heating), in interior wiring harness
- B397 Connection 1 (convenience CAN bus, high), in main wiring harness
- B407 Connection 2 (convenience CAN bus, low), in main wiring harness
- * Pre-wired component
- *2 For left-hand drive models
- *3 see applicable current flow diagram
- *4 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink