

Floor Coverings and Headlinings

cardiagn.com

Repair Instructions

cardiagn.com

1. BODY HARDWARE AND TRIM
2. FLOOR COVERINGS AND HEADLININGS
3. REPAIR INSTRUCTIONS
- 4.

Floor Carpet Drying

If the carpet or the pad or insulator is wet, use the following criteria for drying or for replacing the components:


- For a 1-piece carpet assembly bonded to a cotton or a fiber padding, replace the entire assembly.
- For a 2-piece carpet assembly with a cotton or a fiber padding, replace the padding only. While the carpet is out of the vehicle, dry the carpet using the method described below.
- For a 1-piece carpet assembly bonded to a foam padding or attached to a synthetic padding, dry the carpet using the method described below.
- For a 2-piece carpet assembly with a synthetic padding, dry the assembly using the method described below.

Drying Method

1. If you observe puddles of liquid on the carpet face, use a wet vacuum to remove the excess moisture.
2. Blot the face of the carpet with a towel in order to absorb as much moisture as possible.
3. Point a fan at the affected area and air dry the carpet.

1. BODY HARDWARE AND TRIM
2. FLOOR COVERINGS AND HEADLININGS
3. REPAIR INSTRUCTIONS
- 4.

Floor Panel Carpet Replacement

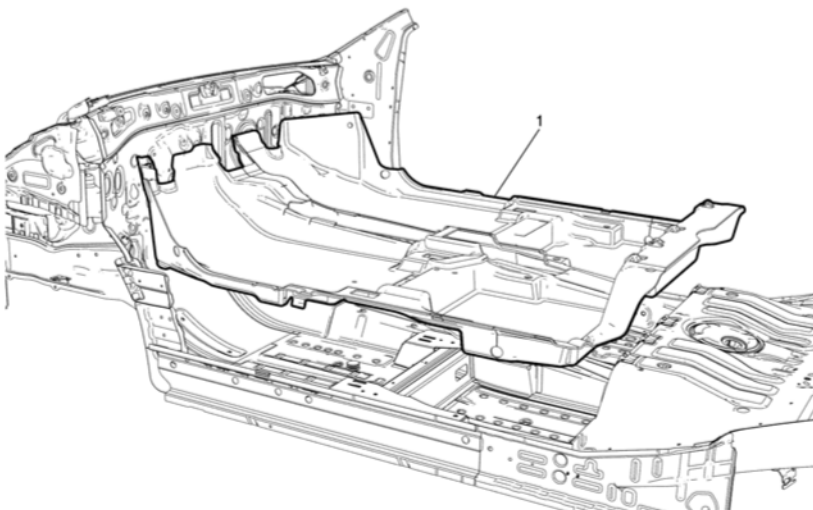



cardiagn.com

[Click here for full size](#)


Callout	Component Name
	Preliminary Procedures 1. Remove front seats. Refer to Front Seat Removal and Installation. 2. Remove rear seat cushion. Refer to Rear Seat Cushion Removal and Installation. 3. Remove the front floor console. Refer to Front Floor Console Replacement. 4. Remove the front side door sill trim plate. Refer to Front Side Door Sill Trim Plate Replacement. 5. Remove the rear side door sill trim plate. Refer to Rear Side Door Sill Trim Plate Replacement. 6. Remove the center pillar lower trim panels. Refer to Center Pillar Lower Trim Panel Replacement.
1	Front Floor Panel Carpet Assembly Procedure Loosen the transmission control.

1. BODY HARDWARE AND TRIM
2. FLOOR COVERINGS AND HEADLININGS
3. REPAIR INSTRUCTIONS
- 4.

Floor Carpet Retainer Replacement


Removal Procedure

1. Remove the front side door sill trim plate. Refer to [Front Side Door Sill Trim Plate Replacement](#).
2. Reposition the front floor panel carpet as needed to access retainers. Refer to [Floor Panel Carpet Replacement](#).

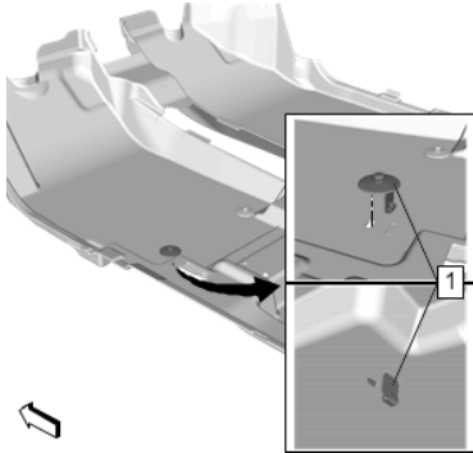

3. [Click here for full size](#)
4. Disengage the front floor panel carpet retainerâ€™(1) on the rear side of the front floor panel carpet.
5. Remove the front floor panel carpet retainerâ€™(1) upwards.

Installation Procedure

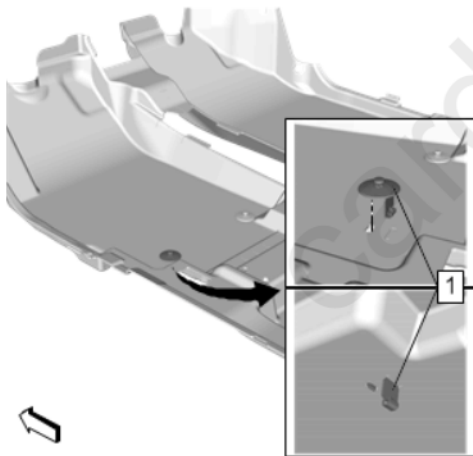


1. [Click here for full size](#)
2. Align the front floor panel carpet retainerâ€™(1) to the cutout in the carpet.
3. Engage the front floor panel carpet retainerâ€™(1) on the rear side of the front floor panel carpet.
4. Reposition the front floor panel carpet as needed. Refer to [Floor Panel Carpet Replacement](#).
5. Install the front side door sill trim plate. Refer to [Front Side Door Sill Trim Plate Replacement](#).

Related Part Information

Part Name	Catalog Name	Part Code
Floor Carpet Retainer	RETAINER,FLR CPT (PUSH IN)	0050H

- 1. BODY HARDWARE AND TRIM
- 2. FLOOR COVERINGS AND HEADLININGS
- 3. REPAIR INSTRUCTIONS
- 4.

Floor Carpet Auxiliary Mat Retainer Replacement

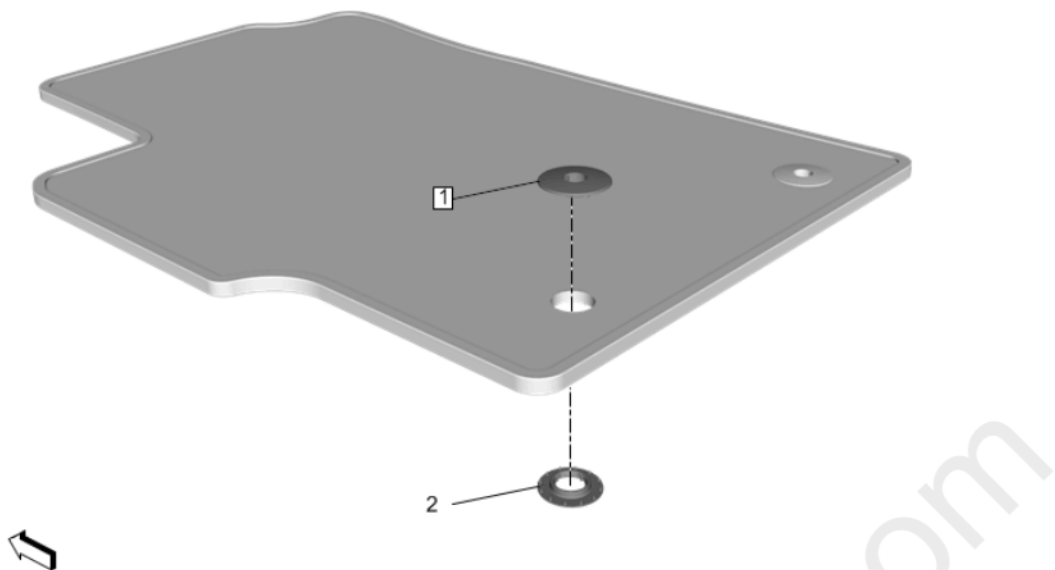

[Click here for full size](#)


Callout	Component Name
1	Floor Carpet Auxiliary Mat Retainer “ Upper
2	Floor Carpet Auxiliary Mat Retainer “ Lower
	Procedure
	1. Use a flat-bladed tool.
	2. Remove the lower retainer on the rear side of the mat.

Related Part Information

Part Name	Catalog Name	Part Code
Floor Carpet Auxiliary Mat Retainer	RETAINER,FLR CPT AUX MAT	0150G

1. BODY HARDWARE AND TRIM
2. FLOOR COVERINGS AND HEADLININGS
3. REPAIR INSTRUCTIONS
- 4.

Headlining Trim Panel Replacement

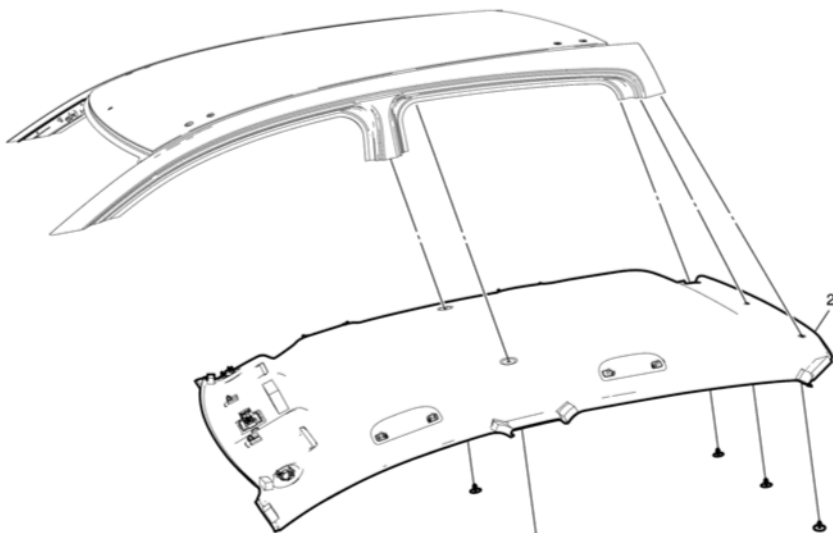

cardiagn.com

[Click here for full size](#)

Callout	Component Name

Callout	Component Name
Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury. Caution: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced. Caution: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced. Preliminary Procedures 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the sunshade. Refer to Sunshade Replacement. 3. Remove the assist handles. Refer to Assist Handle Replacement. 4. Remove the windshield garnish moldings. Refer to Windshield Garnish Molding Replacement. 5. Remove the center pillar upper trim panels. Refer to Center Pillar Upper Trim Panel Replacement. 6. Remove the quarter window garnish moldings. Refer to Quarter Window Garnish Molding Replacement. 7. Remove the dome lamp assembly. Refer to Dome Lamp Replacement. 8. Move the front seat fully forward and recline.	
1	Headliner Trim Panel Retainer (Qty:â€%5)
2	Headliner Trim Panel Assembly
	Procedure Disconnect the electrical connectors.