


Dual clutch gearbox 0CW , (0EG)


From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

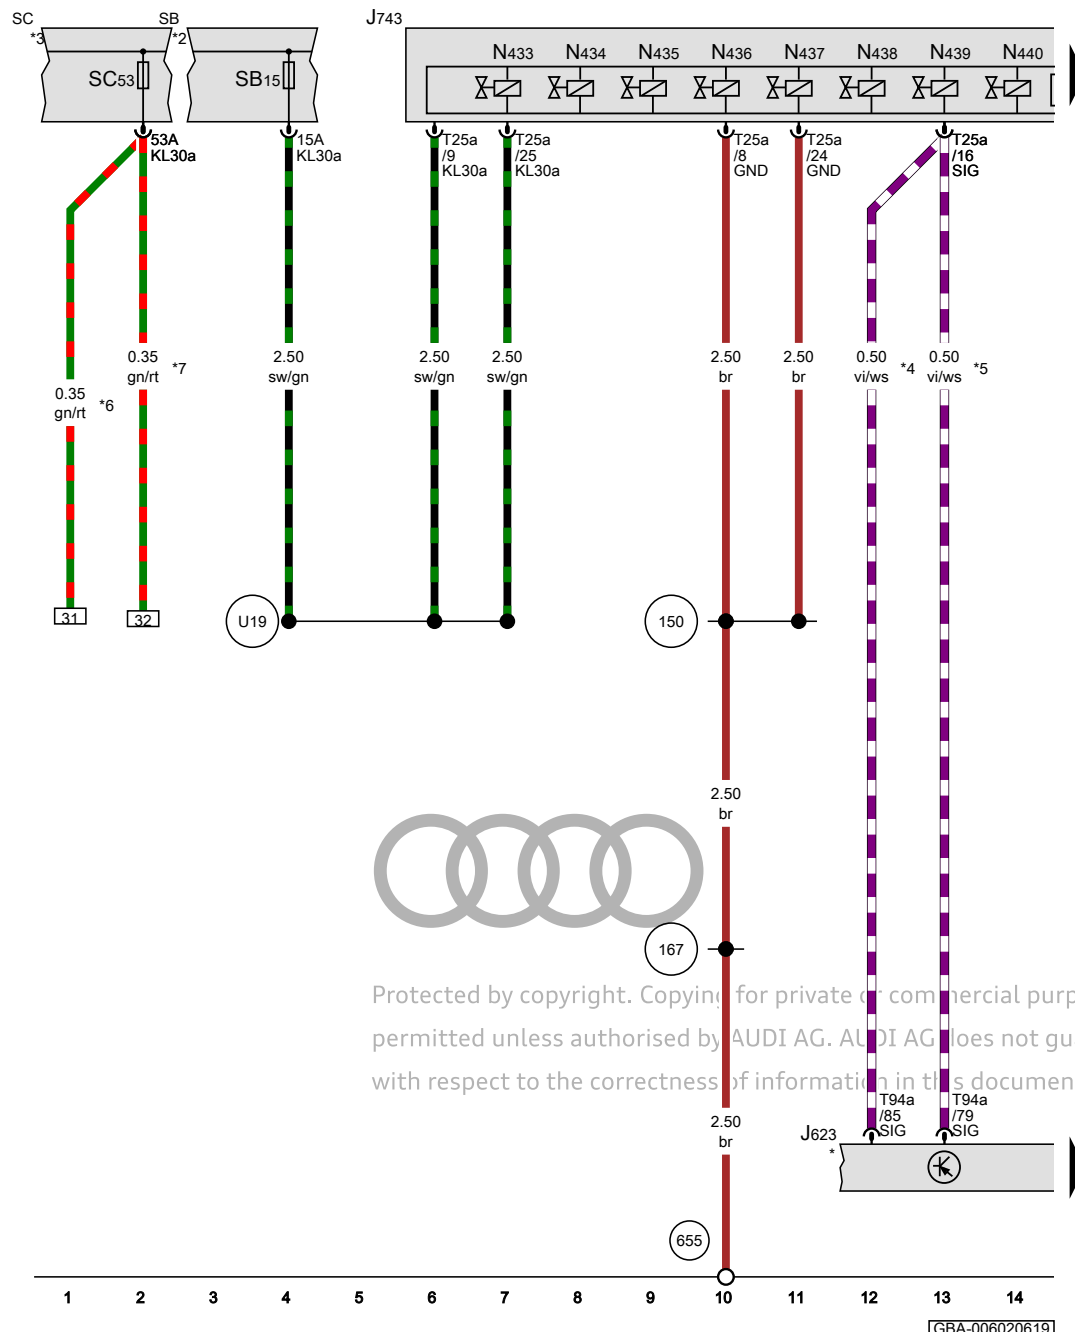

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

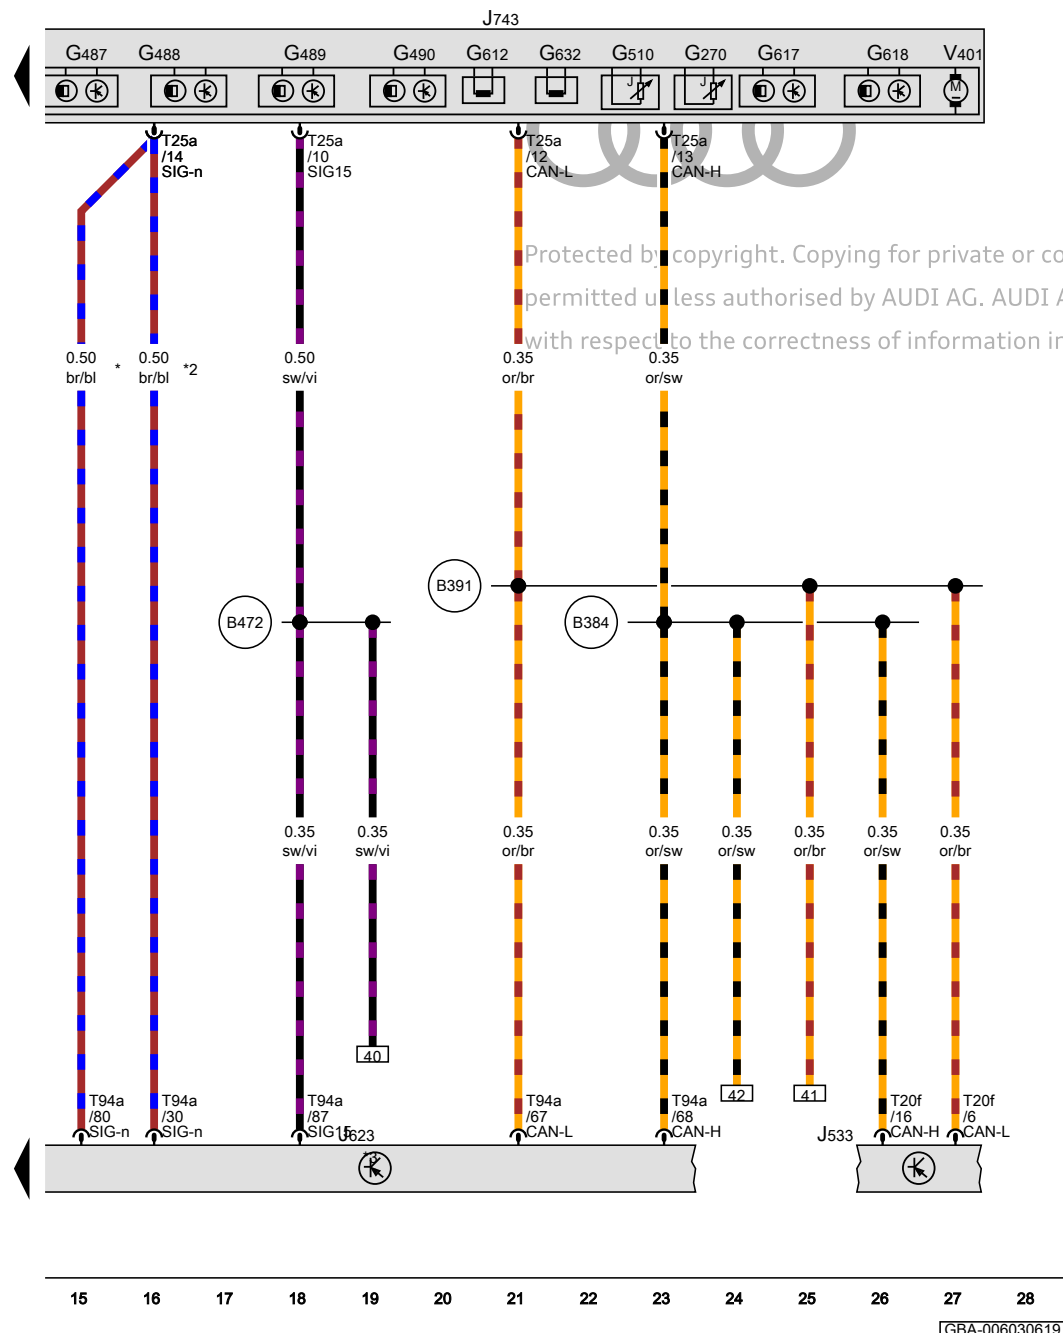


Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox

- G270 Gearbox hydraulic pressure sender
- G487 Gear selector movement sensor 1
- G488 Gear selector movement sensor 2
- G489 Gear selector movement sensor 3
- G490 Gear selector movement sensor 4
- G510 Temperature sender in control unit
- G612 Gearbox input speed sender 2
- G617 Clutch travel sender 1
- G618 Clutch travel sender 2
- G632 Gearbox input speed sender 1
- J533 Data bus diagnostic interface
- J623 Engine/motor control unit
- J743 Mechatronic unit for dual clutch gearbox
- T20f 20-pin connector, red
- T25a 25-pin connector, black
- T94a 94-pin connector, black
- V401 Hydraulic pump motor

- B384 Connection 2 (powertrain CAN bus, high), in main wiring harness
- B391 Connection 2 (powertrain CAN bus, low), in main wiring harness
- B472 Connection 8, in main wiring harness
- * For models with 1.0l petrol engine
- *2 For models with 1.5l petrol engine
- *3 see applicable current flow diagram for engine


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Selector lever, Onboard supply control unit, Ignition key withdrawal lock solenoid

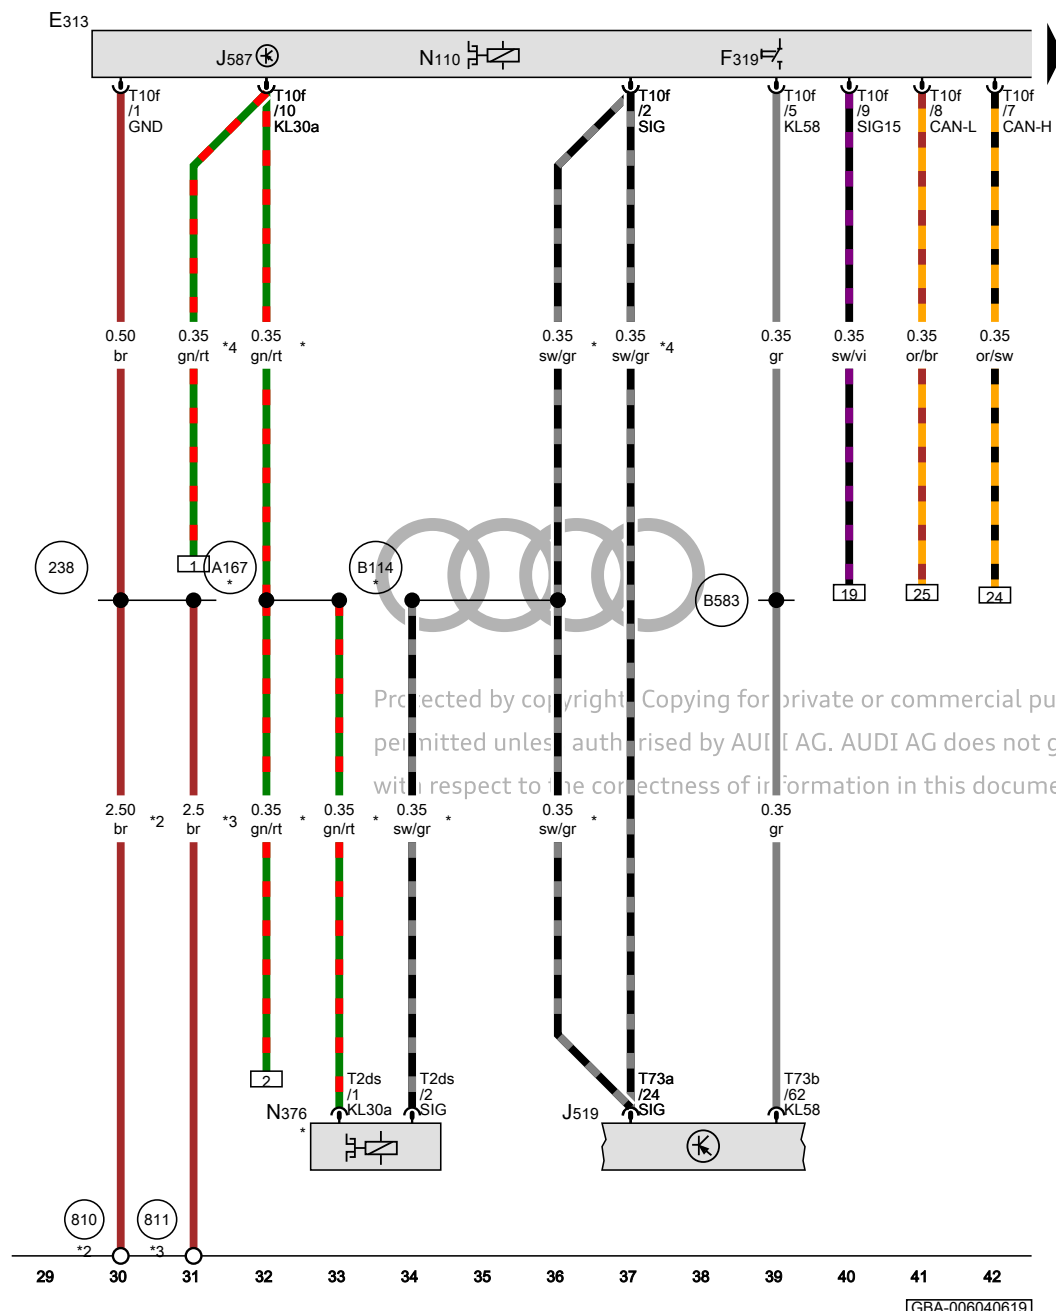

- E313 Selector lever
- F319 Selector lever locked in position P switch
- J519 Onboard supply control unit
- J587 Selector lever sensors control unit
- N110 Selector lever lock solenoid
- N376 Ignition key withdrawal lock solenoid
- T2ds 2-pin connector, black
- T10f 10-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black

- 238 Earth connection 1, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A167 Positive connection 3 (30a) in dash panel wiring harness
- B114 Connection (inhibitor switch), in interior wiring harness
- B583 Positive connection (58), in interior wiring harness
- * For models with no entry and start authorisation
- *2 For left-hand drive models
- *3 For right-hand drive models
- *4 For models with entry and start authorisation

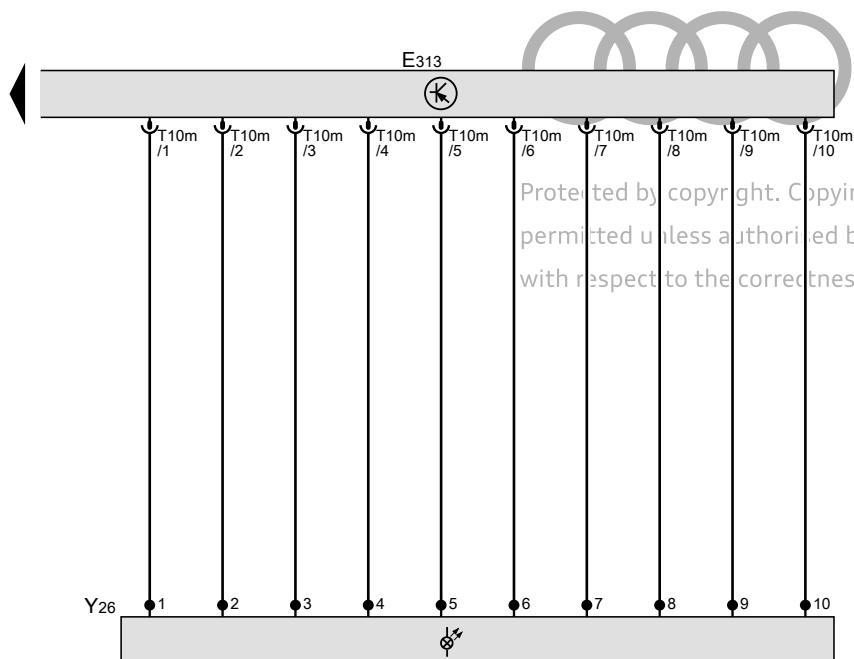

Selector lever, Selector lever position display

E313 Selector lever
T10m 10-pin connector, black
Y26 Selector lever position display

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

43 44 45 46 47 48 49 50 51 52 53 54 55 56

[6BA-006050619]