

ELECTRICAL

12 V Starting and Charging - CTS Coupe And Wagon

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Battery Cable Terminal Bolt	35 N.m	26 lb ft
Battery Hold Down Retainer Bolt	18 N.m	13 lb ft
Battery Negative Cable Bolt	20 N.m	15 lb ft
Battery Negative Cable Extension Cable Bolt (Engine Block)	35 N.m	26 lb ft
Battery Negative Cable Extension Cable Bolt (Shock Tower)	20 N.m	15 lb ft
Battery Negative Cable Clamp Nut	9 N.m	80 lb in
Battery Negative Cable Ground Bolt	20 N.m	15 lb ft
Battery Positive Cable Nut (at the underhood electrical center)	15 N.m	11 lb ft
Battery Positive Cable Nut (at the starter)	13 N.m	115 lb in
Generator BAT Terminal Nut	13 N.m	115 lb in
Generator Bolt	58 N.m	43 lb ft
Generator Bracket Bolt	58 N.m	43 lb ft
Generator Bracket Bolt (Inside)	22 N.m	16 lb ft
Starter Motor Mounting Bolt	58 N.m	43 lb ft
Starter Shield Bolt	8 N.m	115 lb in
Starter Shield Nut	8 N.m	71 lb in

BATTERY USAGE

Battery Usage

Application	Specification
Cold Cranking Amperage (CCA)	660 A
Amp Hours	80 A/H

GENERATOR USAGE

Generator Usage

Application	Specification
CTS-V Only	

Rated Output	150 Amps
Load Test Output	105 Amps
CTS	
Rated Output	140 Amos
Load Test Output	100 Amps

SCHEMATIC WIRING DIAGRAMS

STARTING AND CHARGING WIRING SCHEMATICS

Starting System

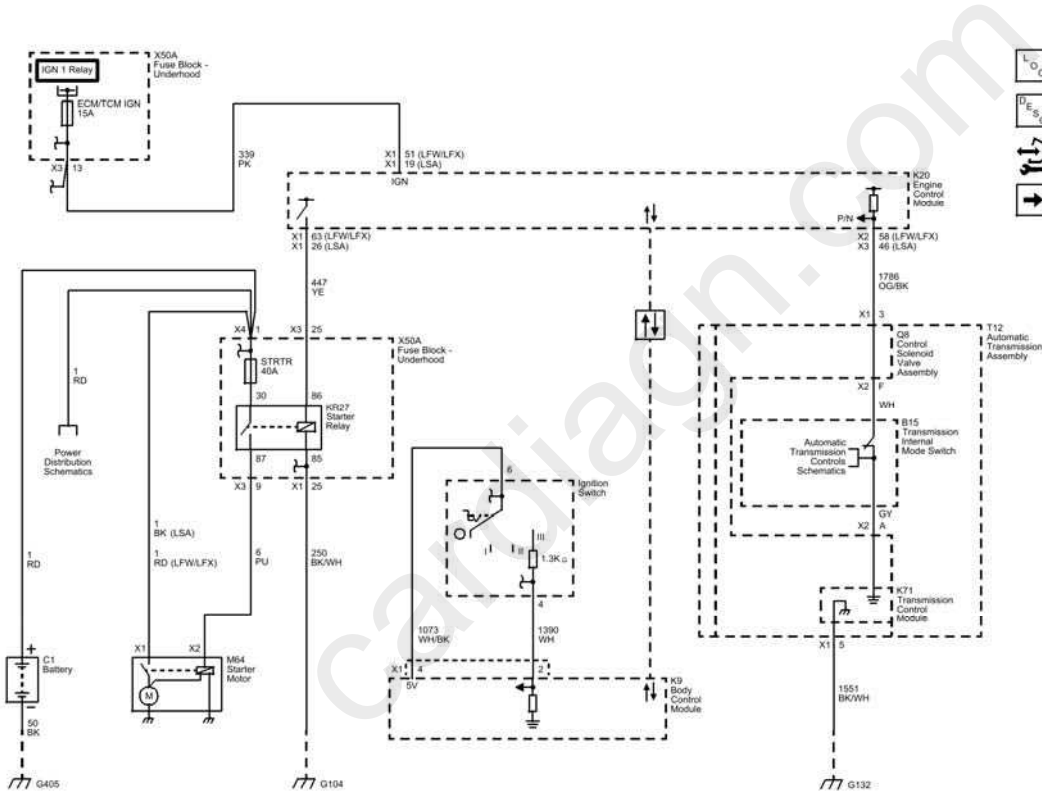


Fig. 1: Starting System
Courtesy of GENERAL MOTORS COMPANY

Charging System

<u>DTC B1516</u>	DTC B1516 08 Battery Current Sensor Signal Invalid DTC B1516 66 Battery Current Sensor Wrong Mounting Position
<u>DTC B151A</u>	DTC B151A 58 Low Battery Capacity Detected
<u>DTC B1527</u>	DTC B1527 00 Parasitic Load
<u>DTC C0895</u>	DTC C0895 Device Voltage
<u>DTC C0899</u>	DTC C0899 Device Voltage Low
<u>DTC C0900</u>	DTC C0900 00 Device Voltage High
<u>DTC P0615, P0616, or P0617</u>	DTC P0615 Starter Relay Control Circuit DTC P0616 Starter Relay Control Circuit Low Voltage DTC P0617 Starter relay Control Circuit High Voltage
<u>DTC P0621</u>	DTC P0621 Generator L-Terminal Circuit
<u>DTC P0622</u>	DTC P0622 Generator F-Terminal Circuit
<u>DTC P0622, P0625, or P0626</u>	DTC P0622 Generator F-Terminal Circuit DTC P0625 Generator F-Terminal Circuit Low Voltage DTC P0626 Generator F-Terminal Circuit High Voltage

DTC B1325, B1330, B1517, C0800, P0560, P0562, OR P0563: DEVICE POWER CIRCUIT/SYSTEM VOLTAGE

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC B1325 03

Device Power Circuit Voltage Below Threshold

DTC B1325 07

Device Power Circuit Voltage Above Threshold

DTC B1330 03

Device Power 2 Circuit Voltage Below Threshold

DTC B1517 03

Battery Voltage Below Threshold

DTC B1517 07

Battery Voltage Above Threshold

DTC B1517 5A

Battery Voltage Plausibility Failure

DTC C0800 03

Device Power 1 Circuit Voltage Below Threshold

DTC C0800 07

Device Power 1 Circuit Voltage Above Threshold

DTC C0800 11

Device Power 1 Circuit High Input

DTC C0800 0D

Device Power 1 Circuit High Resistance

DTC P0560

System Voltage

DTC P0562

System Voltage Lows Voltage

DTC P0563

System Voltage High Voltage

Circuit/System Description

The vehicle control modules or sensors monitor the system voltage to verify the system voltage is within the normal operating range.

Conditions for Running the DTC

The engine is running.

Conditions for Setting the DTC

The control module or sensor detects a system voltage of less than approximately 9 V or greater than 18 V for approximately 5 seconds.

Action Taken When the DTC Sets

- A driver information center message and/or warning indicator may be displayed.
- The control module may be temporarily disabled.

Conditions for Clearing the DTC

The system voltage returns to normal operating range.

Diagnostic Aids

- A high or low voltage DTC set or voltage value in multiple modules/sensors indicates a concern in the charging system.
- A possible cause of this DTC could be overcharging with a battery charger or jump starting.

Reference Information

Schematic Reference

Control Module References

Connector End View Reference

- **COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON**
- **INLINE HARNESS CONNECTOR END VIEWS - INDEX - COUPE AND WAGON**

Description and Operation

Charging System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Special Tools

- **DT 47825-10** Adapter Harness
- **DT 47825-20** Adapter Harness
- **DT 48616-10** Adapter Harness

For equivalent regional tools, refer to **Special Tools**.

Circuit/System Verification

1. Ignition OFF, measure and record the battery voltage at the battery terminals. The battery voltage should stabilize between 12.4 and 12.8 V within a few minutes of turning the ignition OFF.
 - If not within the specified range, refer to **Battery Inspection/Test**.
2. Engine running, accessories OFF, measure and record the battery voltage at the battery terminals. The voltage should be at least 1 V greater than the voltage measured in step 1 but less than 15 V.
 - If not within the specified range, refer to **Charging System Test**.
3. Observe the appropriate module scan tool B+ and ignition voltage parameters. The voltage readings should be within 1 V of the battery voltage.

Circuit/System Testing

NOTE: Use the schematic to identify the following:

- **Control modules the vehicle is equipped with**
- **The control modules ground, B+, and ignition circuit terminal IDs and connectors**

1. Ignition OFF, disconnect the harness connectors at the appropriate control module.

NOTE: Some control module ground circuits may require up to 20 minutes to achieve a resistance reading of less than 10 ohms. In most cases the readings will drop below 20 ohms within 1 minute indicating the control modules are going to sleep.

2. For the transmission control module only, connect the appropriate adapter harness to the transmission connector.
3. Ignition OFF, scan tool disconnected, open and close the driver door and wait 1 minute. Test for less than 10 ohms between each ground circuit terminal and ground.
 - If greater than the specified range, test the ground circuit for an open/high resistance.
4. If equipped, test for greater than 9 V between each B+ circuit terminal and ground.
 - If less than the specified range, test the B+ circuit for a short to ground or an open/high resistance.

NOTE: If the ignition circuit in Step 4 is providing voltage from a relay that has its coil grounded through the control module connector, you will have to connect a fused jumper wire from the relay ground to a good ground to

verify the ignition circuit works properly.

5. If equipped, ignition ON, test for greater than 9 V between each ignition circuit terminal and ground.
 - If less than the specified range, test the ignition circuit for a short to ground or an open/high resistance.
6. If all circuits test normal, replace the appropriate control module.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

Control Module References for control module replacement, programming and setup

DTC B1424: DEVICE 1 VOLTAGE LOW

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC B1424 00

Device 1 Voltage Low

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	B1424 00	B1424 00	-	-
Ground	-	B1424 00	-	-

Circuit/System Description

The theft deterrent module (TDM) monitors the battery positive (B+) voltage available to it. If the voltage at the TDM is between 6-9 V, and the voltage being reported by a serial data message is greater than 9 V, then DTC B1424 00 sets.

Conditions for Running the DTC

- The Ignition is in Accessory or Run
- The diagnostic runs every 100 milliseconds.

Conditions for Setting the DTC

- Voltage at the B+ circuit is between 6 and 9 V.
- Reported battery voltage received via serial data is valid and is greater than 9 V.
- The above conditions have been met for 2 seconds.

Action Taken When the DTC Sets

- Security Indicator turns ON.
- The driver information center (DIC) displays the SERVICE THEFT DETERRENT SYSTEM message.

Conditions for Clearing the DTC

- This DTC passes when the battery voltage at the TDM is greater than 9 V, or if the voltage reported by serial data is less than 9 V.
- A history DTC clears after 100 consecutive ignition cycles, if no failures are reported by this diagnostic.

Diagnostic Aids

A low voltage DTC in multiple modules indicates a concern in the charging system.

Reference Information

Schematic Reference

Immobilizer Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Immobilizer Description and Operation (with ATH) , Immobilizer Description and Operation (without ATH)

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Testing

1. Engine running, accessories OFF, measure and record the battery voltage at the battery terminals. The voltage should be between 12.6 and 15.0 V.
 - If the battery voltage is not within the specified range, refer to **Charging System Test**
2. Ignition OFF, disconnect the harness connector at the theft deterrent module (TDM).
3. Ignition OFF and scan tool disconnected, open and close the driver door, and wait 1 minute. Test for less than 5 ohms between the ground circuit terminal 3 and ground.
 - If greater than the specified range, test the ground circuit for an open/high resistance.
4. Ignition ON , verify a test lamp illuminates between the B+ circuit terminal 1 and ground.
 - If the test lamp does not illuminate, test the B+ circuit for a short to ground or an open/high resistance.
5. If the circuits test normal, replace the TDM.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

Control Module References for TDM replacement, set up, and programming

DTC B1516: BATTERY CURRENT SENSOR

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC B1516 08

Battery Current Sensor Signal Invalid

DTC B1516 66

Battery Current Sensor Wrong Mounting Position

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
5 V Reference	B1516 08	B1516 08	-	-
Signal	B1516 08	B1516 08	B1516 08	B1516 08, B1516 66
Low Reference	-	B1516 08	-	-

Circuit/System Description

The battery current sensor is a 3-wire hall effect current sensor. The body control module (BCM) supplies 5 V and ground to the battery current sensor. The battery current sensor measures the amount of current flowing to or from the battery, and supplies a pulse width modulation (PWM) signal to the BCM.

Conditions for Running the DTC

B1516 08

The BCM is awake.

B1516 66

- The BCM is awake.
- The engine is OFF.

Conditions for Setting the DTC

B1516 08

The battery current signal is less than 4 percent or greater than 96 percent duty cycle for 2 minutes.

B1516 66

The battery current polarity is positive for 2 minutes.

Action Taken When the DTC Sets

The regulated voltage control (RVC) is disabled.

Conditions for Clearing the DTC

The DTC passes when the battery current returns to the normal range for 15 seconds.

Diagnostic Aids

DTC B1516 08 could be set by overcharging with a battery charger or jump starting.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Charging System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Testing

B1516 08

1. Ignition OFF, disconnect the harness connector at the B18 battery current sensor.
2. Ignition OFF and scan tool disconnected, open and close the driver door, and wait 1 minute. Test for less than 30 ohms between the low reference circuit terminal B and ground.
 - If greater than specified range , test the low reference circuit for an open/high resistance. If the circuit tests normal, replace the K9 BCM.
3. Ignition ON, test for 4.8-5.2 V between the 5 V reference circuit terminal A and ground.
 - If less than the specified range , test the 5 V reference circuit for a short to ground or an open/high resistance. If the circuit tests normal, replace the K9 BCM.
 - If greater than the specified range, test the 5 V reference circuit for a short to voltage. If the circuit tests normal, replace the K9 BCM.
4. Ignition ON, test for 4.8-5.2 V between the signal circuit terminal C and ground.
 - If less than the specified range, test the signal circuit for a short to ground or an open/high resistance. If the circuit tests normal, replace the K9 BCM.
 - If greater than the specified range, test the signal circuit for a short to voltage. If the circuit tests normal, replace the K9 BCM.
5. If all circuits test normal, test or replace the B18 battery current sensor.

B1516 66

1. Verify that the B18 battery current sensor is installed securely around the negative battery cable, with the tape tab pointing away from the negative terminal on the C1 battery.
 - If the B18 battery current sensor is not installed correctly, remove and reinstall the sensor properly.
2. Replace the B18 battery current sensor.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Battery Current Sensor Replacement**
- **Control Module References** for BCM replacement, setup, and programming

DTC B151A: LOW BATTERY CAPACITY

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC B151A 58

Low Battery Capacity Detected

Circuit/System Description

The body control module (BCM) monitors the battery voltage level during an engine crank event to detect a low battery voltage condition.

Conditions for Running the DTC

The vehicle is ON

Conditions for Setting the DTC

A minimum crank battery voltage is less than the minimum crank battery voltage threshold for 16 consecutive crank events.

Action Taken When the DTC Sets

A driver information center message is displayed.

Conditions for Clearing the DTC

The DTC will clear if the minimum crank voltage is greater than the minimum crank voltage threshold during a crank event.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Charging System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

Refer to the **Battery Inspection/Test**.

DTC B1527: PARASITIC LOAD

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC B1527 00

Parasitic Load

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Battery Current Sensor 5 V Reference	B1527 00, B1516 08	B1527 00, B1516 08	-	-
Battery Current Sensor Signal	B1527 00, B1516 08	B1527 00, B1516 08	B1527 00, B1516 08	B1527 00, B1516 08, B1516 66
Battery Current Sensor Low		B1527 00, B1516		

Reference	-	08	-	-
-----------	---	----	---	---

Circuit/System Description

The body control module (BCM) monitors the state of charge of the electrical system.

Conditions for Running the DTC

The ignition is in Accessory or Run mode.

Conditions for Setting the DTC

The state of charge at ignition ON is 30% lower than when the engine was running and battery drain is more than 2 A.

Action Taken When the DTC Sets

There is no battery telltale illuminated or DIC message displayed.

Conditions for Clearing the DTC

- The DTC will clear if the fault does not return after 50 consecutive ignition cycles.
- The DTC will clear when run state of charge is greater than or equal to 80%.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Charging System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Verify that the B18 Battery Current Sensor is installed securely around the negative battery cable, with the tape tab pointing away from the negative terminal on the C1 Battery.

- **If the B18 Battery Current Sensor is not installed correctly**

Remove and reinstall the B18 Battery Current Sensor properly.

- **If the B18 Battery Current Sensor is installed correctly**

2. Ignition ON, headlamps and HVAC blower motor on HIGH.
3. Verify the scan tool Battery Current Sensor parameter is negative amps.

- **If positive**

Refer to Circuit/System Testing.

- **If negative**

4. Engine running.
5. Verify the scan tool Battery Current Sensor parameter is positive amps.

- **If negative**

Refer to Circuit/System Testing.

- **If positive**

6. Refer to **Battery Electrical Drain/Parasitic Load Test**.

Circuit/System Testing

NOTE: **You must perform the Circuit/System Verification first.**

1. Ignition OFF and all vehicle systems OFF, disconnect the harness connector at the B18 Battery Current Sensor. It may take up to 2 minutes for all vehicle systems to power down.
2. Test for less than 30 ohms between the low reference circuit terminal B and ground.
 - **If 30 ohms or greater**
 1. Ignition OFF, disconnect the X5 harness connector at the K9 Body Control Module.
 2. Test for less than 2 ohms in the low reference circuit end to end.
 - If 2 ohms or greater, repair the open/high resistance in the circuit.
 - If less than 2 ohms, replace the K9 Body Control Module.
 - **If less than 30 ohms**
3. Ignition ON.
4. Test for 4.8-5.2 V between the 5 V reference circuit terminal A and ground.
 - **If less than 4.8 V**

1. Ignition OFF, disconnect the X4 harness connector at the K9 Body Control Module.
2. Test for infinite resistance between the 5 V reference circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
3. Test for less than 2 ohms in the 5V reference circuit end to end.
 - If 2 ohms or greater, repair the open/high resistance in the circuit.
 - If less than 2 ohms, replace the K9 Body Control Module.
 - **If greater than 5.2 V**
1. Ignition OFF, disconnect the X4 harness connector at the K9 Body Control Module, ignition ON.
2. Test for less than 1 V between the 5 V reference circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K9 Body Control Module.
 - **If between 4.8-5.2 V**
5. Test for 4.8-5.2 V between the signal circuit terminal C and ground.
 - **If less than 4.8 V**
1. Ignition OFF, disconnect the X4 harness connector at the K9 Body Control Module.
2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
3. Test for less than 2 ohms in the signal circuit end to end.
 - If 2 ohms or greater, repair the open/high resistance in the circuit.
 - If less than 2 ohms, replace the K9 Body Control Module.
 - **If greater than 5.2 V**
1. Ignition OFF, disconnect the X4 harness connector at the K9 Body Control Module, ignition ON.
2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K9 Body Control Module.
 - **If between 4.8-5.2 V**
6. Test or replace the B18 Battery Current Sensor.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Battery Current Sensor Replacement**
- **Control Module References** for BCM replacement, programming, and setup.

DTC C0895: DEVICE VOLTAGE

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC C0895

Device Voltage

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	C0895	C0895	-	-
Ground	-	C0895	-	-

Circuit/System Description

Voltage is supplied to the electronic suspension control (ESC) module through the battery positive voltage circuit. The ESC module monitors the supplied voltage to determine if it is within a valid operating range.

Conditions for Running the DTC

Ignition is ON.

Conditions for Setting the DTC

The DTC is set when the battery voltage is outside the normal range of 9-15.5 V.

Action Taken When the DTC Sets

- The electronic suspension control system (ECS) is disabled for the duration of the ignition cycle.
- The TCS indicator illuminates on the IPC.
- The DIC displays the Service Stability System message, if equipped.
- Disable All Functionality

Conditions for Clearing the DTC

The DTC is saved as history when the ESC module no longer sees battery voltage outside the normal range of 9-15.5 V. The DTC will clear if the fault does not return after 50 consecutive ignition cycles.

Diagnostic Aids

- A high or low voltage DTC set in multiple modules indicates a concern in the charging system.
- A possible cause of this DTC could be overcharging with a battery charger or jump starting.

- A high or low voltage value in multiple modules indicates a concern in the charging system.

Reference Information

Schematic Reference

Electronic Suspension Control Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Electronic Suspension Control Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Engine running measure and record the voltage at the battery terminals.
2. Verify that the battery voltage is 12.6-15.5 V.
 - If the battery voltage is not within the specified range, refer to **Charging System Test**
3. Engine running, observe the scan tool ESC Battery Positive Voltage parameter.
4. Verify that the scan tool displays a value that is within 2 V of the battery terminal voltage.

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the ESC module.
2. Ignition OFF, test for less than 5 ohms between the ground circuit terminal 47 and ground.
 - If greater than the specified range, test the ground circuit for an open/high resistance.
3. Ignition ON, verify a test lamp illuminates between the B+ circuit terminal 32 and ground.
 - If the test lamp does not illuminate, test the B+ circuit for a short to ground or an open/high resistance.
4. If all circuits test normal, replace the ESC module.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

Control Module References for ESC module replacement, setup and programming

DTC C0899: DEVICE VOLTAGE LOW

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC C0899

Device Voltage Low

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	C0899	C0899	-	-
Ground	-	C0899	-	-

Circuit/System Description

The electronic brake control module (EBCM) monitors the ignition voltage level available for system operation. A low voltage condition prevents the system from operating properly.

Conditions for Running the DTC

ignition is ON.

Conditions for Setting the DTC

This DTC will set if the B+ voltage to EBCM is less than 9 V for 100 msec.

Action Taken When the DTC Sets

- The traction control system (TCS) and vehicle stability enhancement system (VSES) are disabled for the duration of the ignition cycle.
- The ABS and TCS indicators illuminate on the IPC.
- The brake warning indicator illuminates.

- The driver information center (DIC) displays the SERVICE STABILITRAK / SERVICE TRACTION CONTROL message.

Conditions for Clearing the DTC

- The condition for the DTC is no longer present.
- The EBCM automatically clears the history DTC when a current DTC is not detected in 100 consecutive drive cycles.

Diagnostic Aids

- A low voltage DTC in multiple modules indicates a concern in the charging system
- Inspect the ground connection G110 to ensure that it is clean and tight.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

ABS Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information.

Circuit/System Verification

1. Engine running measure and record the voltage at the battery terminals. Verify that the battery voltage is 12.6-15.5 V.
 - If not within the specified range, refer to **Charging System Test**.
2. Observe the scan tool EBCM Battery Voltage Signal parameter. The reading should be between 12.6 and 15.5 V.

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the EBCM.
2. Ignition OFF and scan tool disconnected, open and close the driver door, and wait 1 minute. Test for less than 10 ohms between the ground circuit terminals listed below and ground:
 - Terminal 1
 - Terminal 25
 - If greater than the specified range, test the ground circuit for an open/high resistance.
3. Verify that a test lamp illuminates between the B+ circuit terminals listed below and ground:
 - Terminal 13
 - Terminal 38
 - If the test lamp does not illuminate, test the B+ circuits for a short to ground or an open/high resistance.
4. If all circuits test normal, replace the EBCM.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

Control Module References for EBCM replacement, setup and programming

DTC C0900: DEVICE VOLTAGE HIGH

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC C0900 00

Device Voltage High

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	C0899 00	C0899 00	-	-
Ground	-	C0899 00	-	-

Circuit/System Description

The EBCM monitors the ignition voltage. If the voltage level is too high, damage may result in the system. When a high voltage condition is detected the EBCM turns OFF the system relay which removes battery voltage from the solenoid valves and pump motor.

Conditions for Running the DTC

The ignition is ON.

Conditions for Setting the DTC

The system voltage is greater than 16 V for 100 msec.

Action Taken When the DTC Sets

- Traction Control System (TCS) and Vehicle Stability Enhancement System (VSES) disabled for the duration of the ignition cycle.
- ABS disabled if ignition voltage exceeds 19.5 V.
- The TCS indicator turns ON.
- The Antilock Brake System (ABS) indicator turns ON if voltage exceeds 19.5 V.
- The driver information center (DIC) displays the SERVICE STABILITRAK / SERVICE TRACTION CONTROL message

Conditions for Clearing the DTC

- The condition for the DTC is no longer present.
- The EBCM automatically clears the history DTC when a current DTC is not detected in 100 consecutive drive cycles.

Diagnostic Aids

- A high voltage value in multiple modules indicates a concern in the charging system.
- DTC C0900 could be set by overcharging with a battery charger or jump starting.
- Inspect the ground connection G110 to ensure that it is clean and tight.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

ABS Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information.

Circuit/System Verification

1. Engine running measure and record the voltage at the battery terminals. Verify that the battery voltage is 12.6-15.5 V
 - If not within the specified range, refer to **Charging System Test**
2. Engine running, observe the scan tool EBCM Battery Voltage Signal parameter. The reading should be between 12.6 and 15.5 V
 - If not within the specified range, replace the EBCM.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

Control Module References for EBCM replacement, setup and programming.

DTC P0615, P0616, OR P0617: STARTER RELAY

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC P0615

Starter Relay Control Circuit

DTC P0616

Starter Relay Control Circuit Low Voltage

DTC P0617

Starter relay Control Circuit High Voltage

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Control	P0615*, P0616**	P0615*, P0616**	-	-
Ground	-	P0615*, P0616**	-	-
* LF1, 6.2L ** LLT				

Circuit/System Description

When the ignition switch is placed in the START position, a discrete signal is supplied to the body control module (BCM) notifying it that the ignition is in the START position. The BCM then sends a message to the engine control module (ECM) that crank has been requested. The ECM then verifies that the clutch pedal is depressed or the transmission is in Park/Neutral. If it is, the ECM then supplies 12 V to the control circuit of the starter relay. When this occurs, battery voltage is supplied through the switch of the starter relay to the starter solenoid.

Conditions for Running the DTC

- The ignition is in the START position.
- The system voltage is between 9.5-18 V.

Conditions for Setting the DTC

The ECM detects improper voltage on the control circuit of the starter relay.

Action Taken When the DTC Sets

DTC P0615, P0616, and P0617 are C type DTCs.

Conditions for Clearing the DTC

DTC P0615, P0616, and P0617 are C type DTCs.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Starting System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Testing

1. Ignition OFF, disconnect the KR27 starter relay.
2. Ignition OFF and scan tool disconnected, open and close the driver door, and wait 1 minute. Test for less than 5.0 ohms between the relay ground circuit terminal 85 and ground.
 - If greater than the specified range, test the ground circuit for an open/high resistance.
3. Ignition OFF, connect a test lamp between the control circuit terminal 86 and the ground circuit terminal 85.
4. With the transmission range selector in park or neutral, cycle the ignition between the OFF and CRANK position. The test lamp should turn ON and OFF when changing between the commanded states.
 - If the test lamp is always ON, test the control circuit for short to voltage. If the circuit tests normal, replace the K20 ECM.
 - If the test lamp is always OFF, test the control circuit for a short to ground or an open/high resistance. If the circuit tests normal, replace the K20 ECM.
5. If all circuits tests normal, replace the KR27 starter relay.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Relay Replacement (Within an Electrical Center)** , **Relay Replacement (Attached to Wire Harness)**
- **Control Module References** for ECM replacement, setup, and programming

DTC P0621: GENERATOR L-TERMINAL CIRCUIT

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC P0621

Generator L-Terminal Circuit

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	P0622	P0621	-	-
Control - L Terminal	P0621	P0621	P0621	-
Signal - F Terminal	P0622	P0622	P0622	P0622

Circuit/System Description

The engine control module (ECM) uses the generator turn ON control circuit to control the load of the generator on the engine. A high side driver in the ECM applies a duty cycled voltage to the voltage regulator. The duty cycle controls the voltage regulator to turn the field circuit ON and OFF. The ECM monitors the state of the generator turn ON control circuit. The ECM should detect low voltage on the generator turn on control circuit when the ignition is ON and the engine is OFF, or when the charging system malfunctions. With the engine running, the ECM should detect high voltage when the duty cycle voltage is commanded high and a low voltage when the duty cycle voltage is commanded low on the generator turn on control circuit.

Conditions for Running the DTC

- Ignition ON, engine OFF (Prior to Ignition ON, the ignition must have been OFF for at least 5 s)
- The engine is running for the run test

Conditions for Setting the DTC

- Ignition ON, engine OFF - The ECM detects greater than 3.5 V on the generator control circuit for 5 s
- Engine running - The ECM detects a low voltage for 15 s on the generator control circuit when the duty cycle voltage is commanded high
- Engine running - The ECM detects a high voltage for 15 s on the generator control circuit when the duty cycle voltage is commanded low

Action Taken When the DTC Sets

DTC P0621 is a C type DTC

Conditions for Clearing the DTC

- Ignition ON, engine OFF- Low voltage
- Engine running - A control signal duty cycle is detected

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Charging System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
2. Verify the DTC does not set.
 - **If the DTC sets**

Refer to Circuit/System Testing.
 - **If the DTC does not set**
3. All OK.

Circuit/System Testing

1. Verify a test lamp illuminates between the G13 Generator B+ circuit terminal 1 X2 or A X2 and ground.
 - **If the test lamp does not illuminate and the circuit fuse is good**
 1. Remove the test lamp and disconnect the B+ cable at the G13 Generator.
 2. Test for less than 2 ohms in the B+ circuit end to end.
 - If 2 ohms or greater, repair the open/high resistance in the circuit.
 - If less than 2 ohms, verify the fuse is not open and there is voltage at the fuse.
 - **If the test lamp does not illuminate and the circuit fuse is open**
 1. Remove the test lamp, disconnect the battery negative cable, and disconnect the G13 Generator B+ cable.
 2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - **If the test lamp illuminates**
2. Disconnect the X1 harness connector at the G13 Generator, ignition ON.
3. Test for 3.0- 5.5 V between the control circuit terminal 1 and ground.
 - **If less than 3.0 V**
 1. Ignition OFF, disconnect the harness connectors at the K20 Engine Control Module.
 2. Test for infinite resistance between the control circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
 3. Test for less than 2 ohms in the control circuit end to end.
 - If greater the 2 ohms, repair the open/high resistance in the circuit.
 - If less than 2 ohms, replace the K20 Engine Control Module.
 - **If greater than 5.5 V**
 1. Ignition OFF, disconnect the harness connectors at the K20 Engine Control Module, Ignition ON.
 2. Test for less than 1 V between the control circuit and ground.
 - If greater than 1 V, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K20 Engine Control Module.
 - **If between 3.0-5.5 V**
4. Test or replace the G13 Generator.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Generator Replacement (6.2L), Generator Replacement (3.6L)**
- **Control Module References** for engine control module replacement, programming, and setup

DTC P0622: GENERATOR F-TERMINAL CIRCUIT

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC P0622

Generator F-Terminal Circuit

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	-	P0621	-	-
Control - L Terminal	P0621	P0621	P0621	-
Signal - F Terminal	P0622	P0622	P0622	P0622

Circuit/System Description

The engine control module (ECM) uses the generator field duty cycle signal circuit, or F-terminal circuit, to monitor the duty cycle of the generator. The generator field duty cycle signal circuit connects to high side of the field windings in the generator. A pulse width modulated (PWM) high side driver in the voltage regulator turns the field windings ON and OFF. The ECM uses the PWM signal input to determine the generator load on the engine. This allows the ECM to adjust the idle speed to compensate for high electrical loads. The ECM monitors the status of the generator field duty cycle signal circuit. When the ignition is ON and the engine is OFF, the ECM should detect a duty cycle near 0%. When the engine is running, the duty cycle should be between 5-99%.

Conditions for Running the DTC

- Ignition ON, engine OFF (Prior to Ignition ON, the ignition must have been OFF for at least 5 s).
- Engine running at less than 3,000 RPM.

Conditions for Setting the DTC

- DTC P0621 is not set.
- Ignition ON, engine OFF (Prior to Ignition ON, the ignition must have been OFF for at least 5 seconds), the ECM detects a PWM signal that is greater than 65% for 5 s.
- Engine running at less than 3,000 RPM - The ECM detects a PWM signal that is less than 5% for 30 s.

Action Taken When the DTC Sets

DTC P0622 is a C type DTC.

Conditions for Clearing the DTC

- Ignition ON, Engine OFF- Low / no PWM signal detected.
- Engine running - A 5-90% duty cycle is detected.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Charging System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

NOTE: Do not have a battery charger connected during the generator testing.

1. Engine running.
2. Verify the scan tool Engine Control Module Generator F-Terminal Signal parameter is between 5-90%.
 - **If not between 5-90%**

Refer to Circuit/System Testing.

- **If between 5-90%**

3. Verify the scan tool Engine Control Module Generator F-Terminal Signal parameter changes when commanding the headlamps ON and OFF.

- **If the parameter does not change**

Refer to Circuit/System Testing.

- **If the parameter changes**

4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

5. Verify the DTC does not set.

- **If the DTC sets**

Refer to Circuit/System Testing.

- **If the DTC does not set**

6. All OK.

Circuit/System Testing

1. Verify a test lamp illuminates between the G13 Generator B+ circuit terminal 1 X2 or A X2 and ground.

- **If the test lamp does not illuminate and the circuit fuse is good**

1. Remove the test lamp and disconnect the B+ cable at the G13 Generator.
2. Test for less than 2 ohms in the B+ circuit end to end.
 - If 2 ohms or greater, repair the open/high resistance in the circuit.
 - If less than 2 ohms, verify the fuse is not open and there is voltage at the fuse.

- **If the test lamp does not illuminate and the circuit fuse is open**

1. Remove the test lamp, disconnect the battery negative cable, and disconnect the G13 Generator B+ cable.
2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.

- **If the test lamp illuminates**

2. Disconnect the X1 harness connector at the G13 Generator, engine running.
3. Verify the scan tool Engine Control Module Generator F-Terminal Signal parameter is less than 5%.

- **If 5% or greater**

1. Ignition OFF, disconnect the harness connector at the K20 Engine Control Module, ignition ON.
2. Test for less than 1 V between the signal circuit terminal 2 and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V, replace the K20 Engine Control Module.

- **If less than 5%**

4. Install a 3 A fused jumper wire between the signal circuit terminal 2 and B+, engine running.
5. Verify the scan tool Engine Control Module Generator F-Terminal Signal parameter is greater than 95%.

- **If 95% or less**
- 1. Ignition OFF, remove the jumper wire, disconnect the harness connector at the K20 Engine Control Module.
- 2. Test for infinite resistance between the signal circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance
- 3. Test for less than 2 ohms in the signal circuit end to end.
 - If 2 ohms or greater, repair the open/high resistance in the circuit
 - If less than 2 ohms, replace the K20 Engine Control Module.
- **If greater than 95%**
- 6. Test or replace the G13 Generator.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Generator Replacement (6.2L)**, **Generator Replacement (3.6L)**
- **Control Module References** for engine control module replacement, programming, and setup

DTC P0622, P0625, OR P0626: GENERATOR F-TERMINAL CIRCUIT

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC P0622

Generator F-Terminal Circuit

DTC P0625

Generator F-Terminal Circuit Low Voltage

DTC P0626

Generator F-Terminal Circuit High Voltage

Diagnostic Fault Information

	Short to	Open/High	Short to	Signal
--	----------	-----------	----------	--------

Circuit	Ground	Resistance	Voltage	Performance
B+	P0621	P0621	-	-
Signal	P0622*, P0625**	P0622*, P0625**	P0622*, P0626**	-
Control	P0621	P0621	P0621	-
* 3.0L or 6.2L engines ** 3.6L engine				

Circuit/System Description

The engine control module (ECM) uses the generator field duty cycle signal circuit, or F-terminal circuit, to monitor the duty cycle of the generator. The generator field duty cycle signal circuit connects to high side of the field windings in the generator. A pulse width modulated (PWM) high side driver in the voltage regulator turns the field windings ON and OFF. The ECM uses the PWM signal input to determine the generator load on the engine. This allows the ECM to adjust the idle speed to compensate for high electrical loads. The ECM monitors the status of the generator field duty cycle signal circuit. When the ignition is ON and the engine is OFF, the ECM should detect a duty cycle near 0 percent. When the engine is running, the duty cycle should be between 5-99 percent.

Conditions for Running the DTC

P0622 and P0625

- The engine is running.
- The engine speed is less than 3000 RPM.

P0622 and P0626

- The engine is not running.
- The ignition is in the ON position.

Conditions for Setting the DTC

P0622 and P0625

The ECM detects a pulse width modulated (PWM) signal less than 5 percent for 15 seconds.

P0622 and P0626

The ECM detects a pulse width modulated (PWM) signal greater than 65 percent for 15 seconds.

Action Taken When the DTC Sets

DTC P0622, P0625 and P0626 are a C type DTCs.

Conditions for Clearing the DTC

DTC P0622, P0625 and P0626 are a C type DTCs.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Charging System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

Engine running, observe the scan tool GEN-F Terminal Signal parameter. The GEN-F Terminal Signal parameter should display between 5-99 percent.

Circuit/System Testing

1. Verify that a test lamp illuminates between the G13 generator B+ terminal 1 X2 and ground.
 - If the test lamp does not illuminate, test the B+ circuit for a short to ground or an open/high resistance.
2. Ignition OFF, disconnect the X1 harness connector at the G13 generator.
3. Ignition ON, verify the scan tool ECM GEN-F Terminal Signal parameter displays less than 5 percent.
 - If greater than the specified range, test the signal circuit terminal 2 for a short to voltage. If the circuit tests normal, replace the K20 ECM.

4. Install a 3 A fused jumper wire between B+ and the signal circuit terminal 2.
5. Verify the scan tool ECM GEN-F Terminal Signal parameter displays greater than 95 percent.
 - If less than the specified range, test the signal circuit terminal 2 for a short to ground or an open/high resistance. If the circuit tests normal, replace the K20 ECM.
6. If the circuit tests normal replace the G13 generator.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Generator Replacement (6.2L), Generator Replacement (3.6L)**
- **Control Module References** for ECM replacement, setup, and programming

SYMPTOMS - ENGINE ELECTRICAL

NOTE: The following steps must be completed before using the symptom tables.

- Perform **Diagnostic System Check - Vehicle** before using the Symptom Tables in order to verify that all of the following are true:
 - There are no DTCs set.
 - The control modules can communicate via the serial data link.
- Review the system descriptions and operations in order to familiarize yourself with the system functions. Refer to one of the following system operations:
 - **Battery Description and Operation**
 - **Charging System Description and Operation**
 - **Electrical Power Management Description and Operation**
 - **Starting System Description and Operation**

Visual/Physical Inspection

- Inspect for aftermarket devices which could affect the operation of the starting and charging systems. Refer to **Checking Aftermarket Accessories** .
- Inspect the easily accessible or visible system components for obvious damage or conditions which could cause the symptom.

Intermittent

Faulty electrical connections or wiring may be the cause of intermittent conditions. Refer to **Testing for Intermittent Conditions and Poor Connections** .

Symptom List

Refer to a symptom diagnostic procedure from the following list in order to diagnose the symptom:

- Battery Inspection/Test
- Battery Electrical Drain/Parasitic Load Test
- Charging System Test
- Generator Noise Diagnosis
- Starter Solenoid Does Not Click
- Starter Solenoid Clicks, Engine Does Not Crank
- Engine Cranks Slowly
- Starter Noise Diagnosis

BATTERY INSPECTION/TEST

Diagnostic Instructions

- Perform the Diagnostic System Check - Vehicle prior to using this diagnostic procedure.
- Review Strategy Based Diagnosis for an overview of the diagnostic approach.
- Diagnostic Procedure Instructions provides an overview of each diagnostic category.

Diagnostic Aids

NOTE: For Warranty repairs -

You must use regionally required battery test equipment for warranty repairs.

For accurate test results the battery must be disconnected from the vehicle and the equipment connected directly to the battery posts. When setting up the equipment, select "Out of Vehicle" and then the correct battery type (Flooded or AGM) and rated CCA (both from the battery label) must be entered.

- **Failure to obtain the correct connections during the test may result in a failed test on a good battery.**
- **Use the Out of Vehicle test (both batteries disconnected with test equipment connected directly to the post) test for each battery when testing a vehicle with dual batteries.**

Follow these instructions in order to avoid an incorrect diagnosis because of connections:

- If testing the vehicle with the battery cables still connected, wiggle the battery tester clips on the terminal. This may cut through any coating or through any oxidation that may be present on the terminal.
- If correct connections to the battery terminals in the vehicle are in doubt, perform the following steps:
 1. Disconnect the negative battery cable.
 2. Disconnect the positive battery cable.
 3. Follow the instructions for testing a removed battery.
- If the tester displays a REPLACE BATTERY or BAD CELL-REPLACE result for a battery tested in the

vehicle with the battery cables connected, perform the following steps:

1. Disconnect the negative battery cable.
2. Disconnect the positive battery cable.

NOTE: Always write the test code displayed by the tester on the repair order for any warranty purposes. The number is a unique code that describes the test data for a particular battery at a particular time. The test code may occasionally repeat when you retest the same battery. More often, each test will result in a different code. Use the test code from the second, or Out of Vehicle test.

3. Follow the instructions for testing a removed battery.
4. Replace the battery only if the second test shows a REPLACE BATTERY or BAD CELL-REPLACE result.

Use the test code from the second test for any warranty purposes.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Starting System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Special Tools

EL 50313 Battery Tester

Circuit/System Testing

WARNING: Unless directed otherwise, the ignition and start switch must be in the OFF or LOCK position, and all electrical loads must be OFF before servicing any electrical component. Disconnect the negative battery cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to the vehicle or its components.

For Vehicles equipped with OnStar® (UE1) with Back Up Battery:

The Back Up Battery is a redundant power supply to allow limited OnStar® functionality in the event of a main vehicle battery power disruption to the VCIM (OnStar® module). Do not disconnect the main vehicle battery or remove the OnStar® fuse with the ignition key in any position other than OFF. Retained accessory power should be allowed to time out or be disabled (simply opening the driver door should disable retained accessory power) before disconnecting power. Disconnecting power to the OnStar® module in any way while the ignition is On or with retained accessory power activated may cause activation of the OnStar® Back-Up Battery system and will discharge and permanently damage the back-up battery. Once the Back-Up Battery is activated it will stay on until it has completely discharged. The back-up battery is not rechargeable and once activated the back-up battery must be replaced.

1. Verify the C1 or C1B Battery case is not cracked, broken, or damaged, which may be indicated by battery acid leakage.
 - **If there is any apparent damage**

Replace the C1 or C1B Battery.
 - **If there is no damage**
2. Verify the cold cranking amperage and amperage hour rating of the C1 or C1B Battery. Refer to the manufacturer specifications on the battery label.
 - **If the C1 or C1B Battery does not meet specifications**

Replace the C1 or C1B Battery.
 - **If the C1 or C1B Battery meets specifications**
3. Verify that the battery cables are clean and tight. The battery terminal bolts should be torqued as specified in **Fastener Tightening Specifications**.
 - **If the battery cables need to be cleaned or tightened**

Clean as required and tighten as specified.

- **If the battery cables are clean and tight**

4. Install the battery tester and follow directions supplied by the tester.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

Battery Replacement

BATTERY CHARGING

Special Tools

EL 50313 Battery Tester

For equivalent regional tools, refer to **Special Tools**.

Diagnostic Aids

- For best results, use an automatic taper-rate battery charger with a voltage capability of 16 V.
- The charging area should be well ventilated.
- Do not charge a battery that appears to be frozen. Allow the battery to warm to room temperature and test it using the EL 50313 before charging.

Battery State of Charge

NOTE: **Using voltage to determine the batteries state of charge is only accurate after the battery has been at rest for 24 hours. This is enough time for the acid in each cell to equalize. If the battery has been charged or discharged in the past 24 hours, the battery state of charge will only be an estimate.**

The maintenance-free batteries state of charge is estimated by reading the voltage of the battery across the battery terminals. Because the voltage is affected by current flow into or out of the battery, the engine must be stopped and all electrical loads turned OFF, including parasitic loads, when checking the voltage. The voltage can also be affected if the battery has just been charged or discharged, so it is important to consider what has happened to the battery in the time just before testing. Use the following procedure to determine the battery's state of charge:

1. Be sure all electrical loads are turned OFF.
2. Determine whether the battery has been used in a vehicle or charged within the past 12 hours.
 - If the answer is no, the terminal voltage will be stabilized and no action is necessary before reading the voltage. Skip to step 3.
 - If the answer is yes, terminal voltage will not be stabilized and you should wait 12 hours since the last time the battery was used.
3. Estimate the battery temperature by determining the average temperature to which the battery has been

exposed for the past 12 hours.

NOTE: The table is accurate to 10 % only after the battery has been at rest for 12 hours.

4. Measure the battery voltage at the battery terminals. Refer to the following table to determine the state of charge according to the estimated battery temperature:

Battery Voltage	% Charge at 0°C (32°F)	% Charge at 25°C (75°F)
12.75 V	100%	100%
12.7 V	100%	90%
12.6 V	90%	75%
12.45 V	75%	65%
12.2 V	65%	45%
12.0 V	40%	20%

Use the state of charge information as follows:

- A battery with a state of charge that is below 65% must always be recharged before returning it to service or continuing storage.
- A battery with a state of charge that is 65% or greater is generally considered to be charged enough in order to be returned to normal service or in order to continue storage. However, if the battery is being used in slow traffic or with short drive times, or if the temperature is very hot or very cold, the battery should be fully charged, to at least 90%, before returning it to service or continuing storage.

Charging Time Required

The time required to charge a battery will vary depending upon the following factors:

- The battery charger capacity-The higher the charger amperage, the less time it will take to charge the battery.
- The state of charge of the battery-A completely discharged battery requires more than twice as much charging time as a half charged battery. In a discharged battery with a voltage below 11 V, the battery has a very high internal resistance and may only accept a very low current at first. Later, as the charging current causes the acid content to increase in the electrolyte, the charging current will increase. Extremely discharged batteries may not activate the reversed voltage protection in some chargers. Refer to the manufacturer's instructions for operating this circuitry.
- The temperature of the battery-The colder the battery is, the more time it takes to recharge the battery. The charging current accepted by a cold battery is very low at first. As the battery warms, the charging current will increase.

Charging Procedure

CAUTION: Turn OFF the ignition when connecting or disconnecting the battery cables, the battery charger or the jumper cables. Failure to do so may

damage the ECM/PCM or other electronic components.

CAUTION: Refer to Fastener Caution .

When charging side-terminal batteries with the battery cables connected, connect the charger to the positive cable bolt and to a ground located away from the battery. When charging side-terminal batteries with the battery cables disconnected, install the battery side terminal adapters and connect the charger to the adapters.

Tighten

Tighten the battery side terminal adapters to 15 (11 lb ft).

Use the following procedure to charge the battery:

1. Turn OFF the charger.
2. Ensure that all of the battery terminal connections are clean and tight.
3. Connect the charger positive lead to the battery positive terminal on the battery or the remote jumper stud underhood.

CAUTION: Do not connect the negative charger lead to the housings of other vehicle electrical accessories or equipment. The action of the battery charger may damage such equipment.

4. Connect the negative charger lead to a solid engine ground or to a ground stud in the engine compartment that is connected directly to the battery negative terminal, but away from the battery. If the negative battery cable is disconnected and a terminal adapter is being used, connect directly to the adapter.
5. Turn ON the charger and set to the highest setting for normal charging.
6. Inspect the battery every half hour after starting the battery charger.
 - Charge the battery until the taper-rate charger indicates that the battery is fully charged.
 - Estimate the battery temperature by feeling the side of the battery. If it feels hot to the touch or its temperature is over 45°C (125°F), discontinue charging and allow the battery to cool before resuming charging.
7. After charging, test the battery. Refer to Battery Inspection/Test.

BATTERY ELECTRICAL DRAIN/PARASITIC LOAD TEST

12 V Battery

The following procedure is for the 12 V battery only.

Diagnostic Instructions

- Perform the Diagnostic System Check - Vehicle prior to using this diagnostic procedure.

- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Circuit/System Description

Components most likely to cause a parasitic draw on the vehicles battery are switches, relays, and control modules. After the ignition is turned OFF the control modules will begin to go to sleep shut OFF. All control modules do not go to sleep at the same time, some may take up to 30 min or longer after turning the ignition off before going to sleep. Other modules may periodically wake up then go back to sleep. These are all normal conditions.

Diagnostic Aids

- Rule out any possible aftermarket equipment causing an unacceptable parasitic current drain. Aftermarket accessories installed into the courtesy lamp circuit can cause the inadvertent power timer in the body control module (BCM) to keep resetting. This may cause the BCM to remain awake and cause a current drain on the battery.
- Rule out customer driving habits such as regular short trips that do not allow enough time to properly charge the battery. Refer to **Battery Description and Operation**.
- Verify that the battery and charging system are in proper working order. Refer to **Battery Charging**, and **Charging System Test**.
- A battery discharging for no apparent reason while the vehicle is parked can be caused by an intermittent draw, such as a module waking up, or a continuous draw, such as a dome light or stuck relay.
- Some systems and modules such as OnStar®, and regulated voltage control, if equipped, are designed to wake up, perform a task, and go back asleep at regular intervals. Refer to **Body Control System Description and Operation** for the system or modules description and operation.
- An engine off natural vacuum evaporative test can occur if the engine control module (ECM) determines the drive cycle has met the appropriate criteria immediately after key off. The ECM will stay awake and the vent solenoid will stay energized for as long as 45 min. The typical current draw for this is about 1 A.
- Digital OnStar generation 6 and later vehicle communication interface module do not "wake up" every 10 min for the first 48 h as the generation 5 and prior. generation 6 and later vehicle communication interface module current draw is very low, less than 40 mA, so the OnStar system is left in that state for up to the first 48 h. Parasitic draw of up to 40 mA with an occasional spike as high as 80 mA through the vehicle communication interface module for the first 48 h is normal.
- Some automatic climate control systems can remain in a semi awake state for up to three hours, actual draw amounts vary by vehicle platform but are typically not greater than 50 mA.
- An extremely low mA current level is consumed by the remote keyless entry receiver for monitoring purposes, actual system wake up only occurs when the fobs for the vehicle are used. When other devices on the same remote keyless entry operating frequency are activated, such as the 4 tire pressure monitoring sensors and other vehicle FOBs in the vicinity, the remote keyless entry receiver will have a 100 mA spike. These spikes are normal and occur too briefly to have a significant effect on battery drain. Competing signals may cause remote keyless entry performance issues such as jamming but should not cause excessive battery draw.
- If an excessive current draw is not present during initial testing, continue periodic testing over a 1-2 hour period to see if the current draw increases and stays above an unacceptable level.

NOTE: The battery specification listed below is a generic specification. Refer to the label on the original battery when testing the battery.

- The battery run down time will vary depending on the batteries reserve capacity. If the reserve capacity is higher, then the battery run down time may be longer. If the reserve capacity is lower, then the battery run down time may be shorter. The graph below indicates roughly how many days a 690 cold cranking amperage battery with a 110 min reserve capacity starting at 80% state of charge will last with a constant current draw until it reaches 50% state of charge. Differences in battery reserve capacity and temperature will affect the results.

Current Drain	Days
25 mA	33
50 mA	16.5
75 mA	11
100 mA	8.25
250 mA	3.3
500 mA	1.65
750 mA	1
1 A	0.8
2 A	0.4

Reference Information

Schematic Reference

Control Module References

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Electrical Information Reference

- Circuit Testing
- Testing for Intermittent Conditions and Poor Connections
- Connector Repairs
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Special Tools

EL 38758 Parasitic Draw Test Switch

For equivalent regional tools, refer to **Special Tools**.

Circuit/System Verification

NOTE:

- Most vehicle systems will go to sleep within 30 min but it can take up to 2 h before all systems power down allowing the parasitic draw test to pass. An occasional increase in the parasitic draw is normal as long as it returns within 1 s.
- Closing the door latches/ajar switch while leaving the doors open is recommended, this allows the vehicle systems to perform in a "doors closed" mode while allowing vehicle interior access that may be needed to complete the diagnostic steps.
- Locking doors will arm the vehicle content theft deterrent system if equipped. Failure to arm the system may cause a theft system fault to not be present during testing.
- There are many things that can prevent the vehicle from completely going to sleep and passing the parasitic draw test. Make sure all the conditions listed below are met before performing the parasitic current draw test.
 - Ignition OFF
 - Key out of the ignition switch - when not equipped with keyless access and start
 - Retained Accessory Power OFF - open and close the driver door after ignition OFF
 - Scan tool not communicating with a vehicle control module - in some cases it may need to be disconnected from the DLC
 - All access doors closed
 - Headlamps OFF - auto headlamps disabled
 - Any delay lighting OFF
 - If equipped with an under hood lamp disable it
 - HVAC after blow OFF
 - Any accessory that can work with ignition OFF inactive or OFF
 - Wait up to 2 min or longer, after all other listed conditions are met

Using an Inductive Pickup Probe

1. Connect an inductive pickup probe to the negative battery cable that can read down to 1 mA.
2. Ignition OFF, as the vehicle systems shut down test for less than 30 mA of parasitic current drain.
 - If greater than the specified range, refer to Circuit/System Testing.

Using the EL 38758 Parasitic Draw Test Switch

WARNING: Refer to **Battery Disconnect Warning** .

CAUTION: When a fused jumper wire or digital multimeter is connected to the test switch terminals, always turn the test switch ON before opening any access door, turning the ignition on, or turning any accessory on. This is to prevent damaging the jumper wire or digital multimeter fuse.

NOTE: The switch knob on the EL 38758 switch is marked ON and OFF. When the switch knob is in the ON position, the circuit is closed and electrical current will pass through the switch. When the switch knob is in the OFF position, the circuit is open and electrical current will not pass through the switch.

1. Ignition OFF, disconnect the battery negative cable from the battery. Refer to Battery Negative Cable Disconnection and Connection (Coupe), Battery Negative Cable Disconnection and Connection (Wagon).
2. Turn the **EL 38758** switch knob to the OFF position.
3. Install the male end of the **EL 38758** switch to the battery ground terminal.
4. Install the battery negative cable to the female end of the **EL 38758** switch.
5. Turn the **EL 38758** switch knob to the ON position.
6. Road test the vehicle and activate all of the accessories such as the radio and air conditioning.
7. Ignition OFF, connect a 10 A fused jumper wire to the test switch tool terminals.
8. Turn the **EL 38758** switch knob to the OFF position. The current now flows through the jumper wire.
9. Check the fuse in the jumper wire. The fuse should be OK.
 - Failed: If the jumper wire fuse is blown, refer to Circuit/System Testing.
 - Passed
10. Turn the **EL 38758** switch knob to the ON position. Remove the fused jumper wire.
11. Connect a DMM set to the 10 A DC scale between the test switch tool terminals.
12. Turn the **EL 38758** switch knob to the OFF position. The current now flows through the DMM.
13. As the vehicle systems shut down test for less than 30 mA of parasitic current drain.
 - If greater than the specified range, refer to Circuit/System Testing.

Circuit/System Testing

- NOTE:**
- Removing or installing a fuse, relay, or connector, to determine the area causing high parasitic draw may wake up control modules. You must wait for the control modules to go back to sleep before retesting. It is best to install any removed or disconnected components after the diagnosis is completed.
 - Fuses for power mode master components such as the BCM should be removed last to avoid misdiagnosis.

- If a scan tool is connected to the DLC, either disconnect it or subtract the scan tool current draw from the DMM reading to get the actual vehicle parasitic current draw.

If the vehicle has an unacceptable amount of parasitic current draw, remove each fuse one at a time until the current draw falls to an acceptable level. A drop of more than 10-20 mA, when disabling a single system or circuit, is an indication of an overly high current draw that could be causing the battery drain. Refer to **Power Distribution Schematics** to diagnose exactly which circuit of the suspect system is causing the high parasitic drain. The following is a list of common components that could cause a high current draw:

- Stuck switch
- Stuck relay
- Control module

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

Control Module References for control module replacement, programming and setup

CHARGING SYSTEM TEST

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	-	P0621	-	-
Control - L Terminal	P0621	P0621	P0621	-
Signal - F Terminal	P0622	P0622	P0622	P0622

Circuit/System Description

The engine control module (ECM) uses the generator turn ON control circuit to control the load of the generator on the engine. A high side driver in the ECM applies a duty cycled voltage to the voltage regulator. The duty cycle controls the voltage regulator to turn the field circuit ON and OFF. The ECM monitors the state of the generator turn ON control circuit. The ECM should detect low voltage on the generator turn on control circuit when the ignition is ON and the engine is OFF, or when the charging system malfunctions. With the engine running, the ECM should detect high voltage when the duty cycle voltage is commanded high and a low voltage when the duty cycle voltage is commanded low on the generator turn on control circuit.

The engine control module (ECM) uses the generator field duty cycle signal circuit, or F-terminal circuit, to monitor the duty cycle of the generator. The generator field duty cycle signal circuit connects to high side of the field windings in the generator. A pulse width modulated (PWM) high side driver in the voltage regulator turns the field windings on and off. The ECM uses the PWM signal input to determine the generator load on the engine. This allows the ECM to adjust the idle speed to compensate for high electrical loads. The ECM monitors the status of the generator field duty cycle signal circuit. When the ignition is ON and the engine is off, the ECM should detect a duty cycle near 0%. When the engine is running, the duty cycle should be between 5-99%.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Charging System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Circuit/System Verification

NOTE: **Do not have a battery charger connected during the generator testing.**

1. Ignition ON.
2. Verify that no G13 Generator or B18 Battery Current Sensor DTCs are set that would cause a charging system concern.

- **If DTCs are set**

Refer to **Diagnostic Trouble Code (DTC) List - Vehicle** .

- **If no DTCs are set**

3. Verify the scan tool Body Control Module Battery Voltage parameter is 12 V or greater.
 - **If less than 12 V**

Refer to **Battery Inspection/Test**.

- **If 12 V or greater**

4. Engine running, all accessories OFF.
5. Verify the scan tool Body Control Module Battery Voltage parameter continually increases when controlling the Body Control Module Generator Regulator Setpoint from 10% to 80% with a scan tool. It may take up to 10 s for the battery voltage to stabilize between each setpoint change.
 - **If the battery voltage does not continually increase**

Refer to Circuit/System Testing.

- **If the battery voltage continually increases**

6. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification before proceeding with Circuit/System Testing.

1. Ignition OFF.
2. Test for less than 2 ohms between the G13 Generator housing and battery negative terminal.
 - **If 2 ohms or greater**

Repair the open/high resistance in the circuit.

- **If less than 2 ohms**

3. Verify a test lamp illuminates between the G13 Generator B+ circuit terminal 1 X2 or A X2 and ground.
 - **If the test lamp does not illuminate and the circuit fuse is good**
 1. Remove the test lamp and disconnect the B+ cable at the G13 Generator.
 2. Test for less than 2 ohms in the B+ circuit end to end.
 - If 2 ohms or greater, repair the open/high resistance in the circuit.
 - If less than 2 ohms, verify the fuse is not open and there is voltage at the fuse.
 - **If the test lamp does not illuminate and the circuit fuse is open**
 1. Remove the test lamp, disconnect the battery negative cable, and disconnect the G13 Generator B+ cable.
 2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - **If the test lamp illuminates**
4. Test or replace the G13 Generator.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

Generator Replacement (6.2L), Generator Replacement (3.6L)

GENERATOR NOISE DIAGNOSIS

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Diagnostic Aids

Noise from a generator may be due to electrical or mechanical noise. Electrical noise or magnetic whine usually varies with the electrical load placed on the generator and is a normal operating characteristic of all generators. When diagnosing a noisy generator, it is important to remember that loose or misaligned components around the generator may transmit the noise into the passenger compartment and that replacing the generator may not solve the problem.

Circuit/System Testing

1. Start the engine. Verify the noise can be heard. Compare the concern to a similar vehicle.
2. Perform a charging system test. Verify that the generator is charging properly.
3. Inspect the generator, generator mounting, wiring harness, heater hoses, A/C lines, or other accessory equipment that may be misrouted or be the cause of noise being transmitted into the passenger compartment.
4. Ignition OFF, remove the engine drive belt. Verify the generator, A/C compressor, water pump pulley, power steering pump, idler pulley, and tensioner pulley spin freely.
 - If any of the pulleys do not spin freely, replace the affected component.
5. Start the engine, with the drive belt removed. Verify that the noise goes away. Operate the engine for no longer than 30-40 seconds.
 - If the noise is still present, the generator is not the cause of the noise.
6. Loosen all generator mounting bolts and ensure the generator is properly aligned. Tighten the mounting bolts to specification, refer to **Generator Replacement (6.2L), Generator Replacement (3.6L)**.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

STARTER SOLENOID DOES NOT CLICK

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+	1	1	-	-
Signal	2	1	-	-
Control Terminal 86	-	1	3	-
Control Terminal 87	1	1	3	-
Ground	-	1	-	-
1. Starter Solenoid Does Not Click 2. Cranks In Any Gear 3. Cranks All The Time				

Circuit/System Description

When the ignition mode switch is placed in the START position, a discrete signal is supplied to the body control module (BCM) notifying it that the ignition is in the START position. The BCM then sends a serial data message to the engine control module (ECM) that crank has been requested. The ECM then verifies that the clutch is fully depressed or the automatic transmission is in Park/Neutral. If it is, the ECM then supplies 12 V to the control circuit of the starter relay. When this occurs, battery voltage is supplied through the switch of the starter relay to the starter solenoid.

Reference Information

Schematic Reference

- Starting and Charging Schematics
- Automatic Transmission Controls Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Starting System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

Automatic Transmission

1. Ignition ON, verify that no ignition, starter relay, brake pedal position sensor, theft deterrent, or automatic transmission DTCs are set that would cause the ECM to disable engine starting.
 - If DTCs are set, refer to **Diagnostic Trouble Code (DTC) List - Vehicle** .
2. Ignition ON, observe the scan tool BCM 5 V Ignition Switch parameter. Place the ignition switch in the crank position, the parameter should display Crank Request.
 - If not the specified value, refer to **Power Mode Description and Operation** .
3. Transmission range selector in park , verify the scan tool ECM PNP Switch and TCM Internal Mode Switch parameter displays Park.
 - If the TCM Internal Mode Switch parameter does not indicate Park. Refer to **Transmission Internal Mode Switch Logic** .
4. Transmission range selector in park or neutral attempt to start the vehicle. The crank relay should click and the engine should begin cranking.
 - If the starter relay does not click or the engine does not crank, refer to Circuit/System Testing.
5. Ignition ON, observe the scan tool ECM Crankshaft Position Sensor Active Counter is not incrementing.
 - If the Crankshaft Position Sensor Active Counter is incrementing, replace the Crankshaft Position Sensor.

Manual Transmission

1. Ignition ON, verify that no ignition, starter relay, clutch pedal position sensor, brake pedal position sensor, or theft deterrent DTCs are set that would cause the ECM to disable engine starting.
 - If DTCs are set, refer to **Diagnostic Trouble Code (DTC) List - Vehicle** .
2. Ignition ON, observe the scan tool BCM 5 V Ignition Switch parameter. Place the ignition switch in the crank position, the parameter should display Crank Request.
 - If not the specified value, refer to **Power Mode Description and Operation** .
3. Ignition ON, observe the scan tool ECM clutch pedal parameter, verify the scan tool parameter displays Applied / Released while depressing and releasing the clutch pedal.
 - If the clutch pedal parameter does change. Refer to **Clutch Pedal Position Sensor Learn** .
4. Clutch pedal fully depressed, attempt to start the vehicle. The crank relay should click and the engine should begin cranking.
 - If the starter relay does not click or the engine does not crank, refer to Circuit/System Testing.
5. Ignition ON, observe the scan tool ECM Crankshaft Position Sensor Active Counter is not incrementing.
 - If the Crankshaft Position Sensor Active Counter is incrementing, replace the Crankshaft Position Sensor.

Circuit/System Testing

1. Ignition ON, with a scan tool verify the ECM Ignition 1 Signal parameter is greater than 10 V.
 - If less than the specified range, test the ECM ignition circuit for a short to ground or an open/high resistance. If the circuit tests normal, replace the K20 ECM.
2. Ignition OFF, disconnect the starter relay.
3. Ignition OFF and scan tool disconnected, open and close the driver door, and wait 1 minute. Test for less than 5.0 ohms between the relay ground circuit terminal 85 and ground.
 - If greater than the specified range, test the ground circuit for an open/high resistance.
4. Ignition ON, verify a test lamp illuminates between the B+ circuit terminal 30 and ground.
 - If the test lamp does not illuminate, test the B+ circuit for a short to ground or an open/high resistance. If the circuit tests normal and the B+ circuit fuse is open, test the control circuit terminal 87 for a short to ground.
5. Ignition ON, verify that a test lamp does not illuminate between the control circuit terminal 87 and ground.
 - If the test lamp illuminates, test the control circuit for a short to voltage.
6. Ensure the parking brake is applied and the transmission is in NEUTRAL on manual transmission or PARK on automatic transmissions. Momentarily install a 40 A fused jumper wire between the B+ circuit terminal 30 and the control circuit terminal 87. Verify the starter is activated.
 - If the starter does not activate, test the control circuit for a short to ground or an open/high resistance. If the circuit tests normal, test or replace the starter.
7. Connect a test lamp between the control circuit terminal 86 and the ground circuit terminal 85.
8. With the transmission range selector in park/neutral, or the clutch pedal fully applied, place the ignition switch between the OFF and CRANK position. The test lamp should turn ON and OFF when changing between the commanded states.
 - If the test lamp is always ON, test the control circuit for a short to voltage. If the circuit tests normal, replace the ECM.
 - If the test lamp is always OFF, test the control circuit for a short to ground or an open/high resistance. If the circuit tests normal, replace the ECM.
9. If all circuits test normal, test or replace the starter relay.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Crankshaft Position Sensor Replacement** for the 2.8L, 3.0L, 3.2L or 3.6L engines
- **Crankshaft Position Sensor Replacement** for the 4.8L, 5.3L, 6.0L, 6.2L or 7.0L engines
- **Manual Shift Shaft Position Switch Replacement**
- **Relay Replacement (Within an Electrical Center)** , **Relay Replacement (Attached to Wire Harness)**
- **Control Module References** for ECM replacement, setup, and programming

STARTER SOLENOID CLICKS, ENGINE DOES NOT CRANK

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Starting System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition OFF, measure and record the battery voltage at the C1 terminals. The voltage should be between 12.0-15.0 V.
 - If not within the specified range, refer to **Battery Inspection/Test**.
2. Remove the drive belts. Refer to one of the following:
 - **Drive Belt Replacement** for the 2.8L, 3.0L, 3.2L, or 3.6L engines
 - **Drive Belt Replacement - Accessory** for the 6.2L engine
 - **Air Conditioning Compressor Belt Replacement** for the 6.2L engine
 - **Supercharger Belt Replacement** for the 6.2L engine
3. Using the appropriate tools, rotate the crankshaft by hand and verify the crankshaft rotates.
 - If the crankshaft does not rotate, refer to one of the following:
 - **Engine Will Not Crank - Crankshaft Will Not Rotate** for the 2.8L, 3.0L, 3.2L, or 3.6L engines
 - **Engine Will Not Crank - Crankshaft Will Not Rotate** for the 6.2L engine

4. Ignition start, verify the engine does not crank.
 - If the engine cranks, inspect the engine and belt drive system for mechanical binding, seized engine, or seized generator.
5. Verify that a test lamp illuminates between the M64 starter motor B+ terminal X1 and ground.
 - If the test lamp does not illuminate, test the B+ circuit for a short to ground or an open/high resistance.
6. Test for less than 0.5 V between the positive battery cable and terminal X1 at the M64 starter motor as ignition is switched to start position.
 - If greater than the specified value, replace the positive battery cable.
7. Test for less than 0.5 V between the negative battery cable and the M64 starter motor case as ignition is switched to start position.
 - If greater than the specified value, replace the negative battery cable.
8. If all circuits test normal, replace the M64 starter motor.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Battery Negative Cable Replacement**
- **Battery Positive Cable Replacement**
- **Starter Replacement (6.2L), Starter Replacement (3.0L, 3.6L)**

ENGINE CRANKS SLOWLY

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Reference Information

Schematic Reference

Starting and Charging Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX - COUPE AND WAGON

Description and Operation

Starting System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition OFF, measure and record the battery voltage at the C1 terminals. The voltage should be between 12.0-15.0 V.
 - If not within the specified range, refer to **Battery Inspection/Test**.
2. Remove the drive belts. Refer to one of the following:
 - **Drive Belt Replacement** for the 2.8L, 3.0L, 3.2L, or 3.6L engines
 - **Drive Belt Replacement - Accessory** for the 6.2L engine
 - **Air Conditioning Compressor Belt Replacement** for the 6.2L engine
 - **Supercharger Belt Replacement** for the 6.2L engine
3. Ignition Start, verify the engine does not crank normal.
 - If the engine cranks normal, inspect the engine and belt drive system for mechanical binding, seized engine, or seized generator.
4. Verify that a test lamp illuminates between the M64 starter motor B+ terminal X1 and ground.
 - If the test lamp does not illuminate, test the B+ circuit for a short to ground or an open/high resistance.
5. Test for less than 0.5 V between the positive battery cable and terminal X1 at the M64 starter motor as ignition is switched to start position.
 - If greater than the specified value, replace the positive battery cable.
6. Test for less than 0.5 V between the negative battery cable and the M64 starter motor case as ignition is switched to start position.
 - If greater than the specified value, replace the negative battery cable.
7. If all circuits test normal, replace the M64 starter motor.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Battery Negative Cable Replacement**
- **Battery Positive Cable Replacement**
- **Starter Replacement (6.2L), Starter Replacement (3.0L, 3.6L)**

STARTER NOISE DIAGNOSIS

Circuit/System Testing

1. Remove the flywheel inspection cover.
2. Inspect the flywheel for the following:
 - Loose flywheel bolts
 - Chipped gear teeth
 - Missing gear teeth
 - Bent flywheel
 - If not within specifications, secure the flywheel bolts or replace the flywheel.
 - If all inspections were within specification, replace the starter motor.

Repair Instructions

- **Fastener Tightening Specifications** for the 3.6L engine
- **Fastener Tightening Specifications (6.2L LSA)** for the 6.2L engine
- **Engine Flywheel Removal** for the 3.6L engine
- **Engine Flywheel Replacement** for the 6.2L engine
- **Starter Replacement (6.2L), Starter Replacement (3.0L, 3.6L)**

REPAIR INSTRUCTIONS

BATTERY NEGATIVE CABLE DISCONNECTION AND CONNECTION (WAGON)

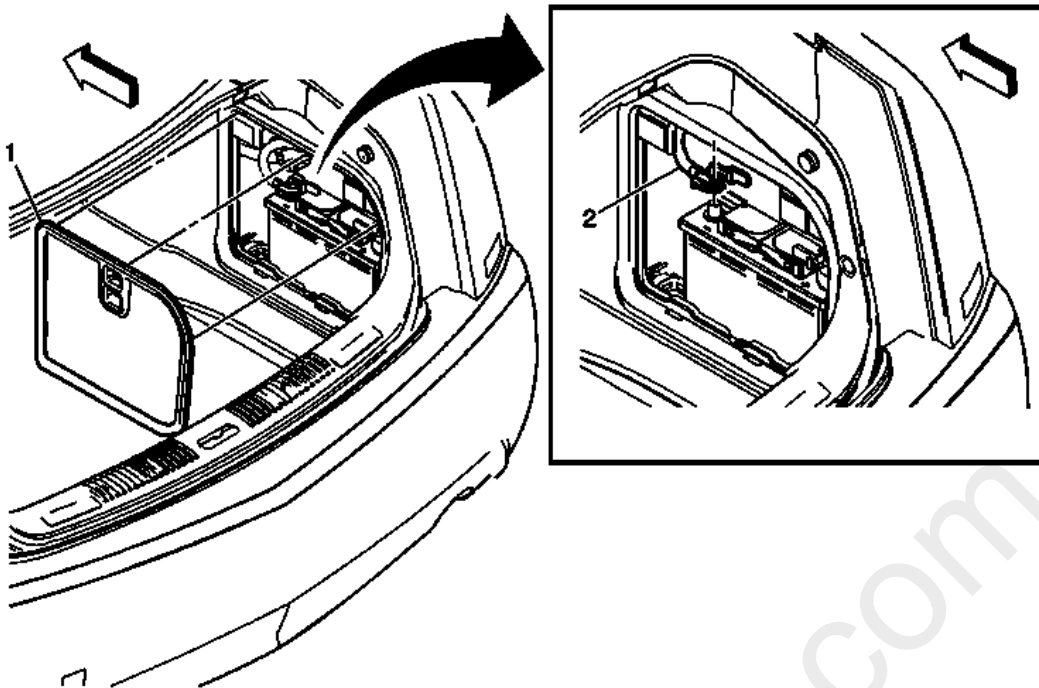


Fig. 3: Identifying Battery Negative Cable
 Courtesy of GENERAL MOTORS COMPANY

Battery Negative Cable Disconnection and Connection (Wagon)

Callout	Component Name
1	WARNING: Unless directed otherwise, the ignition and start switch must be in the OFF or LOCK position, and all electrical loads must be OFF before servicing any electrical component. Disconnect the negative battery cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to the vehicle or its components. For Vehicles equipped with OnStar® (UE1) with Back Up Battery: The Back Up Battery is a redundant power supply to allow limited OnStar® functionality in the event of a main vehicle battery power disruption to the VCIM (OnStar® module). Do not disconnect the main vehicle battery or remove the OnStar® fuse with the ignition key in any position other than OFF. Retained accessory power should be allowed to time out or be disabled (simply opening the driver door should disable retained accessory power) before disconnecting power. Disconnecting power to the OnStar® module in any way while the ignition is On or with retained accessory power activated may cause activation of the OnStar® Back-Up Battery system and will discharge and permanently damage the back-up battery. Once the Back-Up Battery is activated it will stay on until it has completely discharged. The back-up battery is not rechargeable and once activated the back-up battery must be replaced.

	Rear Compartment Side Trim Panel Door
	Battery Negative Cable
2	Procedure 1. Turn the battery negative cable handle to release the clamping force on the battery negative post. 2. To disconnect, pull the battery negative cable off of the battery negative post. 3. When connecting, ensure the battery negative cable is seated properly before turning the battery negative cable handle.

BATTERY NEGATIVE CABLE DISCONNECTION AND CONNECTION (COUPE)

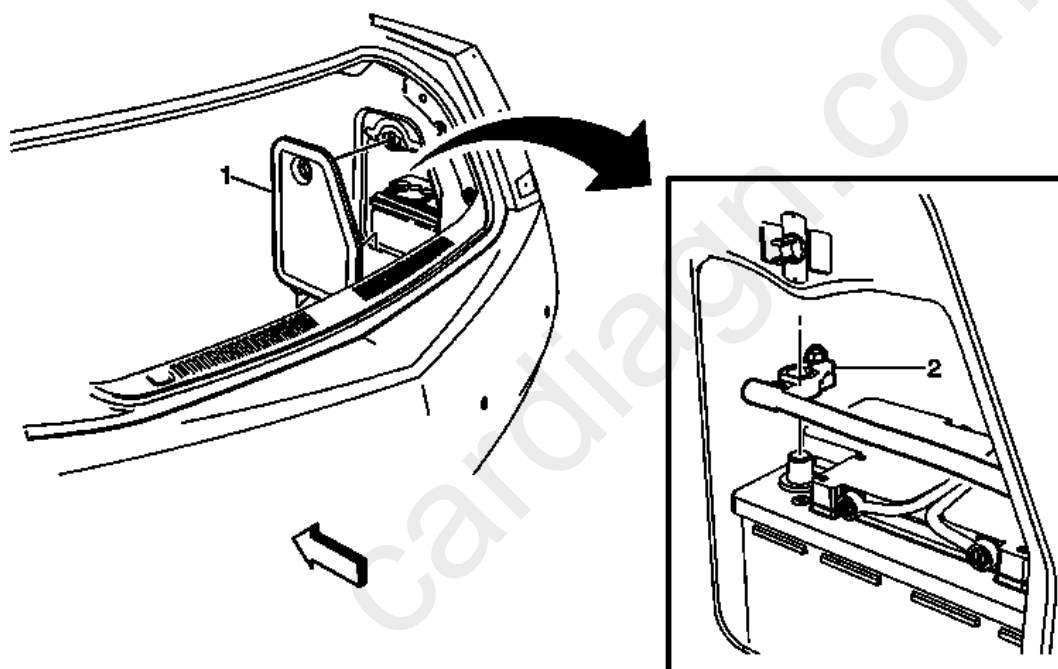


Fig. 4: Rear Compartment Side Trim Panel & Battery Negative Cable (Coupe)
 Courtesy of GENERAL MOTORS COMPANY

Battery Negative Cable Disconnection and Connection (Coupe)

Callout	Component Name
	WARNING: Unless directed otherwise, the ignition and start switch must be in the OFF or LOCK position, and all electrical loads must be OFF before servicing any electrical component. Disconnect the negative battery cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to the vehicle or its components.

	For Vehicles equipped with OnStar® (UE1) with Back Up Battery: The Back Up Battery is a redundant power supply to allow limited OnStar® functionality in the event of a main vehicle battery power disruption to the VCIM (OnStar® module). Do not disconnect the main vehicle battery or remove the OnStar® fuse with the ignition key in any position other than OFF. Retained accessory power should be allowed to time out or be disabled (simply opening the driver door should disable retained accessory power) before disconnecting power. Disconnecting power to the OnStar® module in any way while the ignition is On or with retained accessory power activated may cause activation of the OnStar® Back-Up Battery system and will discharge and permanently damage the back-up battery. Once the Back-Up Battery is activated it will stay on until it has completely discharged. The back-up battery is not rechargeable and once activated the back-up battery must be replaced.
1	Rear Compartment Side Trim Panel Door
2	Battery Negative Cable Clamp Nut

BATTERY CURRENT SENSOR REPLACEMENT

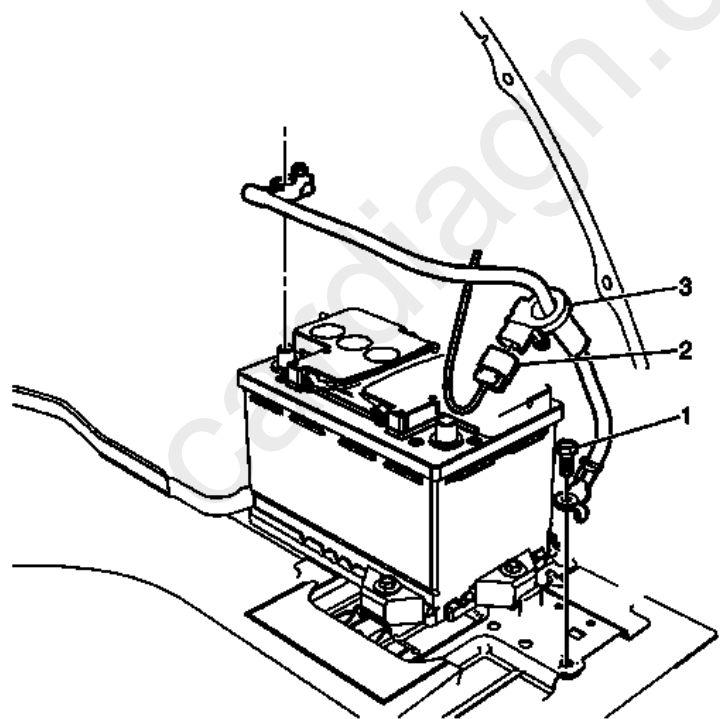


Fig. 5: Battery Negative Cable, Ground Bolt, Battery Current Sensor & Body Harness Connector
 Courtesy of GENERAL MOTORS COMPANY

Battery Current Sensor Replacement

Callout	Component Name
Preliminary Procedure	
Disconnect the battery negative cable. Refer to <u>Battery Negative Cable Disconnection and Connection</u>	

(Coupe), Battery Negative Cable Disconnection and Connection (Wagon).

1	Battery Negative Cable Ground Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 20 N.m (15 lb ft)
2	Body Harness Connector
3	Battery Current Sensor Procedure Disconnect the battery current sensor from the body harness and remove the negative battery cable . TIP: The battery current sensor is part of the negative battery cable.

BATTERY NEGATIVE CABLE REPLACEMENT

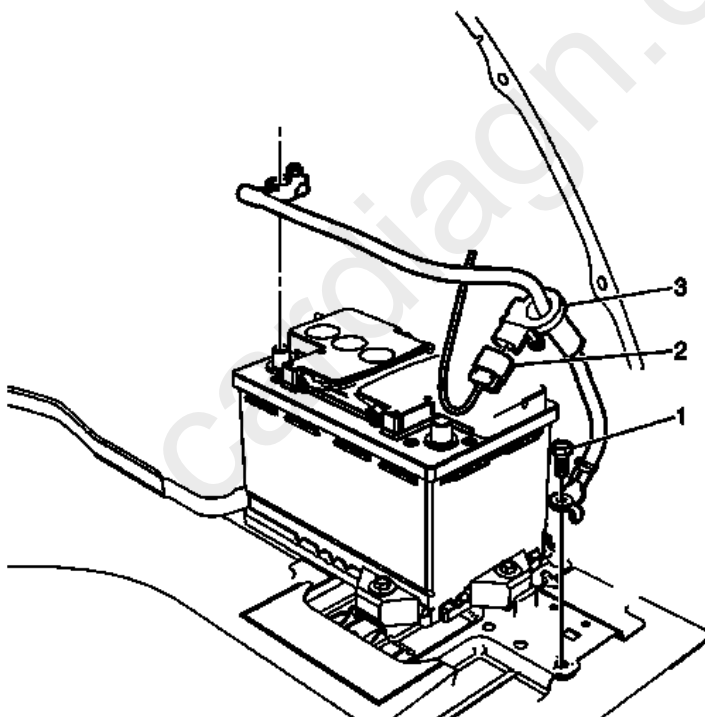


Fig. 6: Battery Negative Cable, Ground Bolt & Body Harness Connector
Courtesy of GENERAL MOTORS COMPANY

Battery Negative Cable Replacement

Callout	Component Name
Preliminary Procedure	

1. Disconnect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**.
2. Reposition the rear compartment side trim panel. Refer to **Rear Compartment Side Trim Panel Replacement (Coupe)** .

1	Battery Negative Cable Ground Bolt CAUTION: Refer to <u>Fastener Caution</u> . Tighten 20 N.m (15 lb ft)
2	Body Harness Connector
3	Battery Negative Cable TIP: The battery current sensor is part of the negative battery cable.

BATTERY NEGATIVE CABLE EXTENSION CABLE REPLACEMENT (3.0L, 3.6L)

Removal Procedure

1. Remove the front compartment side sight shield. Refer to **Front Compartment Side Sight Shield Replacement** .
2. Disconnect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**.

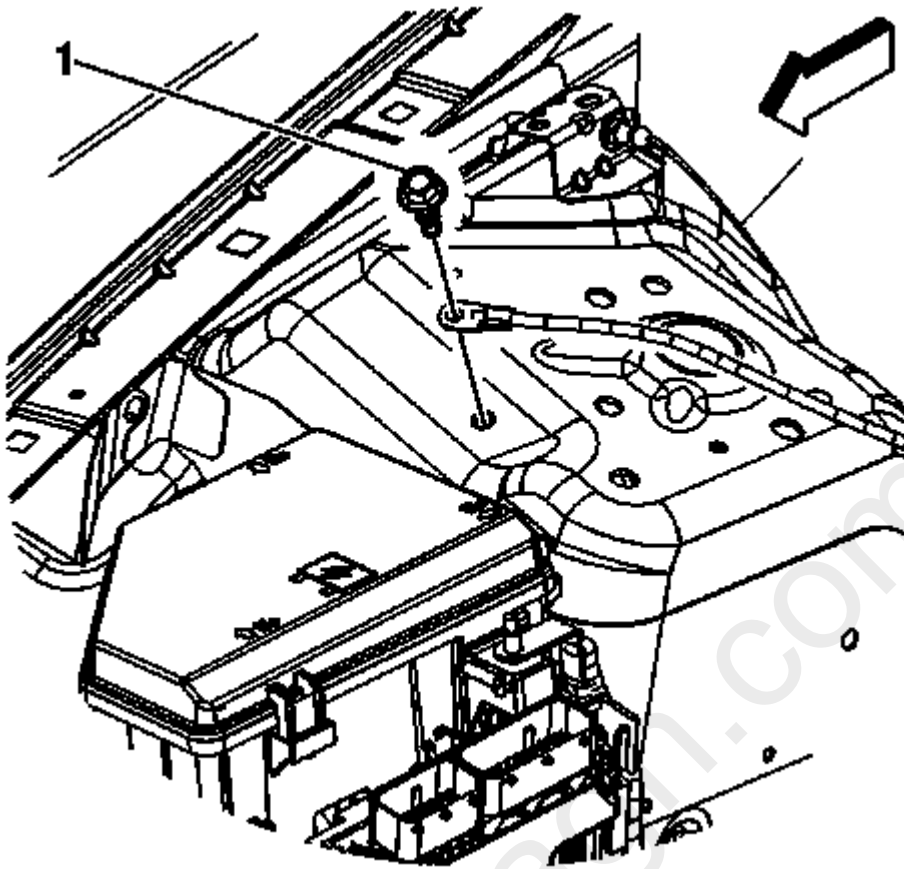


Fig. 7: Identifying Battery Negative Cable Ground Bolt
Courtesy of GENERAL MOTORS COMPANY

3. Remove the battery negative cable ground bolt (1).
4. Lift the vehicle. Refer to **Lifting and Jacking the Vehicle** .

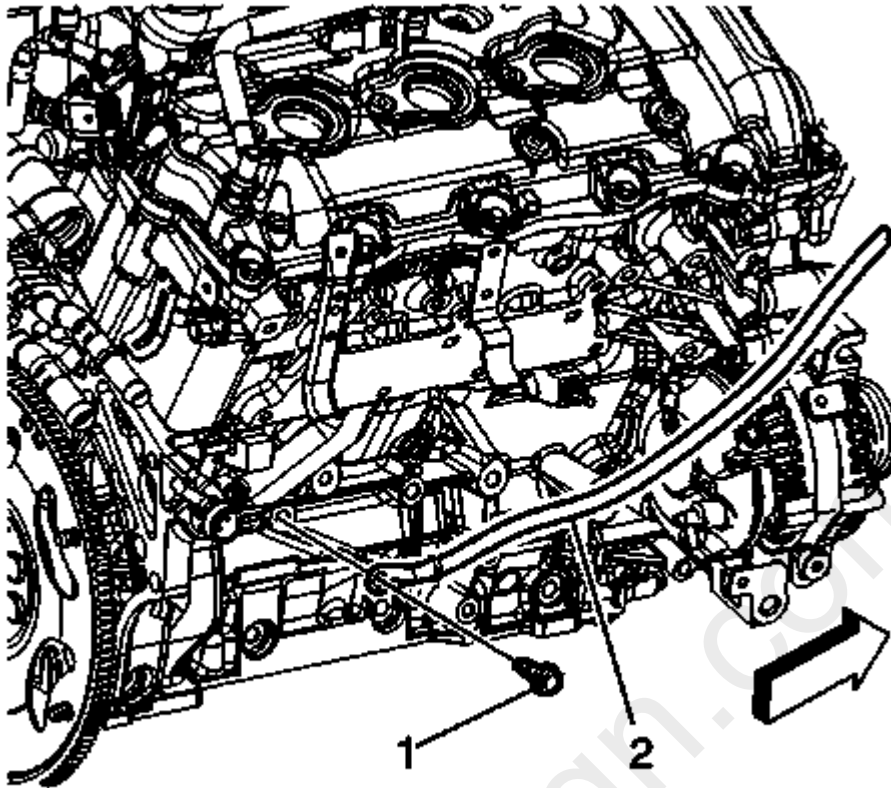


Fig. 8: Identifying Battery Cable Terminal Bolt
Courtesy of GENERAL MOTORS COMPANY

5. Remove the Battery Cable Terminal Bolt (1).
6. Note the routing of the battery negative cable extension cable (2) and remove it from the vehicle.

Installation Procedure

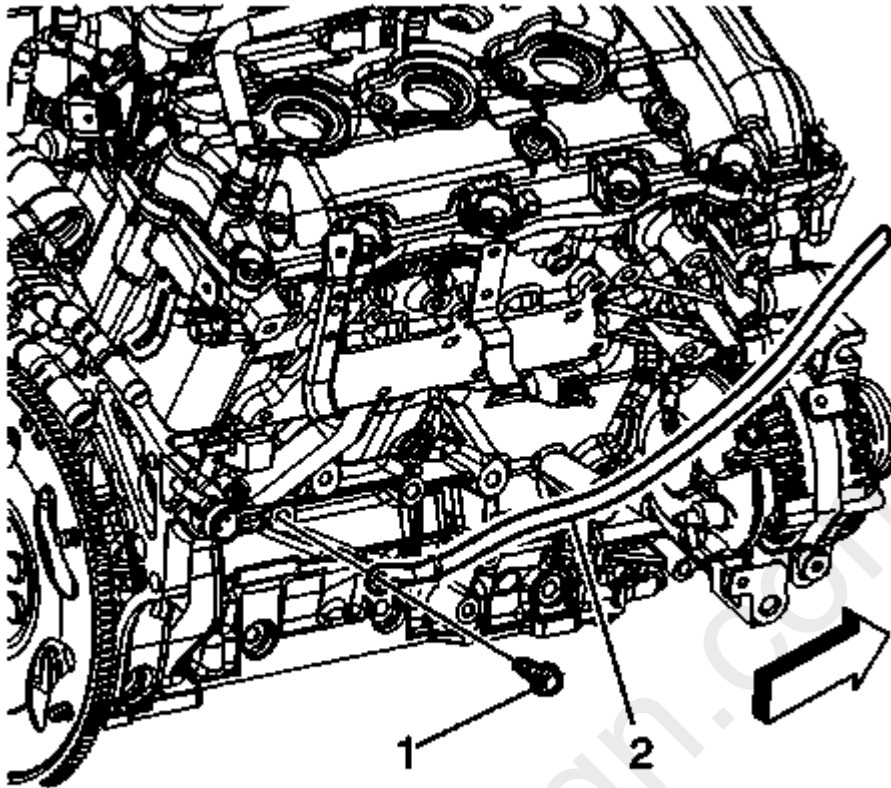


Fig. 9: Identifying Battery Cable Terminal Bolt
Courtesy of GENERAL MOTORS COMPANY

1. Position the battery negative cable extension cable (2) to the vehicle.

CAUTION: Refer to Fastener Caution .

2. Install the Battery Cable Terminal Bolt (1).

Tighten

Tighten the bolt to 35 N.m (26 lb ft).

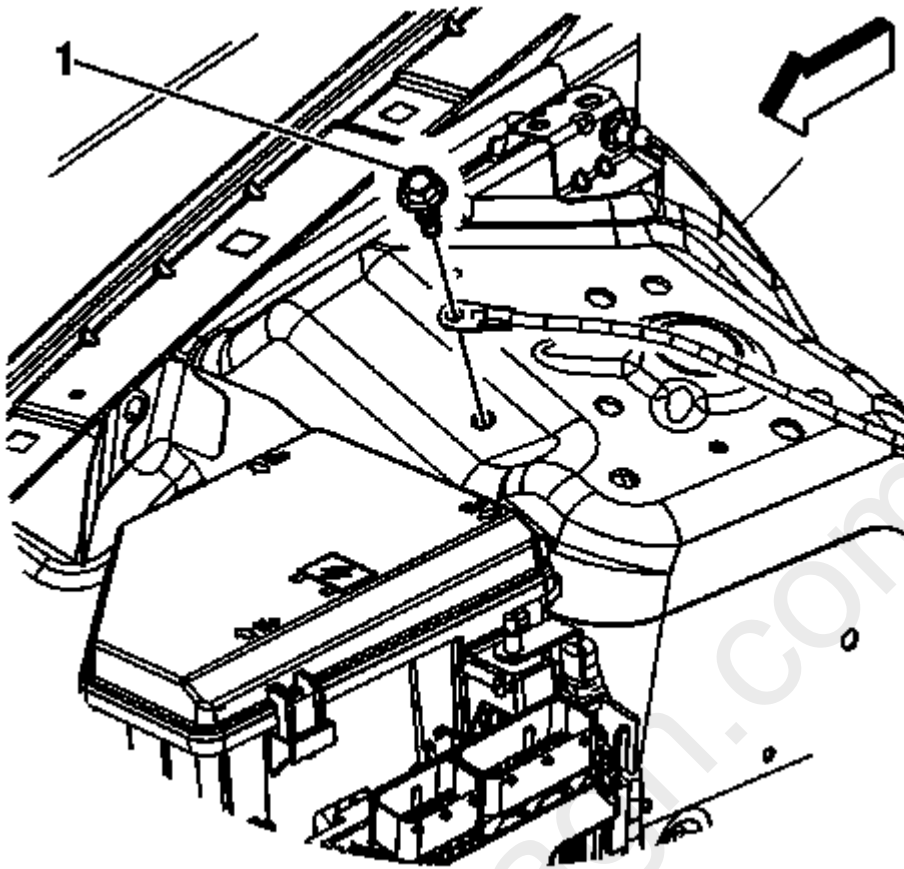


Fig. 10: Identifying Battery Negative Cable Ground Bolt
Courtesy of GENERAL MOTORS COMPANY

3. Install the battery negative cable ground bolt (1).

Tighten

20 N.m (15 lb ft).

4. Install the front compartment side sight shield. Refer to **Front Compartment Side Sight Shield Replacement** .
5. Connect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**.

BATTERY NEGATIVE CABLE EXTENSION CABLE REPLACEMENT (6.2L)

Removal Procedure

1. Remove the front compartment side sight shield. Refer to **Front Compartment Side Sight Shield Replacement** .
2. Disconnect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection**

(Coupe), Battery Negative Cable Disconnection and Connection (Wagon).

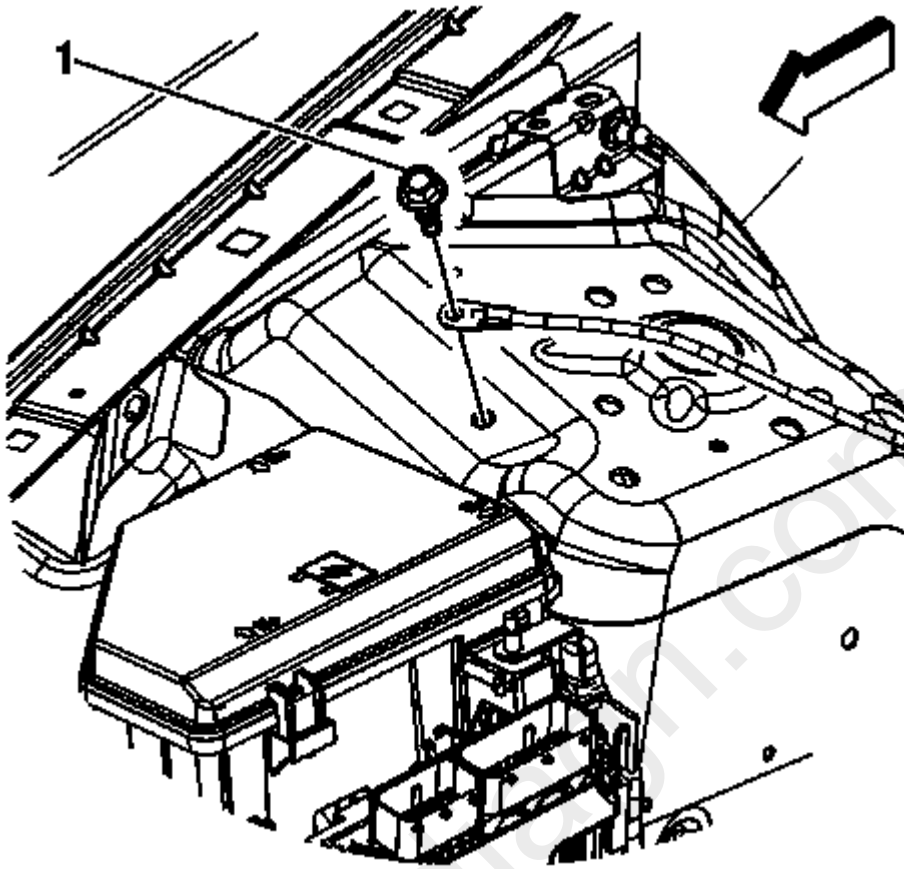


Fig. 11: Identifying Battery Negative Cable Ground Bolt
Courtesy of GENERAL MOTORS COMPANY

3. Remove the battery negative extension cable ground bolt (1).
4. Lift the vehicle. Refer to **Lifting and Jacking the Vehicle** .

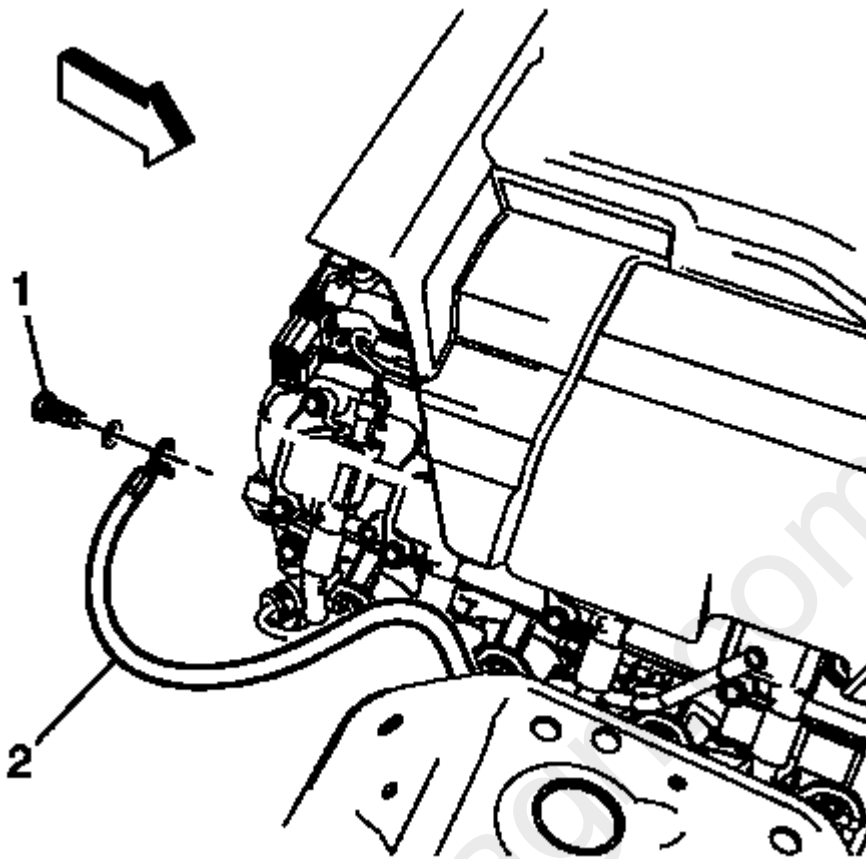


Fig. 12: Battery Negative Extension Cable And Engine Ground Bolt
Courtesy of GENERAL MOTORS COMPANY

5. Remove the battery negative extension cable engine ground bolt (1).
6. Note the routing of the battery negative extension cable (2) and remove it from the vehicle.

Installation Procedure

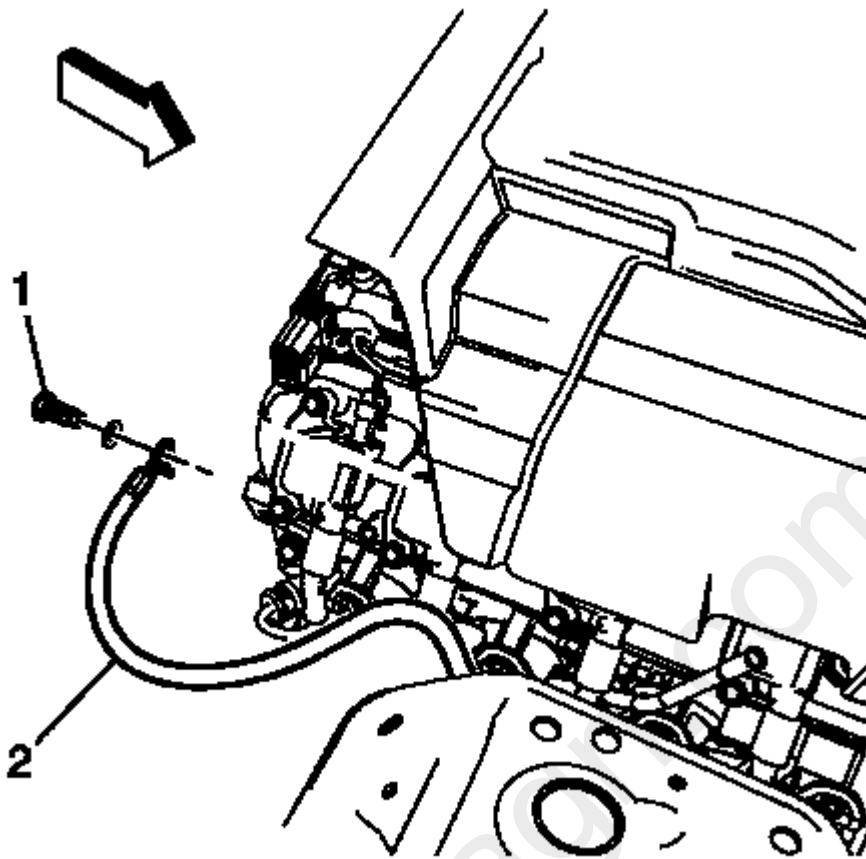


Fig. 13: Battery Negative Extension Cable And Engine Ground Bolt
Courtesy of GENERAL MOTORS COMPANY

1. Position the battery negative extension cable cable (2) to the vehicle.

CAUTION: Refer to Fastener Caution .

2. Install the battery negative extension cable engine ground bolt (1).

Tighten

Tighten the bolt to 35 N.m (26 lb ft).

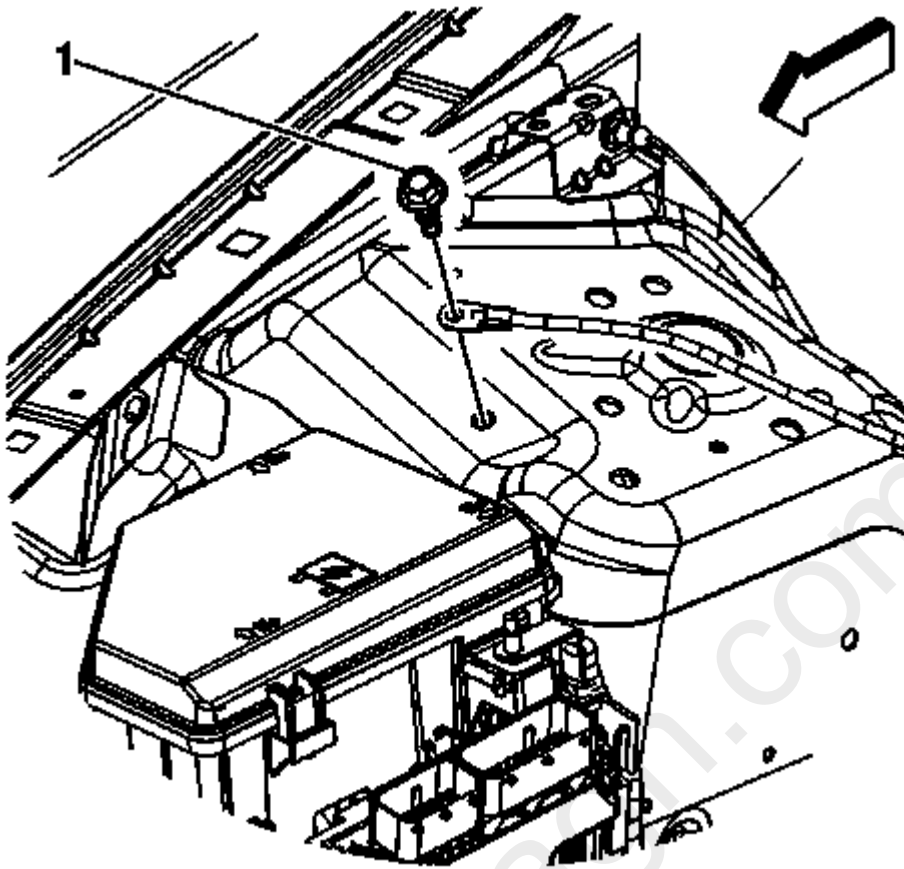


Fig. 14: Identifying Battery Negative Cable Ground Bolt
Courtesy of GENERAL MOTORS COMPANY

3. Install the battery negative extension cable ground bolt (1).

Tighten

20 N.m (15 lb ft).

4. Install the front compartment side sight shield. Refer to **Front Compartment Side Sight Shield Replacement** .
5. Connect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**.

BATTERY POSITIVE CABLE REPLACEMENT

Removal Procedure

1. Remove the rear compartment side trim panel (Coupe). Refer to **Rear Compartment Side Trim Panel Replacement (Coupe)** , or the body side lower trim panel (Wagon). Refer to **Body Side Lower Trim Panel Replacement (Wagon)**

2. Disconnect the negative battery cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**

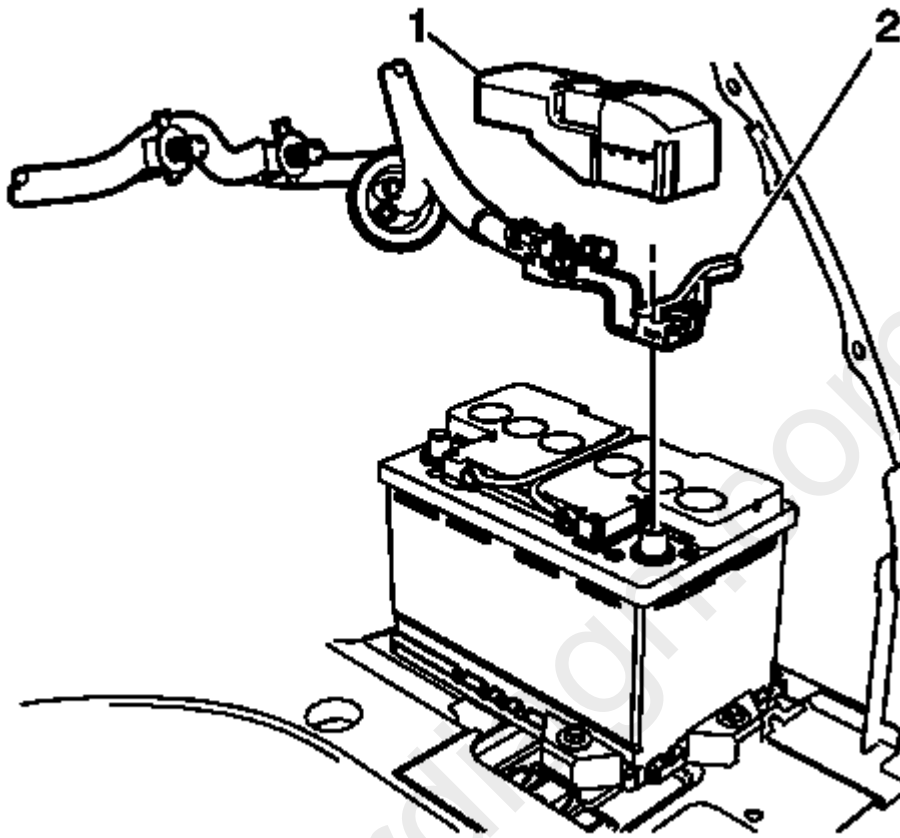


Fig. 15: Battery Positive Cable Handle
Courtesy of GENERAL MOTORS COMPANY

3. Remove the battery positive cover (1).
4. Turn the battery positive cable handle (2) to release the clamping force and remove battery positive cable from the battery positive post.
5. Remove the body lock pillar lower trim panel. Refer to **Body Lock Pillar Lower Trim Panel Replacement (Wagon)**
6. Remove the center pillar lower trim panel. Refer to **Center Pillar Lower Trim Panel Replacement (Wagon)** .
7. Remove the passenger side bucket front seat. Refer to **Front Seat Removal and Installation - Bucket (W2E)** , **Front Seat Removal and Installation - Bucket (AQ9)** .

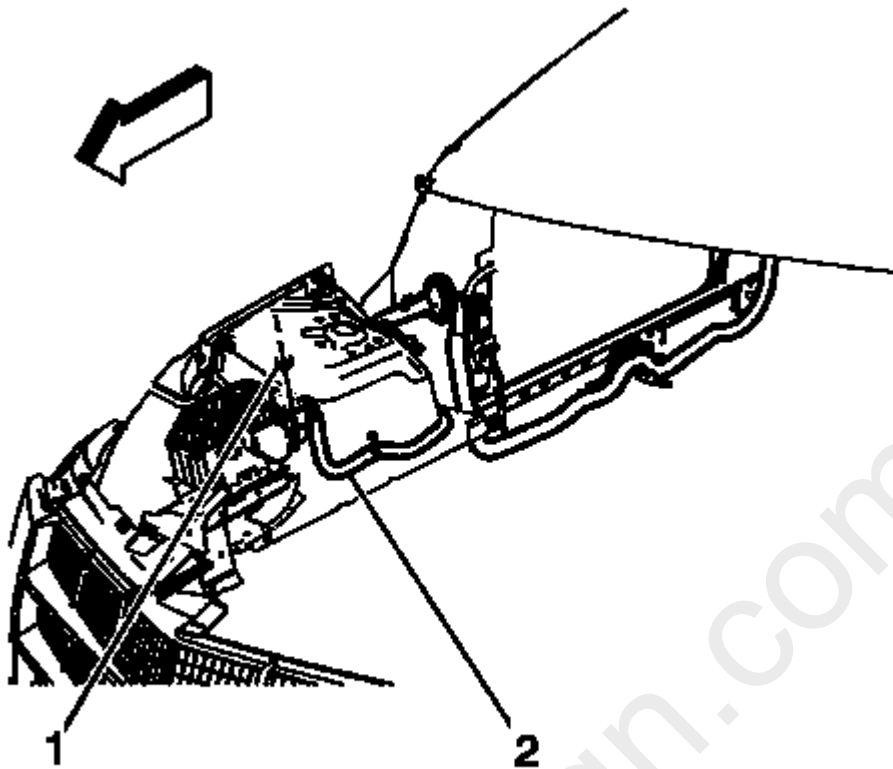


Fig. 16: Battery Positive Cable Nut
Courtesy of GENERAL MOTORS COMPANY

8. Remove the battery positive cable nut (1) from the front underhood electrical center or junction block.
9. Remove the battery positive cable (2) from the front underhood electrical center or junction block.
10. Pull the passenger side front floor panel carpet away from the right side front and rear rocker panels.

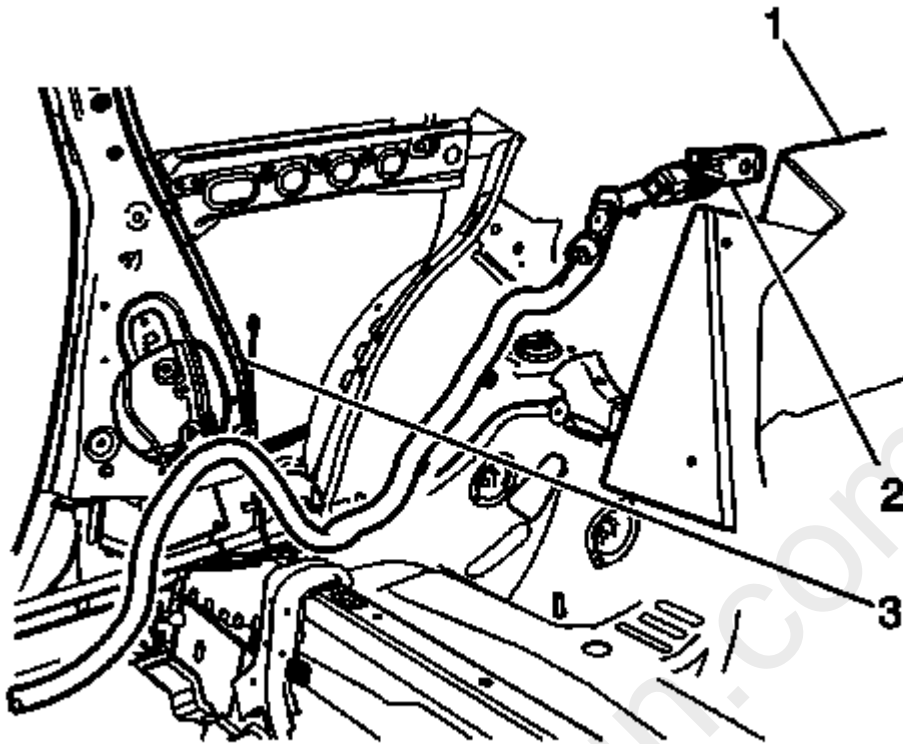


Fig. 17: Body Harness And Battery Positive Cable
Courtesy of GENERAL MOTORS COMPANY

11. Starting in the rear compartment and working forward mark the location of all the retaining clips on the body harness and remove them as needed.
12. Remove the body harness from any bracket assemblies as needed.
13. In the passenger compartment, untape the body harness as needed and separate the battery positive cable from it.

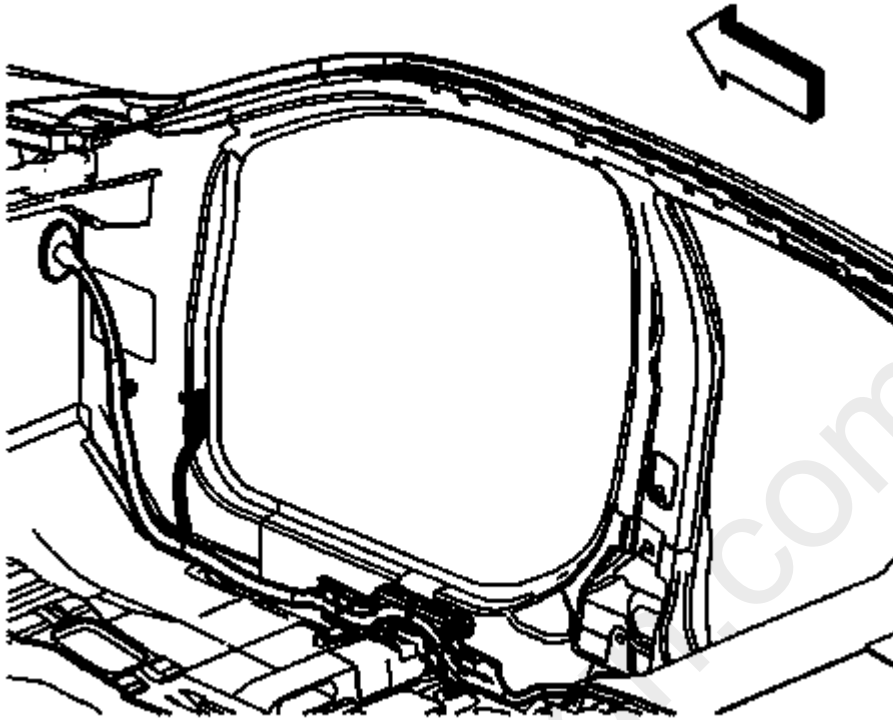


Fig. 18: View Of Rubber Grommet In Dashboard Pass-Through
Courtesy of GENERAL MOTORS COMPANY

14. Push the rubber grommet in the dashboard pass-through to dislocate it from its installed position.
15. In the engine compartment, untape the body harness as needed and separate the battery positive cable from it.
16. Remove the battery positive cable from the body harness and the vehicle.

Installation Procedure

1. Position the battery positive cable to the vehicle and the body harness.
2. In the engine compartment, align the battery positive cable to the body harness and tape it as needed.

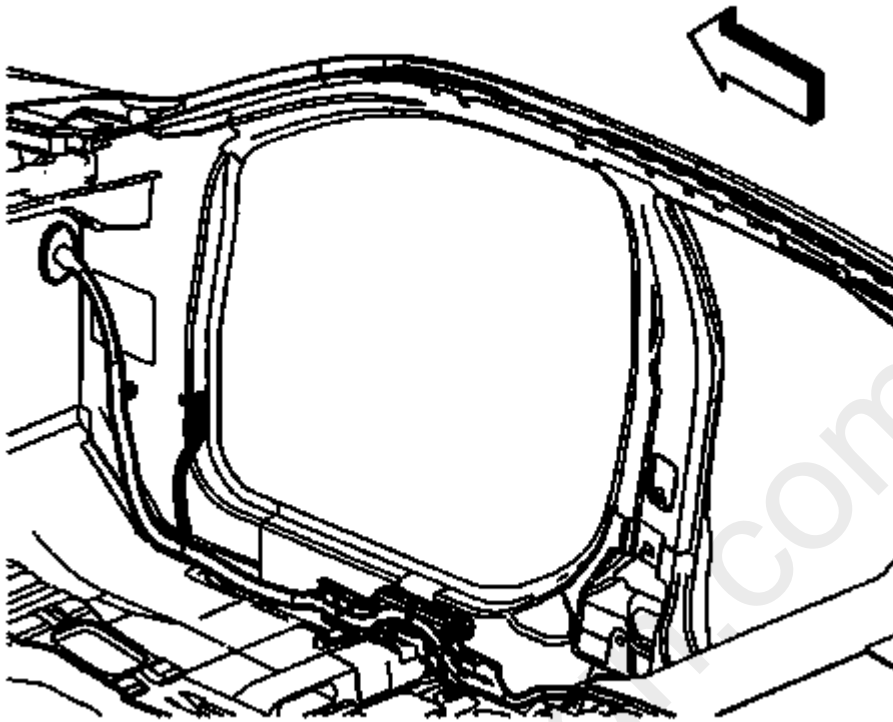


Fig. 19: View Of Rubber Grommet In Dashboard Pass-Through
Courtesy of GENERAL MOTORS COMPANY

3. Install the rubber grommet in the dashboard pass-through.

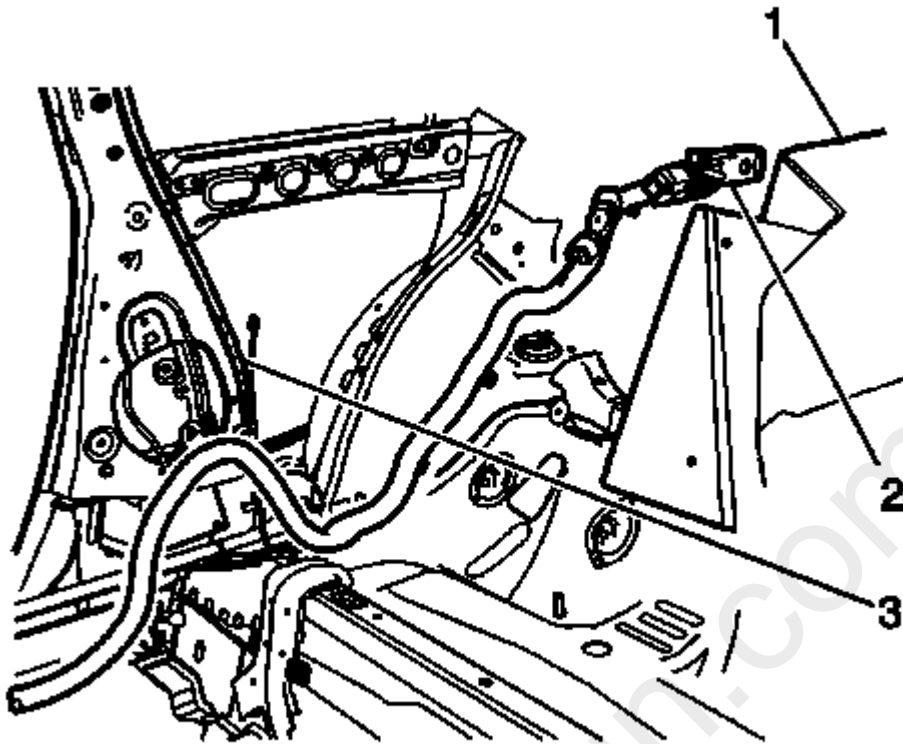


Fig. 20: Body Harness And Battery Positive Cable
Courtesy of GENERAL MOTORS COMPANY

4. Starting in the passenger compartment and working to the rear compartment, align the battery positive cable to the body harness and tape it as needed.
5. Install the body harness to any bracket assemblies as needed.
6. Install any new or reused retainers to the body harness as needed.
7. Secure the body harness to the vehicle.
8. Position the passenger side front floor panel carpet in place.

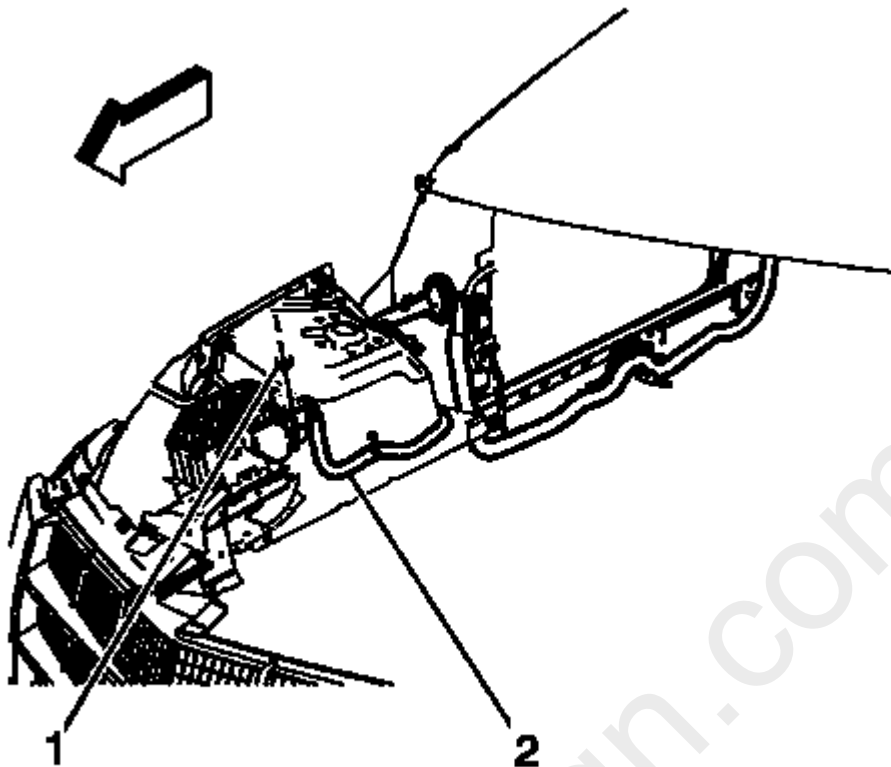


Fig. 21: Battery Positive Cable Nut
Courtesy of GENERAL MOTORS COMPANY

9. Install the battery positive cable (2) to the front underhood electrical center or junction block.

CAUTION: Refer to Fastener Caution .

10. Install the battery positive cable nut (1) to the front underhood electrical center or junction block and tighten to 15 N.m (11 lb ft).
11. Install the passenger side bucket front seat. Refer to **Front Seat Removal and Installation - Bucket (W2E)** , **Front Seat Removal and Installation - Bucket (AQ9)** .
12. Install the center pillar lower trim panel. Refer to **Center Pillar Lower Trim Panel Replacement (Wagon)** .
13. Install the rear compartment side trim panel. Refer to **Rear Compartment Side Trim Panel Replacement (Coupe)** .

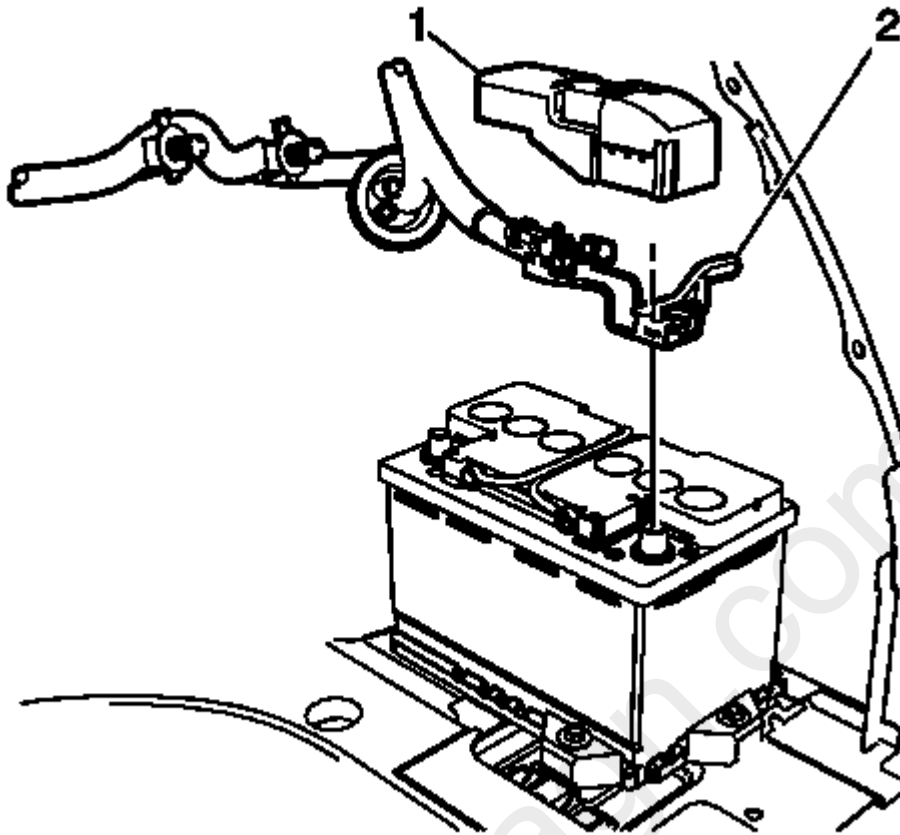


Fig. 22: Battery Positive Cable Handle
Courtesy of GENERAL MOTORS COMPANY

14. Turn the battery positive cable handle (2) to secure the battery positive cable to the battery positive post. Ensure the battery negative cable is seated properly.
15. Turn the battery positive cable handle (1) to secure the battery positive cable to the battery positive post. Install the rear compartment side trim panel door.
16. Install the rear compartment side trim panel door (Coupe). Refer to **Rear Compartment Side Trim Panel Replacement (Coupe)** , or the body side lower trim panel (Wagon). Refer to **Body Side Lower Trim Panel Replacement (Wagon)** .

BATTERY REPLACEMENT

Removal Procedure

WARNING: Refer to **Battery Disconnect Warning** .

1. Remove the rear compartment side trim panel door (Coupe). Refer to **Rear Compartment Side Trim Panel Replacement (Coupe)**

or the body side lower trim panel (Wagon). Refer to **Body Side Lower Trim Panel Replacement (Wagon)**

2. Disconnect the negative battery cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**

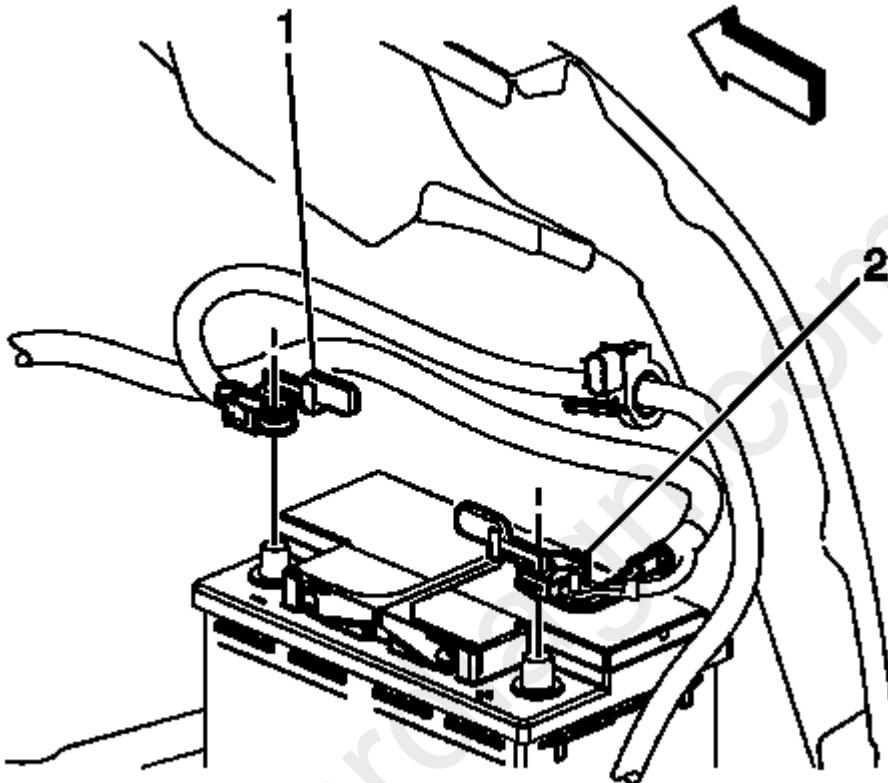


Fig. 23: Identifying Battery Negative Cable Handle
Courtesy of GENERAL MOTORS COMPANY

3. Disconnect the positive battery cable by turning the handle (2) on the battery positive post.
4. Disconnect the battery vent hose.

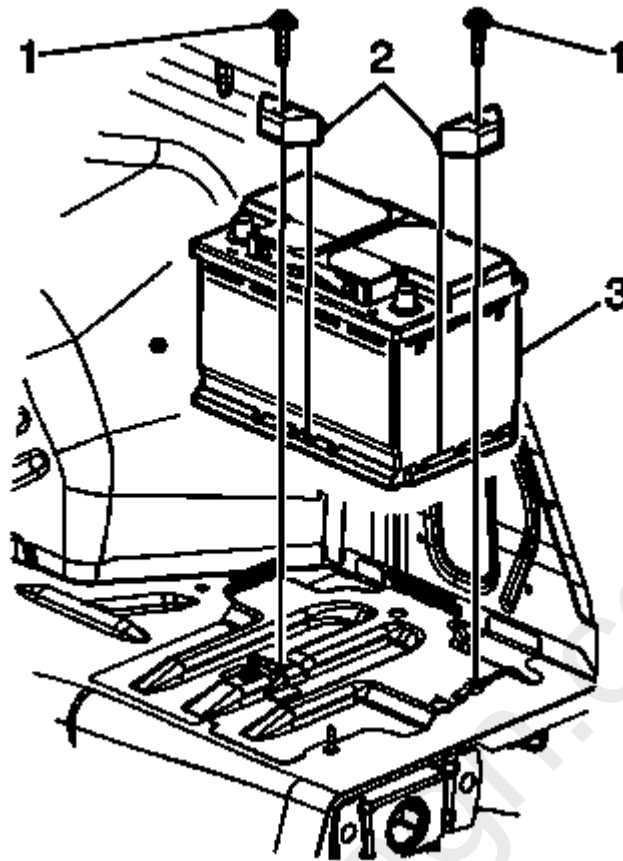


Fig. 24: Identifying Battery Hold Down Retainers & Bolts
Courtesy of GENERAL MOTORS COMPANY

5. Remove the battery hold down retainer bolts (1) and the battery hold down retainers (2).
6. Remove the battery (3) from the vehicle.

Installation Procedure

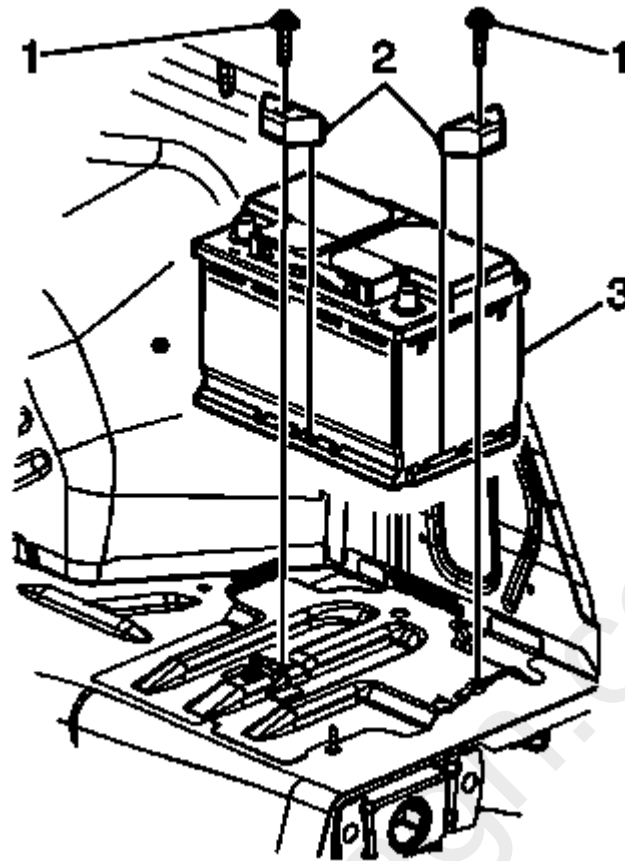


Fig. 25: Identifying Battery Hold Down Retainers & Bolts
Courtesy of GENERAL MOTORS COMPANY

1. Install the battery (3) to the vehicle.

CAUTION: Refer to Fastener Caution .

2. Install the battery hold down retainers (2) and the battery hold down retainer bolts (1) and tighten the bolts to 18 N.m (13 lb ft).

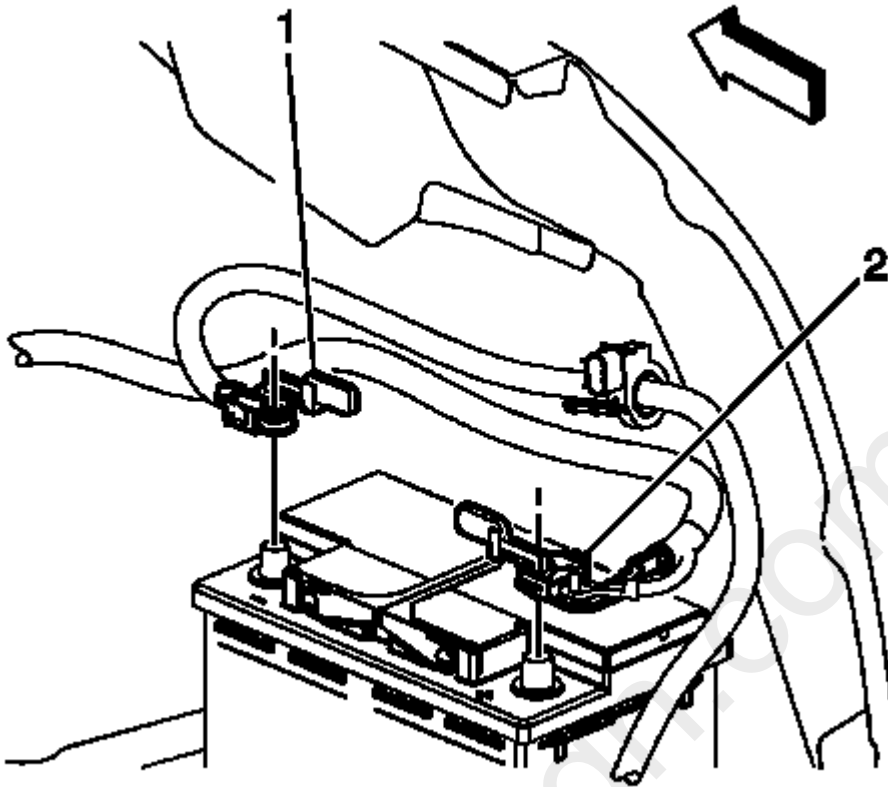


Fig. 26: Identifying Battery Negative Cable Handle
Courtesy of GENERAL MOTORS COMPANY

3. Ensure the battery positive cable is seated properly.
4. Turn the battery positive cable handle (2) to secure the battery positive cable to the battery positive post.
5. Connect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**

NOTE: Replacement batteries may require the vent plug in the battery vent hole to be moved from one end of the battery to the other to permit vent tube installation per original design.

6. Connect the battery vent hose.
7. Install the rear compartment side trim panel door (Coupe). Refer to **Rear Compartment Side Trim Panel Replacement (Coupe)**

or the body side lower trim panel (Wagon). Refer to **Body Side Lower Trim Panel Replacement (Wagon)**

STARTER REPLACEMENT (3.0L, 3.6L)

Removal Procedure

1. Turn OFF the ignition.
2. Disconnect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**.
3. Remove the starter heat shield. Refer to **Starter Shield Replacement (3.0L, 3.6L)**.

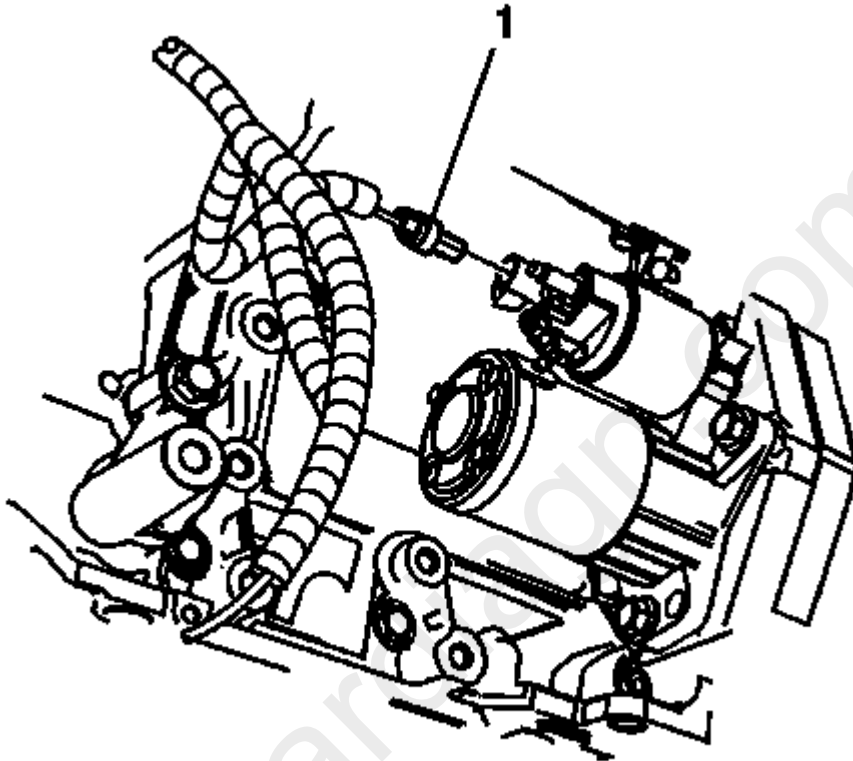


Fig. 27: Starter Solenoid Electrical Connector
Courtesy of GENERAL MOTORS COMPANY

4. Remove the starter solenoid electrical connector (1) from the starter.

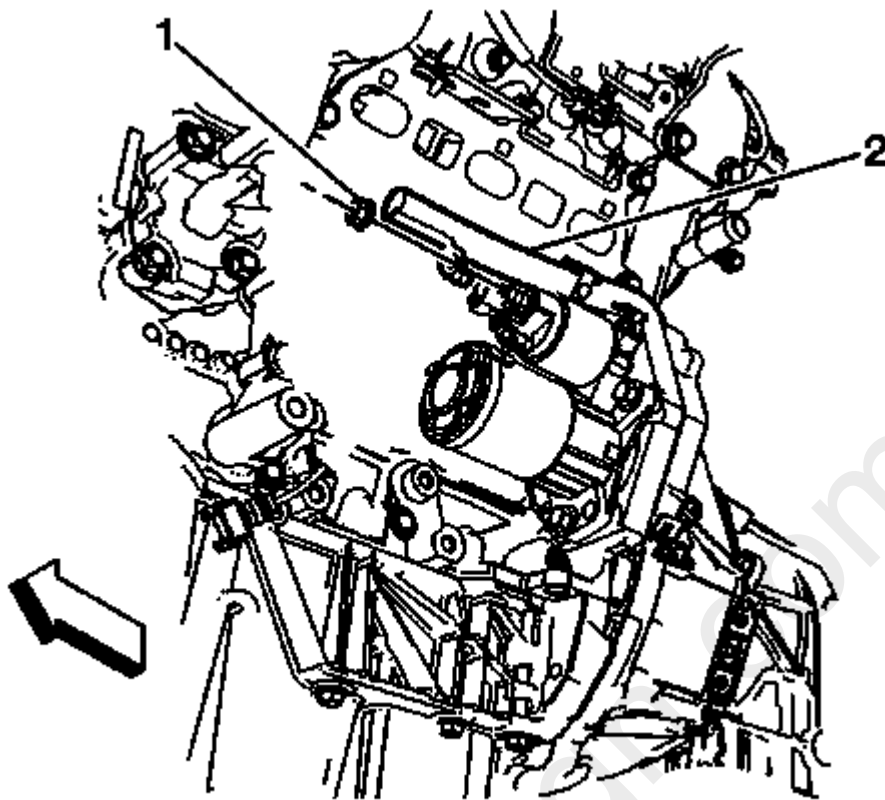


Fig. 28: Identifying Starter Terminal Nut And Engine Harness
Courtesy of GENERAL MOTORS COMPANY

5. Remove the starter terminal nut (1) and the engine harness (2) from the starter.

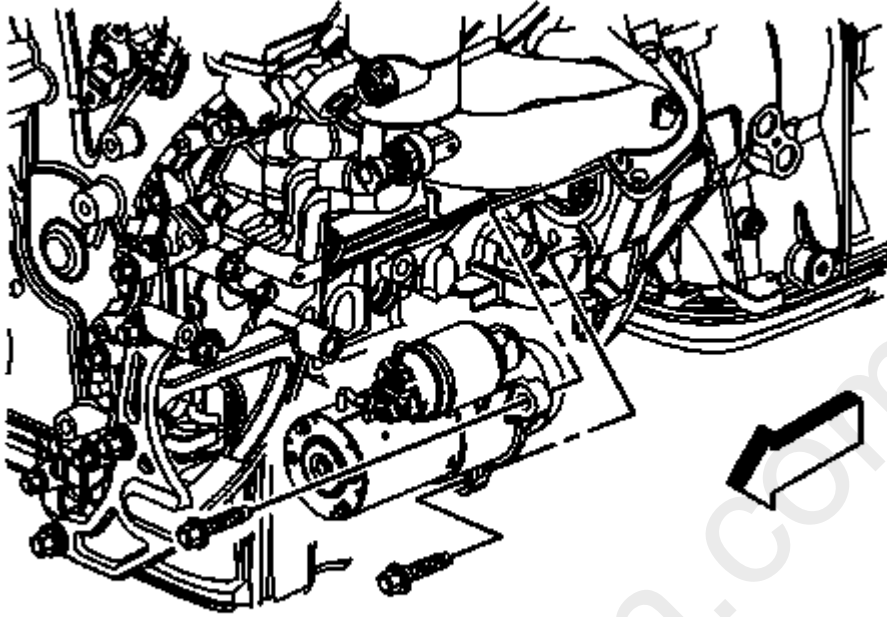


Fig. 29: View Of Starter Motor - LY7
Courtesy of GENERAL MOTORS COMPANY

6. Remove the starter motor bolts.
7. Remove the starter motor.

Installation Procedure

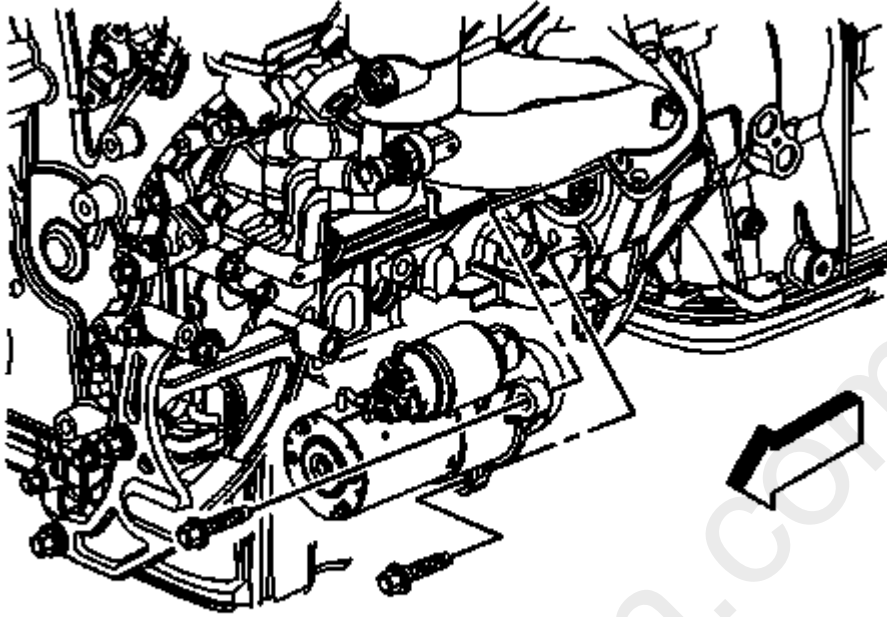


Fig. 30: View Of Starter Motor - LY7
Courtesy of GENERAL MOTORS COMPANY

1. Install the starter motor.

CAUTION: Refer to Fastener Caution .

2. Install the starter motor mounting bolts and tighten to 50 N.m (37 lb ft).

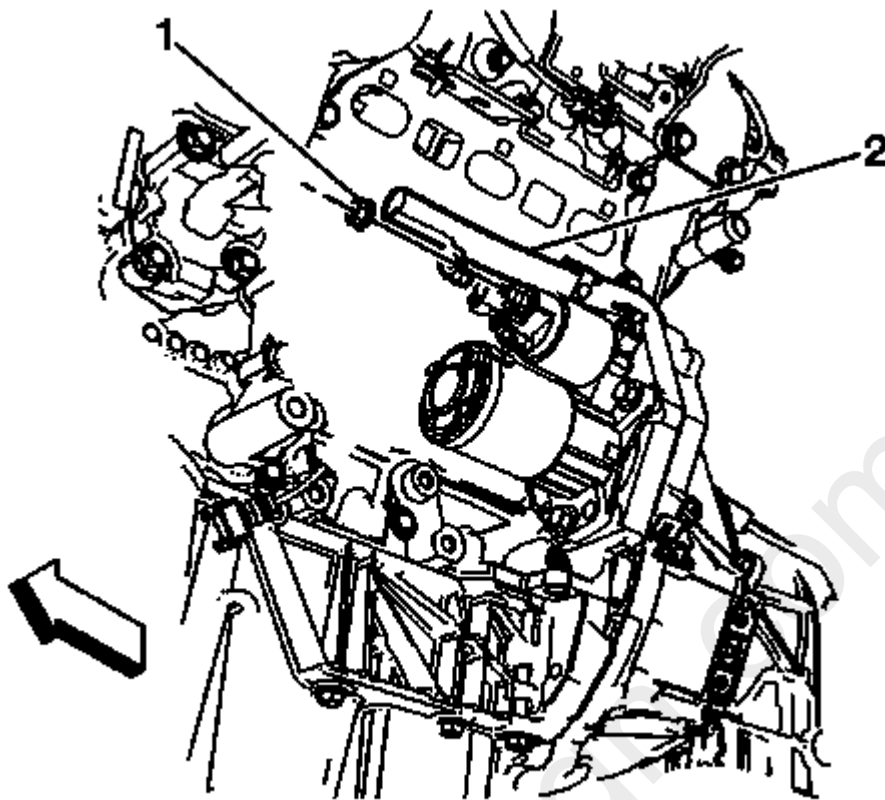


Fig. 31: Identifying Starter Terminal Nut And Engine Harness
Courtesy of GENERAL MOTORS COMPANY

3. Install the battery positive cable (2) to the starter and install the starter terminal nut (1). Tighten the battery positive cable nut to 13 N.m (10 lb ft).

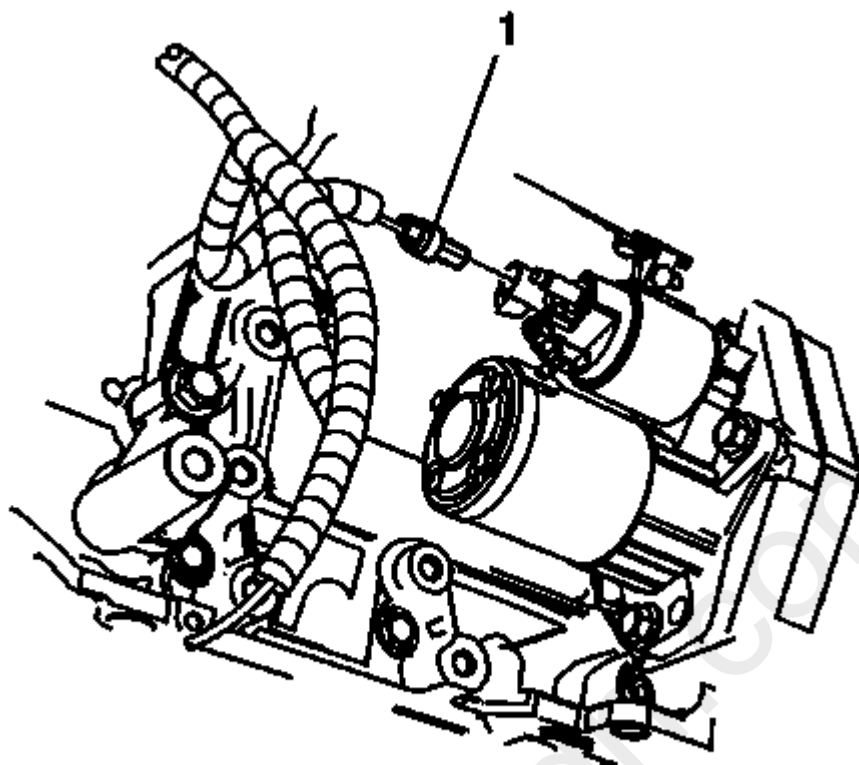


Fig. 32: Starter Solenoid Electrical Connector
Courtesy of GENERAL MOTORS COMPANY

4. Install the electrical connector (1) to the starter solenoid.
5. Install the starter heat shield. Refer to **Starter Shield Replacement (3.0L, 3.6L)**.

STARTER REPLACEMENT (6.2L)

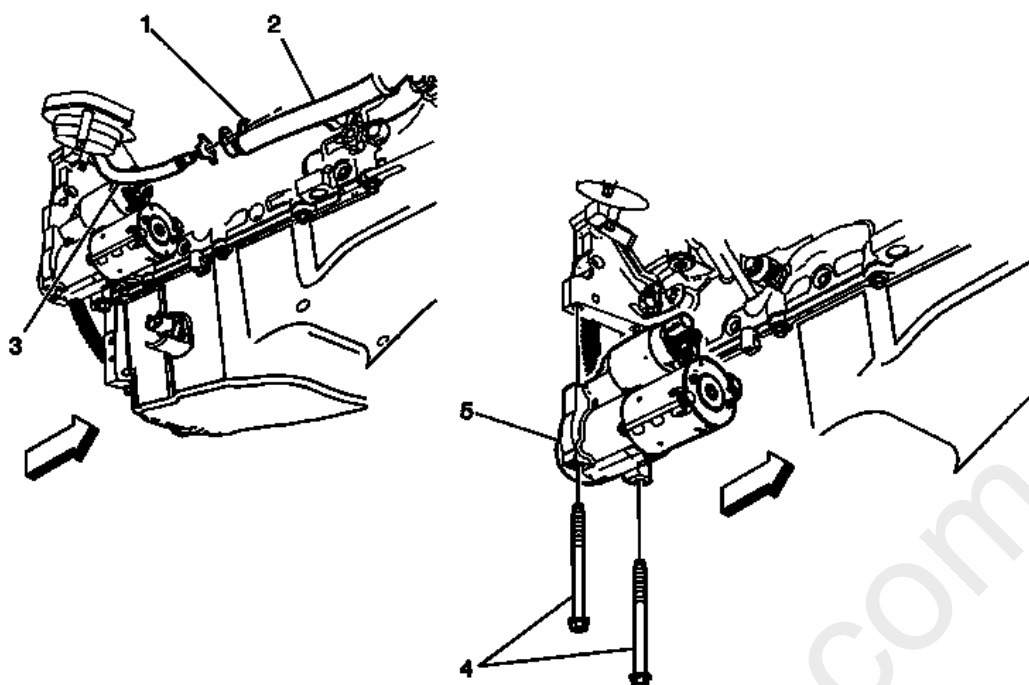


Fig. 33: Starter Components (6.2L)

Courtesy of GENERAL MOTORS COMPANY

Starter Replacement (6.2L)

Callout	Component Name
Preliminary Procedure	
1. Disconnect the negative battery cable. Refer to <u>Battery Negative Cable Disconnection and Connection (Coupe)</u>, <u>Battery Negative Cable Disconnection and Connection (Wagon)</u>. 2. Remove the right catalytic converter. Refer to <u>Catalytic Converter Replacement - Right Side (6.2L)</u>. 3. Disconnect the connector on the starter solenoid.	
1	Battery Solenoid Nut CAUTION: Refer to <u>Fastener Caution</u> Tighten 10 N.m (115 lb in)
2	Battery Cable (Fuse Block-Underhood)
3	Battery Cable (Generator)
4	Bolt (Qty: 2) Tighten

	50 N.m (37 lb ft)
5	Starter

STARTER SHIELD REPLACEMENT (3.0L, 3.6L)

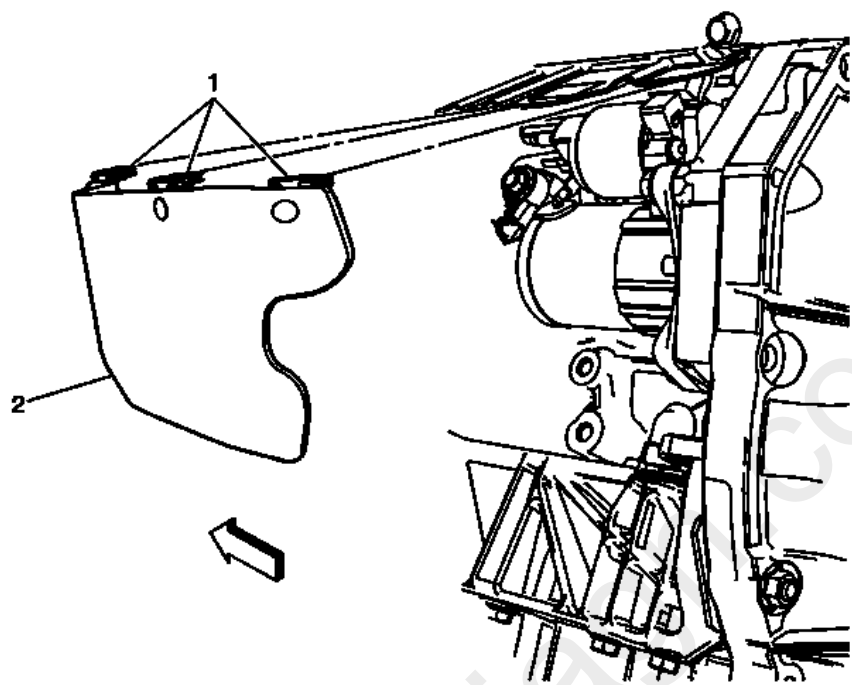


Fig. 34: Starter Shield (3.0L, 3.6L)
 Courtesy of GENERAL MOTORS COMPANY

Starter Shield Replacement (3.0L, 3.6L)

Callout	Component Name
Preliminary Procedure	
1. Disconnect the negative battery cable.Refer to Battery Negative Cable Disconnection and Connection (Coupe) , Battery Negative Cable Disconnection and Connection (Wagon) .	
2. Remove the right catalytic converter.Refer to Catalytic Converter Replacement - Right Side (3.0L, 3.6L)	
1	Clip (Qty: 3)
2	Starter Heat Shield

GENERATOR BRACKET REPLACEMENT (6.2L)

Removal Procedure

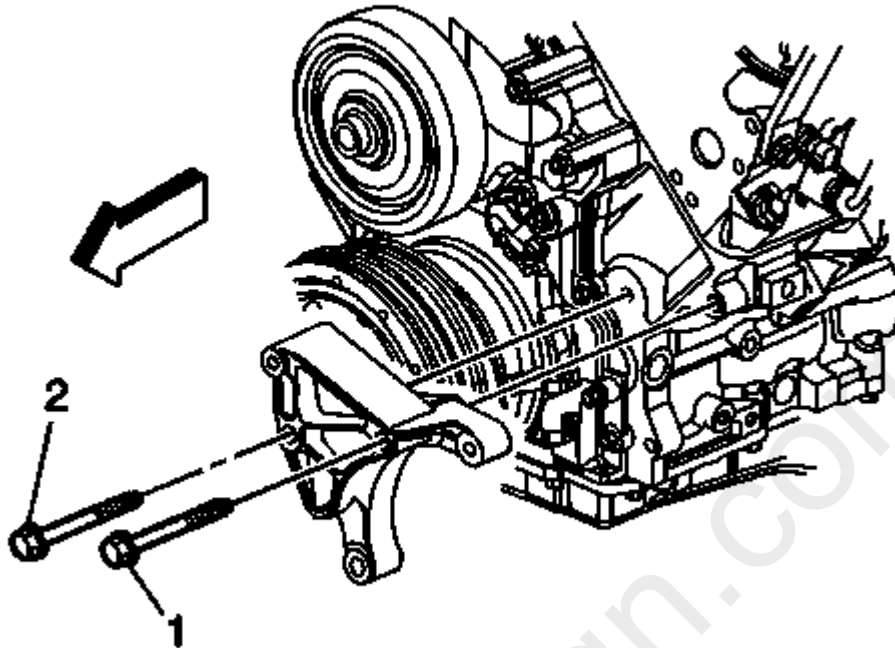


Fig. 35: Locating Generator Bracket To Engine & Mounting Bolts
Courtesy of GENERAL MOTORS COMPANY

1. Disconnect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**.
2. Remove the generator. Refer to **Generator Replacement (6.2L)**.
3. Remove the accessory drive belt idler pulley. Refer to **Drive Belt Idler Pulley Replacement**.
4. Remove the generator bracket bolts (1, and 2).
5. Remove the generator bracket from the engine.

Installation Procedure

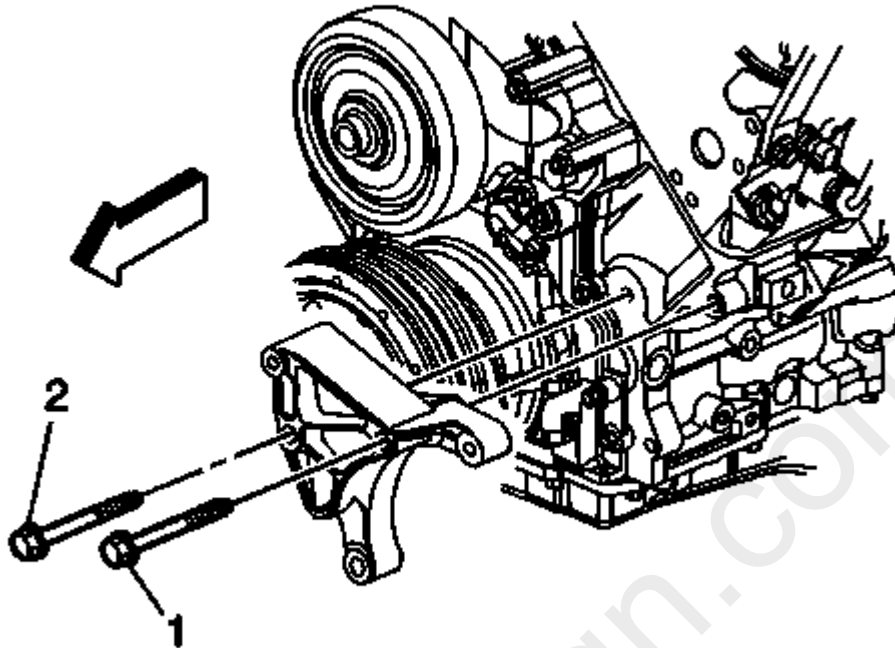


Fig. 36: Locating Generator Bracket To Engine & Mounting Bolts
Courtesy of GENERAL MOTORS COMPANY

1. Install the generator bracket to the engine.

CAUTION: Refer to Fastener Caution .

2. Install the generator bracket bolts (1, and 2) and tighten to 50 N.m (37 lb ft).
3. Install the accessory drive belt idler pulley. Refer to Drive Belt Idler Pulley Replacement .
4. Install the generator. Refer to Generator Replacement (6.2L).
5. Connect the battery negative cable. Refer to Battery Negative Cable Disconnection and Connection (Coupe), Battery Negative Cable Disconnection and Connection (Wagon).

GENERATOR BRACKET REPLACEMENT (3.6L)

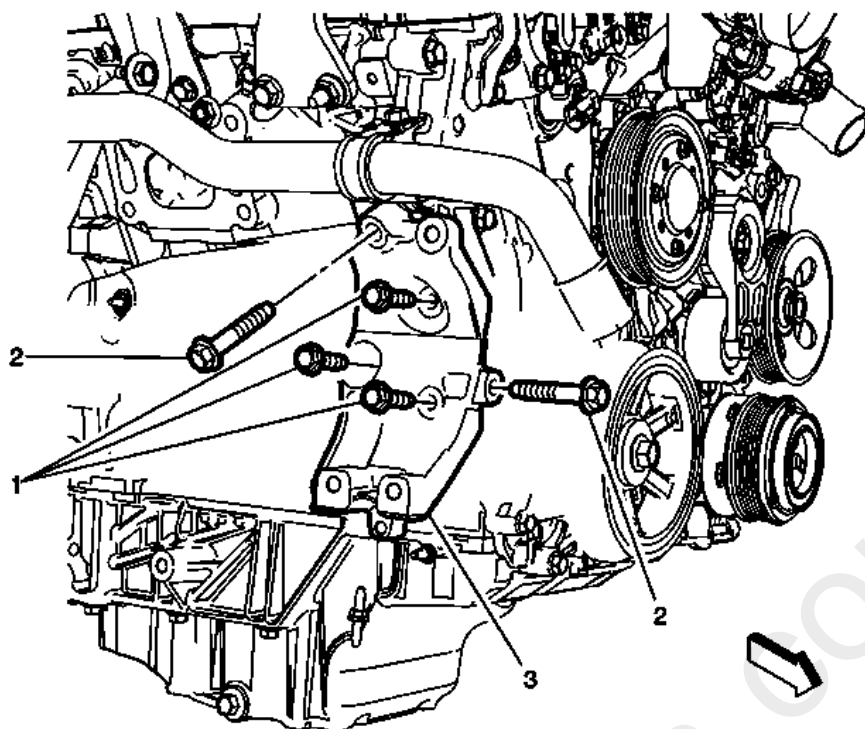


Fig. 37: Generator Bracket & Fasteners (3.6L)
 Courtesy of GENERAL MOTORS COMPANY

Generator Bracket Replacement (3.6L)

Callout	Component Name
Preliminary Procedure	
Remove the generator. Refer to Generator Replacement (3.6L) .	
1	Generator Bracket Fasteners (Qty: 3) CAUTION: Refer to Fastener Caution . Tighten 22 N.m (16 lb ft)
2	Generator Bracket Fasteners (Qty: 2) Tighten 58 N.m (43 lb ft)
3	Generator Bracket

GENERATOR REPLACEMENT (3.6L)

Removal Procedure

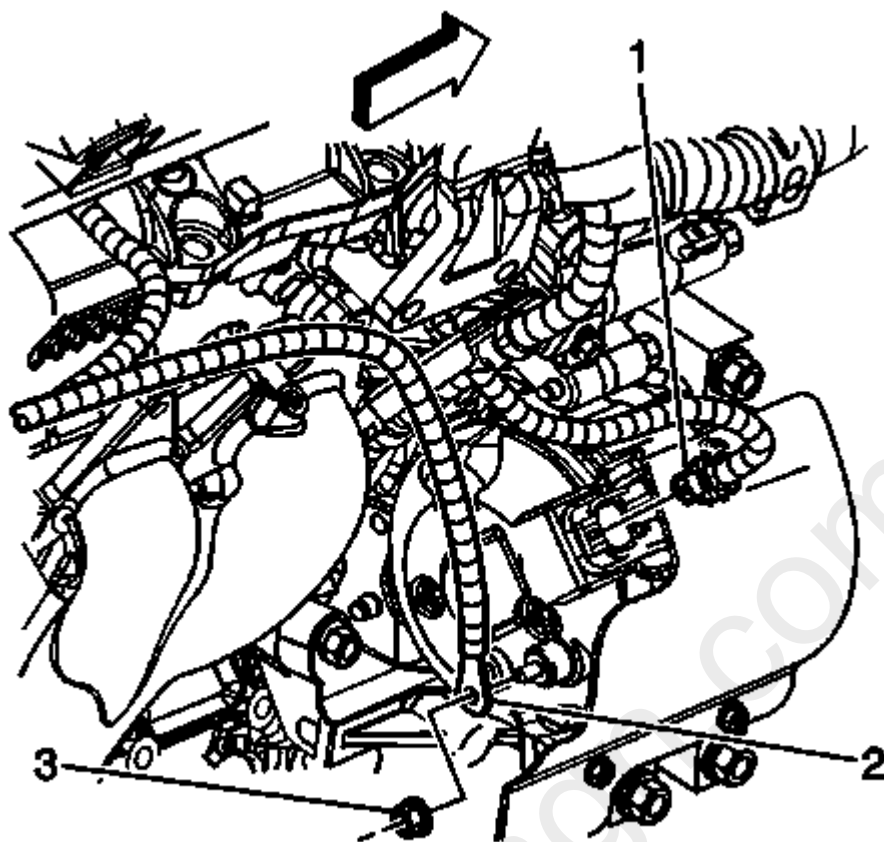


Fig. 38: View Of Battery Positive Lead & Generator BAT Terminal Nut
Courtesy of GENERAL MOTORS COMPANY

1. Disconnect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe), Battery Negative Cable Disconnection and Connection (Wagon)**.
2. Remove the drive belt from the generator. Refer to **Drive Belt Replacement**.
3. Raise and support the vehicle. Refer to **Lifting and Jacking the Vehicle**.
4. Remove the front air deflector. Refer to **Front Air Deflector Replacement**.
5. Disconnect the electrical connector (1) from the generator.
6. Reposition the protective boot from the generator output BAT terminal for access.
7. Remove the generator output BAT terminal nut (3) and disconnect the battery positive lead (2) from the generator.

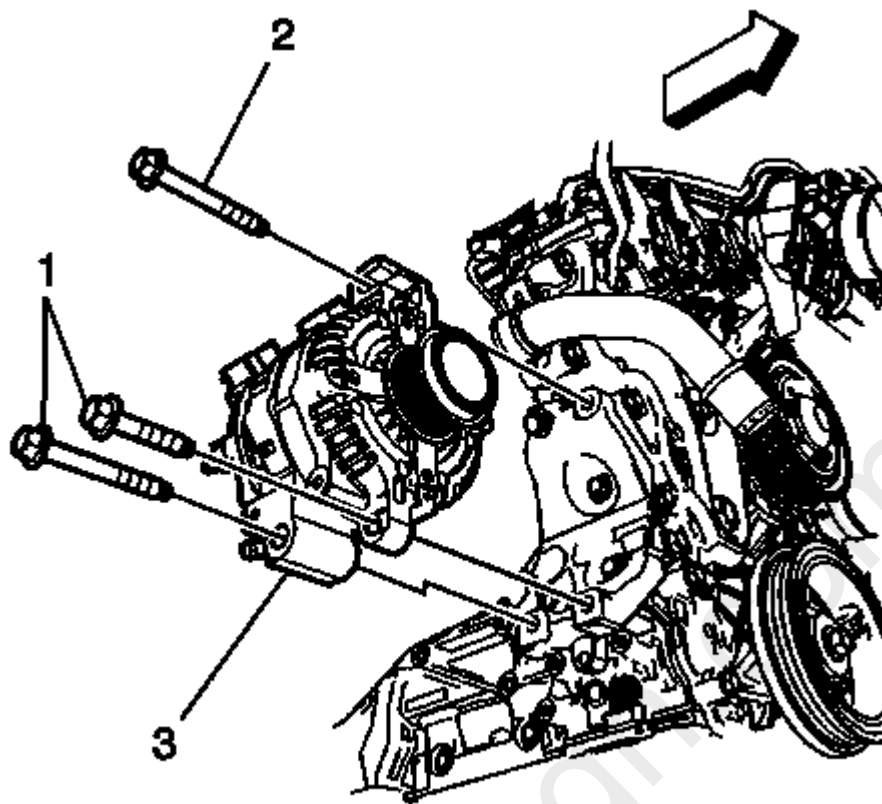


Fig. 39: Generator Lower Bolts
Courtesy of GENERAL MOTORS COMPANY

8. Remove the generator lower bolts (1).
9. Lower the vehicle.
10. Remove the generator upper bolt (2).
11. Remove the generator from the engine.

Installation Procedure

1. Install the generator to the engine.

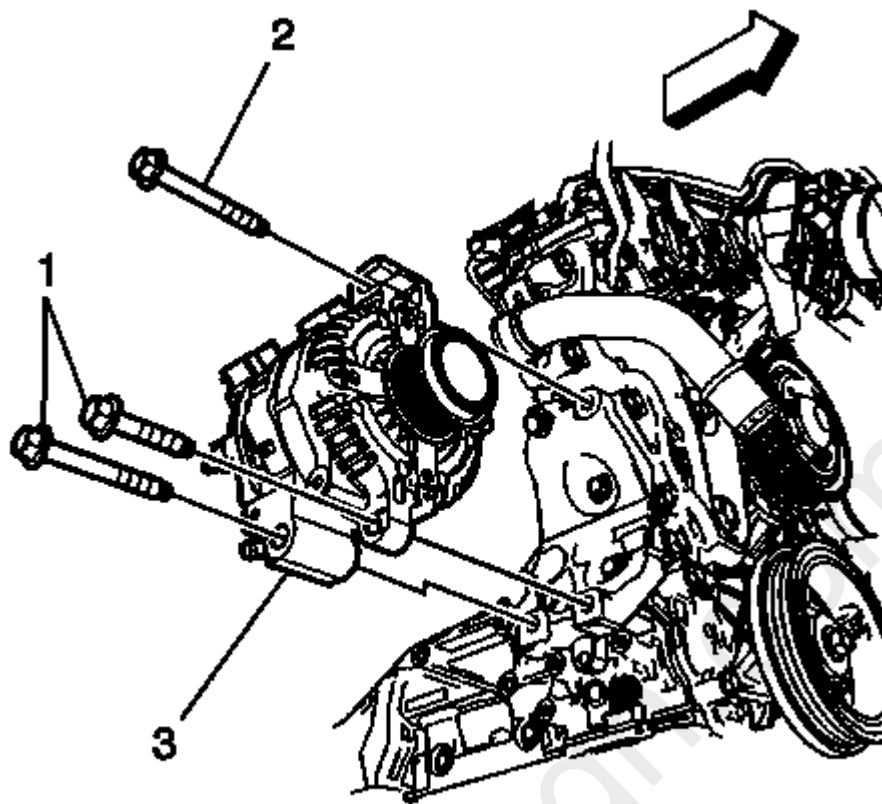


Fig. 40: Generator Lower Bolts

Courtesy of GENERAL MOTORS COMPANY

2. Install the generator upper bolt (2) and tighten to 50 N.m (37 lb ft).
3. Raise and support the vehicle. Refer to **Lifting and Jacking the Vehicle** .

CAUTION: Refer to Fastener Caution .

4. Install the generator lower bolts (1) and tighten to 50 N.m (37 lb ft).

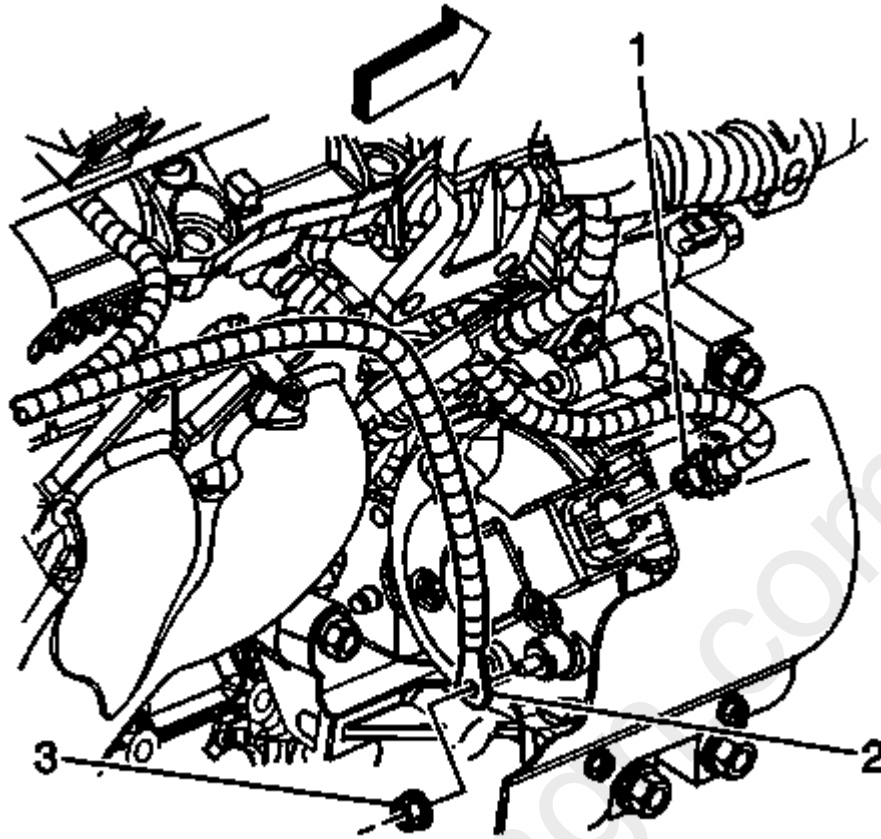


Fig. 41: View Of Battery Positive Lead & Generator BAT Terminal Nut
Courtesy of GENERAL MOTORS COMPANY

5. Install the battery positive lead (2) and the generator BAT terminal nut (3) to the generator and tighten the nut to 13 N.m (115 lb in).
6. Install the BAT terminal boot.
7. Connect the electrical connector (1) to the generator.
8. Install the front air deflector. Refer to **Front Air Deflector Replacement** .
9. Lower the vehicle.
10. Install the drive belt to the generator. Refer to **Drive Belt Replacement** .
11. Connect the battery negative cable. Refer to **Battery Negative Cable Disconnection and Connection (Coupe)**, **Battery Negative Cable Disconnection and Connection (Wagon)**.

GENERATOR REPLACEMENT (6.2L)

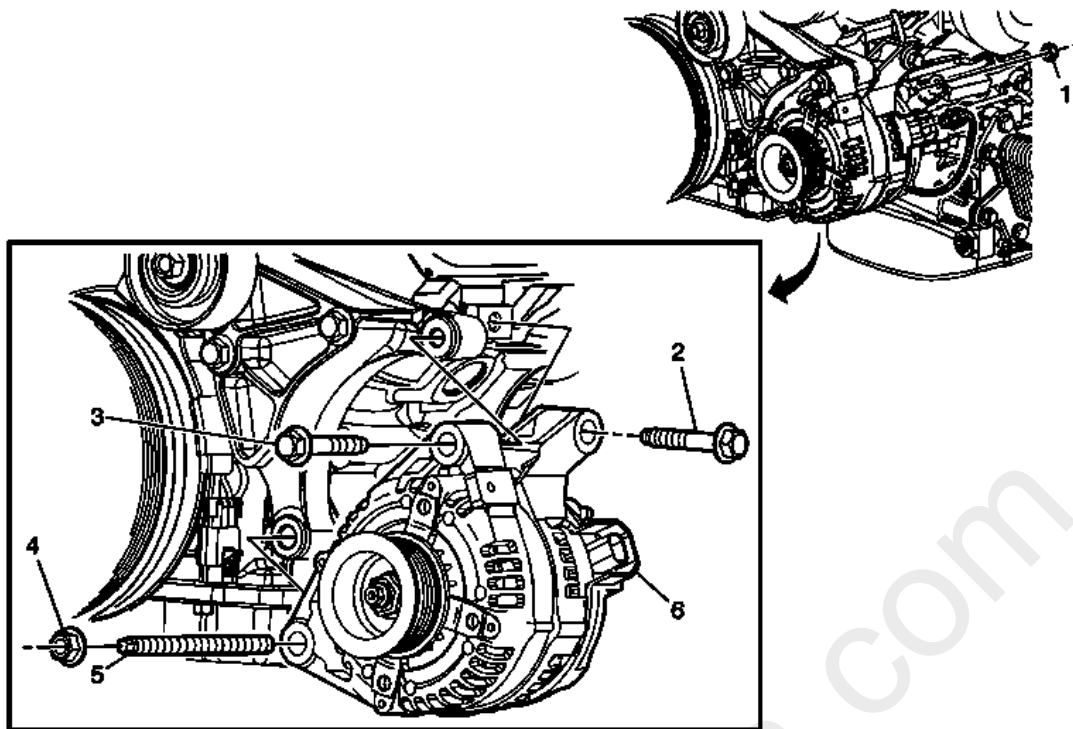


Fig. 42: Identifying Generator Components (6.2L)

Courtesy of GENERAL MOTORS COMPANY

Generator Replacement (6.2L)

Callout	Component Name
Preliminary Procedure	
1. Disconnect the negative battery cable. Refer to <u>Battery Negative Cable Disconnection and Connection (Coupe)</u>. 2. Remove the air cleaner assembly. Refer to <u>Air Cleaner Assembly Replacement</u>. 3. Remove the radiator fan assembly. Refer to <u>Engine Coolant Fan Replacement (6.2L)</u> 4. Remove the drive belt. Refer to <u>Drive Belt Replacement</u>.	
1	Generator Battery Terminal Nut CAUTION: Refer to <u>Fastener Caution</u> . Tighten 10 N.m (89 lb in)
2	Fastener Tighten 50 N.m (37 lb ft)
	Fastener

3	Tighten 50 N.m (37 lb ft)
4	Fastener Tighten 50 N.m (37 lb ft)
5	Fastener Tighten 20 N.m (15 lb ft)
6	Generator Procedure 1. Remove the power steering pressure hose to generator bolt. 2. Disconnect the generator harness connector. Tighten 9 N.m (80 lb in)

DESCRIPTION AND OPERATION

BATTERY DESCRIPTION AND OPERATION

WARNING: Batteries produce explosive gases, contain corrosive acid, and supply levels of electrical current high enough to cause burns. Therefore, to reduce the risk of personal injury when working near a battery:

- Always shield your eyes and avoid leaning over the battery whenever possible.
- Do not expose the battery to open flames or sparks.
- Do not allow the battery electrolyte to contact the eyes or the skin. Flush immediately and thoroughly any contacted areas with water and get medical help.
- Follow each step of the jump starting procedure in order.
- Treat both the booster and the discharged batteries carefully when using the jumper cables.

NOTE: Because of the materials used in the manufacture of automotive lead acid batteries, dealers and service shops that handle them are subject to various regulations issued by OSHA, EPA, DOT, and various state or local agencies. Other regulations may also apply in other locations. Always know and follow these regulations when handling batteries.

Batteries that are no longer wanted must be disposed of by an approved battery recycler and must never be

thrown in the trash or sent to a landfill.

Batteries that are not part of the vehicle itself, not the battery under the hood, must only be transported on public streets for business purposes via approved hazardous material transportation procedures.

Battery storage, charging and testing facilities in repair shops must meet various requirements for ventilation, safety equipment, material segregation, etc.

The maintenance free battery is standard. There are no vent plugs in the cover. The battery is completely sealed except for 2 small vent holes in the side. These vent holes allow the small amount of gas that is produced in the battery to escape.

The battery has 3 functions as a major source of energy:

- Engine cranking
- Voltage stabilizer
- Alternate source of energy with generator overload

Battery Low Start Vehicle Message

The body control module (BCM) monitors battery positive voltage to determine battery state of charge. If one or more of the BCM battery positive voltage terminals measure less than approximately 11.6V compared to the BCM ground circuits, this message will display and four chimes may sound. Start the vehicle immediately. If the vehicle is not started and the battery continues to discharge, the climate controls, heated seats, and audio systems will shut off and the vehicle may require a jump start. These systems will function again after the vehicle is started.

Battery Ratings

A battery has 2 ratings:

- Cold cranking amperage
- Amperage hours

When a battery is replaced use a battery with similar ratings. See battery specification label on the original battery.

Amperage Hours

The amperage hour rating tells you how much amperage is available when discharged evenly over a 20 hour period. The amperage hour rating is cumulative, so in order to know how many constant amperage the battery will output for 20 h, you have to divide the amperage hour rating by 20. Example: If a battery has an amperage hour rating of 74, dividing by 20 = 3.75. Such a battery can carry a 3.75 A load for 20 hours before dropping to 10.5 V. (10.5 V is the fully discharged level, at which point the battery needs to be recharged.) A battery with an amperage hour rating of 55 will carry a 2.75 A load for 20 hours before dropping to 10.5 V.

Cold Cranking Amperage

The cold cranking amperage is an indication of the ability of the battery to crank the engine at cold temperatures. The cold cranking amperage rating is the minimum amperage the battery must maintain for 30 seconds at -18°C (0°F) while maintaining at least 7.2 V. See battery label for the cold cranking amperage rating of this battery.

CHARGING SYSTEM DESCRIPTION AND OPERATION

Electrical Power Management Overview

The electrical power management system is designed to monitor and control the charging system and send diagnostic messages to alert the driver of possible problems with the battery and generator. This electrical power management system primarily utilizes existing on-board computer capability to maximize the effectiveness of the generator, to manage the load, improve battery state-of-charge and life, and minimize the system's impact on fuel economy. The electrical power management system performs 3 functions:

- It monitors the battery voltage and estimates the battery condition.
- It takes corrective actions by boosting idle speeds, and adjusting the regulated voltage.
- It performs diagnostics and driver notification.

The battery condition is estimated during ignition-off and during ignition-on. During ignition-off the state-of-charge of the battery is determined by measuring the open-circuit voltage. The state-of-charge is a function of the acid concentration and the internal resistance of the battery, and is estimated by reading the battery open circuit voltage when the battery has been at rest for several hours.

The state-of-charge can be used as a diagnostic tool to tell the customer or the dealer the condition of the battery. Throughout ignition-on, the algorithm continuously estimates state-of-charge based on adjusted net amp hours, battery capacity, initial state-of-charge, and temperature.

While running, the battery degree of discharge is primarily determined by a battery current sensor, which is integrated to obtain net amp hours.

In addition, the electrical power management function is designed to perform regulated voltage control to improve battery state-of-charge, battery life, and fuel economy. This is accomplished by using knowledge of the battery state-of-charge and temperature to set the charging voltage to an optimum battery voltage level for recharging without detriment to battery life.

The Charging System Description and Operation is divided into 3 sections. The first section describes the charging system components and their integration into the electrical power management. The second section describes charging system operation. The third section describes the instrument panel cluster operation of the charge indicator, driver information center messages, and voltmeter operation.

Charging System Components

Generator

The generator is a serviceable component. If there is a diagnosed failure of the generator it must be replaced as an assembly. The engine drive belt drives the generator. When the rotor is spun it induces an alternating current

(AC) into the stator windings. The AC voltage is then sent through a series of diodes for rectification. The rectified voltage has been converted into a direct current (DC) for use by the vehicles electrical system to maintain electrical loads and the battery charge. The voltage regulator integral to the generator controls the output of the generator. It is not serviceable. The voltage regulator controls the amount of current provided to the rotor. If the generator has field control circuit failure, the generator defaults to an output voltage of 13.8 V.

Body Control Module (BCM)

The body control module (BCM) is a GMLAN device. It communicates with the engine control module (ECM) and the instrument panel cluster for electrical power management (electrical power management) operation. The BCM determines the output of the generator and sends the information to the ECM for control of the generator turn on signal circuit. It monitors the generator field duty cycle signal circuit information sent from the ECM for control of the generator. It monitors a battery current sensor, the battery positive voltage circuit, and estimated battery temperature to determine battery state of charge. The BCM performs idle boost.

Battery Current Sensor

The battery current sensor is a serviceable component that is connected to either the negative or positive battery cable at the battery. The battery current sensor is a 3-wire hall effect current sensor. The battery current sensor monitors the battery current. It directly inputs to the BCM. It creates a 5-volt pulse width modulation (PWM) signal of 128 Hz with a duty cycle of 0-100 percent. Normal duty cycle is between 5-95 percent. Between 0-5 percent and 95-100 percent are for diagnostic purposes.

Engine Control Module (ECM)

When the engine is running, the generator turn-on signal is sent to the generator from the ECM, turning on the regulator. The generator's voltage regulator controls current to the rotor, thereby controlling the output voltage. The rotor current is proportional to the electrical pulse width supplied by the regulator. When the engine is started, the regulator senses generator rotation by detecting AC voltage at the stator through an internal wire. Once the engine is running, the regulator varies the field current by controlling the pulse width. This regulates the generator output voltage for proper battery charging and electrical system operation. The generator field duty terminal is connected internally to the voltage regulator and externally to the ECM. When the voltage regulator detects a charging system problem, it grounds this circuit to signal the ECM that a problem exists. The ECM monitors the generator field duty cycle signal circuit, and receives control decisions based on information from the BCM.

Instrument Panel Cluster

The instrument panel cluster provides the customer notification in case a concern with the charging system. There are 2 means of notification, a charge indicator and a driver information center message of SERVICE BATTERY CHARGING SYSTEM if equipped.

Charging System Operation

The purpose of the charging system is to maintain the battery charge and vehicle loads. There are 6 modes of operation and they include:

- Battery Sulfation Mode

- Charge Mode
- Fuel Economy Mode
- Headlamp Mode
- Start Up Mode
- Voltage Reduction Mode

The engine control module (ECM) controls the generator through the generator turn ON signal circuit. The ECM monitors the generator performance through the generator field duty cycle signal circuit. The signal is a pulse width modulation (PWM) signal of 128 Hz with a duty cycle of 0-100 percent. Normal duty cycle is between 5-95 percent. Between 0-5 percent and 95-100 percent are for diagnostic purposes. The following table shows the commanded duty cycle and output voltage of the generator:

Commanded Duty Cycle	Generator Output Voltage
10%	11 V
20%	11.56 V
30%	12.12 V
40%	12.68 V
50%	13.25 V
60%	13.81 V
70%	14.37 V
80%	14.94 V
90%	15.5 V

The generator provides a feedback signal of the generator voltage output through the generator field duty cycle signal circuit to the ECM. This information is sent to the body control module (BCM). The signal is PWM signal of 128 Hz with a duty cycle of 0-100 percent. Normal duty cycle is between 5-99 percent. Between 0-5 percent and 100 percent are for diagnostic purposes.

Battery Sulfation Mode

The BCM will enter this mode when the interpreted generator output voltage is less than 13.2 V for 45 minutes. When this condition exists the BCM will enter Charge Mode for 2-3 minutes. The BCM will then determine which mode to enter depending on voltage requirements.

Charge Mode

The BCM will enter Charge Mode when ever one of the following conditions are met.

- The wipers are ON for more than 3 seconds.
- GMLAN (Climate Control Voltage Boost Mode Request) is true, as sensed by the HVAC control head. High speed cooling fan, rear defogger and HVAC high speed blower operation can cause the BCM to enter the Charge Mode.
- The estimated battery temperature is less than 0°C (32°F).
- Battery State of Charge is less than 80 percent.

- Vehicle speed is greater than 145 km/h (90 mph)
- Current sensor fault exists.
- System voltage was determined to be below 12.56 V

When any one of these conditions is met, the system will set targeted generator output voltage to a charging voltage between 13.9-15.5 V, depending on the battery state of charge and estimated battery temperature.

Fuel Economy Mode

The BCM will enter Fuel Economy Mode when the estimated battery temperature is at least 0°C (32°F) but less than or equal to 80°C (176°F), the calculated battery current is less than 15 amperes and greater than -8 amperes, and the battery state-of-charge is greater than or equal to 80 percent. Its targeted generator output voltage is the open circuit voltage of the battery and can be between 12.5-13.1 V. The BCM will exit this mode and enter Charge Mode when any of the conditions described above are present.

Headlamp Mode

The BCM will enter Headlamp Mode when ever the headlamps are ON (high or low beams). Voltage will be regulated between 13.9-14.5 V.

Start Up Mode

When the engine is started the BCM sets a targeted generator output voltage of 14.5 V for 30 seconds.

Voltage Reduction Mode

The BCM will enter Voltage Reduction Mode when the calculated ambient air temperature is above 0°C (32°F). The calculated battery current is less than 1 ampere and greater than -7 amperes, and the generator field duty cycle is less than 99 percent. Its targeted generator output voltage is 12.9 V. The BCM will exit this mode once the criteria are met for Charge Mode.

Instrument Panel Cluster Operation

Charge Indicator Operation

The instrument panel cluster illuminates the charge indicator and displays a warning message in the driver information center if equipped, when the one or more of the following occurs:

- The engine control module (ECM) detects that the generator output is less than 11 V or greater than 16 V. The instrument panel cluster receives a GMLAN message from the ECM requesting illumination.
- The instrument panel cluster determines that the system voltage is less than 11 V or greater than 16 V for more than 30 seconds. The instrument panel cluster receives a GMLAN message from the body control module (BCM) indicating there is a system voltage range concern.
- The instrument panel cluster performs the displays test at the start of each ignition cycle. The indicator illuminates for approximately 3 seconds.

Display Message: BATTERY NOT CHARGING SERVICE CHARGING SYSTEM or SERVICE

BATTERY CHARGING SYSTEM

The BCM and the ECM will send a serial data message to the driver information center for the BATTERY NOT CHARGING SERVICE CHARGING SYSTEM or SERVICE BATTERY CHARGING SYSTEM message to be displayed. It is commanded ON when a charging system DTC is a current DTC. The message is turned OFF when the conditions for clearing the DTC have been met.

ELECTRICAL POWER MANAGEMENT DESCRIPTION AND OPERATION

Electrical Power Management

The electrical power management is used to monitor and control the charging system and alert the driver of possible problems within the charging system. The electrical power management system makes the most efficient use of the generator output, improves the battery state-of-charge, extends battery life, and manages system electrical loads.

The load shed operation is a means of reducing electrical loads during a low voltage or low battery state-of-charge condition.

The idle boost operation is a means of improving generator performance during a low voltage or low battery state-of-charge condition.

Each electrical power management function, either idle boost or load shed, is discrete. No two functions are active at the same time. Idle boost is activated in incremental steps, idle boost 1 must be active before idle boost 2 can be active. The criteria used by the body control module (BCM) to regulate electrical power management are outlined below:

Function	Battery Temperature Calculation	Battery Voltage Calculation	Amp-Hour Calculation	Action Taken
Idle Boost 1 Start	Less Than -15°C (5°F)	Less Than 13 V	-	First level Idle boost requested
Idle Boost 1 Start	-	-	Battery has a net loss greater than 0.6 Ah	First level Idle boost requested
Idle Boost 1 Start	-	Less Than 10.9 V	-	First level Idle boost requested
Idle Boost 1 End	Greater Than -15°C (5°F)	Greater Than -12 V	Battery has a net loss less than 0.2 Ah	First level Idle boost request cancelled
Load Shed 1 Start	-	-	Battery has a net loss of 4 Ah	Rear Defrost, Heated Mirrors, Heated Seats cycled OFF for 20% of their cycle
				Rear Defrost, Heated Mirrors,

Load Shed 1 Start	-	Less Than 10.9 V	-	Heated Seats cycled OFF for 20% of their cycle
Load Shed 1 End	-	Greater Than 12 V	Battery has a net loss of less than 2 Ah	Clear Load Shed 1
Idle Boost 2 Start	-	-	Battery has a net loss greater than 1.6 Ah	Second level Idle boost requested
Idle Boost 2 Start	-	Less Than 10.9 V	-	Second level Idle boost requested
Idle Boost 2 End	-	Greater Than 12 V	Battery has a net loss less than 0.8 Ah	Second level Idle boost request cancelled
Idle Boost 3 Start	-	-	Battery has a net loss of 10 Ah	Third level Idle boost requested
Idle Boost 3 Start	-	Less Than 10.9 V	-	Third level Idle boost requested
Idle Boost 3 End	-	Greater Than 12 V	Battery has a net loss of less than 6.0 Ah	Third level Idle boost request cancelled
Load Shed 2 Start	-	Less Than 10 V	Battery has a net loss greater than 12 Ah	Rear Defrost, Heated Mirrors, Heated Seats cycled OFF for 50% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 2 Start	-	Less Than 10.9 V	-	Rear Defrost, Heated Mirrors, Heated Seats cycled OFF for 50% of their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 2 End	-	Greater Than 12.6 V	Battery has a net loss of less than 10.5 Ah	Clear Load Shed 2
			Battery has a net	Rear Defrost, Heated Mirrors, Heated Seats cycled OFF for 100% of

Load Shed 3 Start	-	Less Than 11.9 V	loss greater than 20 Ah	their cycle. The BATTERY SAVER ACTIVE message will be displayed on the DIC
Load Shed 3 End	-	Greater Than 12.6 V	Battery has a net loss of less than 15 Ah	Clear Load Shed 3

STARTING SYSTEM DESCRIPTION AND OPERATION

The starter motors are non-repairable starter motors. They have pole pieces that are arranged around the armature. Both solenoid windings are energized. The pull-in winding circuit is completed to the ground through the starter motor. The windings work together magnetically to pull and hold in the plunger. The plunger moves the shift lever. This action causes the starter drive assembly to rotate on the armature shaft spline as it engages with the flywheel ring gear on the engine. Moving at the same time, the plunger also closes the solenoid switch contacts in the starter solenoid. Full battery voltage is applied directly to the starter motor and it cranks the engine.

As soon as the solenoid switch contacts close, current stops flowing thorough the pull-in winding because battery voltage is applied to both ends of the windings. The hold-in winding remains energized. Its magnetic field is strong enough to hold the plunger, shift lever, starter drive assembly, and solenoid switch contacts in place to continue cranking the engine. When the engine starts, pinion overrun protects the armature from excessive speed until the switch is opened.

When the ignition switch is released from the START position, the START relay opens and battery voltage is removed from the starter solenoid S terminal. Current flows from the motor contacts through both windings to the ground at the end of the hold-in winding. However, the direction of the current flow through the pull-in winding is now opposite the direction of the current flow when the winding was first energized.


The magnetic fields of the pull-in and hold-in windings now oppose one another. This action of the windings, along with the help of the return spring, causes the starter drive assembly to disengage and the solenoid switch contacts to open simultaneously. As soon as the contacts open, the starter circuit is turned off.


Circuit Description (Key Start)

When the ignition switch is placed in the Start position, a discrete signal is supplied to the body control module (BCM) notifying it that the ignition is in the Start position. The BCM then sends a message to the engine control module (ECM) notifying it that CRANK has been requested. The ECM verifies that the transmission is in Park or Neutral. If it is, the ECM then supplies 12 V to the control circuit of the crank relay. When this occurs, battery positive voltage is supplied through the switch side of the crank relay to the S terminal of the starter solenoid.

SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS

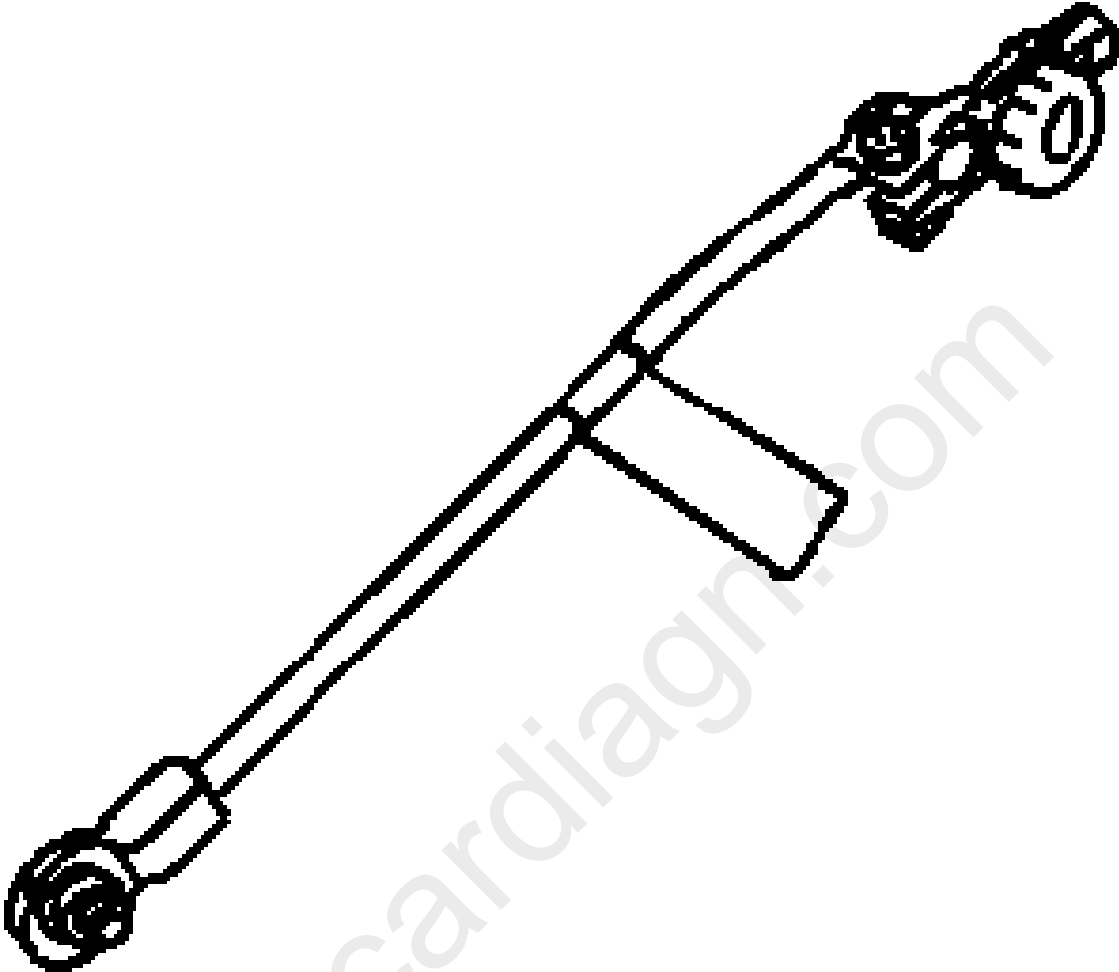Illustration	Tool Number/Descrip
 cardiagn.com	EL 38758 EL 50074 J 38758 Parasitic Draw T Switch

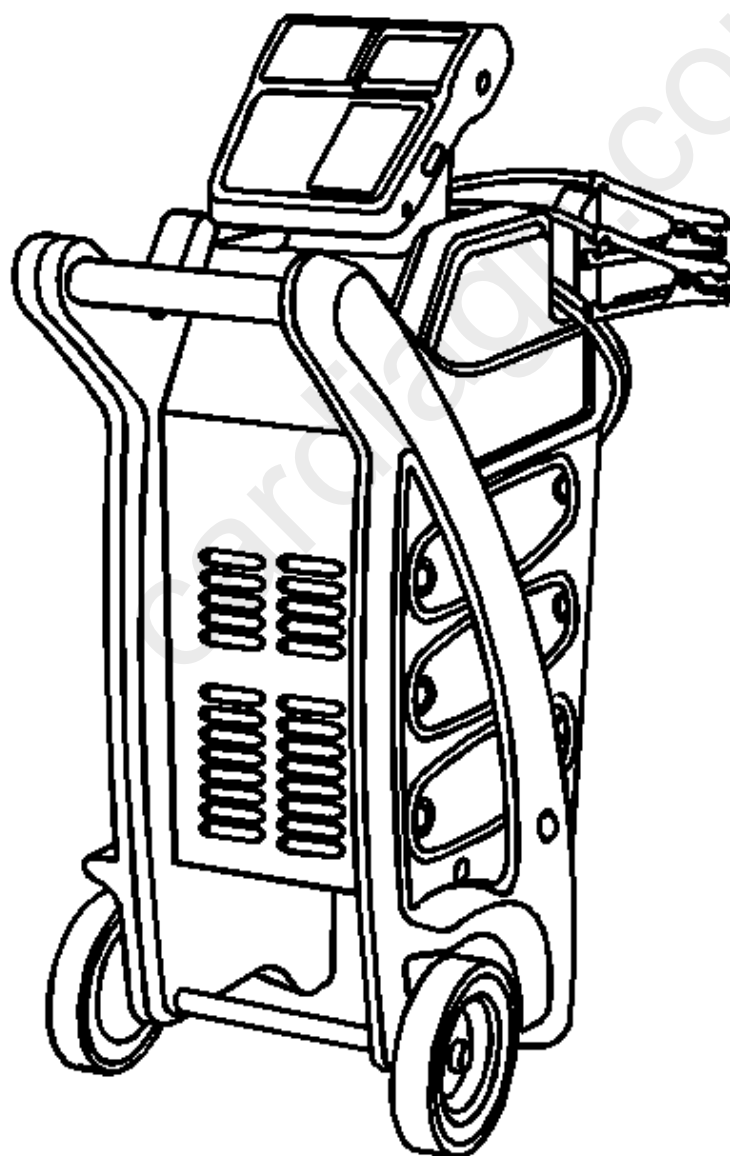

EL 50313
EL 42000
EL 50076
J 42000
Battery Tester

