


Steering column electronics

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

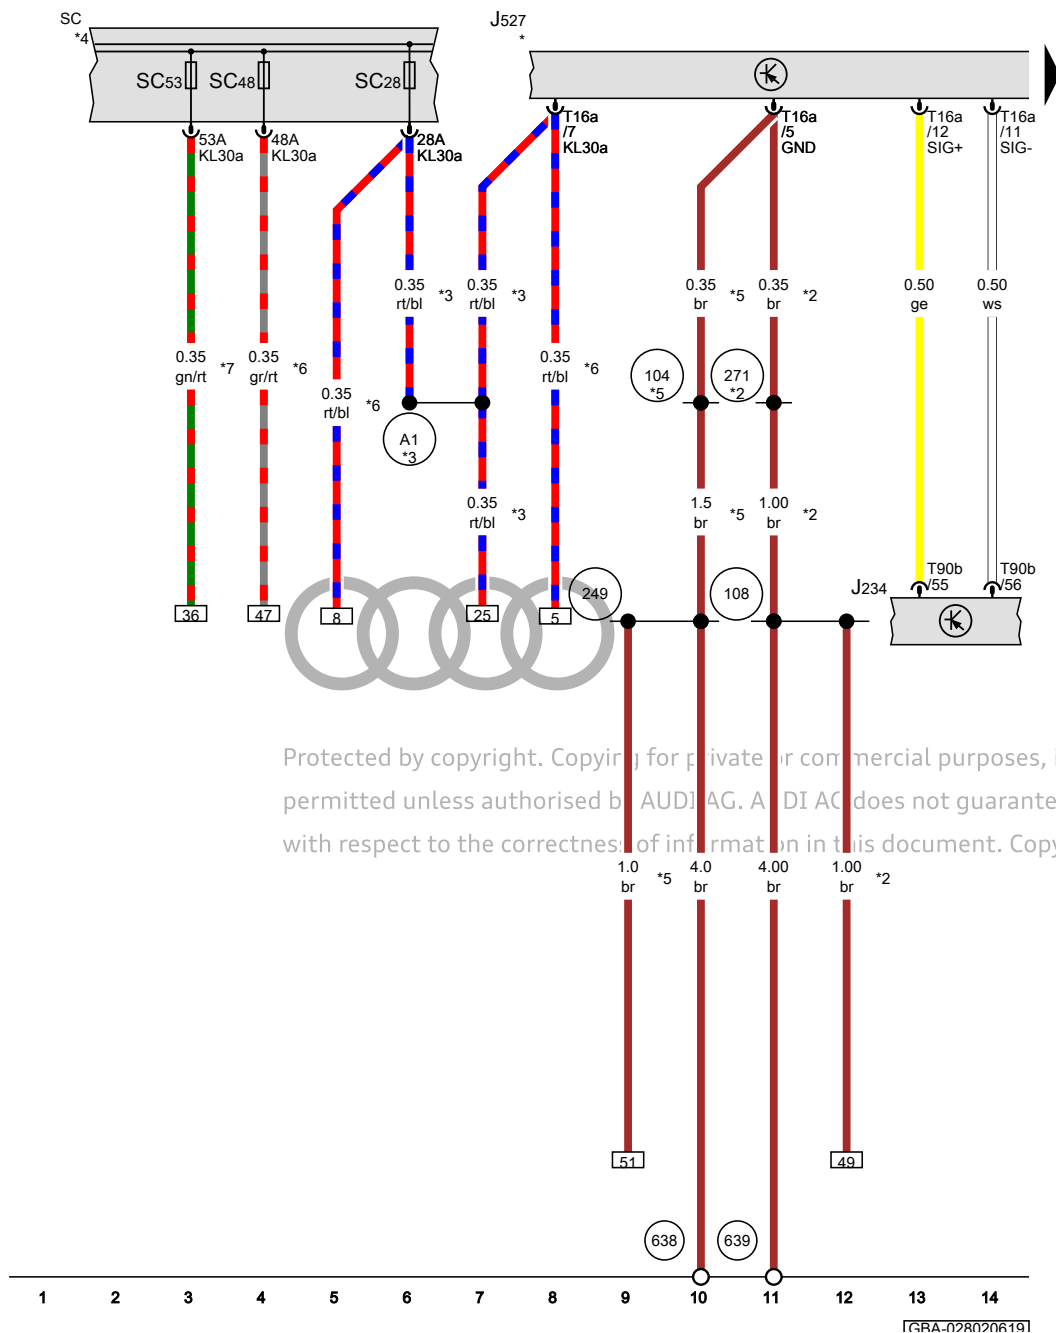


Airbag control unit, Steering column electronics control unit, Fuse holder C

- J234 Airbag control unit
- J527 Steering column electronics control unit
- SC Fuse holder C
- SC28 Fuse 28 on fuse holder C
- SC48 Fuse 48 on fuse holder C
- SC53 Fuse 53 on fuse holder C
- T16a 16-pin connector, black
- T90b 90-pin connector, yellow

- 104 Earth connection in front right wiring harness - sensor earth -
- 108 Earth connection 2, in front left wiring harness
- 249 Earth connection 2, in interior wiring harness
- 271 Earth connection 3, in front wiring harness
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- A1 Positive connection (30a), in dash panel wiring harness

- * see applicable current flow diagram for multifunction steering wheel
- *2 For left-hand drive models
- *3 For models with no entry and start authorisation
- *4 see applicable current flow diagram for fuses in interior
- *5 For right-hand drive models
- *6 For models with entry and start authorisation
- *7 For models with manual gearbox


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

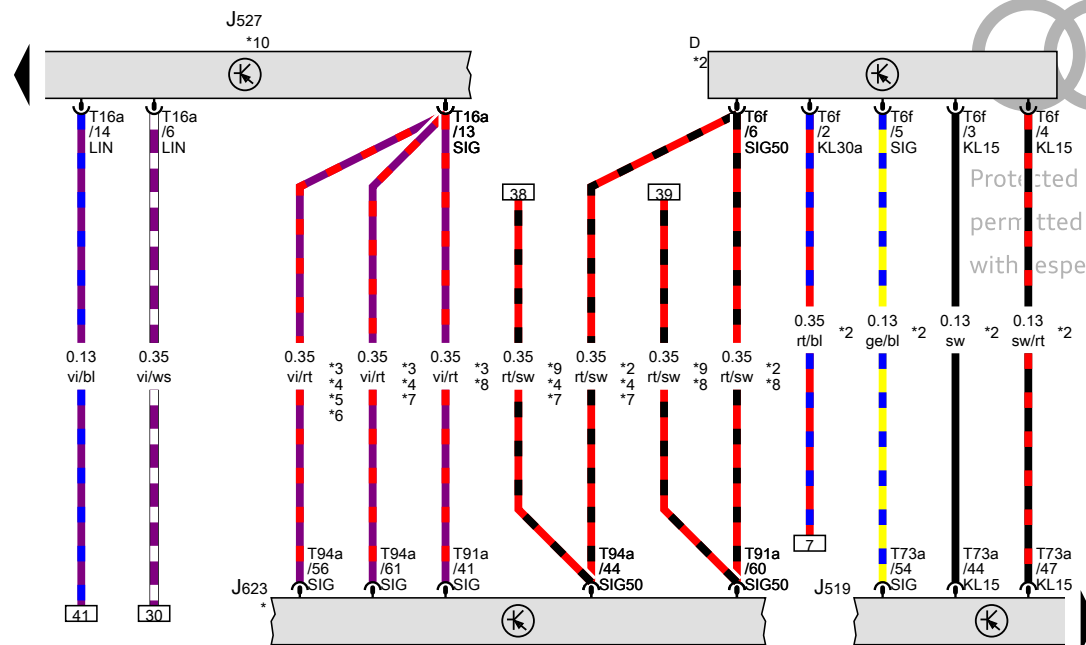

Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit

- D Ignition/starter switch
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J623 Engine/motor control unit
- T6f 6-pin connector, black
- T16a 16-pin connector, black
- T73a 73-pin connector, black
- T91a 91-pin connector, black
- T94a 94-pin connector, black
- * see applicable current flow diagram for engine
- *2 For models with no entry and start authorisation
- *3 For models with cruise control system (CCS)
- *4 For models with 1.0l petrol engine
- *5 For models with Euro 6 emission standard
- *6 Up to July 2019
- *7 For models with 1.5l petrol engine
- *8 For models with 2.0l petrol engine
- *9 For models with entry and start authorisation
- *10 see applicable current flow diagram for multifunction steering wheel

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

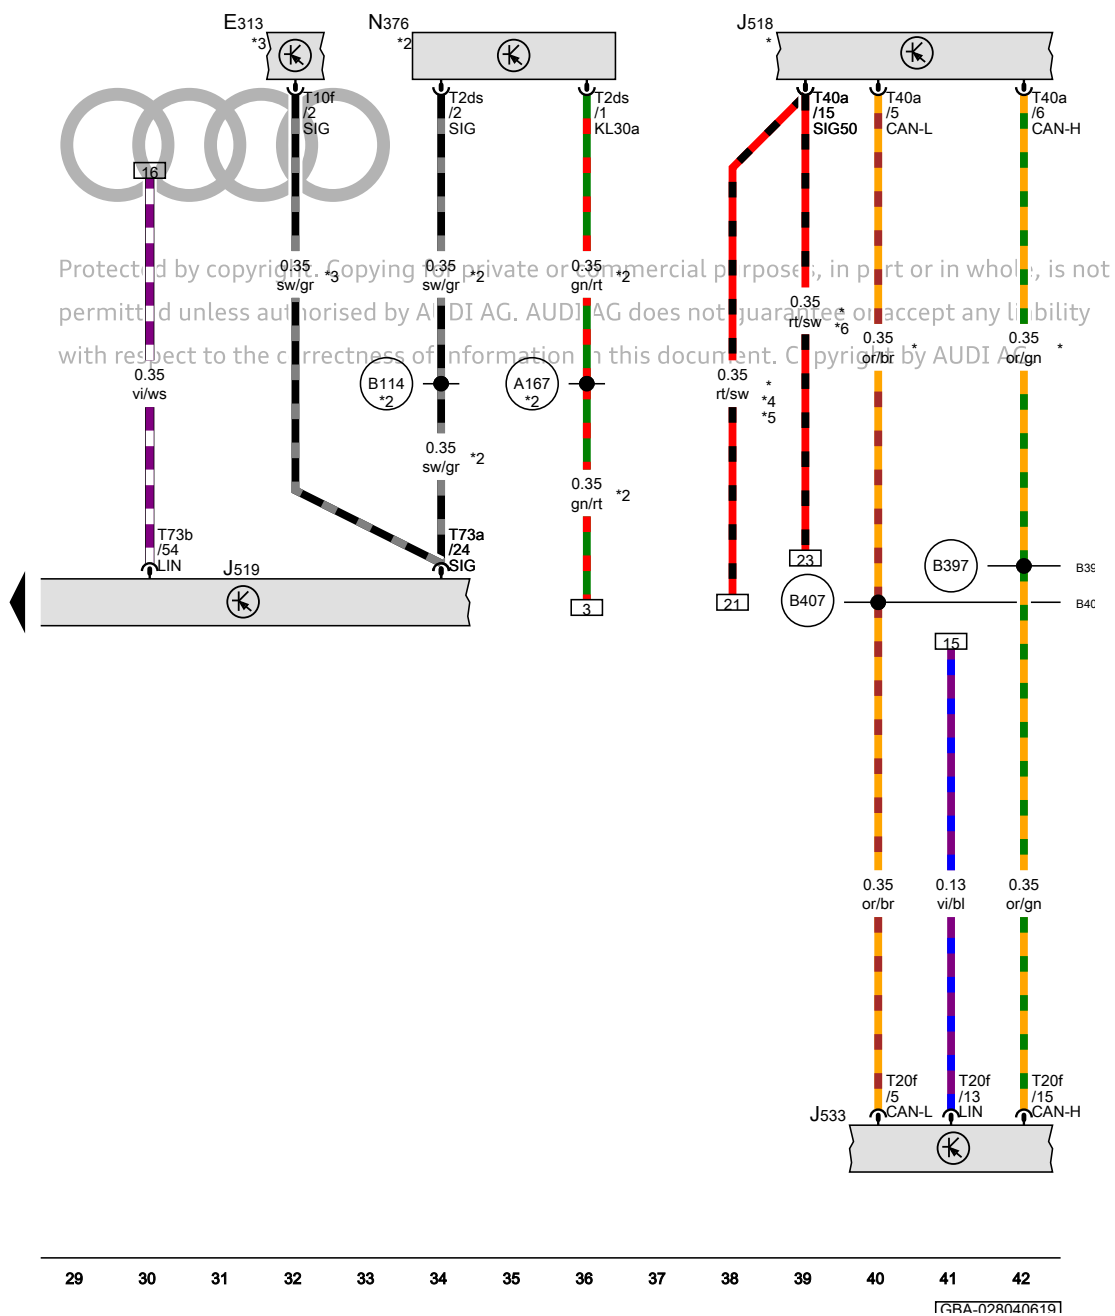


Selector lever, Entry and start authorisation control unit,
Onboard supply control unit, Data bus diagnostic interface,
Ignition key withdrawal lock solenoid

- | | |
|------|--|
| E313 | Selector lever |
| J518 | Entry and start authorisation control unit |
| J519 | Onboard supply control unit |
| J533 | Data bus diagnostic interface |
| N376 | Ignition key withdrawal lock solenoid |
| T2ds | 2-pin connector, black |
| T10f | 10-pin connector, black |
| T20f | 20-pin connector, red |
| T40a | 40-pin connector, black |
| T73a | 73-pin connector, black |
| T73b | 73-pin connector, black |

- A167 Positive connection 3 (30a) in dash panel wiring harness
- B114 Connection (inhibitor switch), in interior wiring harness
- B397 Connection 1 (convenience CAN bus, high), in main wiring harness
- B407 Connection 2 (convenience CAN bus, low), in main wiring harness

- * For models with entry and start authorisation
- *2 For models with manual gearbox
- *3 For models with dual clutch gearbox
- *4 For models with 1.0l petrol engine
- *5 For models with 1.5l petrol engine
- *6 For models with 2.0l petrol engine

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

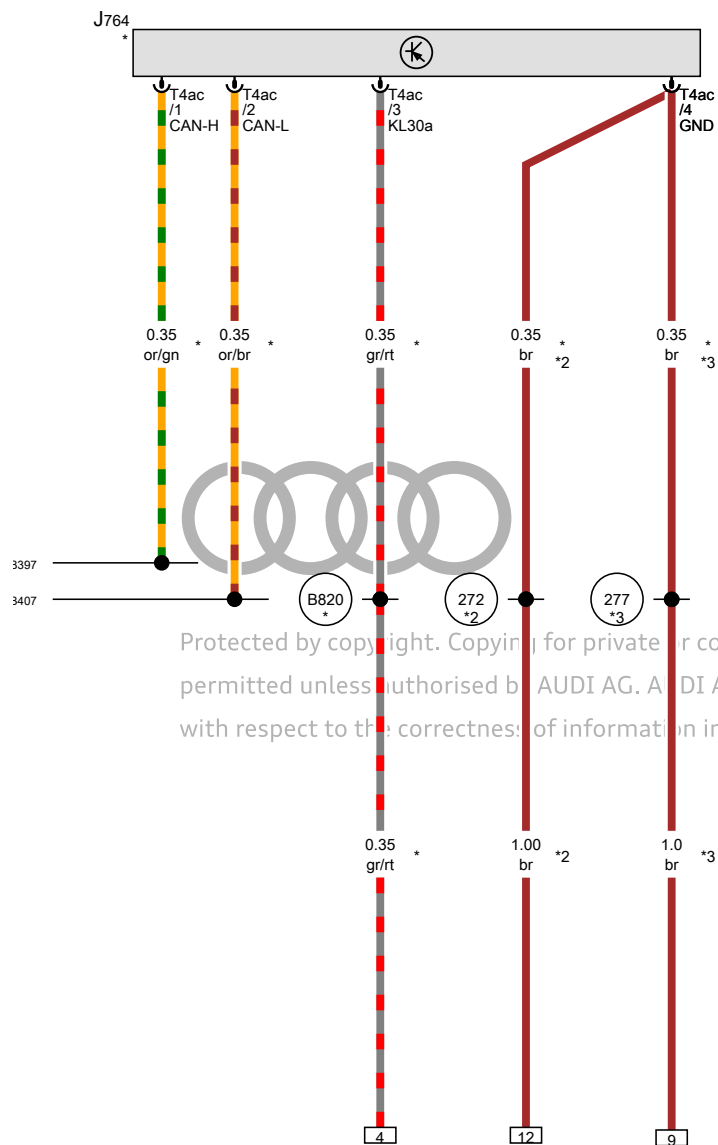

Control unit for electronic steering column lock

J764 Control unit for electronic steering column lock

T4ac 4-pin connector, black

272 Earth connection 4, in front wiring harness

277 Earth connection 3, in interior wiring harness

B397 Connection 1 (convenience CAN bus, high), in main wiring harness

B407 Connection 2 (convenience CAN bus, low), in main wiring harness

B820 Connection (electronic steering column lock) in main wiring harness

* For models with entry and start authorisation

*2 For left-hand drive models

*3 For right-hand drive models

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.