


ENGINE CONTROLS: 5.3L

Component Index

- Accelerator Pedal Position (APP) Sensor (5.3L)
- Camshaft Position (CMP) Sensor (5.3L)
- Crankshaft Position (CKP) Sensor (5.3L)
- Electronic Brake Control Module (EBCM)
- Engine Coolant Temperature (ECT) Sensor (5.3L)
- Evaporative Emission (EVAP) Canister Purge Solenoid (5.3L)
- Evaporative Emission (EVAP) Canister Vent Solenoid
- Fuel Injector 1 (5.3L)
- Fuel Injector 2 (5.3L)
- Fuel Injector 3 (5.3L)
- Fuel Injector 4 (5.3L)
- Fuel Injector 5 (5.3L)
- Fuel Injector 6 (5.3L)
- Fuel Injector 7 (5.3L)
- Fuel Injector 8 (5.3L)
- Fuel Pump and Sender Assembly
- Fuel Tank Pressure (FTP) Sensor
- Fuse Block-Rear
- Fuse Block-Underhood
- Heated Oxygen Sensor (HO2S) Bank 1 Sensor 1 (5.3L)
- Heated Oxygen Sensor (HO2S) Bank 1 Sensor 2 (5.3L)
- Heated Oxygen Sensor (HO2S) Bank 2 Sensor 1 (5.3L)
- Heated Oxygen Sensor (HO2S) Bank 2 Sensor 2 (5.3L)
- Instrument Panel Cluster (IPC)
- Knock Sensor (KS) 1 (Left) (5.3L)
- Knock Sensor (KS) 2 (Right) (5.3L)
- Manifold Absolute Pressure (MAP) Sensor (5.3L)
- Mass Air Flow (MAF) Sensor/Intake Air Temperature (IAT) (5.3L)
- Powertrain Control Module (PCM) (5.3L)
- Stop Lamp Switch
- Throttle Actuator Control (TAC) Module (5.3L)
- Throttle Body (5.3L)
- Vehicle Speed Sensor (VSS) (2WD)
- Vehicle Speed Sensor (VSS) (4WD)


ENGINE CONTROLS: 5.3L

Circuit Schematic

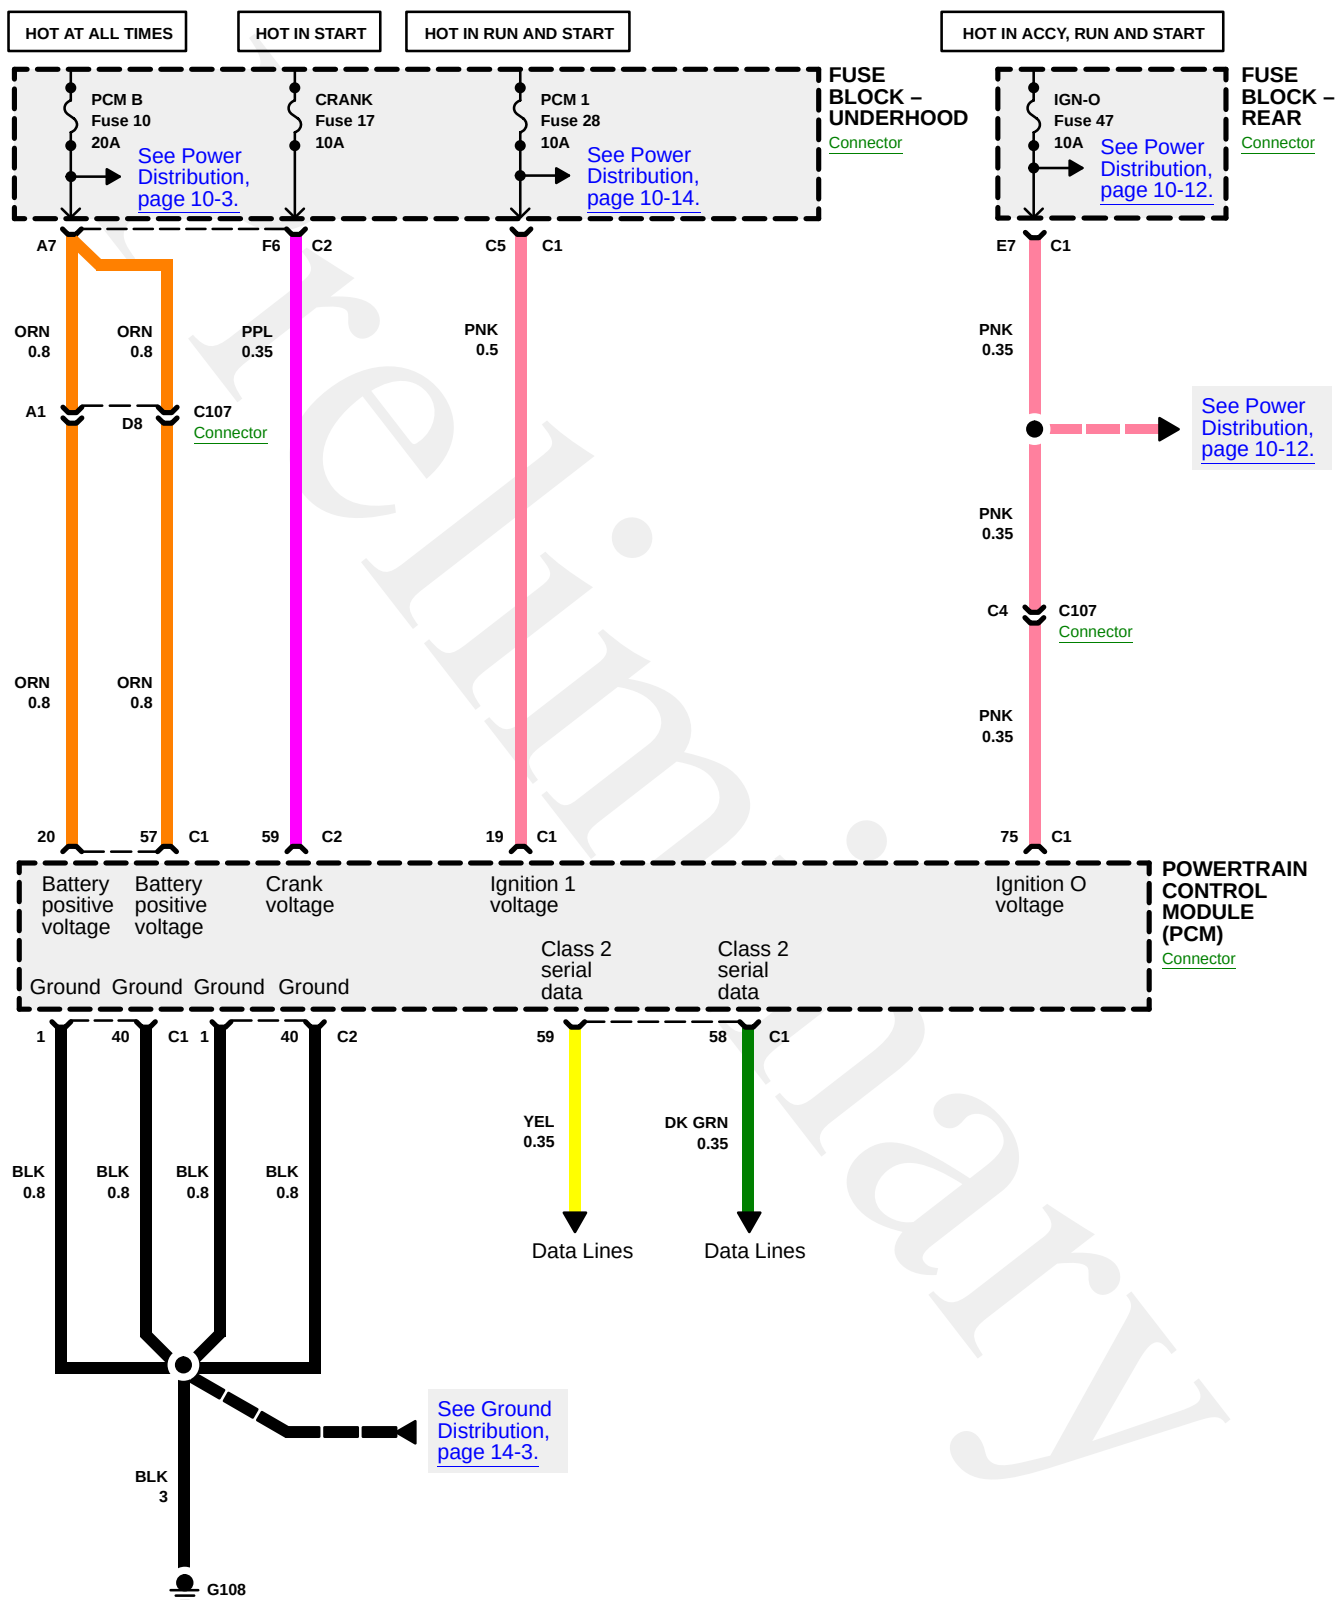


ENGINE CONTROLS: 5.3L

Circuit Schematic

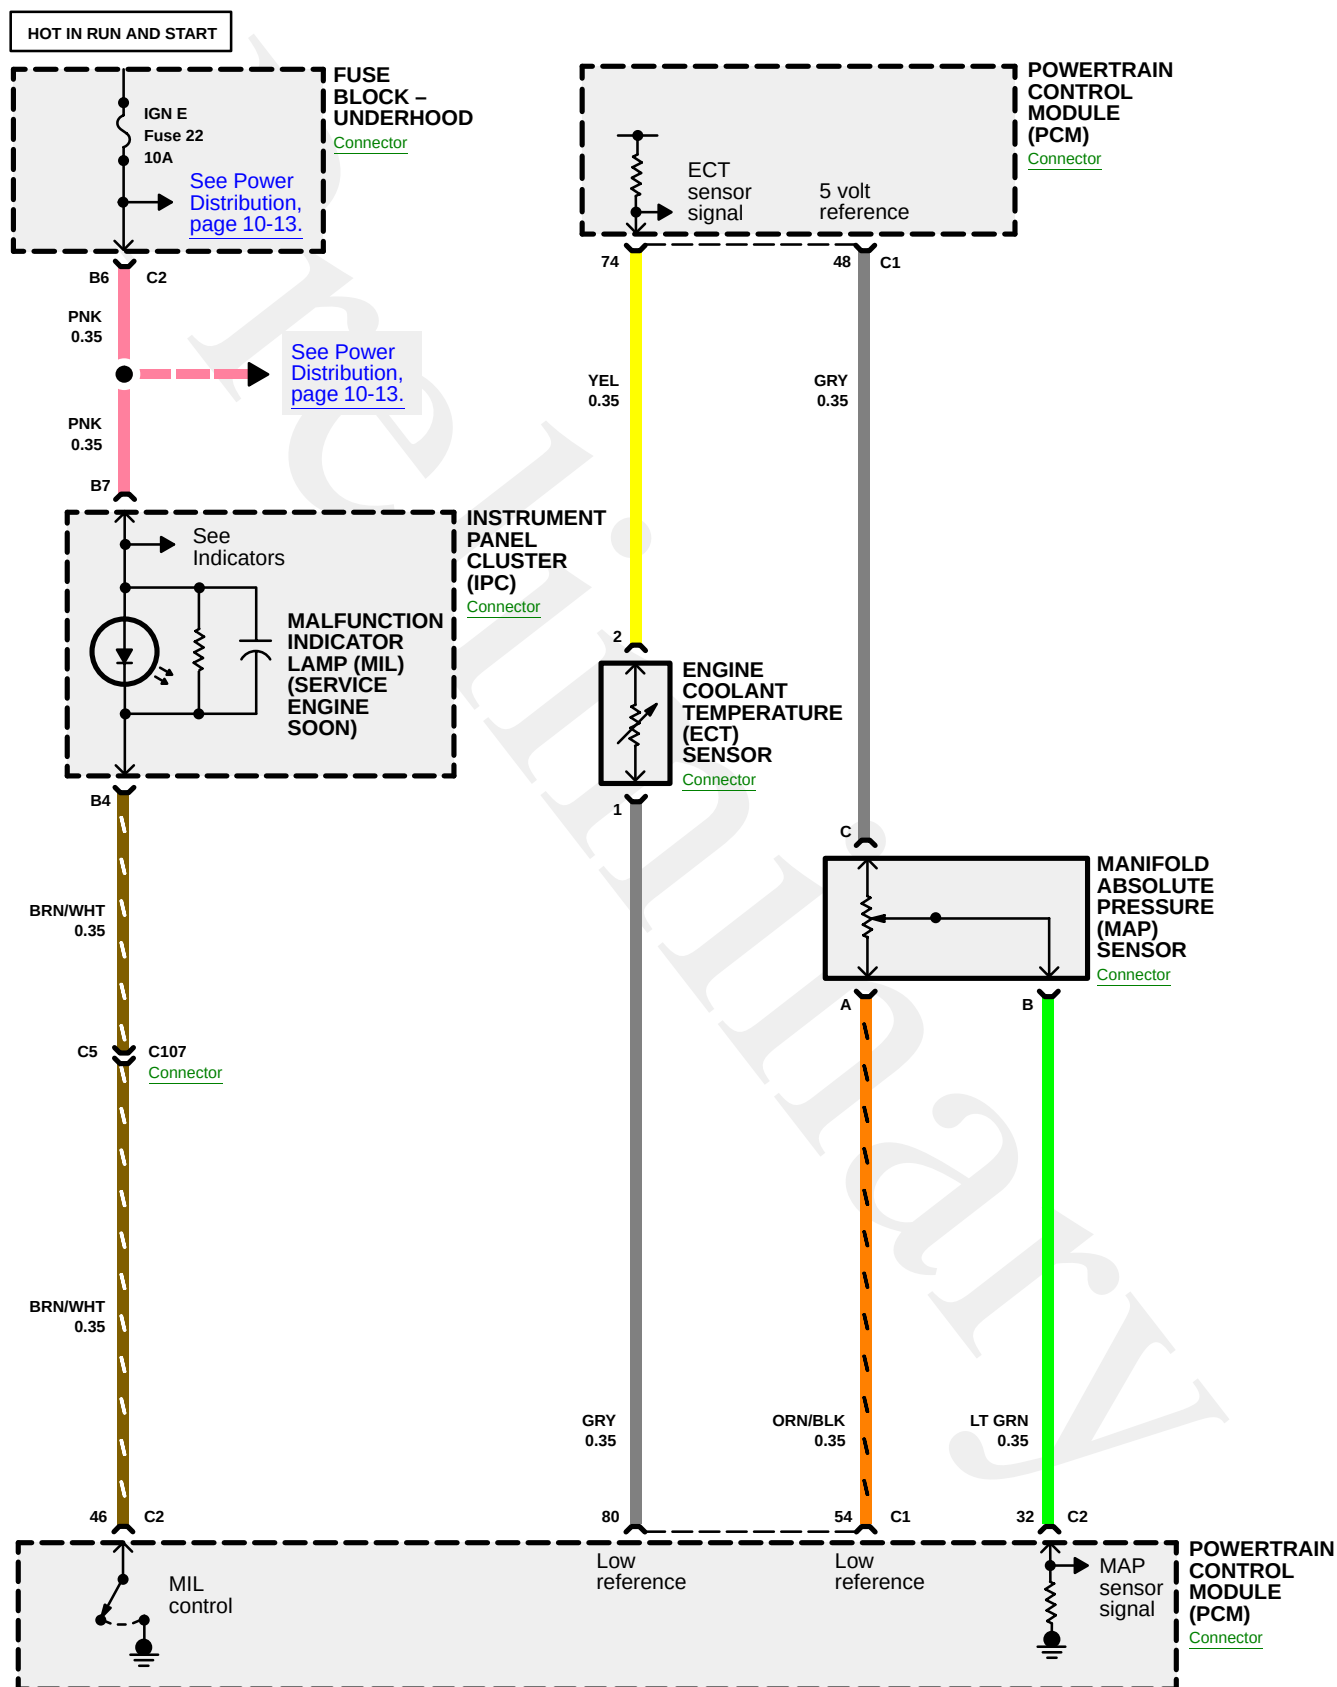


ENGINE CONTROLS: 5.3L

Circuit Schematic

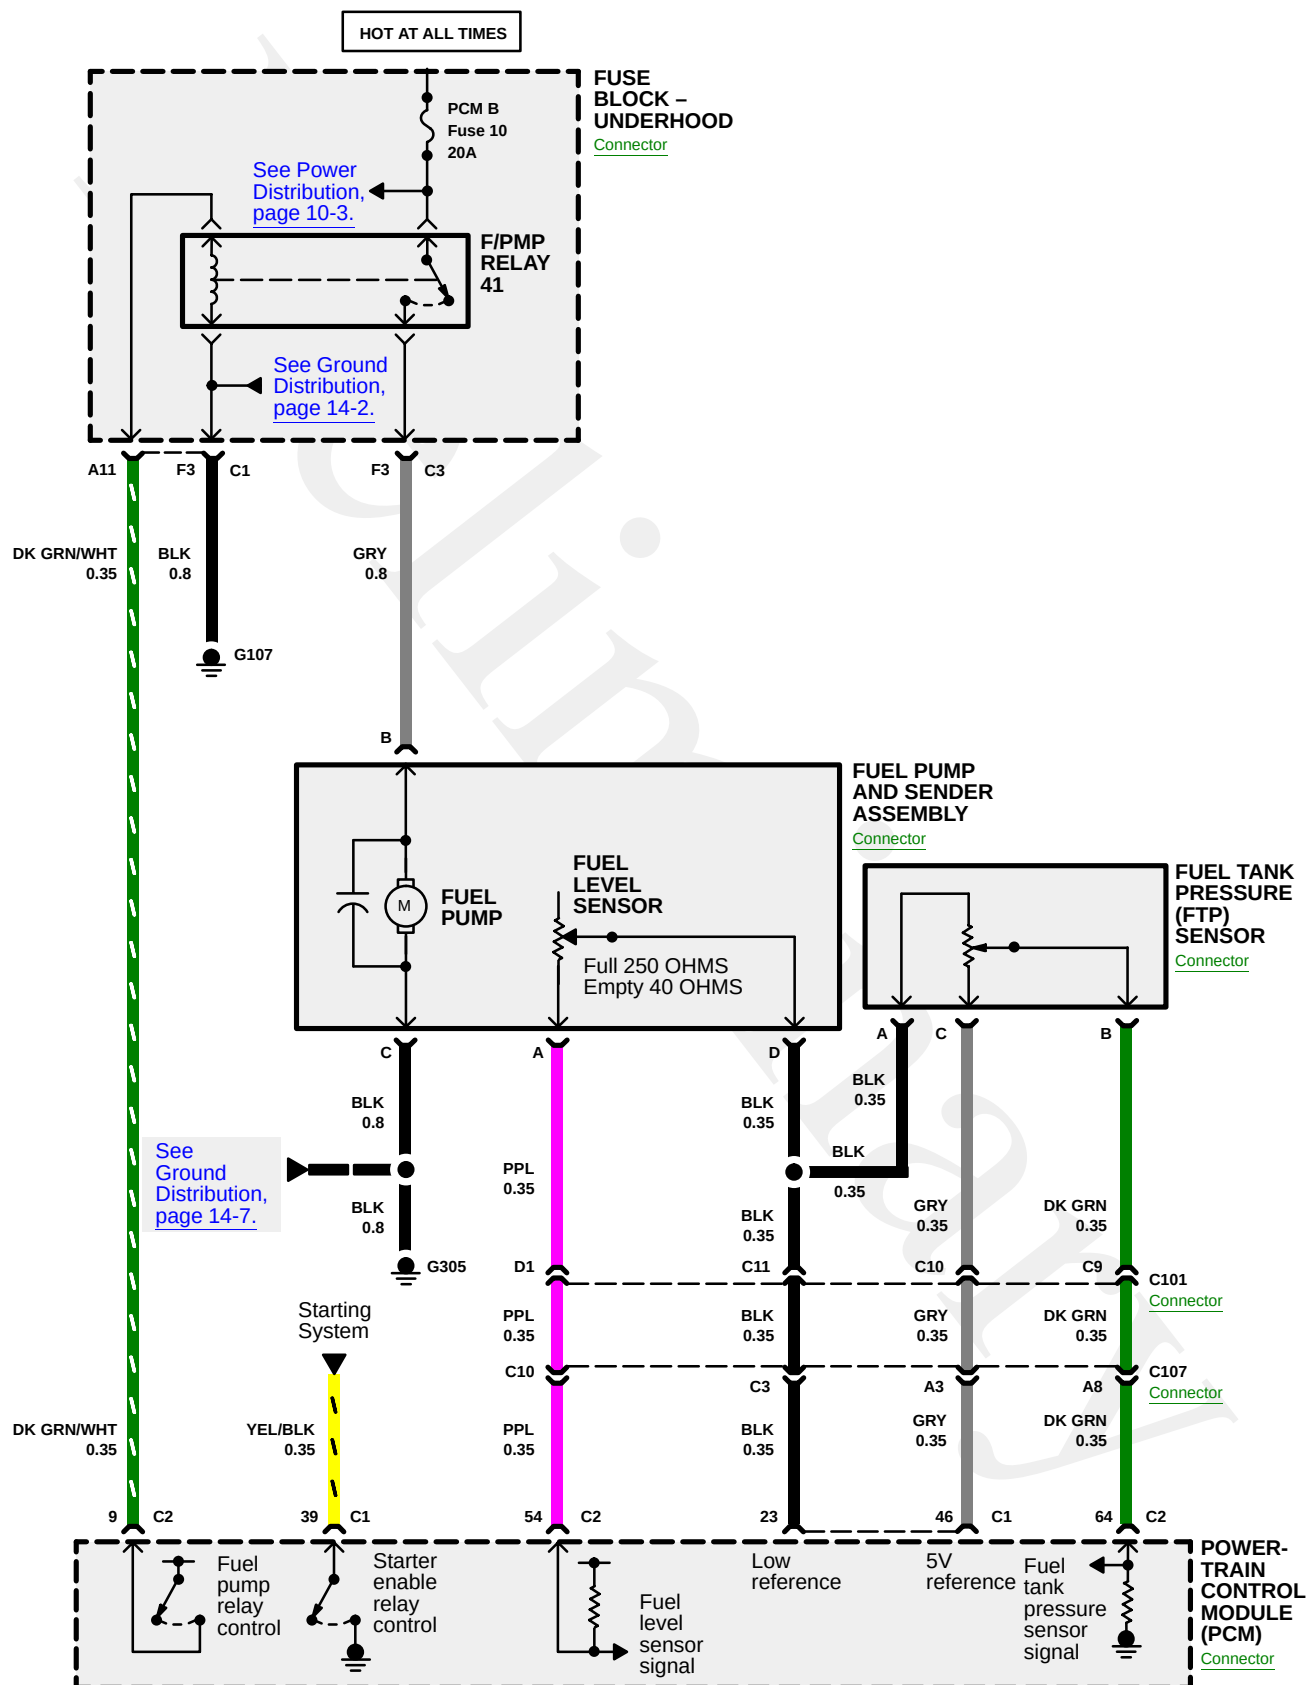


ENGINE CONTROLS: 5.3L

Circuit Schematic

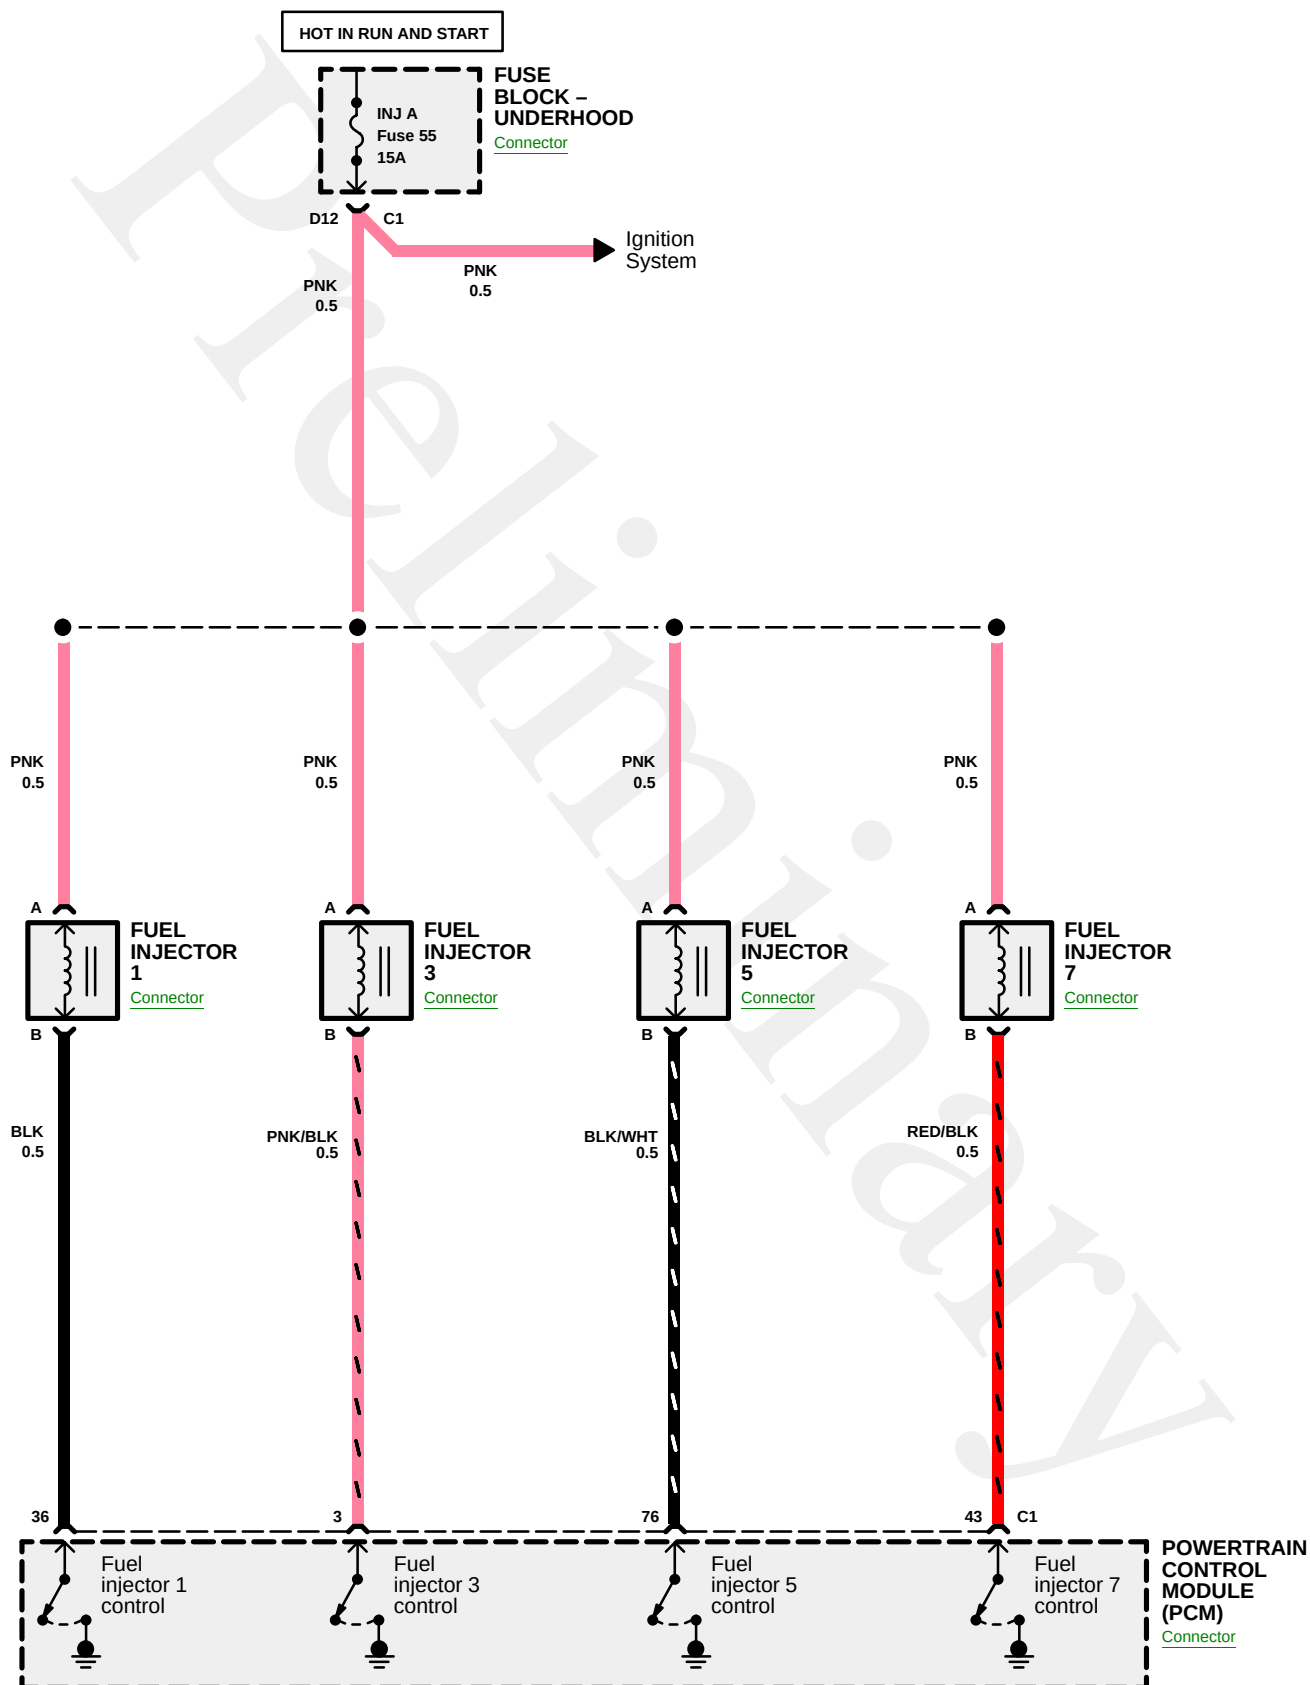


ENGINE CONTROLS: 5.3L

Circuit Schematic

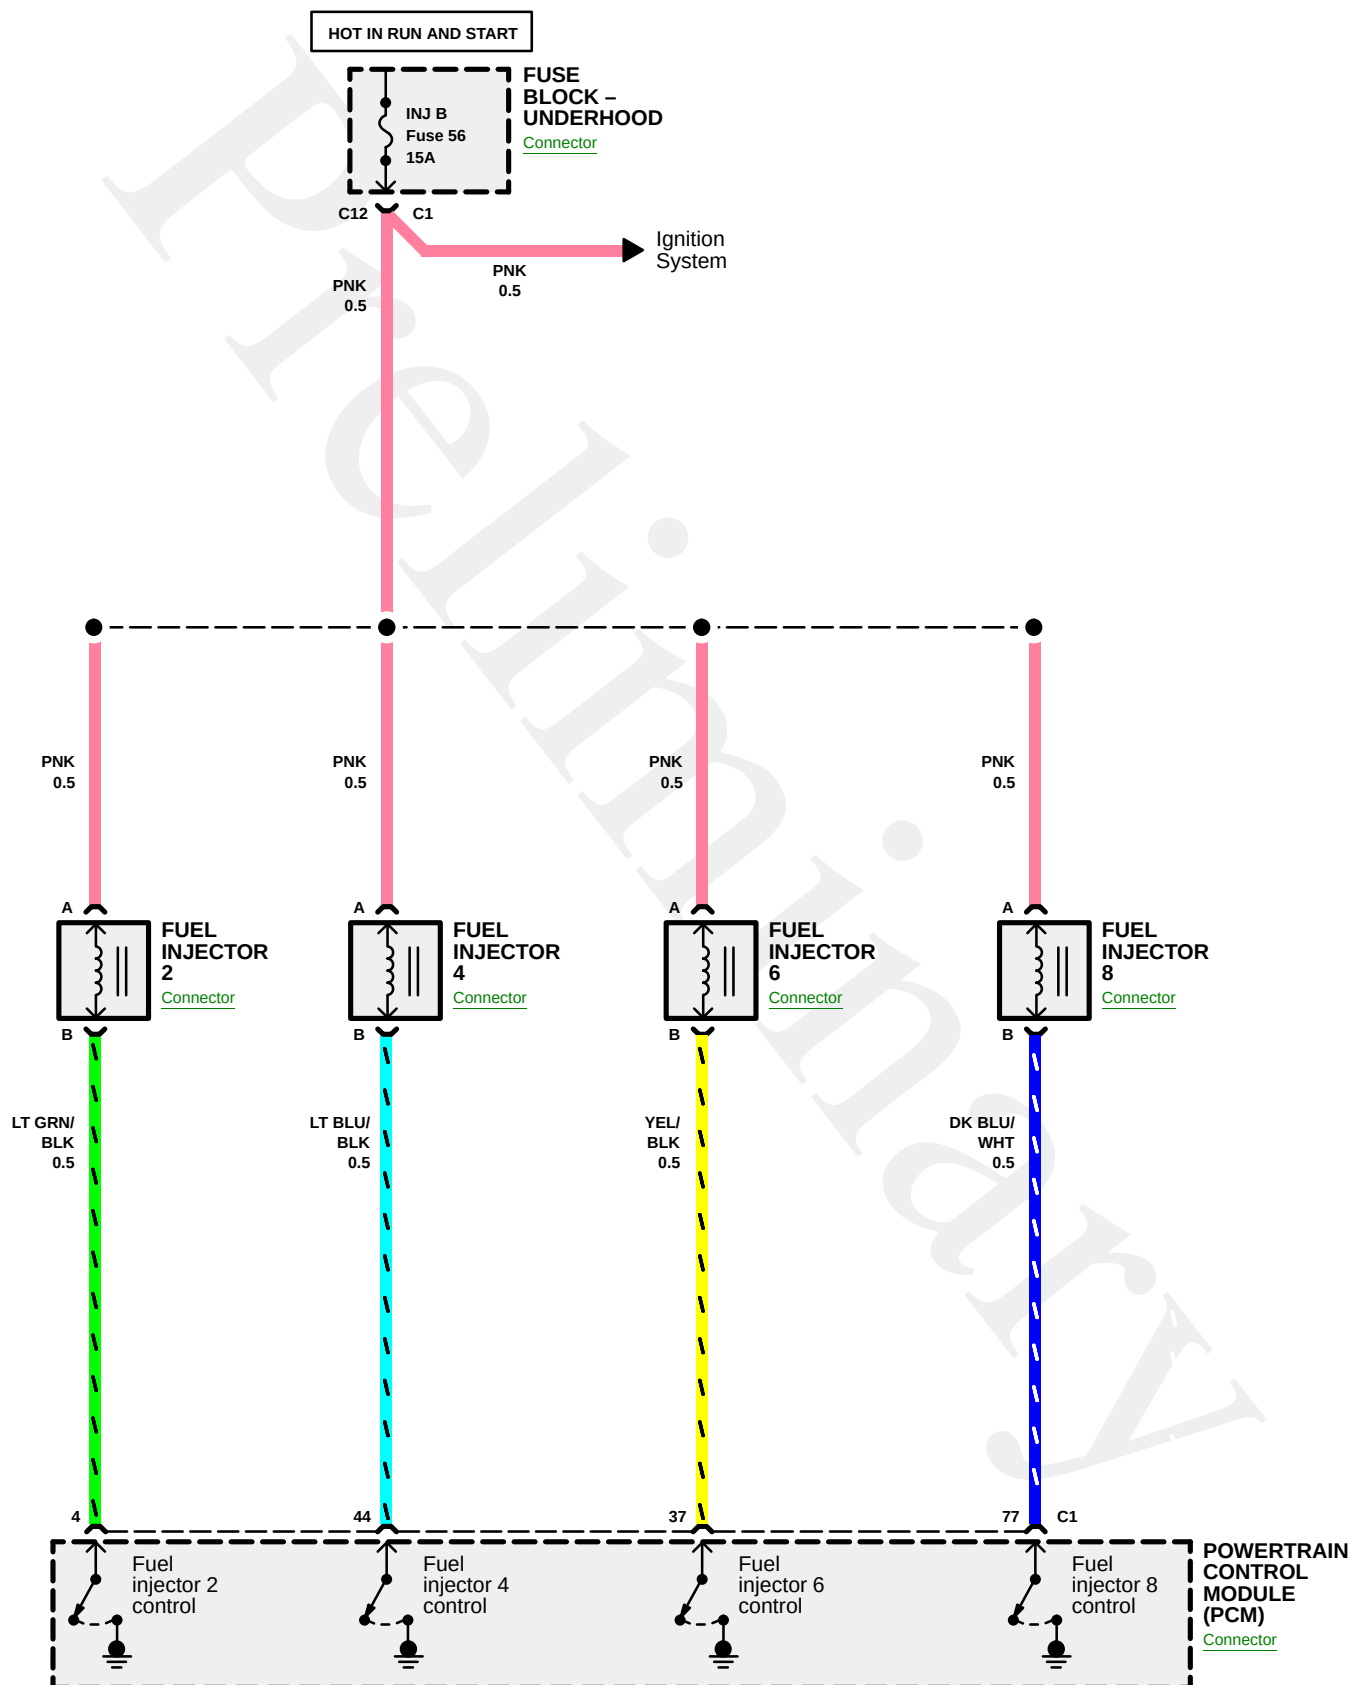


ENGINE CONTROLS: 5.3L

Circuit Schematic

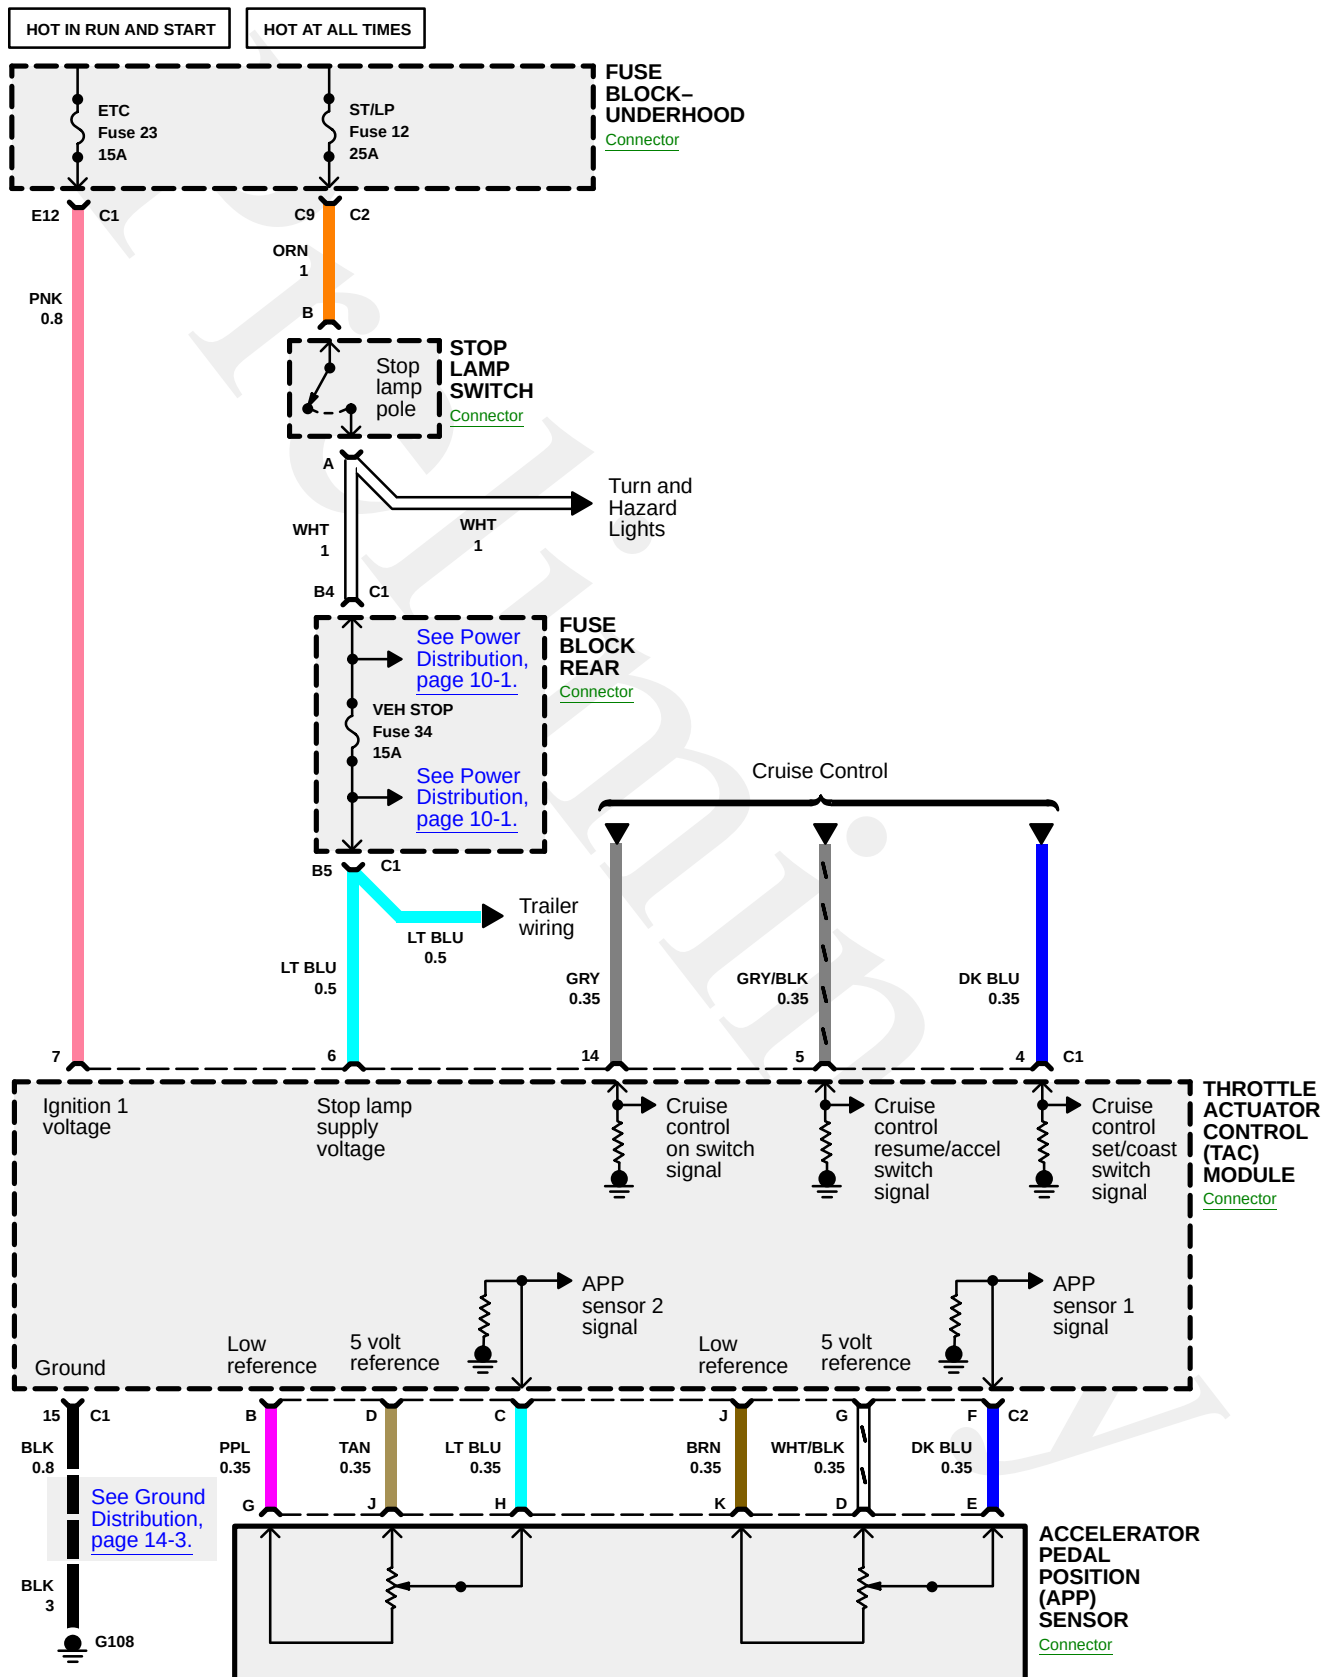


ENGINE CONTROLS: 5.3L

Circuit Schematic

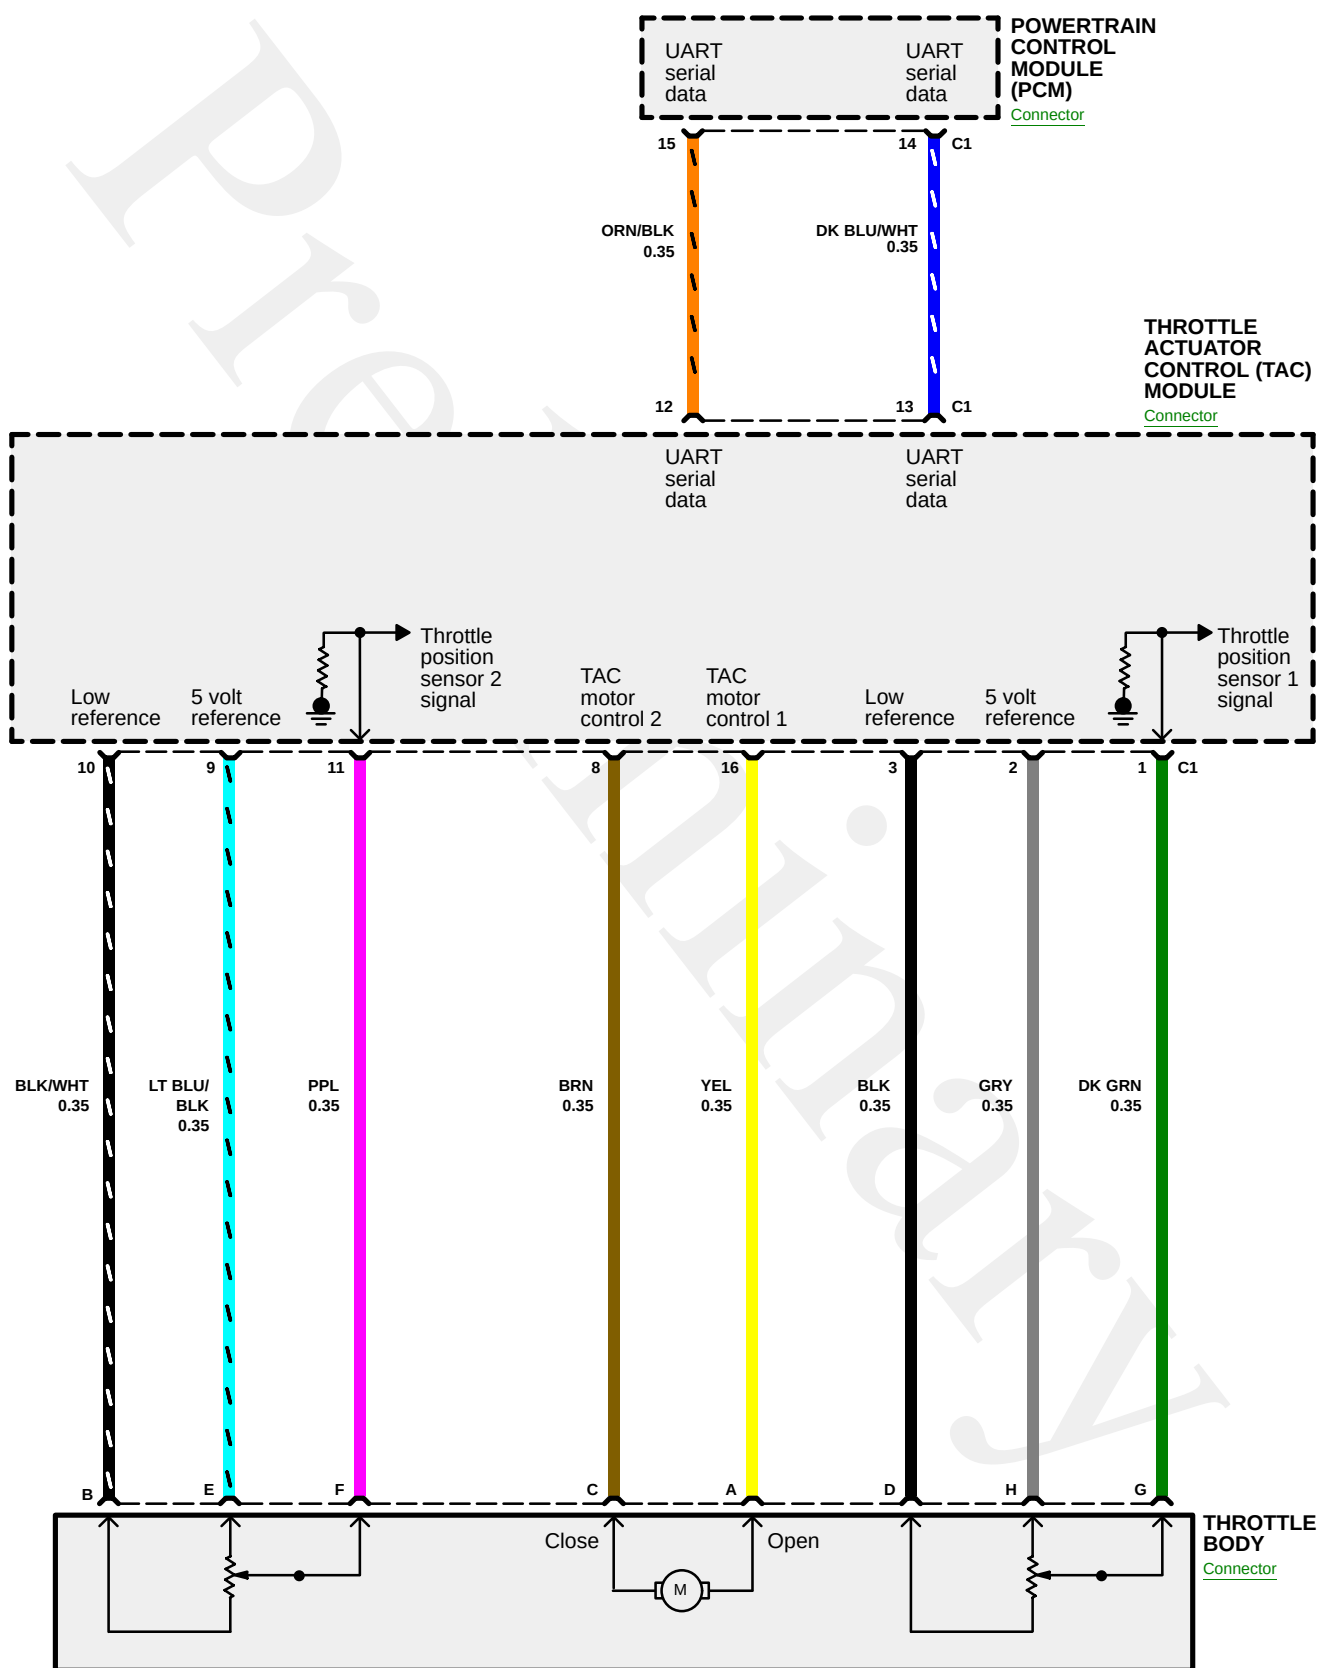


ENGINE CONTROLS: 5.3L

Circuit Schematic

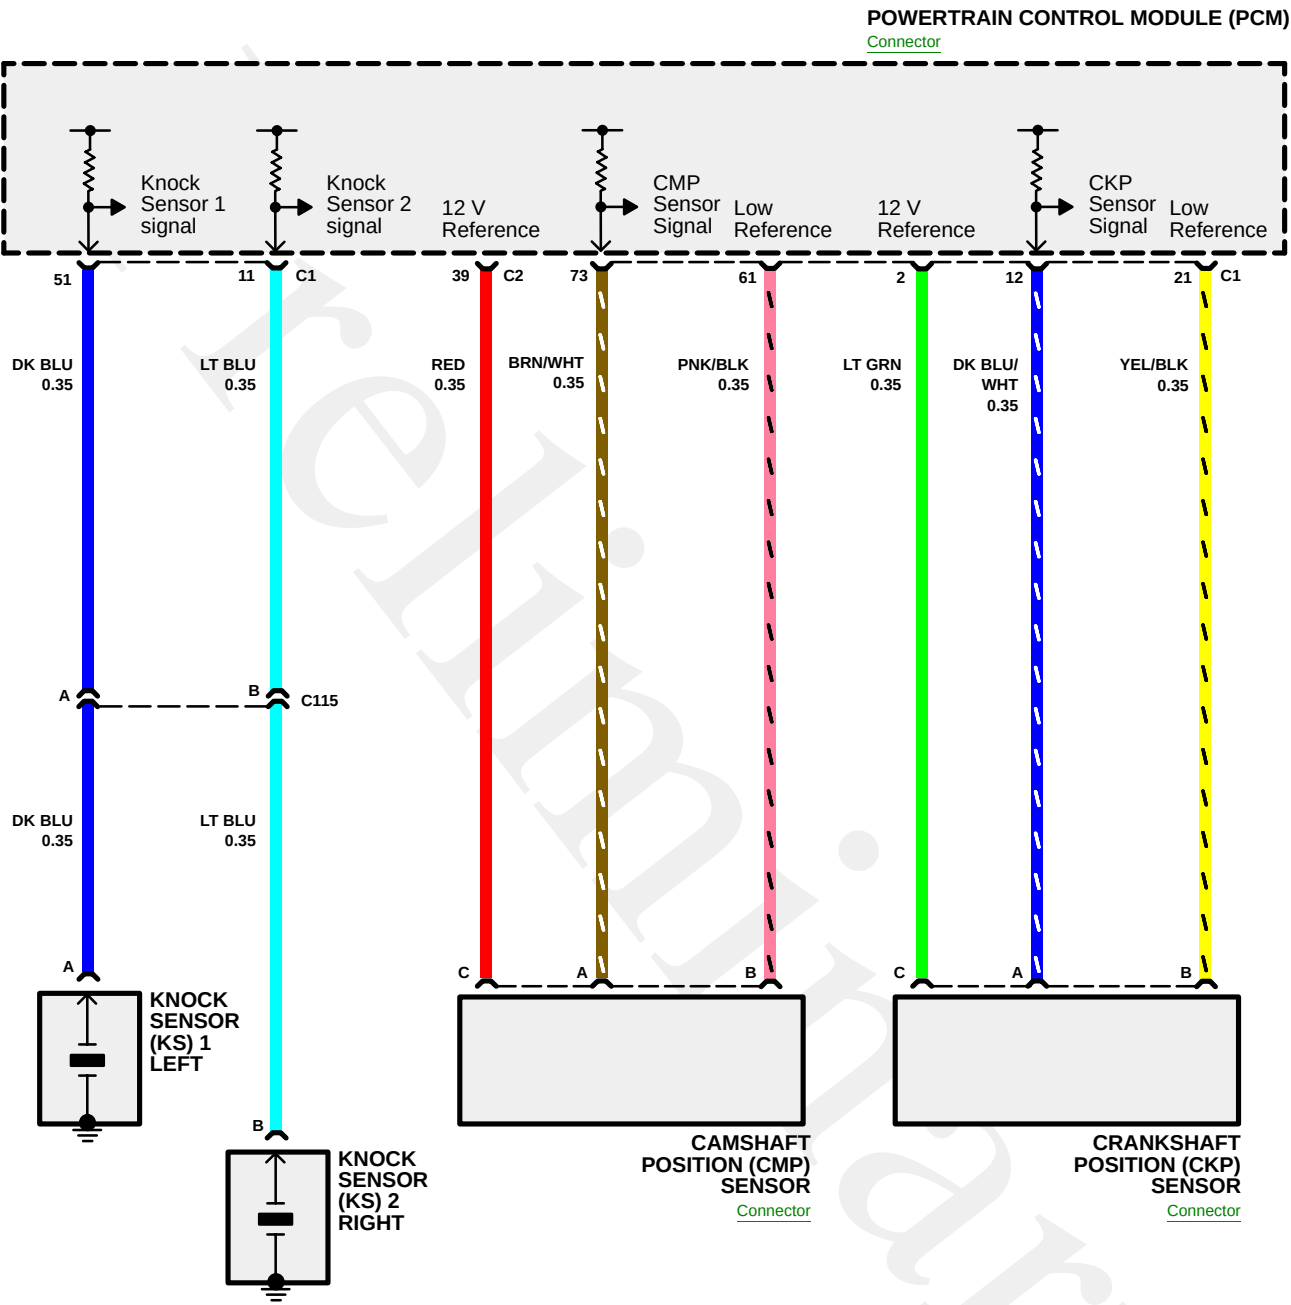


ENGINE CONTROLS: 5.3L

Circuit Schematic

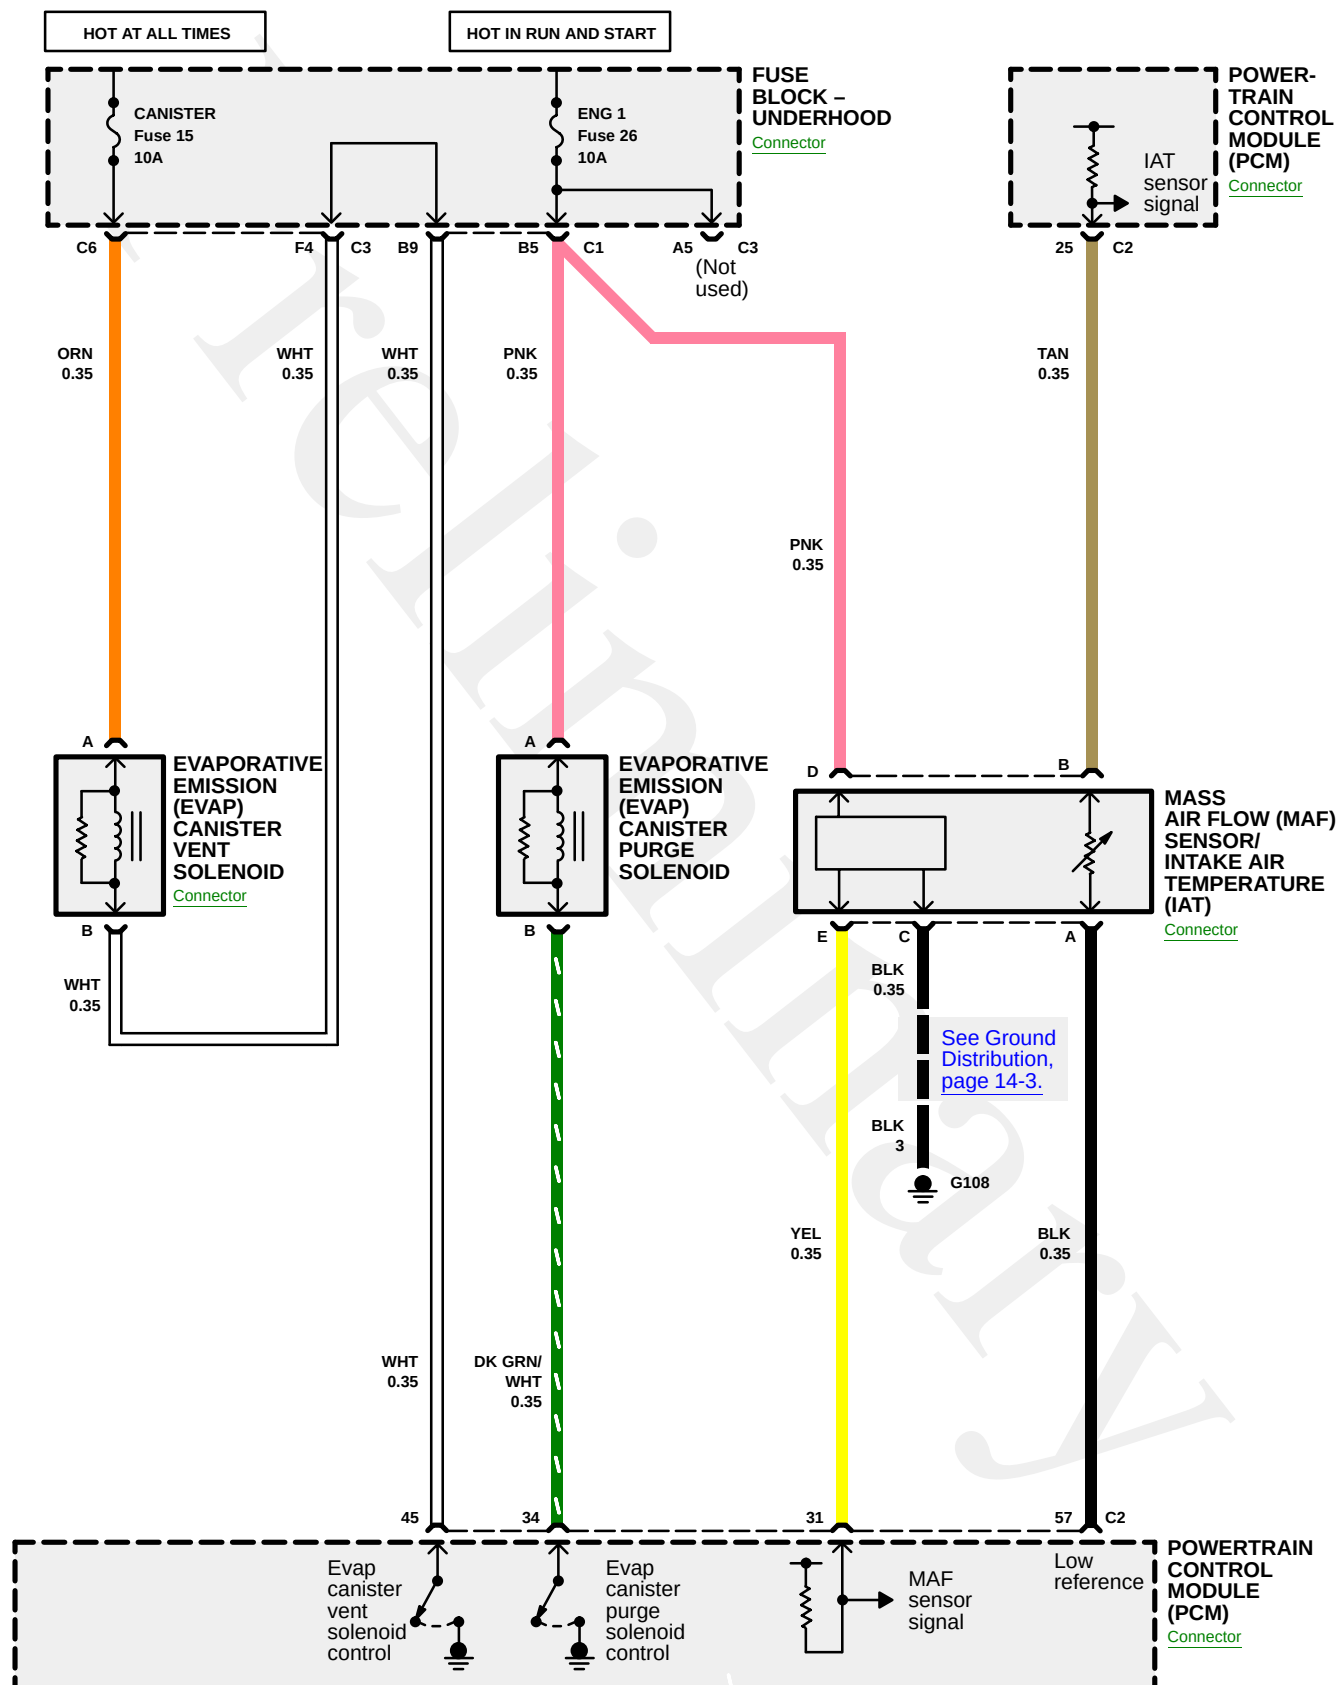


ENGINE CONTROLS: 5.3L

Circuit Schematic

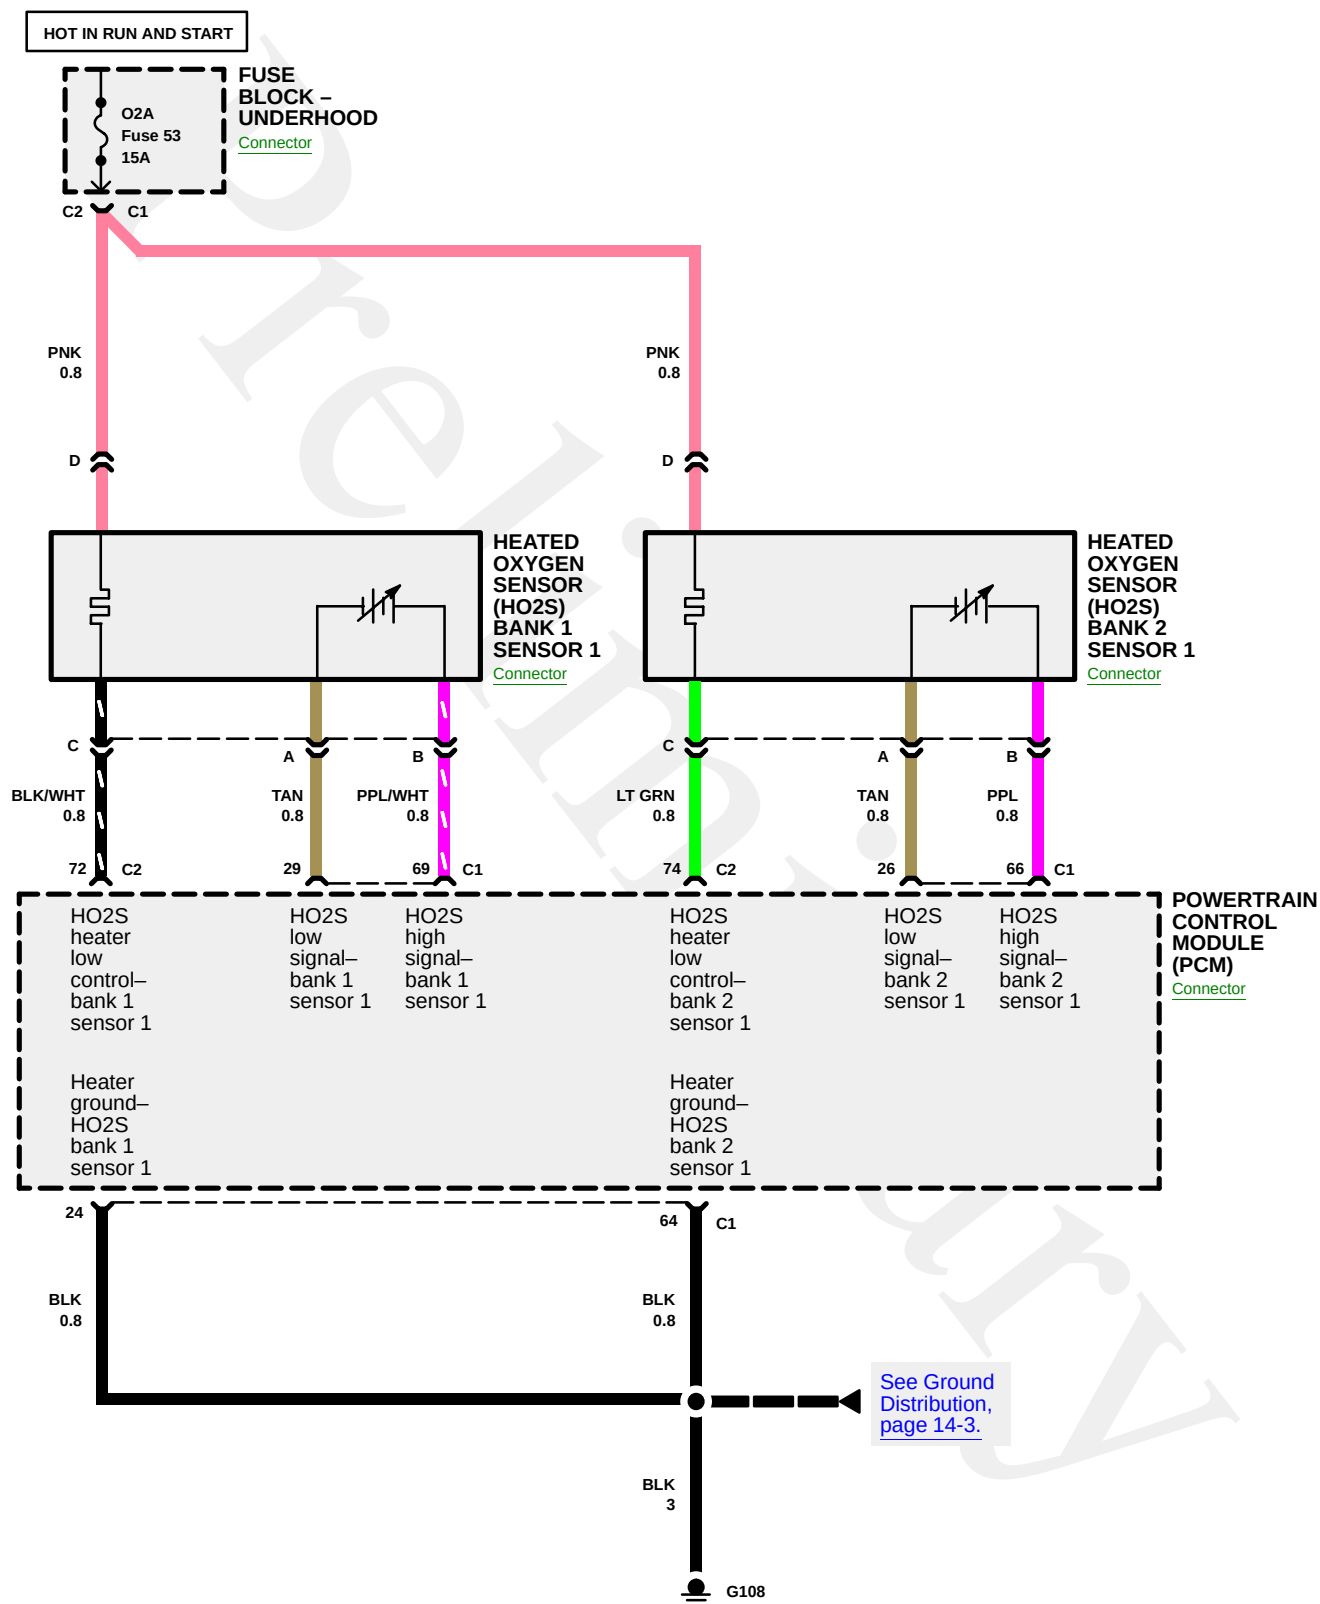


ENGINE CONTROLS: 5.3L

Circuit Schematic

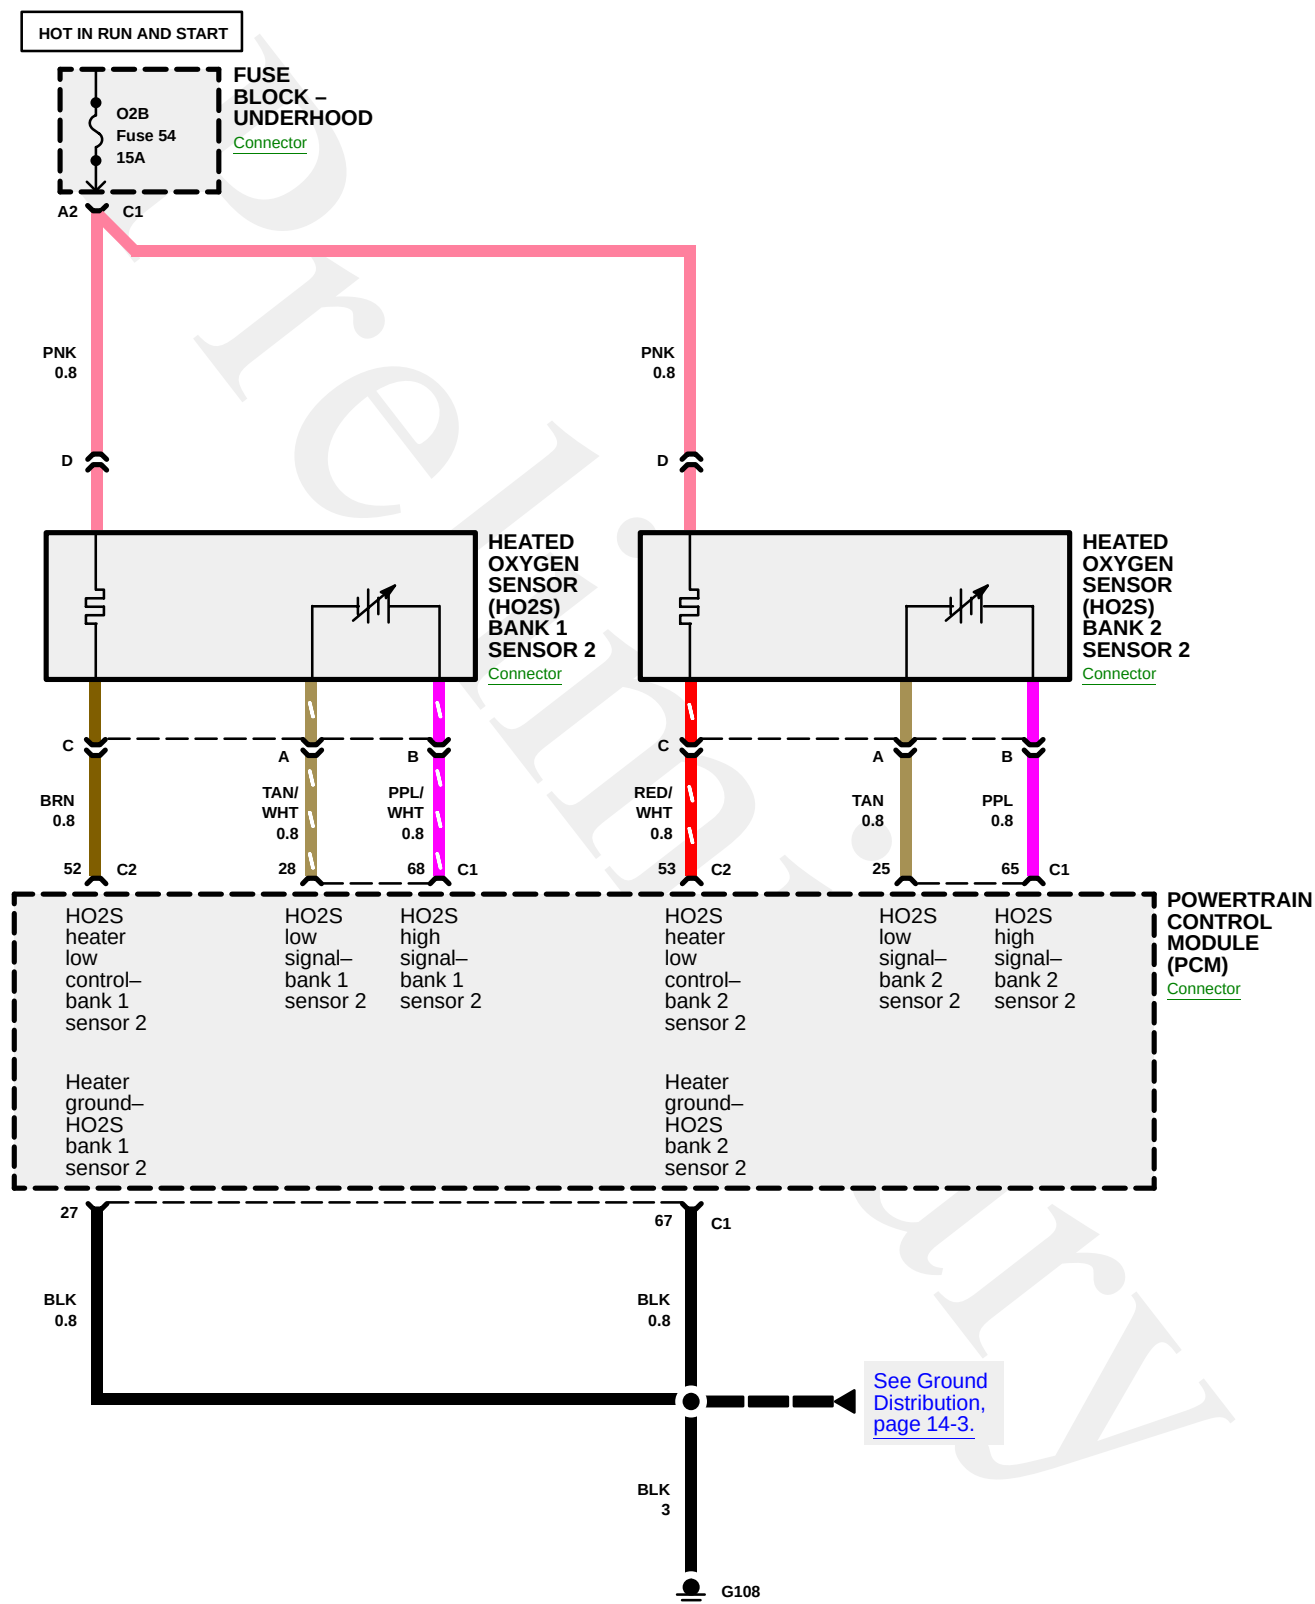


Circuit Schematic

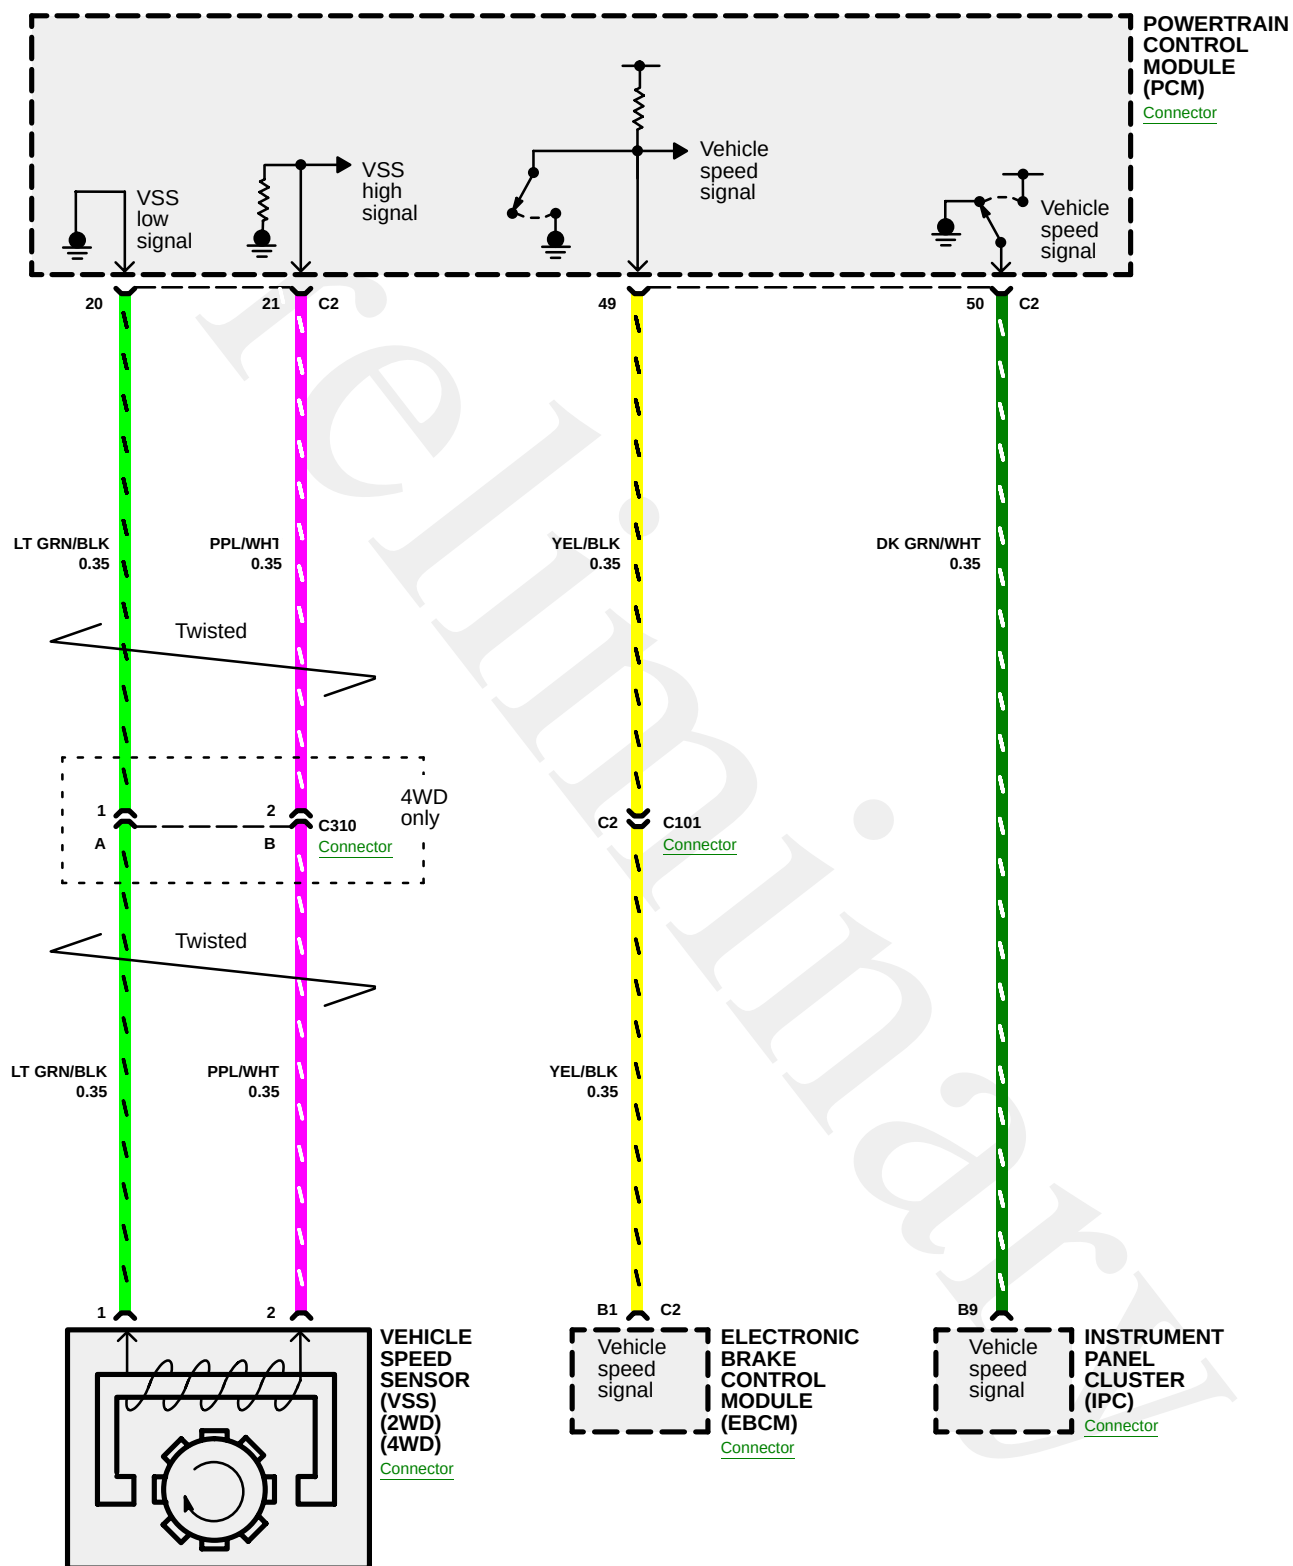


ENGINE CONTROLS: 5.3L

Circuit Schematic

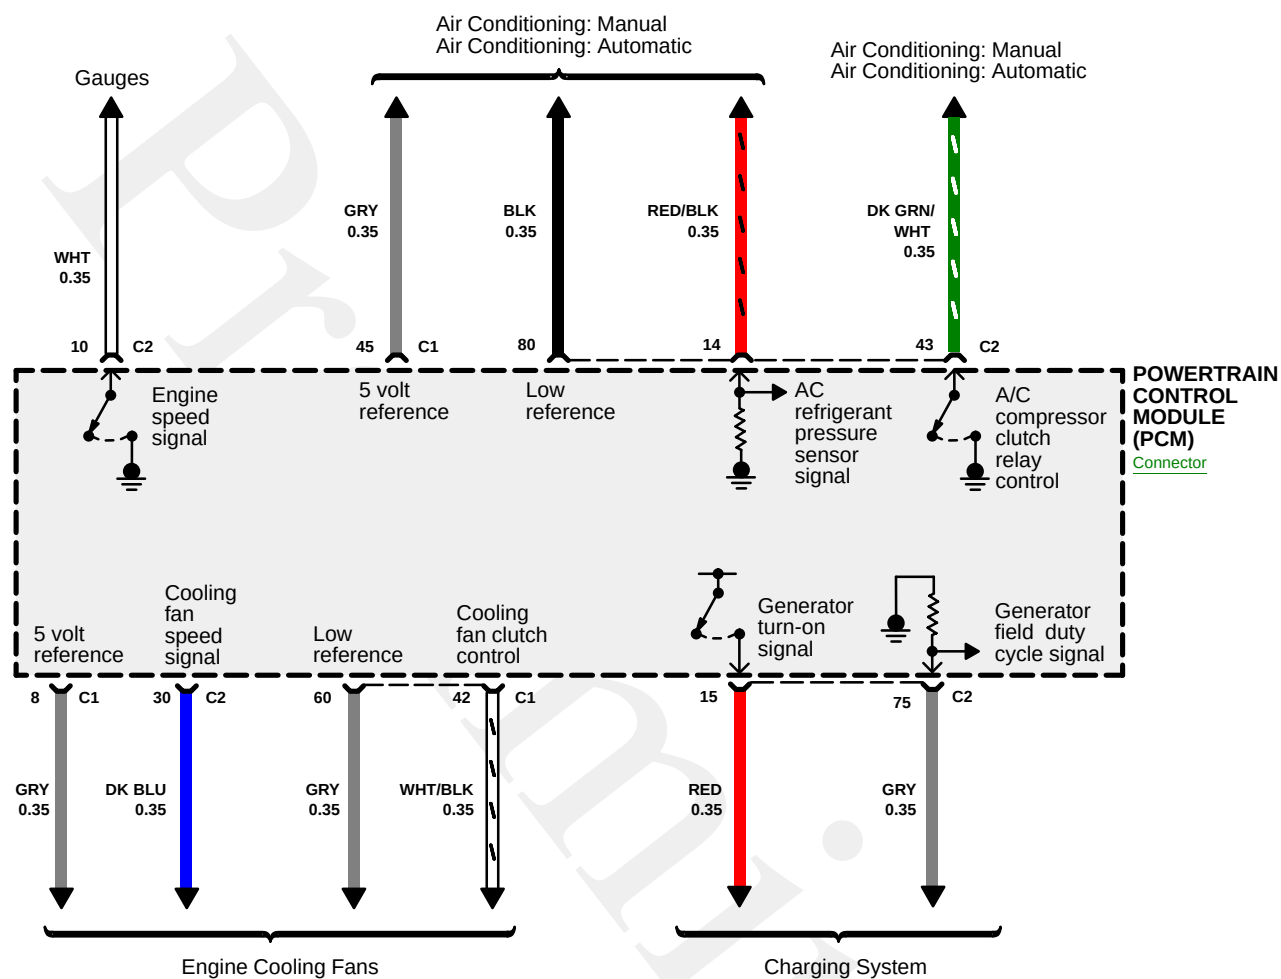

ENGINE CONTROLS: 5.3L

Circuit Schematic

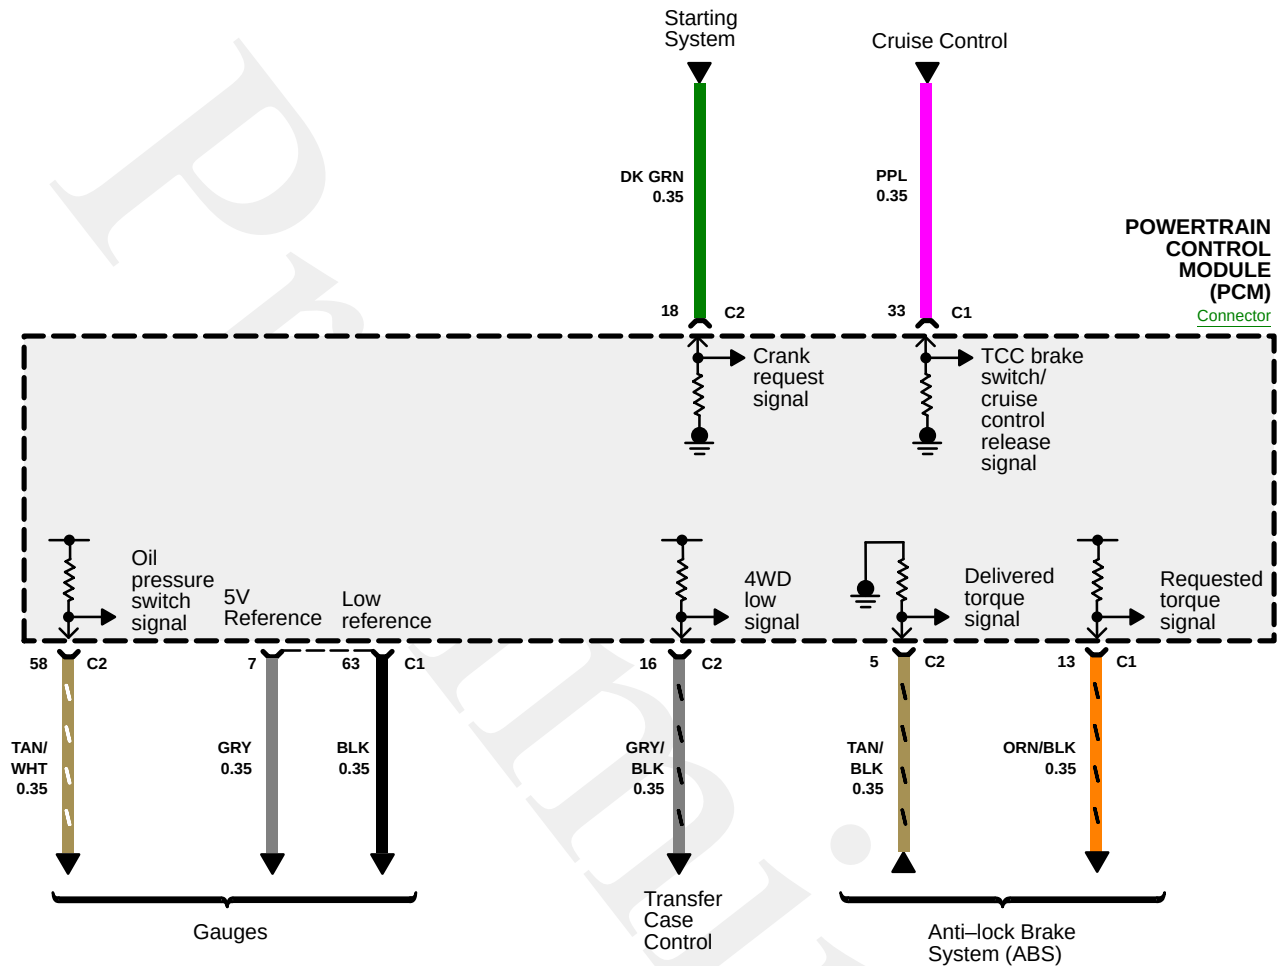

ENGINE CONTROLS: 5.3L

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Accelerator Pedal Position (APP)	
Sensor (5.3L) On the accelerator bracket	63
Camshaft Position (CMP)	
Sensor (5.3L) Top rear of engine	19
Crankshaft Position (CKP)	
Sensor (5.3L) Right rear of engine, near starter	48
Electronic Brake Control	
Module (EBCM) Inner left side frame rail (near transmission)	41
Engine Coolant Temperature	
(ECT) Sensor (5.3L) Left front of engine	24
Evaporative Emission (EVAP)	
Canister Purge Solenoid	
(5.3L) Top of engine	22
Evaporative Emission (EVAP)	
Canister Vent Solenoid Rear of the fuel tank	115
Fuel Injector 1 (5.3L) Top left side of engine	
Fuel Injector 2 (5.3L) Top right side of engine	
Fuel Injector 3 (5.3L) Top left side of engine	
Fuel Injector 4 (5.3L) Top right side of engine	
Fuel Injector 5 (5.3L) Top left side of engine	
Fuel Injector 6 (5.3L) Top right side of engine	
Fuel Injector 7 (5.3L) Top left side of engine	
Fuel Injector 8 (5.3L) Top right side of engine	
Fuel Pump and Sender	
Assembly Inside the fuel tank	
Fuel Tank Pressure (FTP)	
Sensor At top left rear of fuel tank	115
Fuse Block-Rear Under the left rear seat	52
Fuse Block-Underhood Left side of engine compartment	3
Heated Oxygen Sensor (HO2S)	
Bank 1 Sensor 1 (5.3L) Left exhaust downpipe	47
Heated Oxygen Sensor (HO2S)	
Bank 1 Sensor 2 (5.3L) Left exhaust pownpipe	47
Heated Oxygen Sensor (HO2S)	
Bank 2 Sensor 1 (5.3L) Right exhaust downpipe	46
Heated Oxygen Sensor (HO2S)	
Bank 2 Sensor 2 (5.3L) Right exhaust downpipe	46
Instrument Panel Cluster	
(IPC) On the left side of the IP, above the steering column	59
Knock Sensor (KS) 1 (Left)	
(5.3L) On top rear of engine	
Knock Sensor (KS) 2 (Right)	
(5.3L) On top rear of engine	
Manifold Absolute Pressure	
(MAP) Sensor (5.3L) Top of engine	22
Mass Air Flow (MAF) Sensor/ Intake Air Temperature	
(IAT) (5.3L) Right front of engine compartment	21

ENGINE CONTROLS: 5.3L

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Powertrain Control Module	
(PCM) (5.3L)	Left front of engine compartment 25
Stop Lamp Switch	On brake pedal support 64
Throttle Actuator Control	
(TAC) Module (5.3L)	Left rear of engine compartment 18
Throttle Body	Right front of engine compartment 21
Vehicle Speed Sensor (VSS)	
(2WD)	Right rear of transmission 42
Vehicle Speed Sensor (VSS)	
(4WD)	Left rear of transfer case 44
Connector	
C101 (38-BLK)	Left side of engine compartment 3
C107 (5.3L) (38-BLK)	Left rear of engine compartment 18
C115 (5.3L) (2-BLK)	Top of engine 22
C310 (2-BLK)	Right side of transmission 45
Ground	
G107 (5.3L)	Lower left side of engine 38
G108 (5.3L)	Lower left side of engine 38
G305	Outside of left frame rail, near fuel tank 36