


DATA LINES

Component Index

- Audio Amplifier
- Body Control Module (BCM)
- Data Link Connector (DLC)
- Driver Door Module (DDM)
- Electronic Brake Control Module (EBCM)
- Front Passenger Door Module (FPDM)
- Fuse Block-Underhood
- HVAC Control Module
- HVAC Control Module-Auxiliary
- Inflatable Restraint Sensing and Diagnostic Module (SDM)
- Instrument Panel Cluster (IPC)
- Liftgate Module (LGM)
- Memory Seat Module-Driver
- Memory Seat Module-Passenger
- Powertrain Control Module (PCM) (4.2L)
- Powertrain Control Module (PCM) (5.3L)
- Radio
- SP205
- Transfer Case Shift Control Module (4WD)
- Vehicle Communication Interface Module (VCIM)


DATA LINES

Circuit Schematic

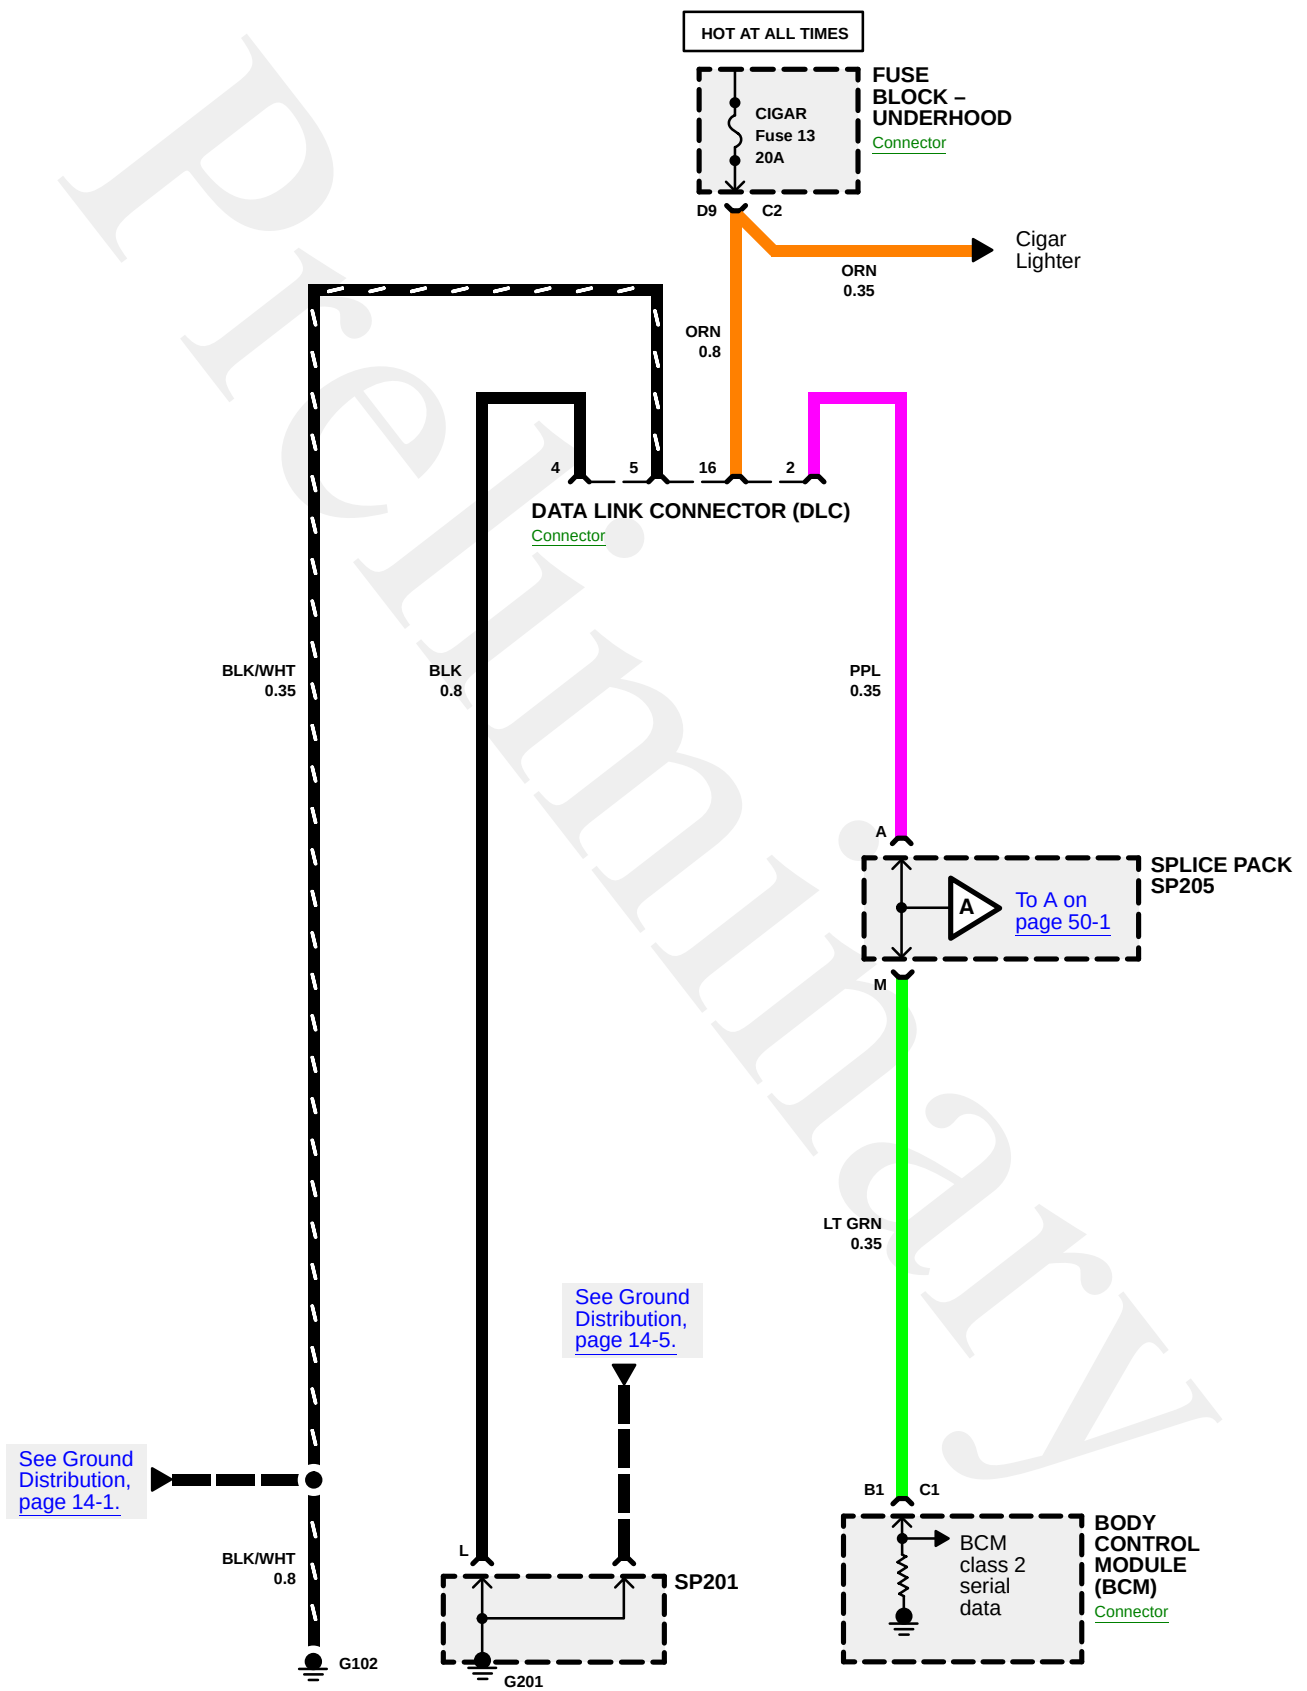


DATA LINES

Circuit Schematic

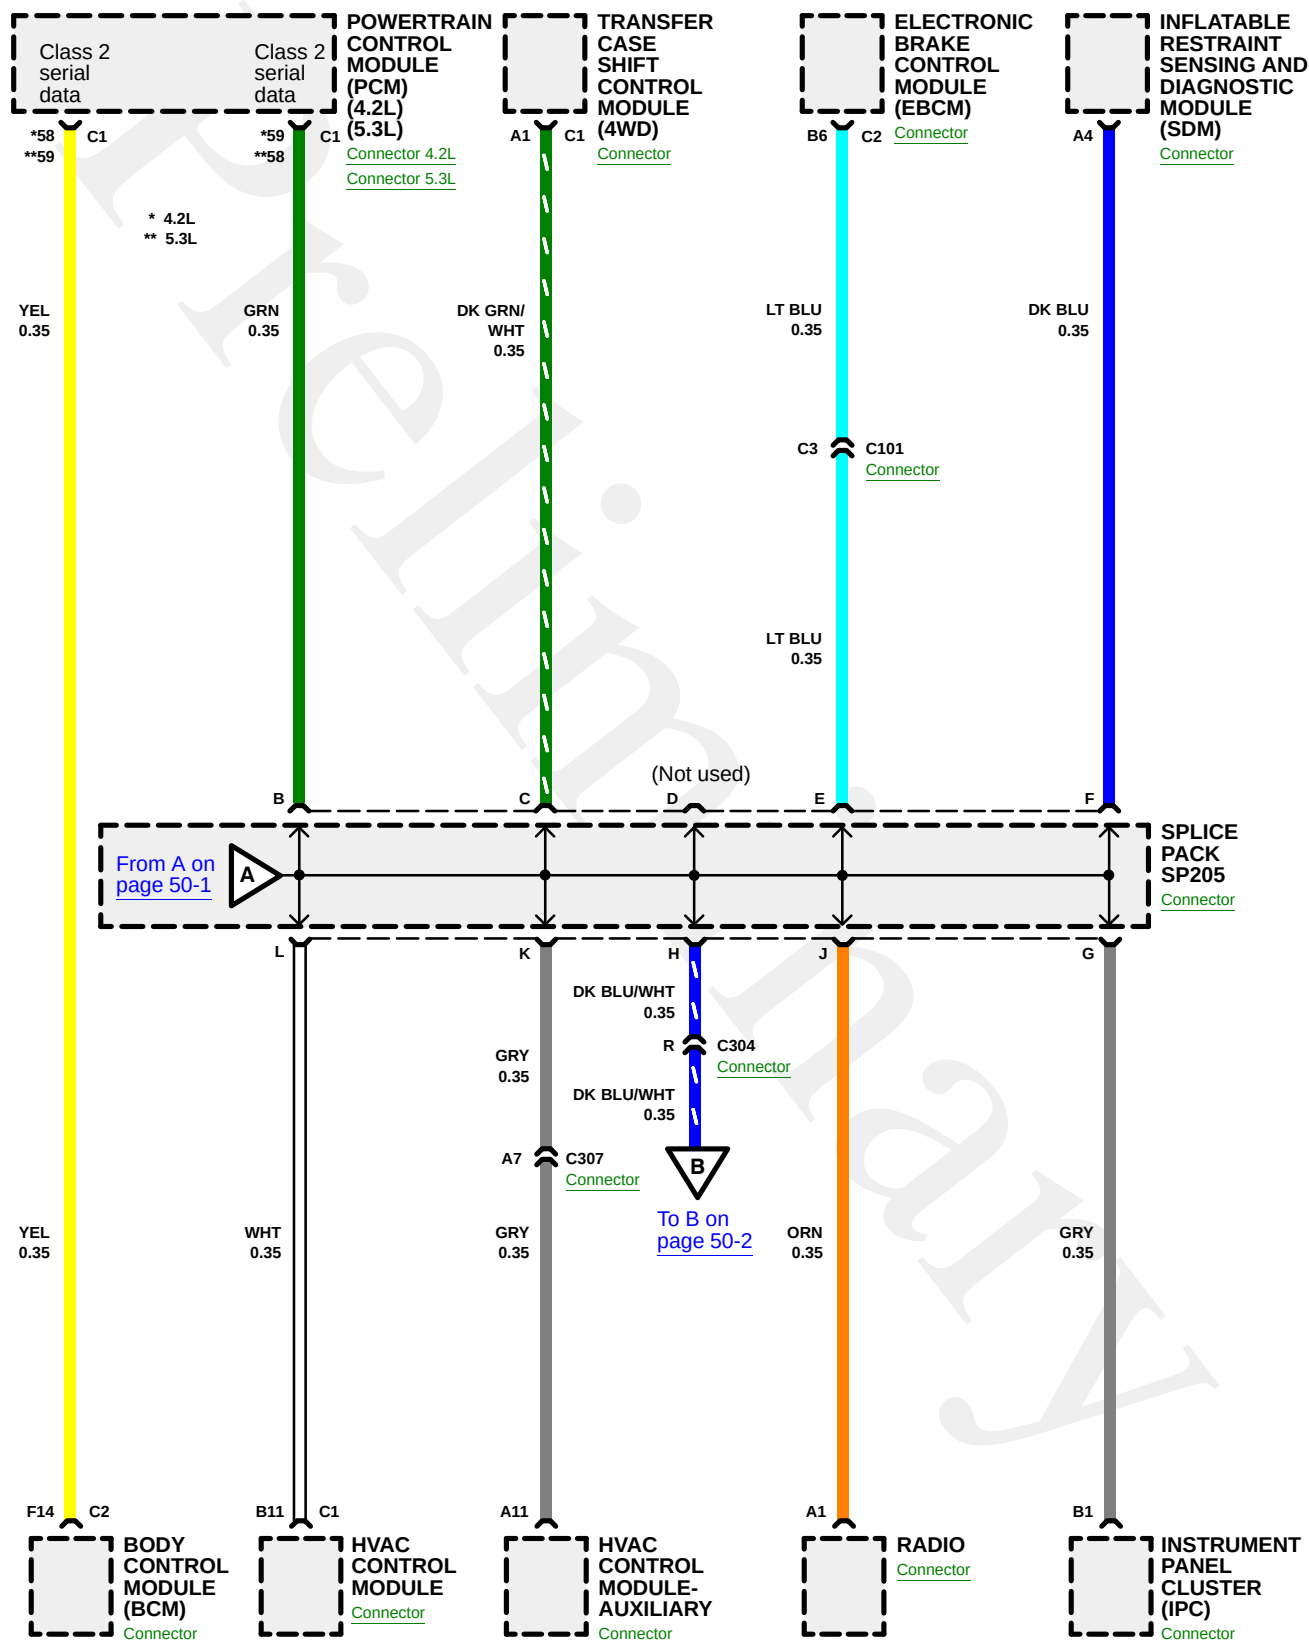

DATA LINES

Circuit Schematic

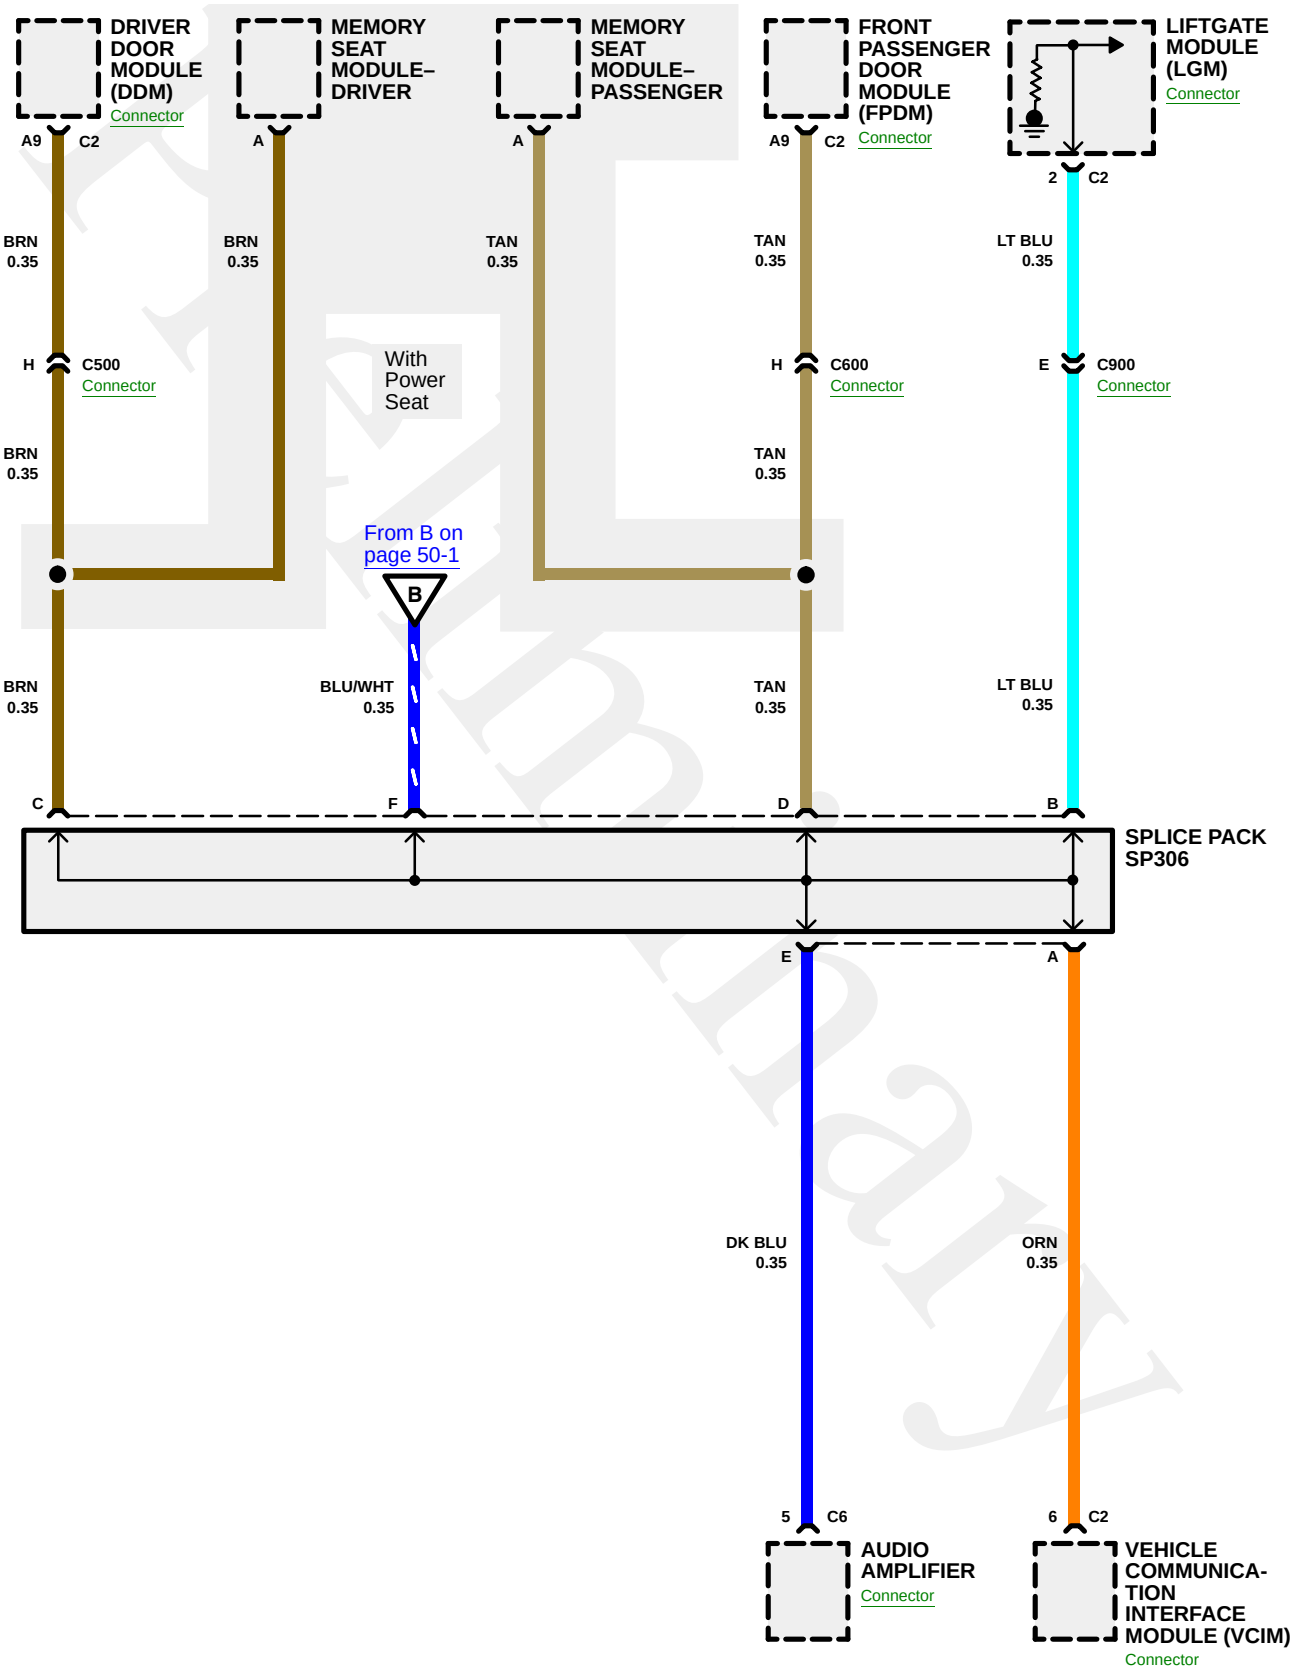

DATA LINES

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Audio Amplifier	Behind the left side panel of the rear compartment 108
Body Control Module (BCM)	On Rear Fuse Block, under left rear seat 53
Data Link Connector (DLC)	Below I/P, above the accelerator pedal 60
Driver Door Module (DDM)	On lower part of the driver door switch panel 95
Electronic Brake Control Module (EBCM)	Inner left side frame rail (near transmission) 41
Front Passenger Door Module (FPDM)	On lower part of passenger door switch panel 96
Fuse Block-Underhood	Left side of engine compartment 3
HVAC Control Module	In the IP center trim panel, beneath the radio 75
HVAC Control Module- Auxiliary	At rear of lower console 85
Inflatable Restraint Sensing and Diagnostic Module (SDM)	Beneath the lower console 87
Instrument Panel Cluster (IPC)	On the left side of the IP, above the steering column 59
Liftgate Module (LGM)	Inside the liftgate 113
Memory Seat Module- Driver	Mounted on underside of seat 121
Memory Seat Module- Passenger	Mounted on underside of seat 121
Powertrain Control Module (PCM) (4.2L)	Left front of engine 5
Powertrain Control Module (PCM) (5.3L)	Left front of engine compartment 25
Radio	Center of I/P 74
SP205	Below left side of I/P 57
Transfer Case Shift Control Module (4WD)	Behind the left lower I/P 58
Vehicle Communication Interface Module (VCIM)	Under right rear seat 65
Connector	
C101 (38-BLK)	Left side of engine compartment 3
C304 (16-BLK)	Under carpet, rear floor area 103
C307 (18-MD GRY)	Beneath rear of lower console 86
C500 (12-BLK)	Midpoint of leading edge of left front door 93
C600 (12-BLK)	Midpoint of leading edge of right front door 93
C900 (6-BLK)	Top of the liftgate 107
Ground	
G102	Left side of engine compartment 4