


GAUGES

Component Index

- Engine Oil Pressure (EOP) Switch (4.2L)
- Fuel Pump and Sender Assembly
- Fuse Block-Underhood
- Instrument Panel Cluster (IPC)
- Oil Pressure Sensor (5.3L)
- Powertrain Control Module (PCM) (4.2L)
- Powertrain Control Module (PCM) (5.3L)


GAUGES

Circuit Schematic

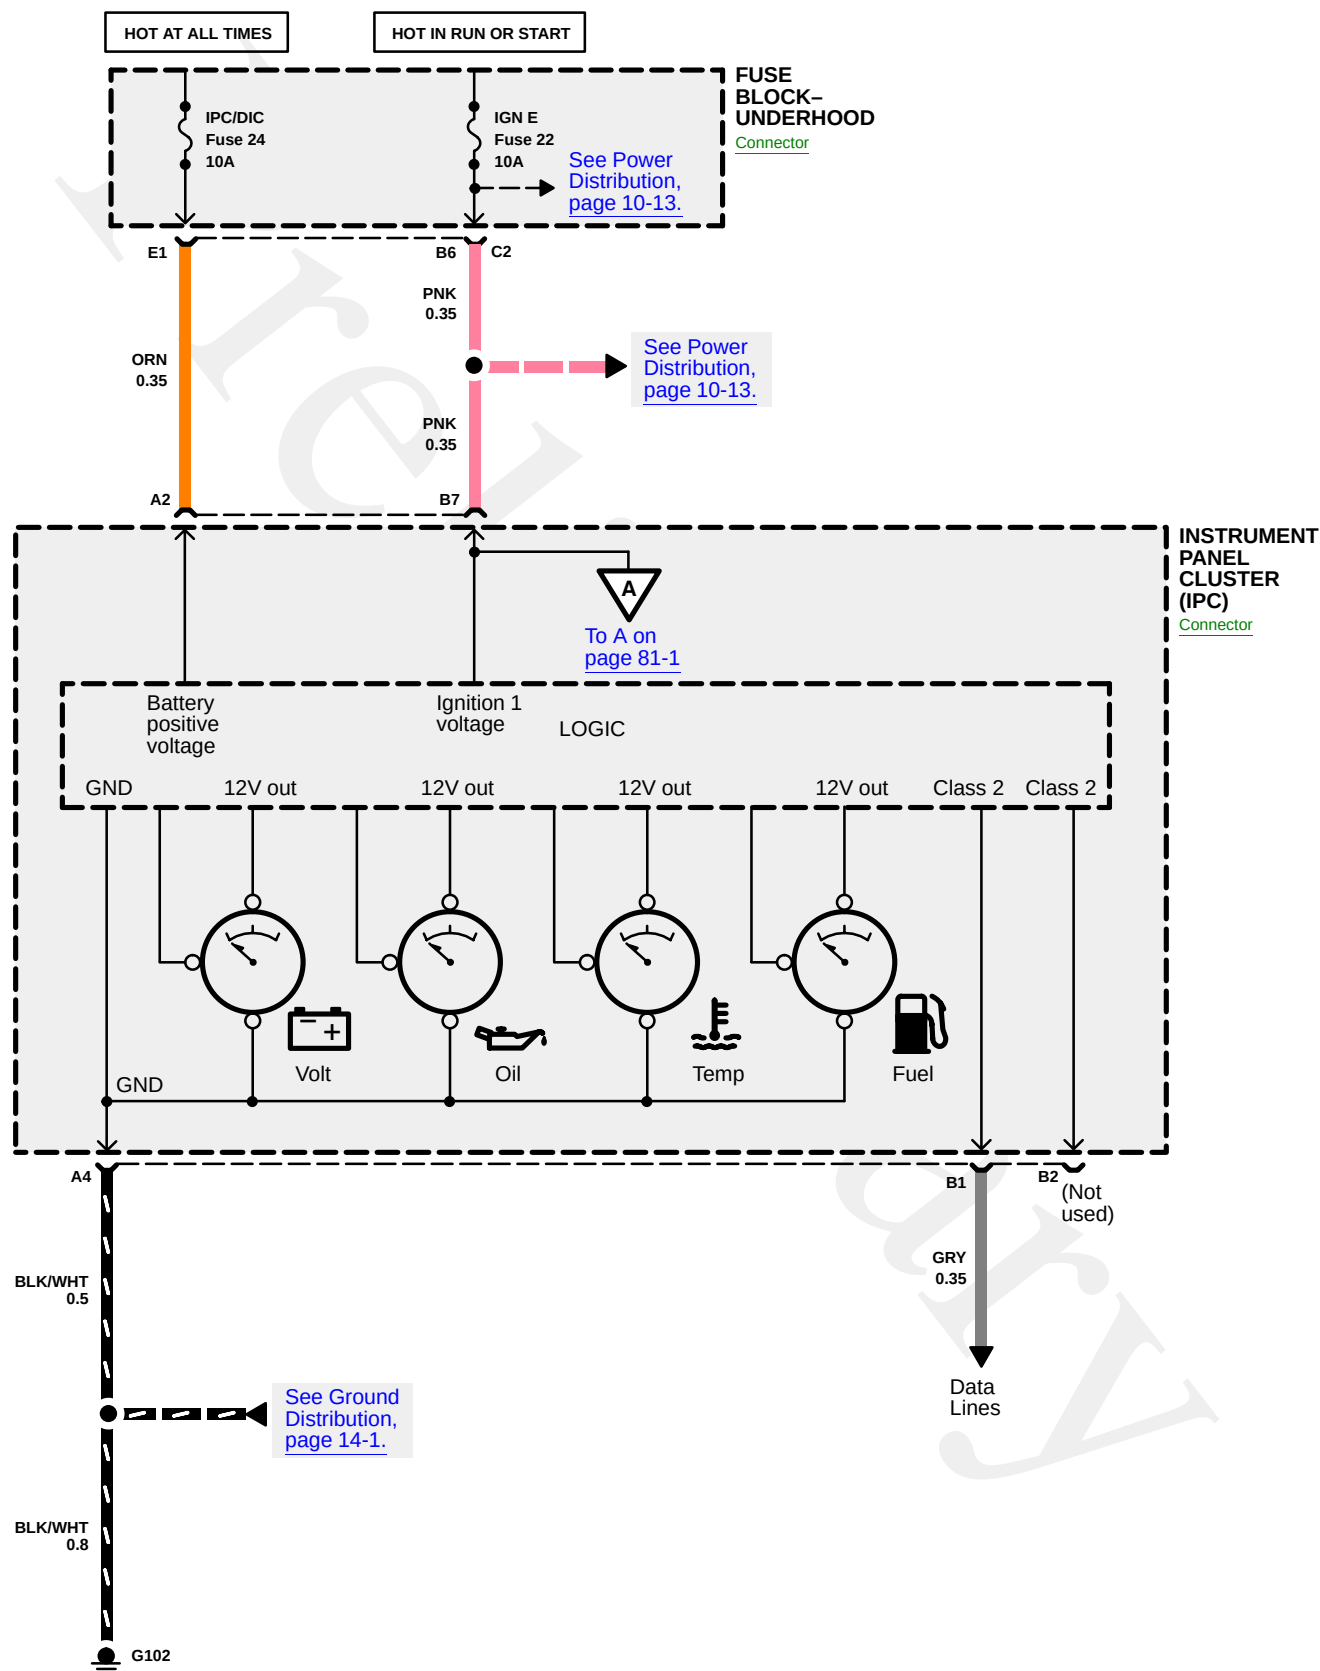

GAUGES

Circuit Schematic

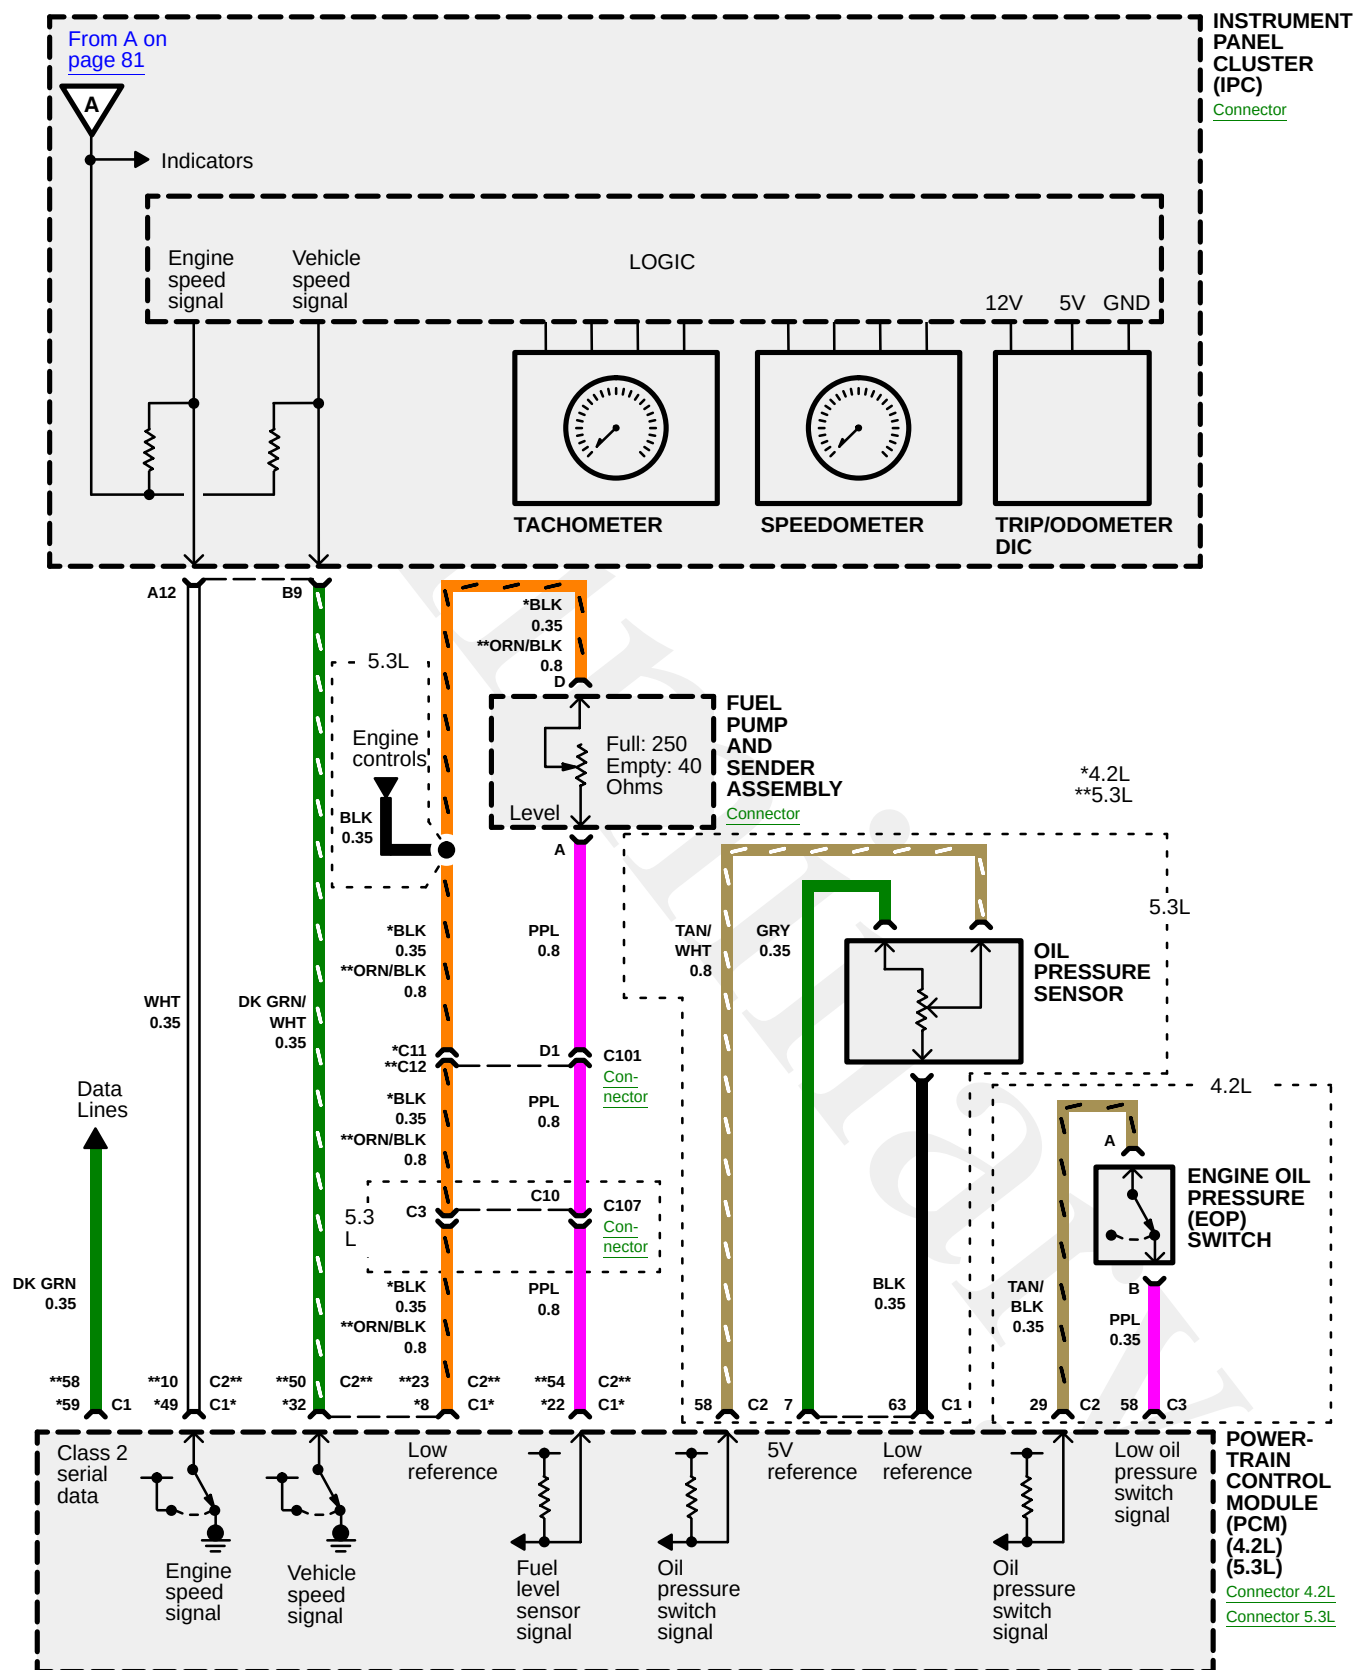

GAUGES

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Engine Oil Pressure (EOP)	
Switch (4.2L) Bottom right side of engine	33
Fuel Pump and Sender	
Assembly Inside the fuel tank	
Fuse Block-Underhood Left side of engine compartment	3
Instrument Panel Cluster	
(IPC) On the left side of the IP, above the steering column	59
Oil Pressure Sensor (5.3L) Top rear of engine	19
Powertrain Control Module	
(PCM) (4.2L) Left front of engine	5
Powertrain Control Module	
(PCM) (5.3L) Left front of engine compartment	25
Connector	
C101 (38-BLK) Left side of engine compartment	3
C107 (5.3L) (38-BLK) Left rear of engine compartment	18
Ground	
G102 Left side of engine compartment	4