


DASH AND CONSOLE LIGHTS

Component Index

- Blower Motor Switch-Front Auxiliary
- Body Control Module (BCM)
- Driver Door Module (DDM)
- Electronic Brake Control Module (EBCM)
- Fuse Block-Rear
- Fuse Block-Underhood
- Garage Door Opener
- Headlamp Switch
- HVAC Control Module
- HVAC Control Module-Auxiliary
- Inflatable Restraint Steering Wheel Module Coil
- Instrument Panel Cluster (IPC)
- Memory Seat Switch-Driver
- Quarter Glass Switch-Left
- Quarter Glass Switch-Right
- Radio
- Rear Window Wiper/Washer Switch
- SP201
- Steering Wheel Control Assembly
- Sunroof Switch
- Traction Control Switch (2WD)
- Transfer Case Shift Control Module (4WD)
- Transfer Case Shift Control Switch
- Voice Recorder
- Window Switch-Left Rear
- Window Switch-Right Rear


DASH AND CONSOLE LIGHTS

Circuit Schematic

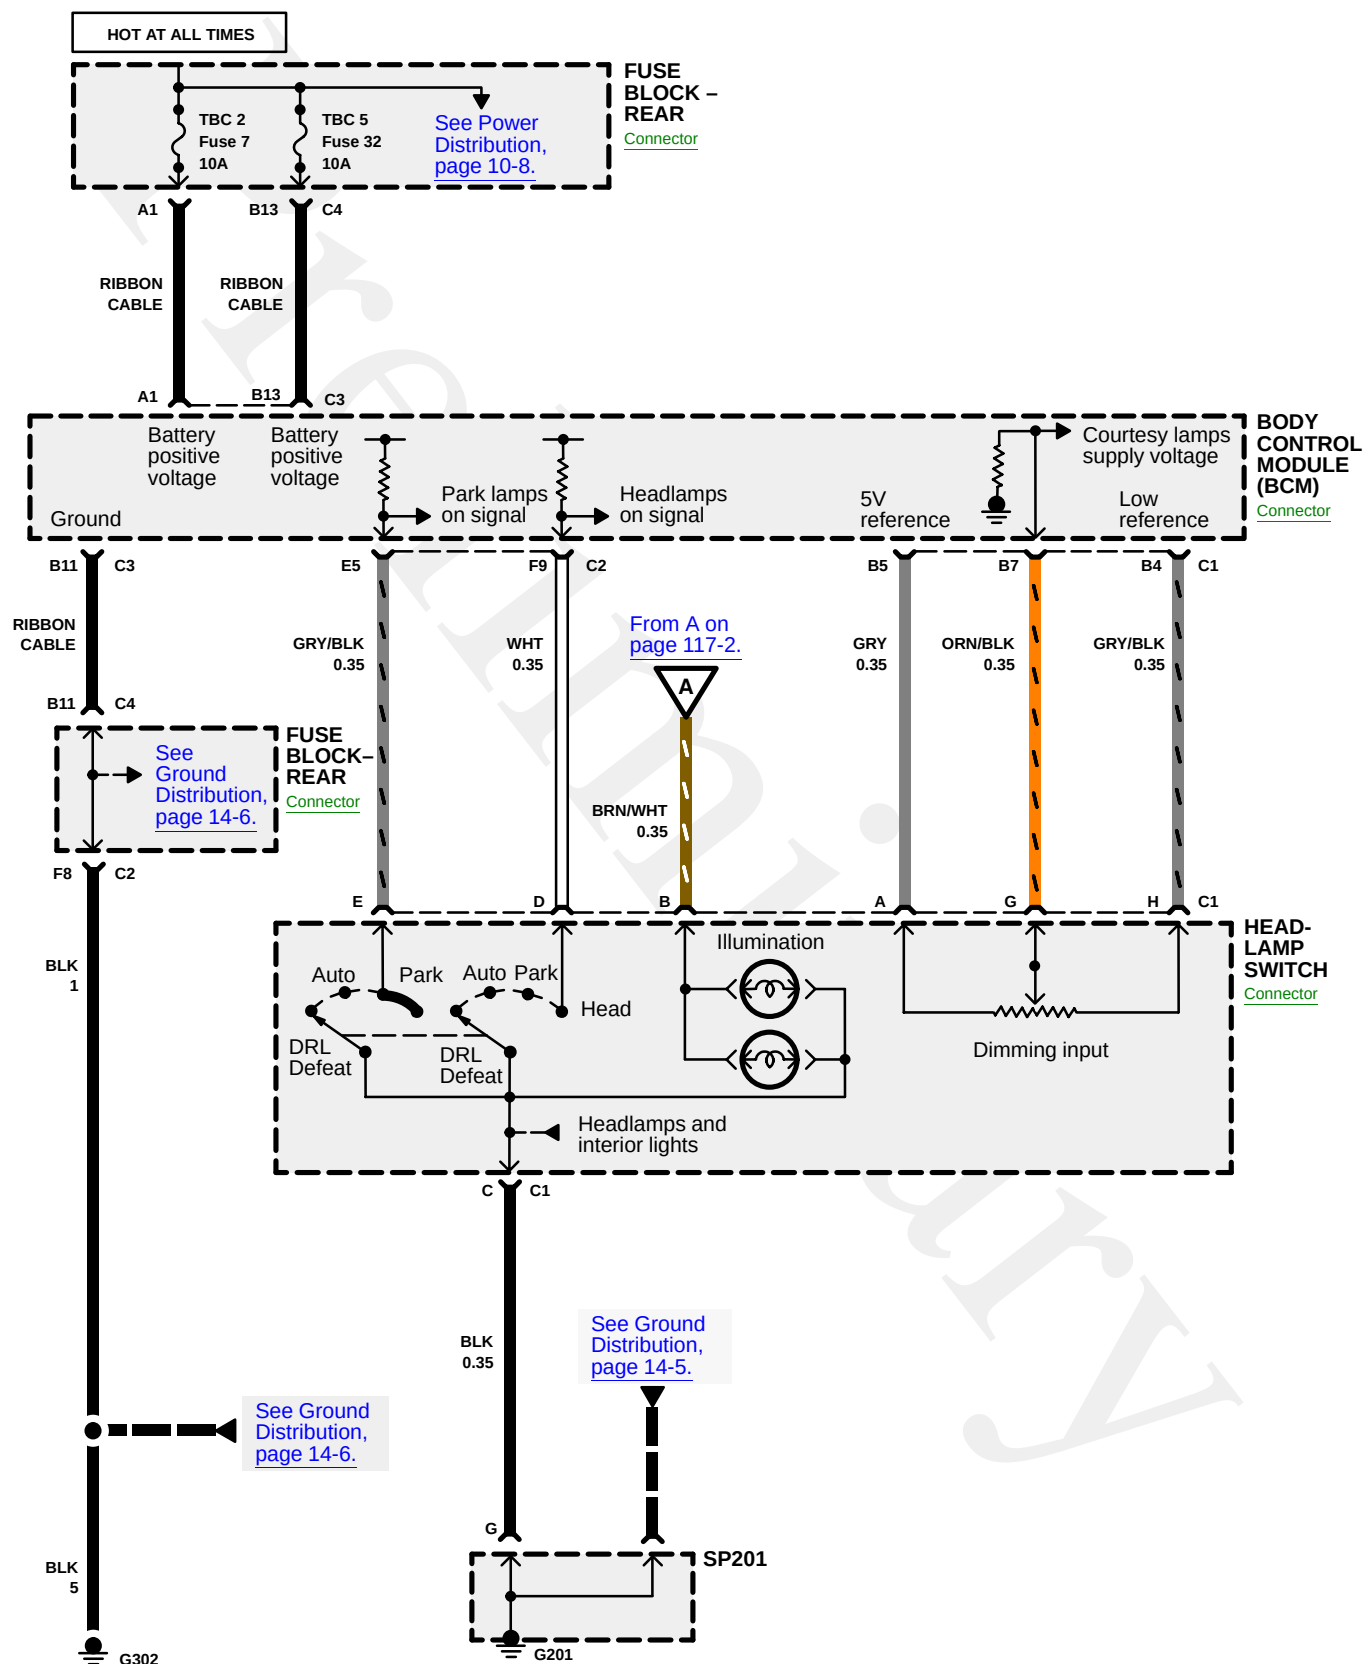


DASH AND CONSOLE LIGHTS

Circuit Schematic

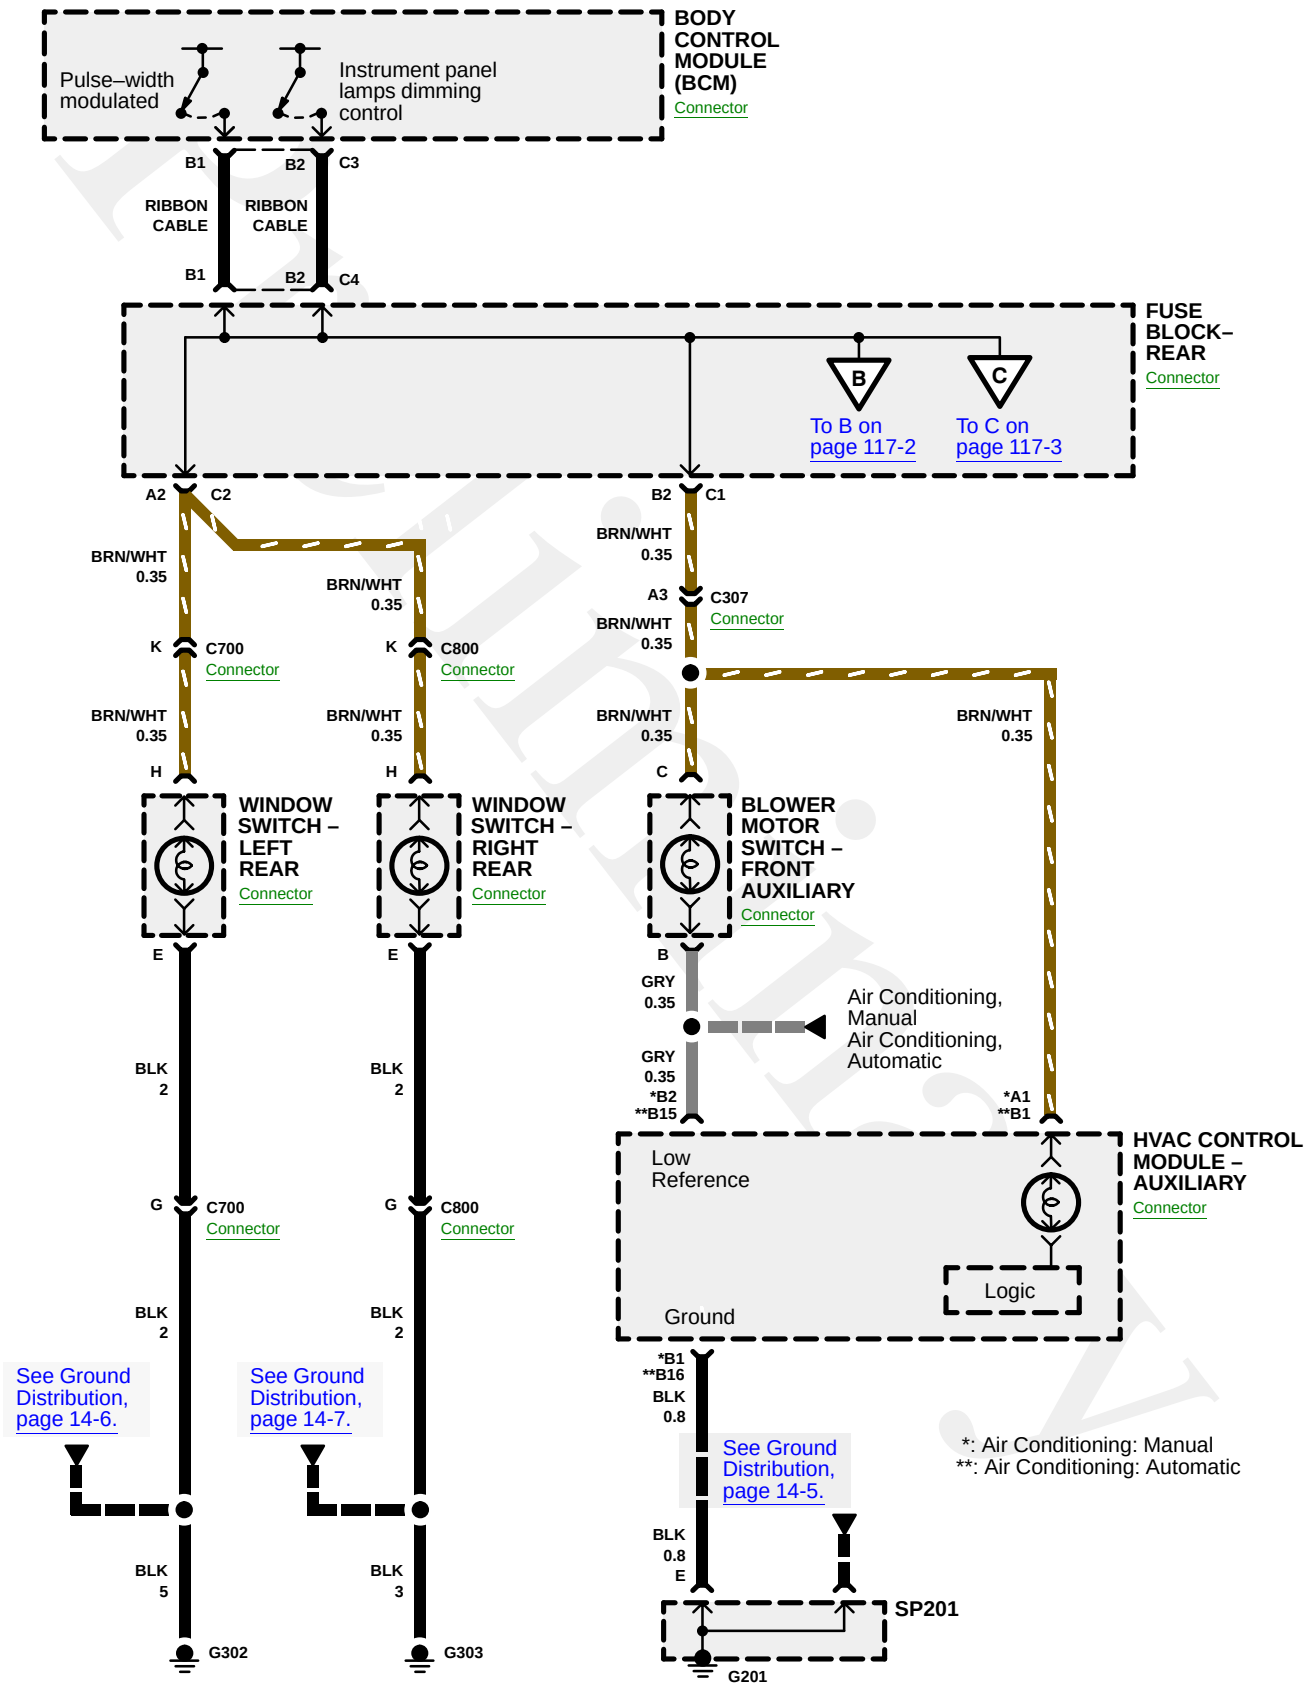


DASH AND CONSOLE LIGHTS

Circuit Schematic

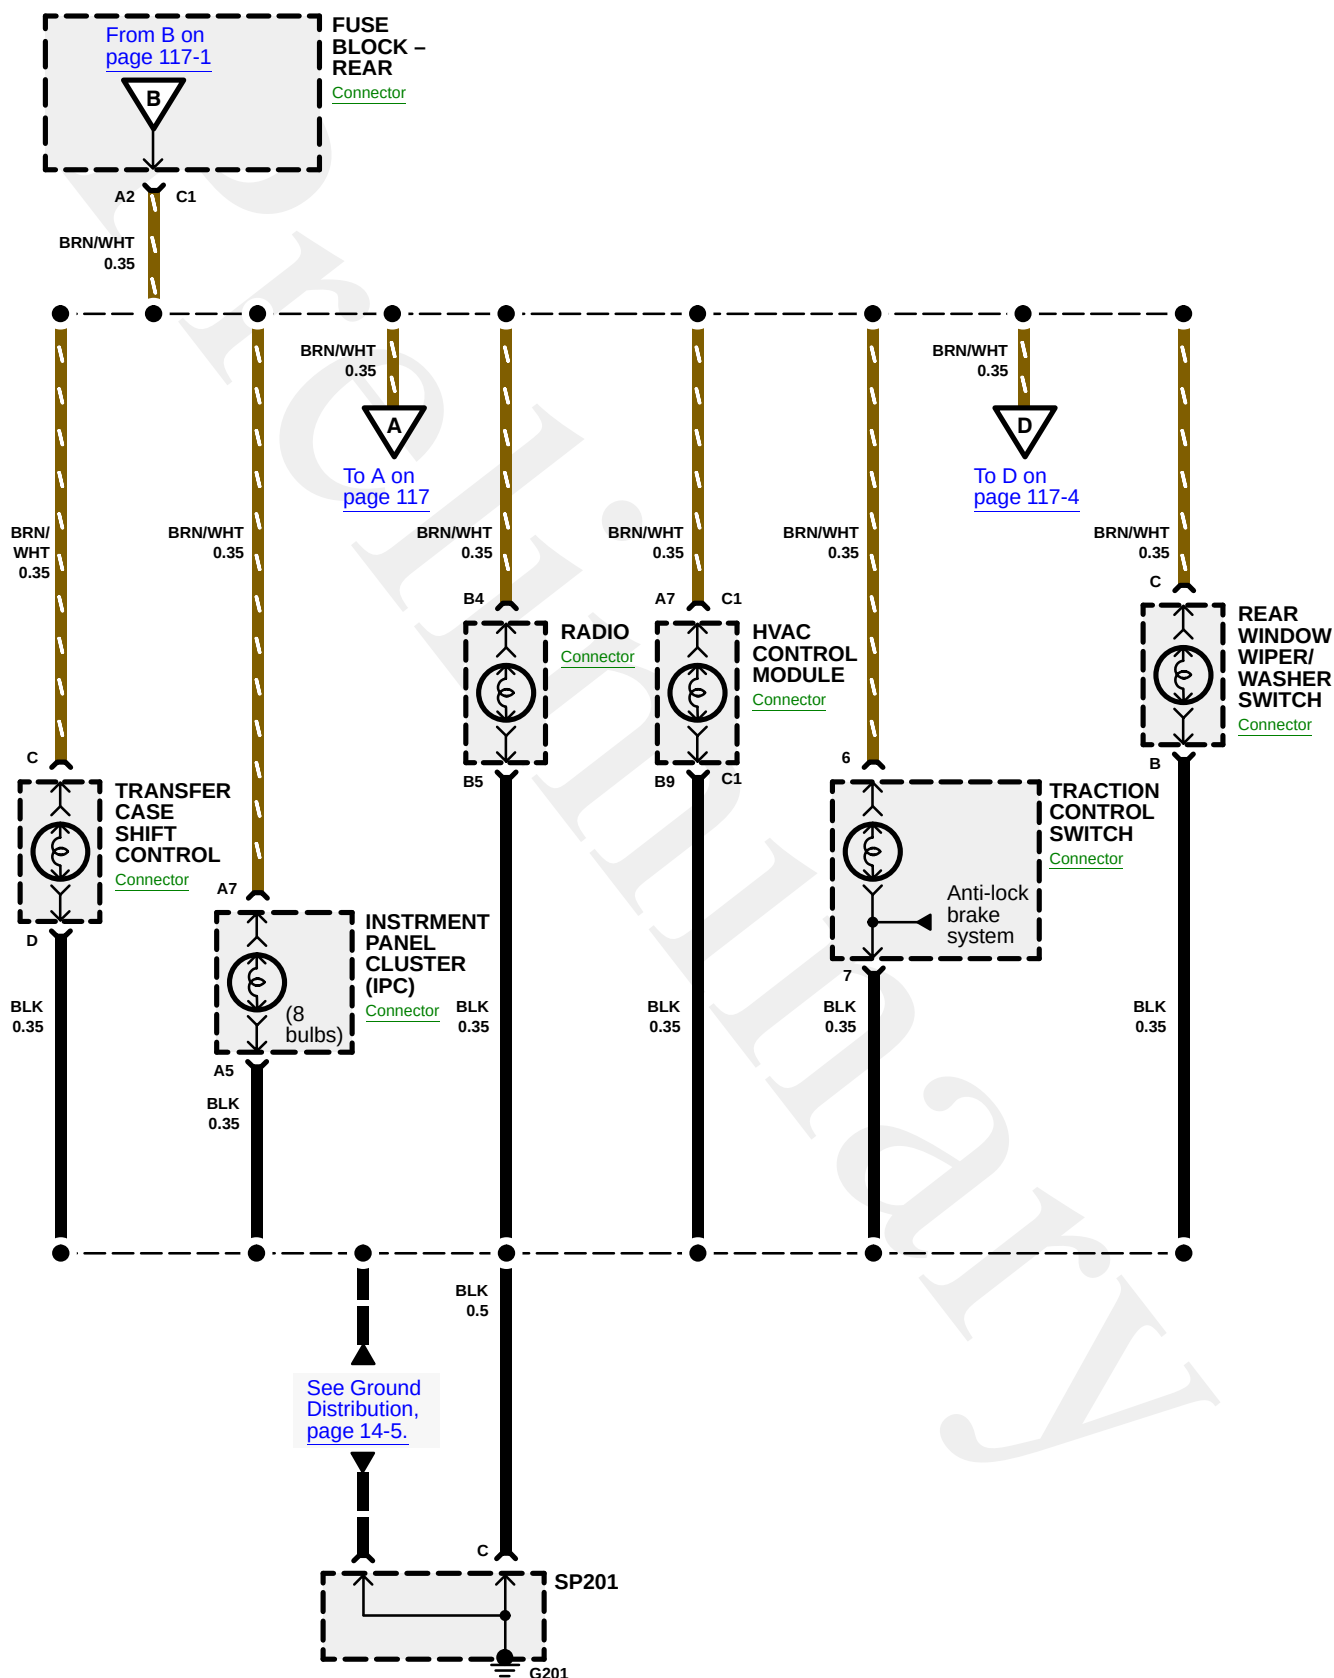


DASH AND CONSOLE LIGHTS

Circuit Schematic

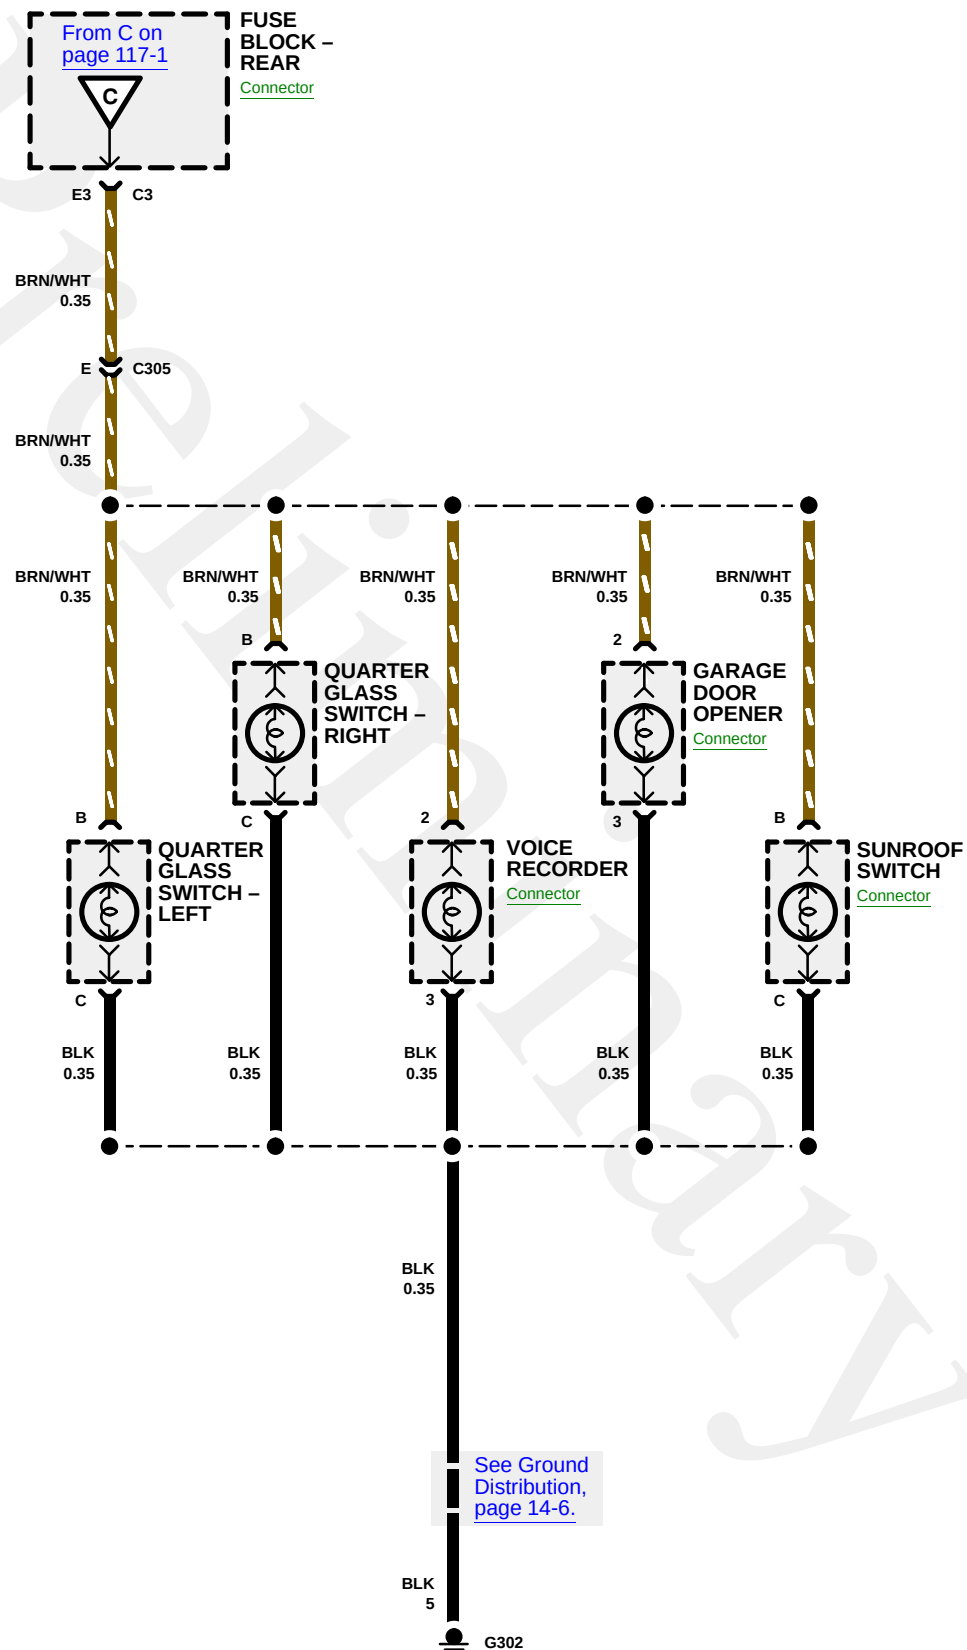

DASH AND CONSOLE LIGHTS


Circuit Schematic

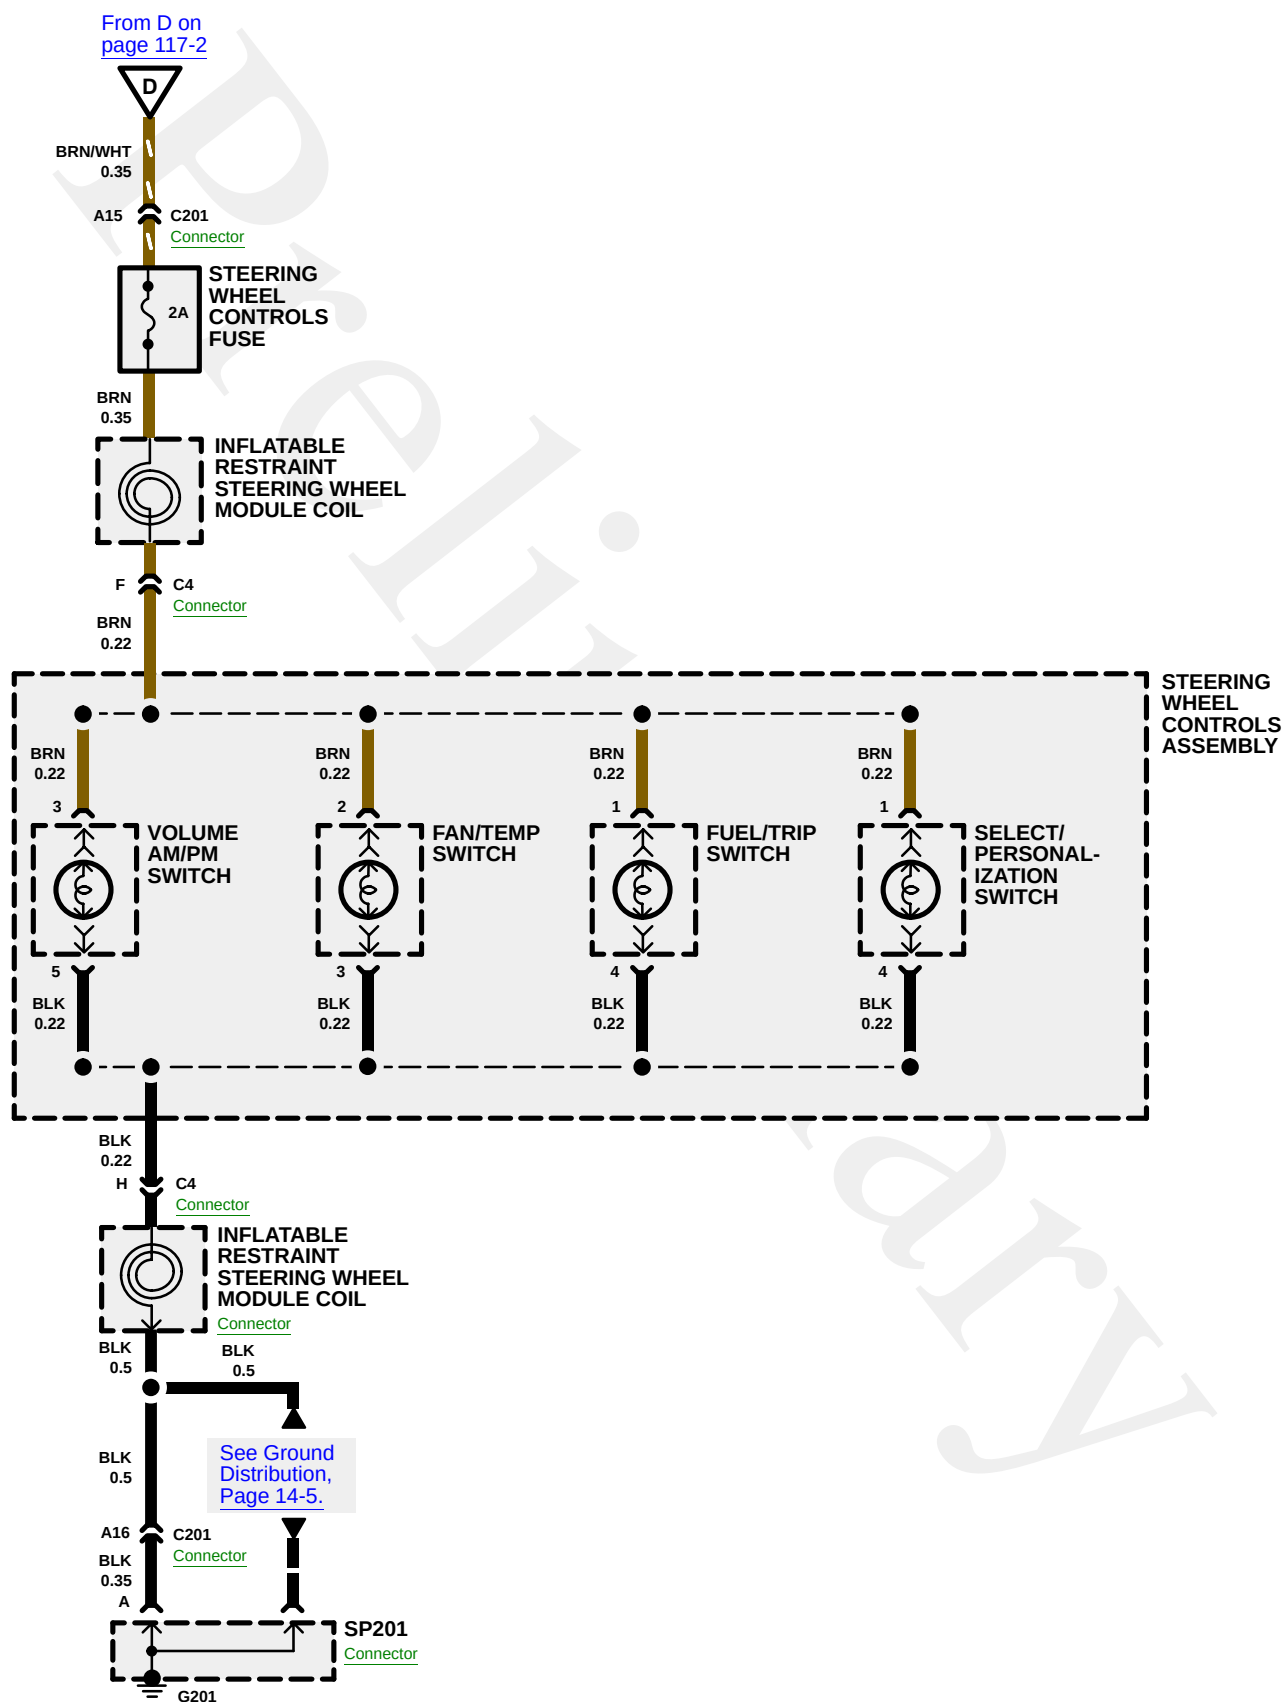

117-4


DASH AND CONSOLE LIGHTS

Circuit Schematic

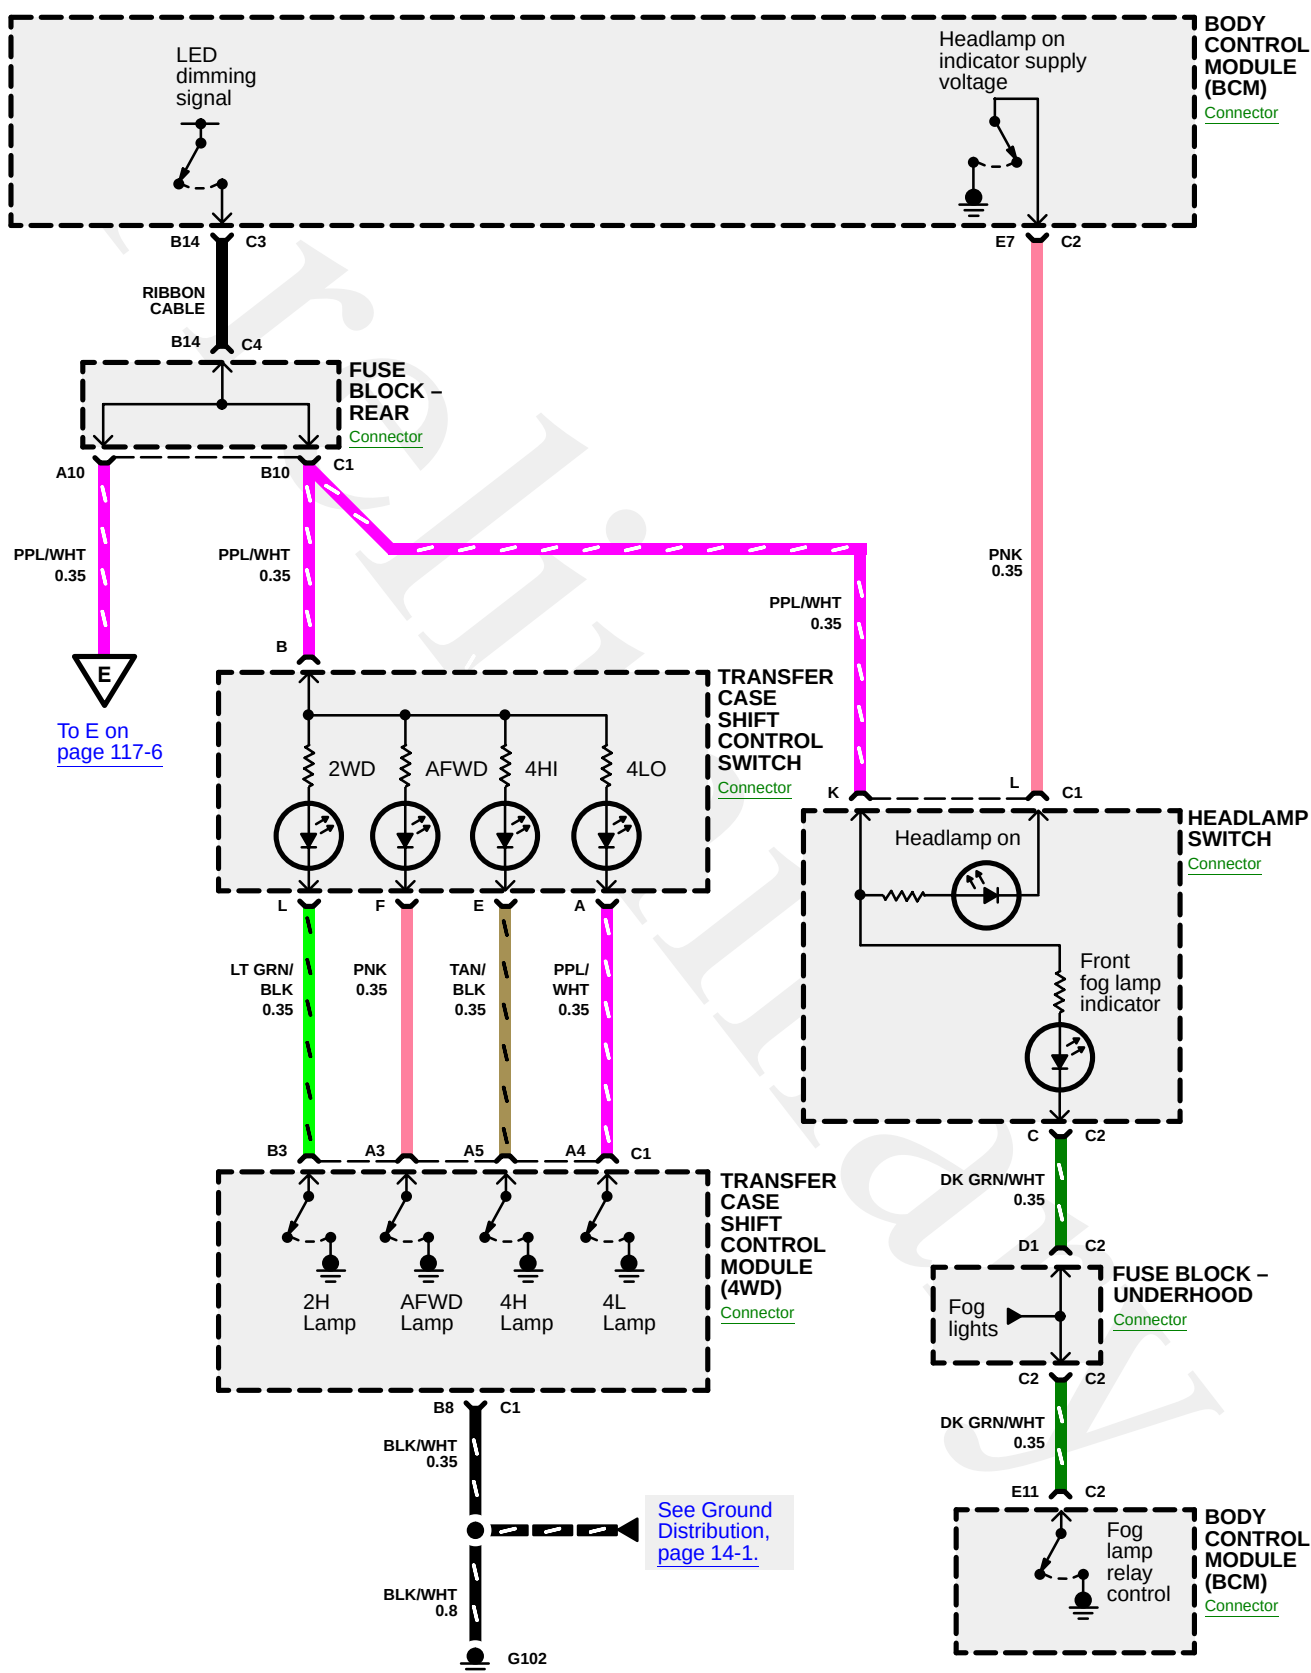

DASH AND CONSOLE LIGHTS

Circuit Schematic

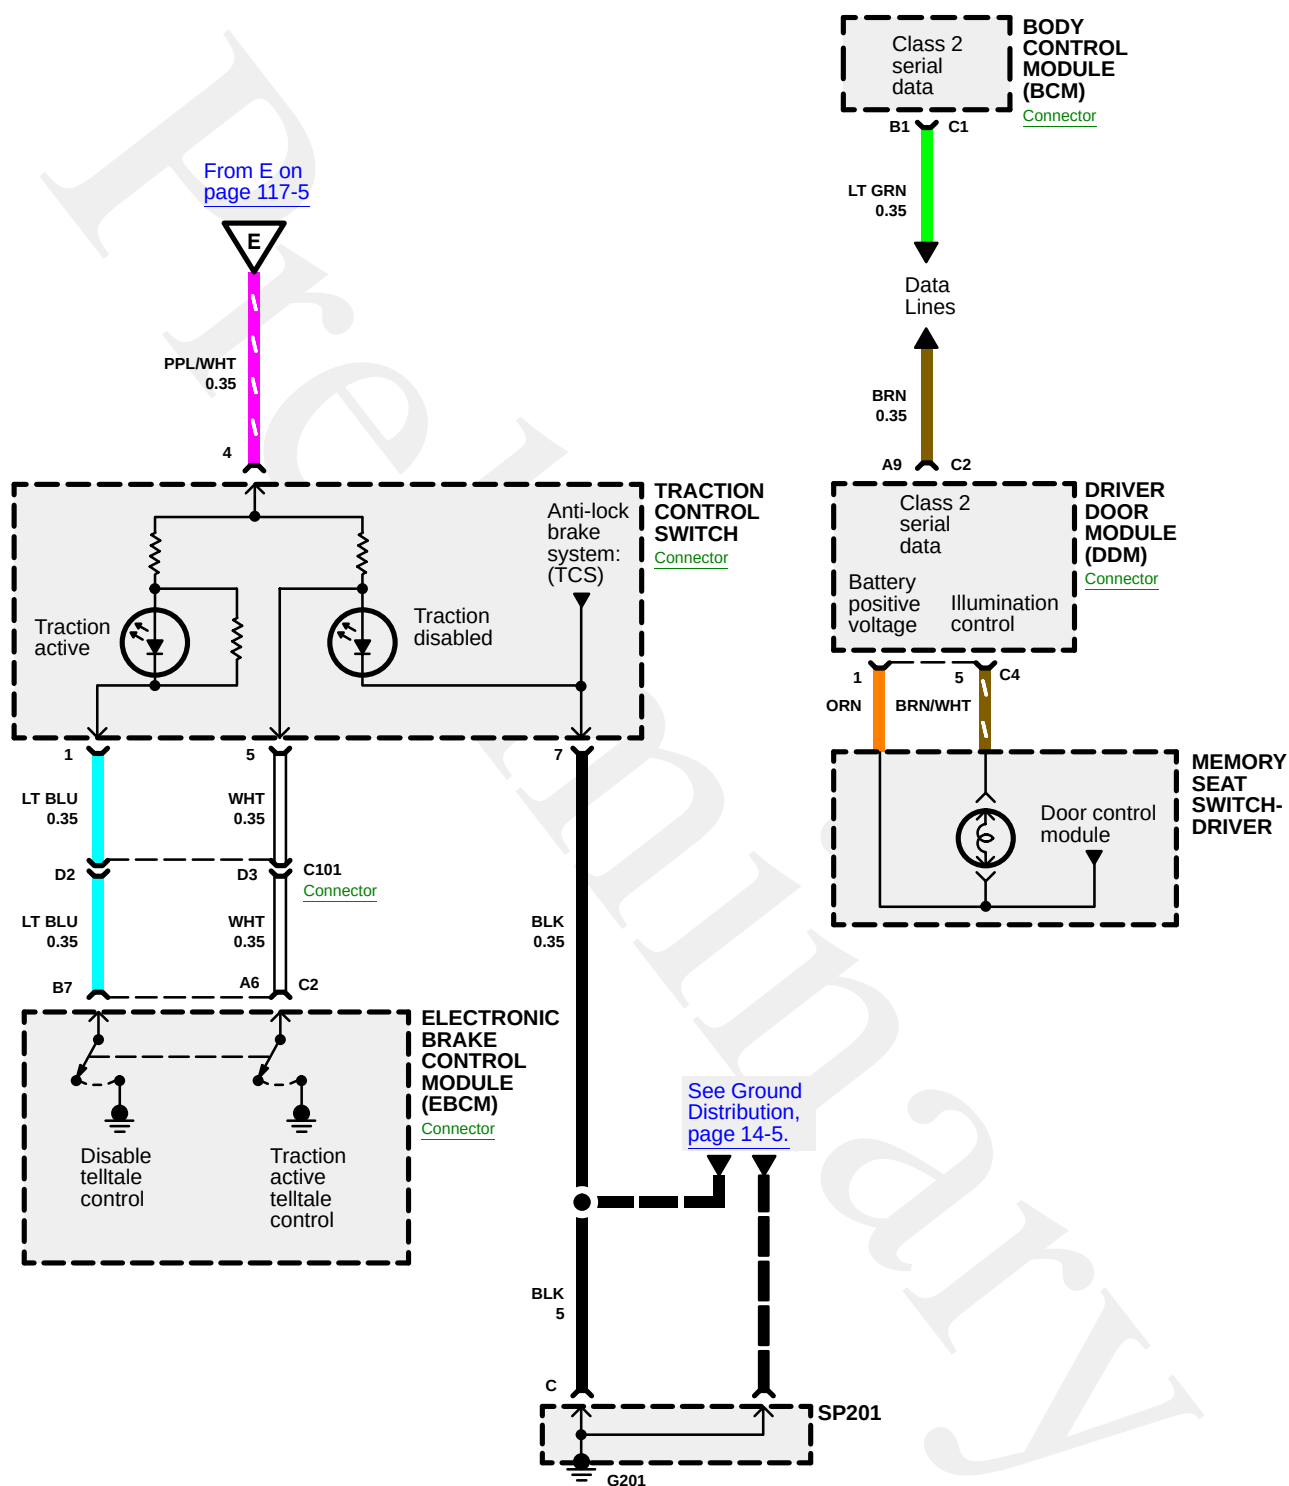

DASH AND CONSOLE LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Blower Motor Switch-Front	
Auxiliary	In center console 72
Body Control Module	
(BCM)	On Rear Fuse Block, under left rear seat 53
Driver Door Module	
(DDM)	On lower part of the driver door switch panel 95
Electronic Brake Control	
Module (EBCM)	Inner left side frame rail (near transmission) 41
Fuse Block-Rear	Under the left rear seat 52
Fuse Block-Underhood	Left side of engine compartment 3
Garage Door Opener	In overhead console 91
Headlamp Switch	On the left side of the IP 61
HVAC Control Module	In the IP center trim panel, beneath the radio 75
HVAC Control Module-	
Auxiliary	At rear of lower console 85
Inflatable Restraint Steering	
Wheel Module Coil	In center hub of steering wheel
Instrument Panel Cluster	
(IPC)	On the left side of the IP, above the steering column 59
Memory Seat Switch-	
Driver	Part of driver's door module (DDM) 95
Quarter Glass Switch-	
Left	In upper console 91
Quarter Glass Switch-	
Right	In upper console 91
Radio	Center of I/P 74
Rear Window Wiper/Washer	
Switch	In lower center of I/P 73
SP201	Near right front of lower console 80
Steering Wheel Control	
Assembly	In the steering wheel hub 66
Sunroof Switch	In upper console 91
Traction Control Switch	
(2WD)	In center of the I/P 92
Transfer Case Shift Control	
Module (4WD)	Behind the left lower I/P 58
Transfer Case Shift Control	
Switch	In lower center of the I/P 73
Voice Recorder	In the upper console 91
Window Switch-Left Rear	Mounted on the interior side of the left rear door
Window Switch-Right Rear ...	Mounted on the interior side of the right rear door
Connector	
C100 (4.2L) (10-BLK)	Left side of engine compartment 3
C201 (17-BLK), (18-BLK), and (13-GRY)	At base of steering column 120
C305 (16-BLK)	Inside upper console 91
C307 (18-MD GRAY)	Beneath rear of lower console 86
C700 (17-NAT)	Midpoint of leading edge of left rear door 94
C800 (17-NAT)	Midpoint of leading edge of right rear door 94

DASH AND CONSOLE LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

Ground

G102	Left side of engine compartment	4
G201	Near right front of lower console	80
G302	On the lower left B-pillar	105
G303	On the lower right B-pillar	105