

CIGAR LIGHTER

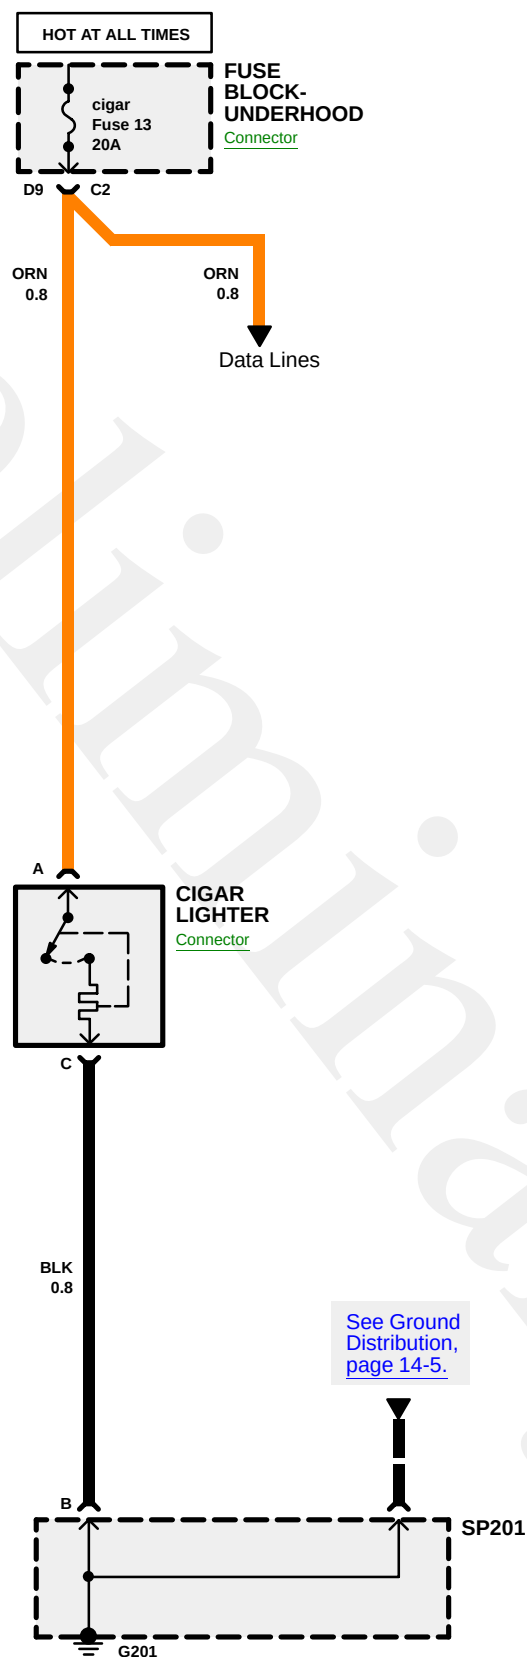
Component Index

- [Cigar Lighter](#)
- [Fuse Block-Underhood](#)
- [SP201](#)

Preliminary

CIGAR LIGHTER

Circuit Schematic

**155-0**

CIGAR LIGHTER

Circuit Operation

Battery voltage is applied to the cigar lighter through the CIGAR fuse 13. When the cigar lighter is depressed, the cigar lighter element completes the circuit to ground. When the element becomes sufficiently heated, it is spring-released and the circuit opens.

Reference

CIGAR LIGHTER

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Cigar Lighter	In lower center of the I/P	73
Fuse Block-Underhood	Left side of engine compartment	3
SP201	Near right front of lower console	80
<u>Ground</u>		
G201	Near right front of lower console	80