


2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

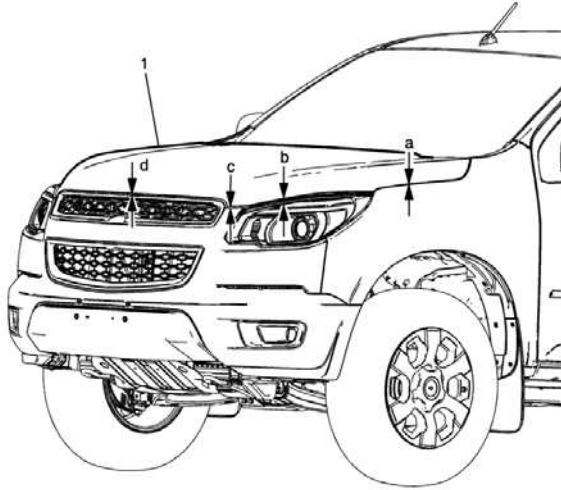

Hood Adjustment

Callout

Hood

Component Name

Caution: Refer to Fastener Caution.

Procedure

1. Loosen the 4 hood hinge bolts.
2. Adjust the hood in order to obtain an even gap on both sides between the hood and the fenders, the headlamps and the front bumper fascia and so that the hood is flush with both fenders on the front edge, the front bumper fascia and the headlamps.

1

Adjustment:

- Hood to front fender (a) $4.0 \text{ mm} \pm 1.0 \text{ mm}$ (0.12 in $\pm$ 0.04 in)
- Hood to headlamp (b) $4.0 \text{ mm} \pm 1.0 \text{ mm}$ (0.12 in $\pm$ 0.04 in)
- Hood to front bumper fascia (c) $6.5 \text{ mm} \pm 1.0 \text{ mm}$ (0.12 in $\pm$ 0.04 in)
- Hood to grille (d) $6.5 \text{ mm} \pm 1.0 \text{ mm}$ (0.12 in $\pm$ 0.04 in)


Tighten

22 Y (16 lb ft)

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

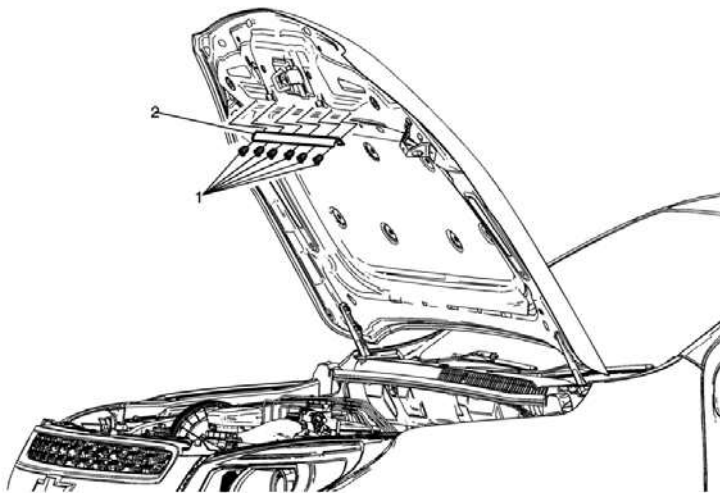

Hood Front Seal Replacement


Callout

- 1 Hood Front Seal Push-In Retainer (Qty: 6)
- 2 Hood Front Seal

Component Name

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

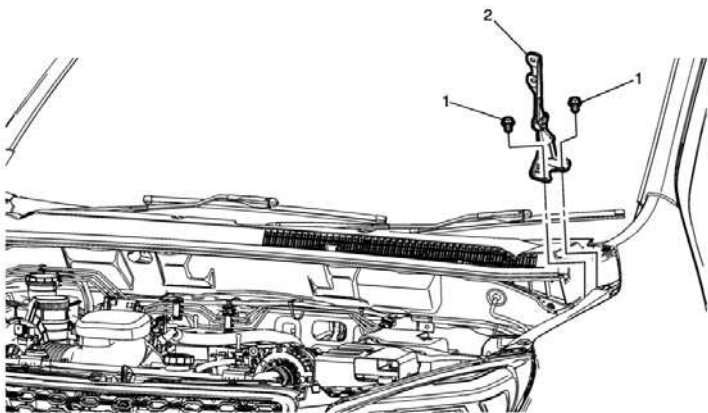


Hood Hinge Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the hood. Refer to Hood Replacement.	
2. Remove the air inlet grille extension. Refer Air Inlet Grille Panel Extension Replacement.	
Hood Hinge Bolt (Qty: 2)	
1	Caution: Refer to Fastener Caution.
	Tighten
	22 Y (16 lb ft)
Hood Hinge	
2	Procedure
Adjust the hood and hinge if needed. Refer to Hood Adjustment.	

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

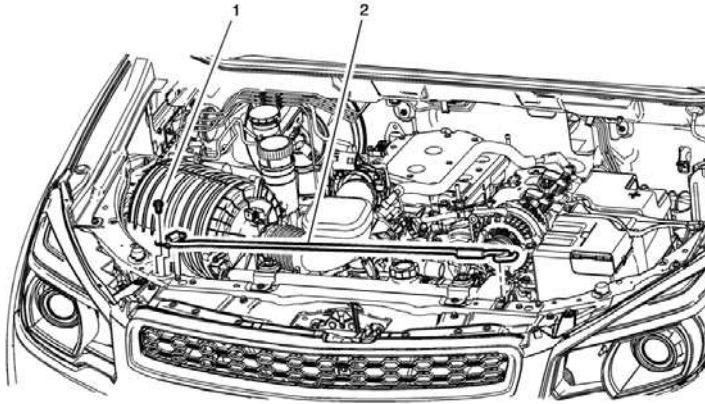

cardiagn.com

Hood Hold-Open Rod Replacement

Callout

Component Name

Hood Hold-Open Bolt

Warning: Refer to Hood Hold-Open Device Warning.

1

Caution: Refer to Fastener Caution.

Procedure

Support the hood in the open position.


2

Hood Hold-Open Rod

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

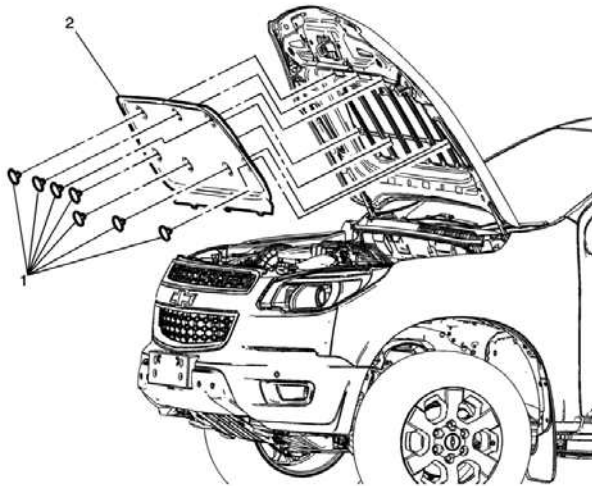

Hood Insulator Replacement

Callout

Component Name

1 Hood Insulator Plastic Push-In Retainer (Qty: 7)


Hood Insulator

2 **Procedure**

Ensure the 3 integral tabs are secured to the hood.

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

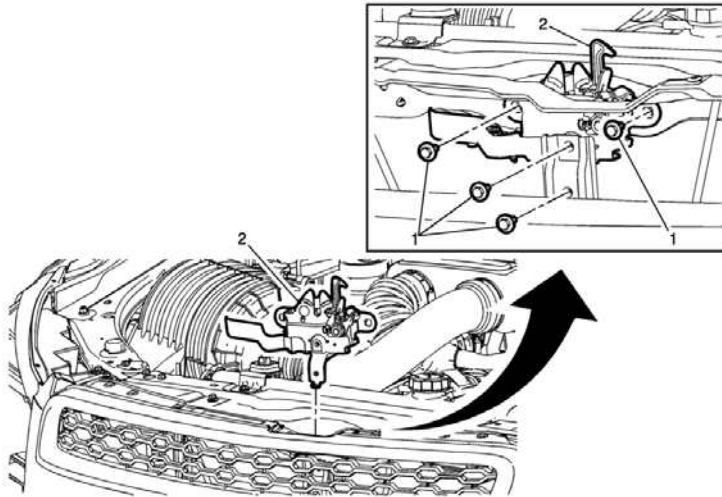

Hood Primary and Secondary Latch Replacement

Callout

Component Name

Hood Primary and Secondary Latch Bolt (Qty: 4)

Caution: Refer to Fastener Caution.

1

Tighten

22 Y (16 lb ft)

Hood Primary and Secondary Latch


Procedure

2

1. Disconnect the release cable from the hood primary latch.
2. Disconnect the electrical connector.

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

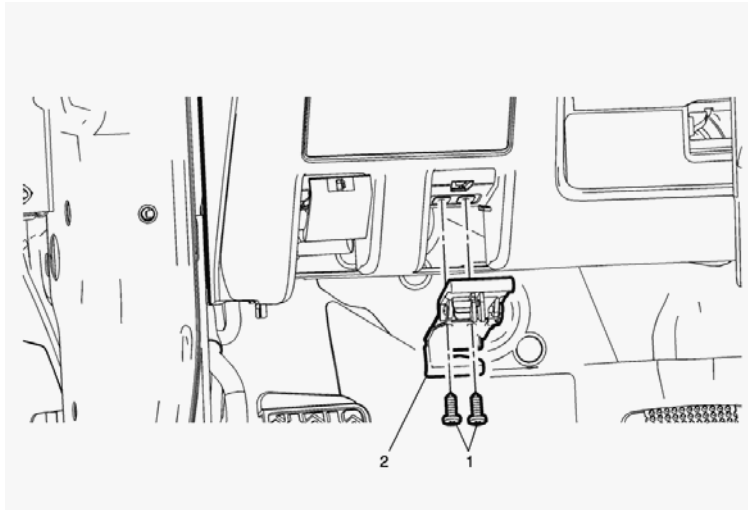

Hood Primary Latch Release Cable Handle Replacement

Callout

Component Name

Hood Primary Latch Release Cable Handle Screw (Qty: 2)

Caution: Refer to Fastener Caution.

1

Tighten

2 Y (17 lb in)

Hood Primary Latch Release Cable Handle


2

Procedure

Disconnect the hood release cable from the hood release handle.

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

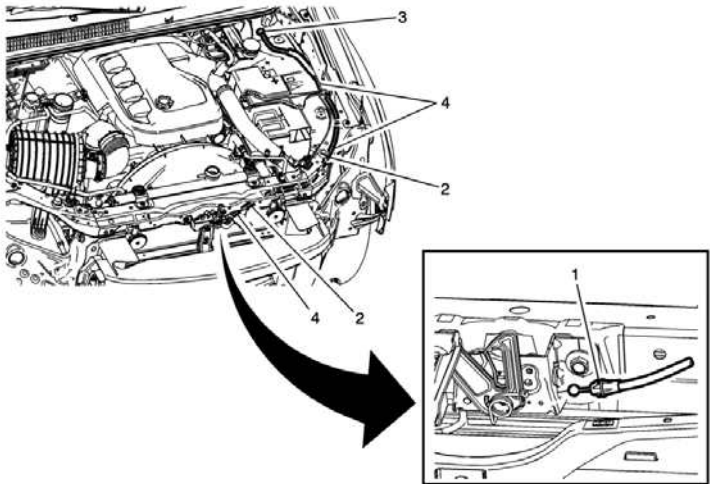

Hood Primary Latch Release Cable Replacement

Callout
Preliminary Procedures

Component Name

1. Remove the radiator grille support reinforcement. Refer to Front Grille Support Reinforcement Replacement.
2. Remove the hood primary and secondary latch. Refer to Hood Primary and Secondary Latch Replacement
3. Remove the left headlamp. Refer to Headlamp Replacement.

Hood Primary Latch Cable

1 Procedure

Disconnect the hood primary latch release cable from the primary hood latch.

Hood Primary Release Latch Cable Retainer

2 Procedure

Disconnect the hood release cable retainers from the hood release cable.

Hood Primary Latch Release Cable Grommet

Hood Primary Latch Release Cable


4 Procedure

Disconnect the hood primary latch release cable handle from the hood latch cable.

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

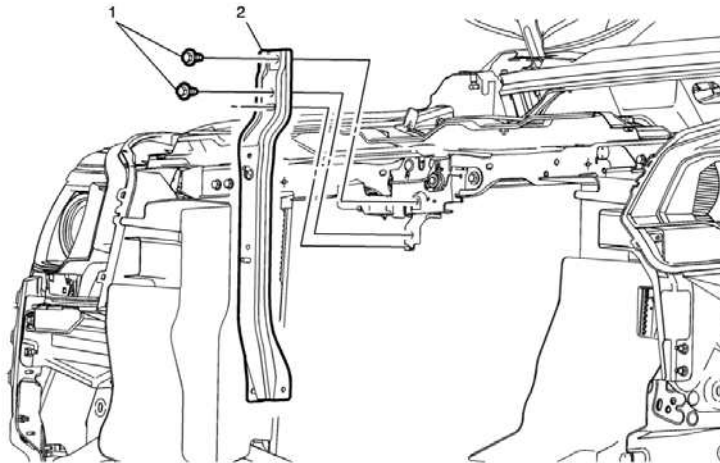

Hood Primary Latch Support Replacement

Callout

Component Name

Preliminary Procedures

1. Remove the front bumper fascia brace. Refer to Front Bumper Fascia Brace Replacement.
2. Disconnect the ambient air sensor. Refer to Ambient Air Temperature Gauge Sensor Replacement.
3. Remove the front bumper upper impact bar. Refer to Front Bumper Upper Impact Bar Replacement.

Hood Primary Latch Support Bolt (Qty: 2)

Caution: Refer to Fastener Caution.

1

Tighten


10 Y (89 lb in)

2

Hood Primary Latch Support

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

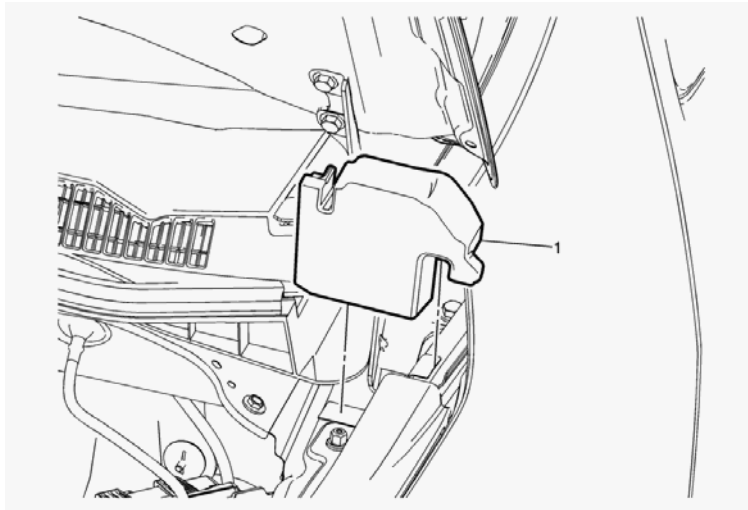

Hood Rear Corner Seal Replacement

Callout

Hood Rear Seal

Component Name


Procedure

1

1. Clean the area where the seal will be mounted. Use a suitable solvent with a mixture of 50 percent isopropyl alcohol & 50 percent water by volume, or high-flash naphtha.
2. Warm the hood rear corner seal panel area using a heat gun, to a minimum, prior to the hood rear corner seal installation.
3. Do NOT touch the adhesive surface when the tape is removed. Peel the tape liner off and install the hood rear corner seal.
4. Position the end of the corner seal to the end of the hood rear seal.

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

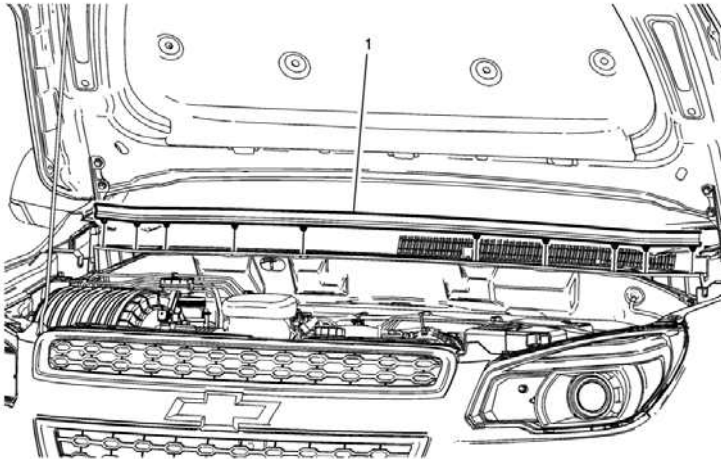

Hood Rear Seal Replacement

Callout

Component Name

Hood Rear Seal

1

Procedure

The hood rear seal is held in place with 10 plastic retainers that are part of the air inlet grille panel. Carefully pull the rear seal left/right to release from the retainers on the air inlet grille panel.

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:



Hood Replacement

Callout

Component Name

Hood Hinge Bolt (Qty: 4)

Caution: Refer to Fastener Caution.

Procedure

Mark the hood or hinge position in order to aid in hood installation.

Tighten

22 Y (16 lb ft)

Hood

Procedure

1. Remove the hood with aid of an assistant.
2. Transfer parts as needed.
3. Adjust the hood if needed. Refer to Hood Adjustment.

2013 Chevrolet Colorado


Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

Warning: When a hood hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

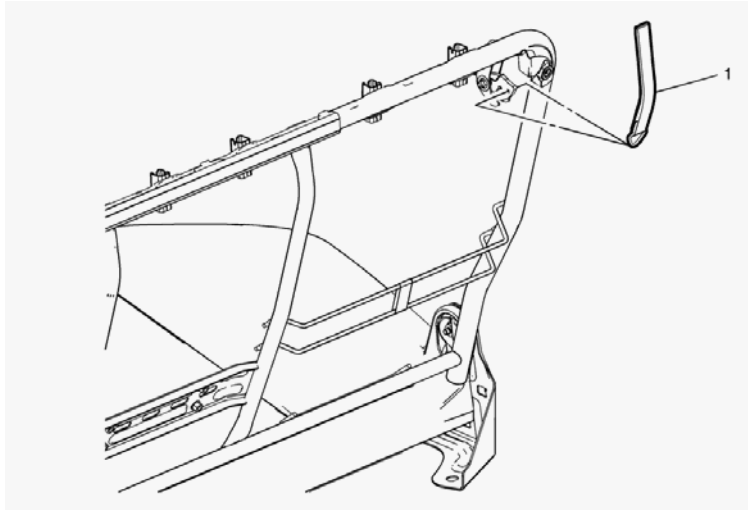

Rear Seat Back Cushion Latch Release Handle Replacement

Callout

Component Name

Preliminary Procedures

1. Remove the rear seat. Refer to Rear Seat Removal and Installation.
2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement.

Rear Seat Back Cushion Latch Release Handle

1


Procedure

Remove the latch release handle from the latch actuator.

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

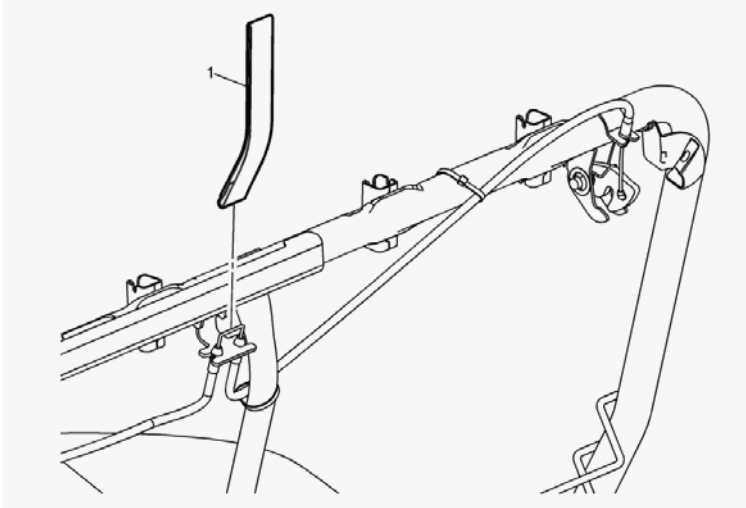

Rear Seat Back Cushion Latch Release Handle Replacement

Callout

Component Name

Preliminary Procedures

1. Remove the rear seat. Refer to Rear Seat Removal and Installation.
2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement.
3. Remove the right side rear seat anchor cable. Refer to Rear Seat Anchor Cable Replacement.

Rear Seat Back Cushion Latch Release Handle


1

Procedure

Remove the handle from the cable by sliding the cable through the handle.

2013 Chevrolet Colorado

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

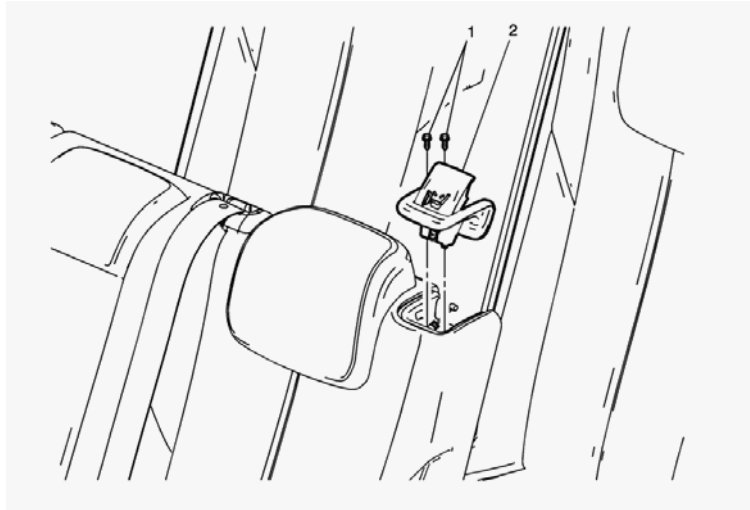

Rear Seat Back Cushion Latch Release Handle Replacement

Callout

Component Name

Rear Seat Back Cushion Latch Release Handle Fasteners (Qty: 2)

Caution: Refer to Fastener Caution.

Procedure

Pull up on the release handle to gain access to the latch assembly fasteners.

Rear Seat Back Cushion Latch Release Handle

Procedure

1. Pull up on the release handle to gain access to the cable and disconnect the latch release cable from the handle assembly.
2. Grasp the handle and pull upwards disengaging the handle from the seat back frame.