


2.0l petrol engine , CZPC,DKZC

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

SB

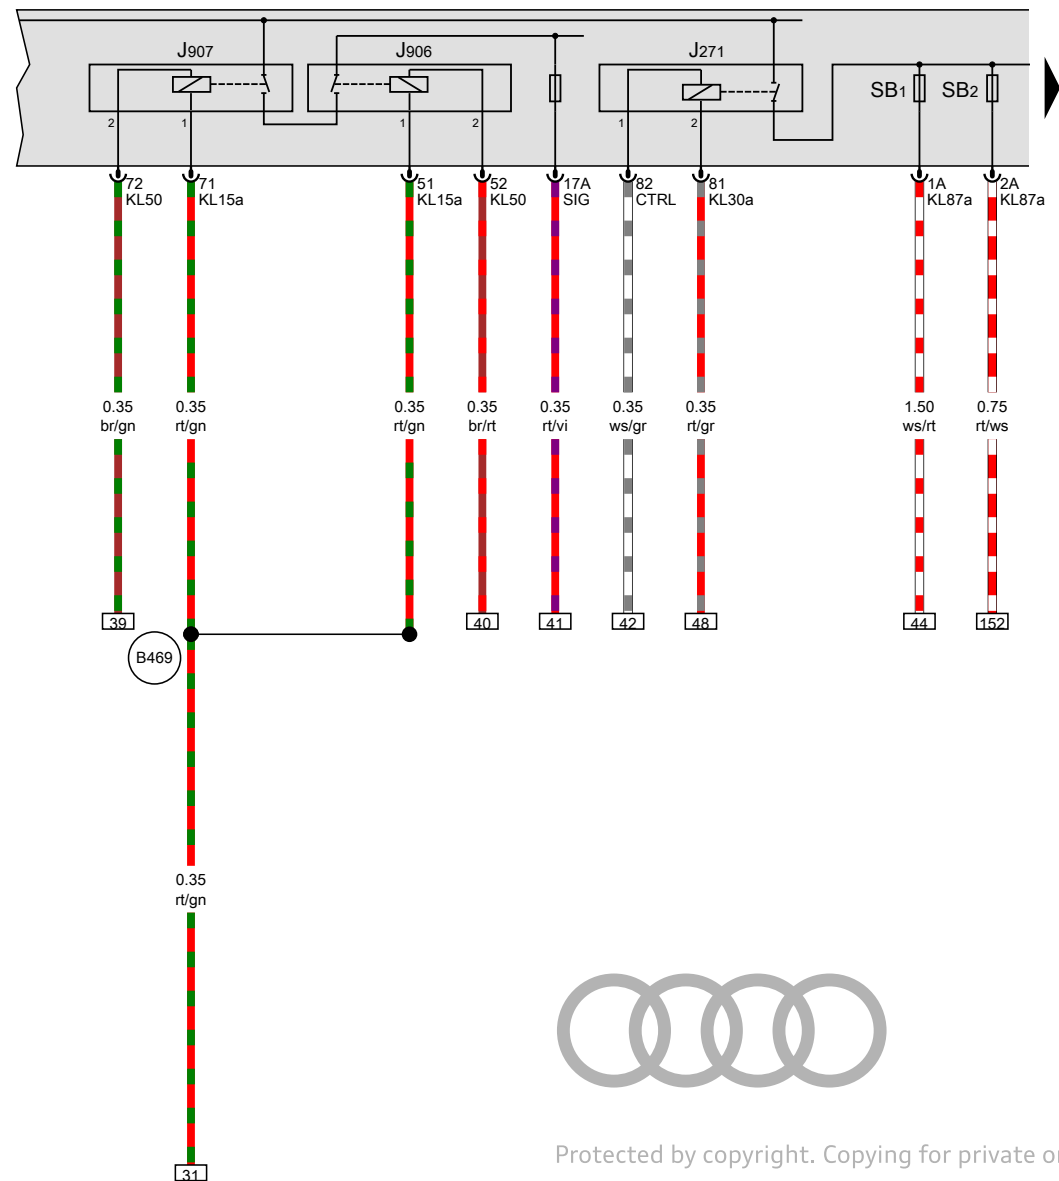

Main relay, Starter relay 1, Starter relay 2, Fuse holder B

- J271 Main relay
- J906 Starter relay 1
- J907 Starter relay 2
- SB Fuse holder B
- SB1 Fuse 1 on fuse holder B
- SB2 Fuse 2 on fuse holder B


B469 Connection 5, in main wiring harness

* see applicable current flow diagram for fuses in engine compartment



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

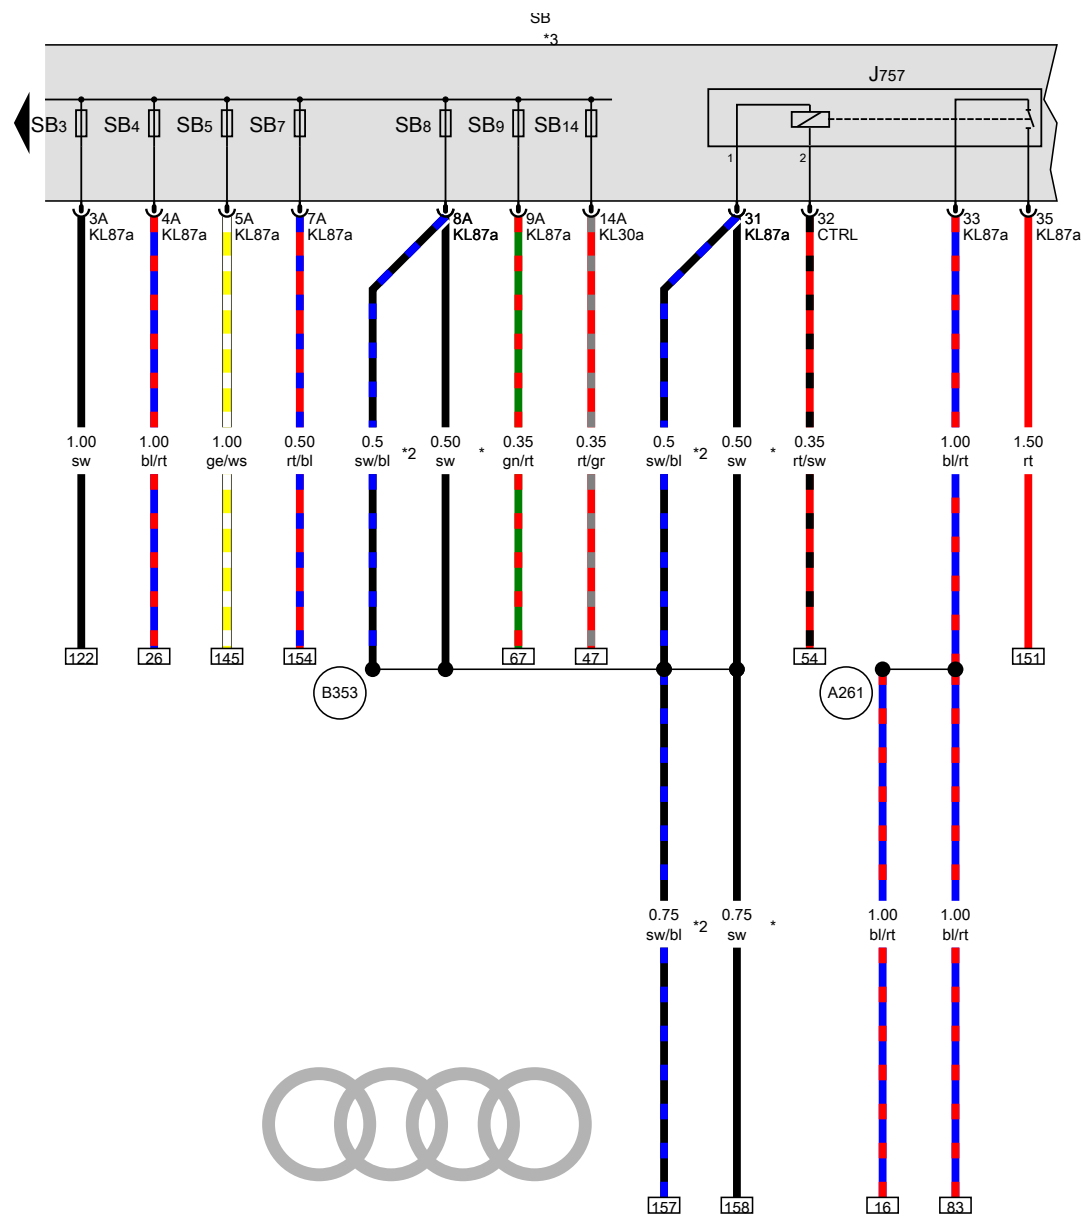

Engine component current supply relay, Fuse holder B

- J757 Engine component current supply relay
- SB Fuse holder B
- SB3 Fuse 3 on fuse holder B
- SB4 Fuse 4 on fuse holder B
- SB5 Fuse 5 on fuse holder B
- SB7 Fuse 7 on fuse holder B
- SB8 Fuse 8 on fuse holder B
- SB9 Fuse 9 on fuse holder B
- SB14 Fuse 14 on fuse holder B


A261 Connection 5, in dash panel wiring harness

B353 Positive connection 4 (87a) in main wiring harness

- * Up to July 2019
- *2 From July 2019
- *3 see applicable current flow diagram for fuses in engine compartment



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

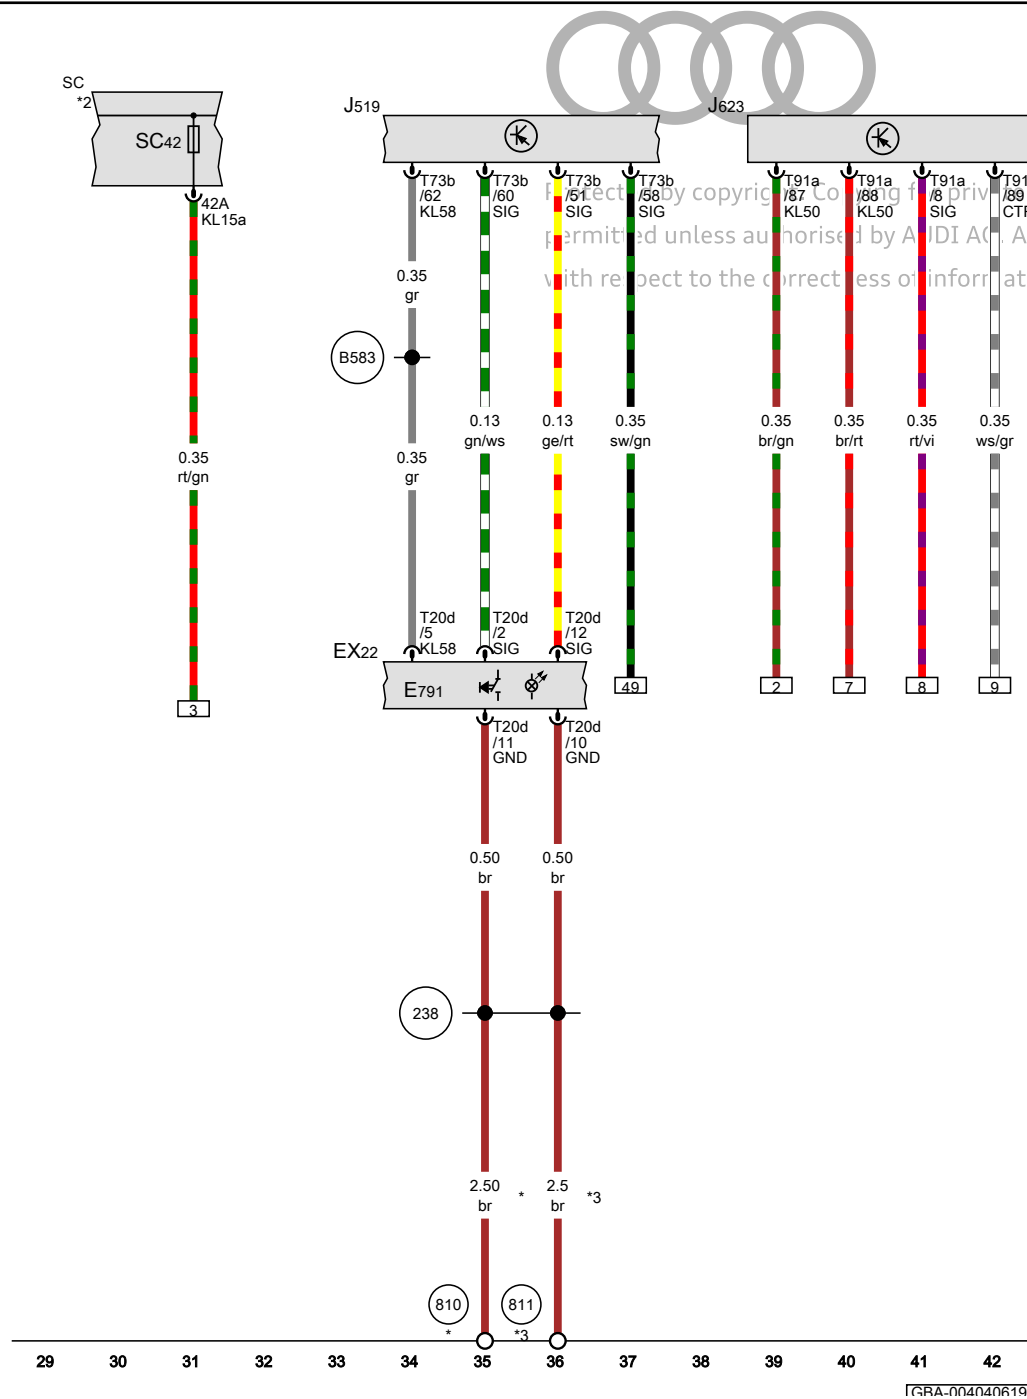


Centre switch module in dash panel, Operating unit 1 for driver and convenience functions, Onboard supply control unit, Engine/motor control unit, Fuse holder C

- EX22 Centre switch module in dash panel
- E791 Operating unit 1 for driver and convenience functions
- J519 Onboard supply control unit
- J623 Engine/motor control unit
- SC Fuse holder C
- SC42 Fuse 42 on fuse holder C
- T20d 20-pin connector, black
- T73b 73-pin connector, black
- T91a 91-pin connector, black

- (238) Earth connection 1, in interior wiring harness
- (810) Earth point on central tube for dash panel, centre left
- (811) Earth point on central tube for dash panel, centre right
- (B583) Positive connection (58), in interior wiring harness

- * For left-hand drive models
- *2 see applicable current flow diagram for fuses in interior
- *3 For right-hand drive models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

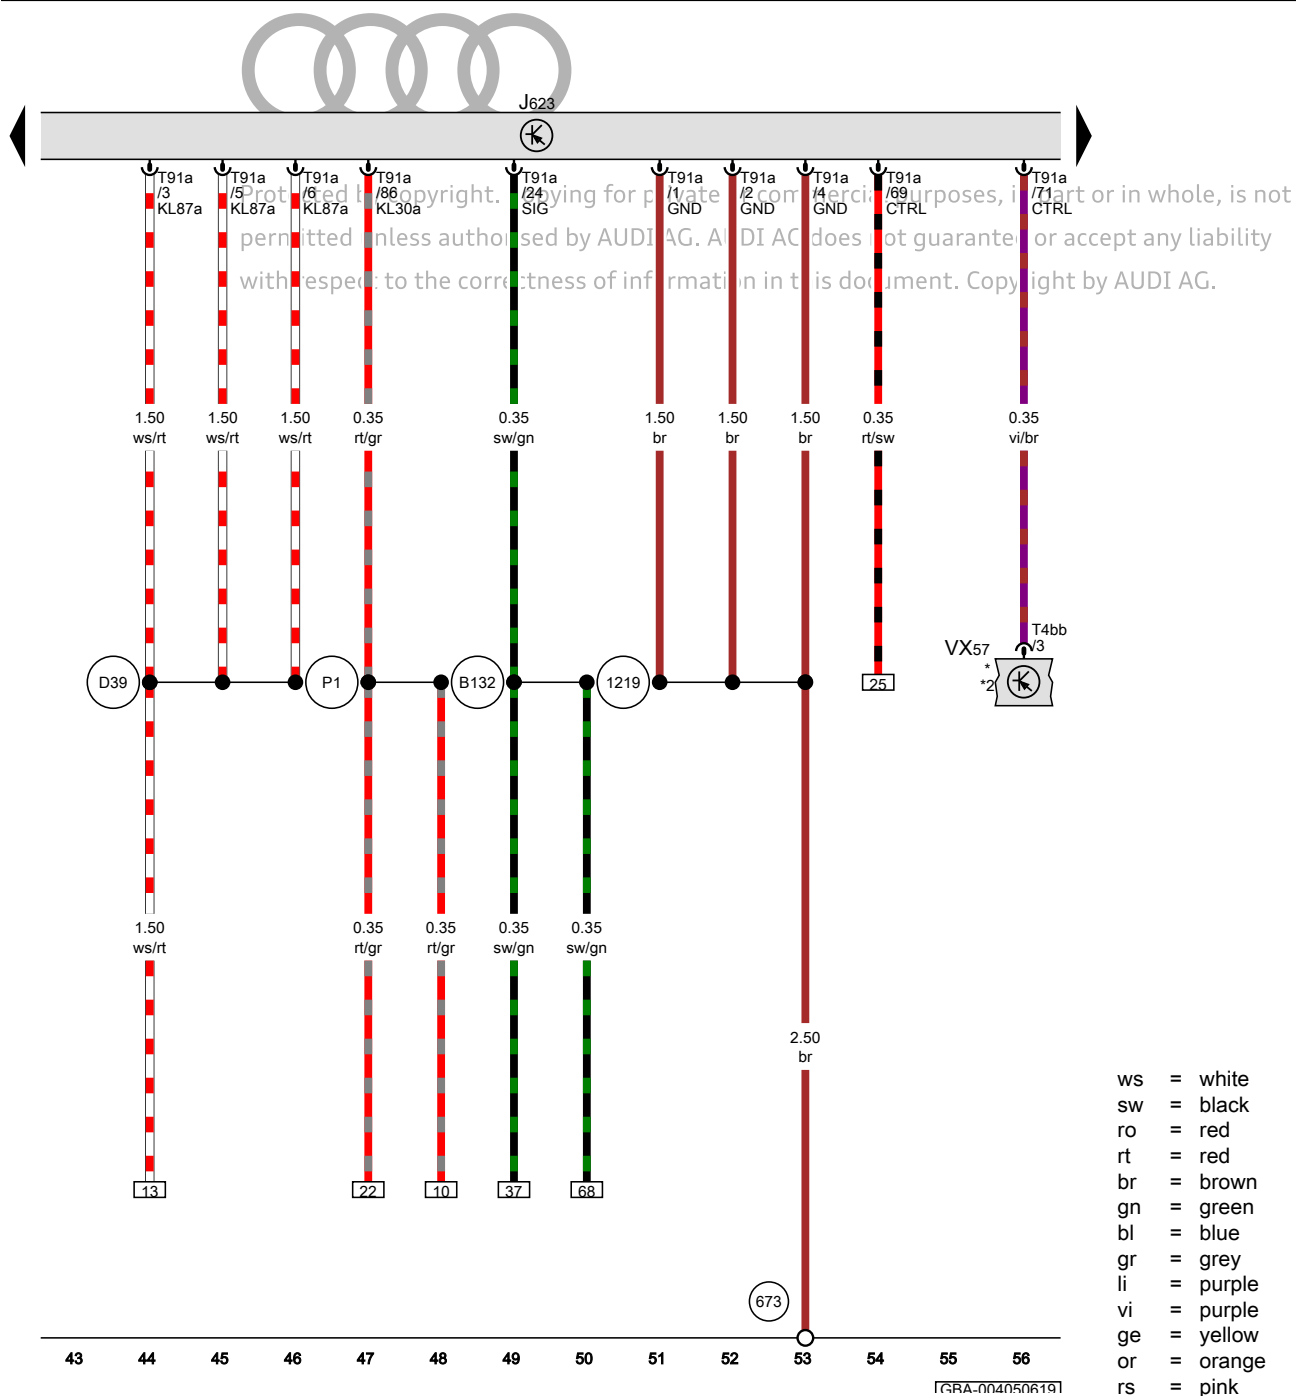


Engine/motor control unit, Radiator fan

J623 Engine/motor control unit
T4bb 4-pin connector, black
T91a 91-pin connector, black
VX57 Radiator fan

 - 673 Earth point 3, on front of left longitudinal member
- 1219 Earth connection 12, in engine compartment wiring harness
- B132 Connection (number plate lights), in interior wiring harness
- D39 Connection 1, in engine prewiring harness
- P1 Positive connection (30), in battery fuse holder
- * Pre-wired component
- *2 see applicable current flow diagram for radiator fan



16BA-0040506191

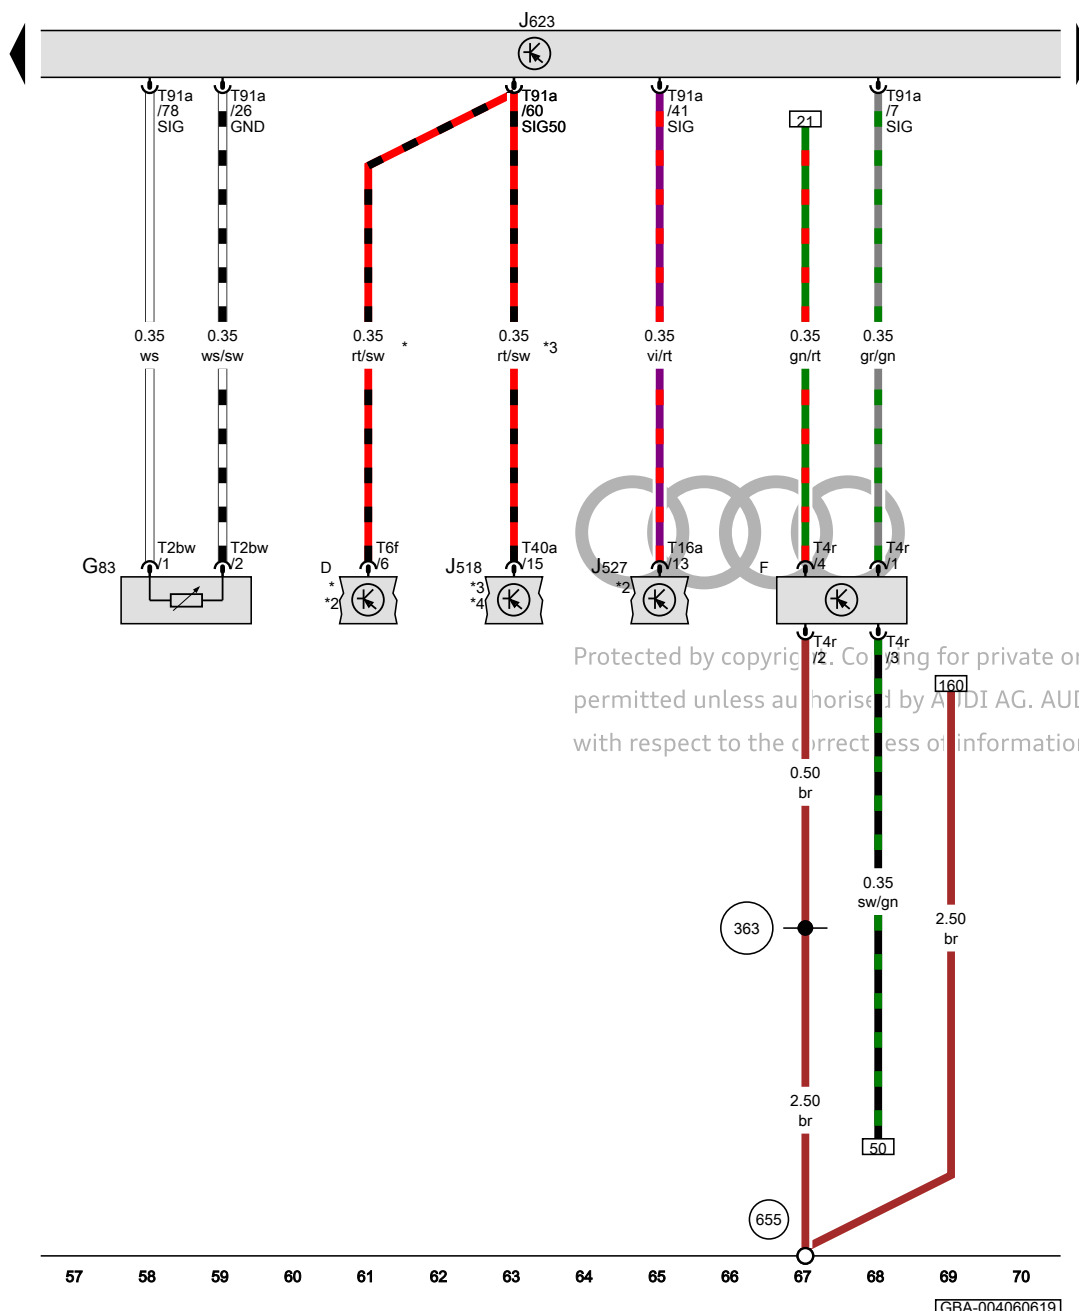

Ignition/starter switch, Brake light switch, Radiator outlet coolant temperature sender, Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit

- D Ignition/starter switch
- F Brake light switch
- G83 Radiator outlet coolant temperature sender
- J518 Entry and start authorisation control unit
- J527 Steering column electronics control unit
- J623 Engine/motor control unit
- T2bw 2-pin connector, black
- T4r 4-pin connector, black
- T6f 6-pin connector, black
- T16a 16-pin connector, black
- T40a 40-pin connector, black
- T91a 91-pin connector, black


363 Earth connection 8, in engine compartment wiring harness

655 Earth point, on left headlight

- * For models with no entry and start authorisation
- *2 see applicable current flow diagram for steering column electronics
- *3 For models with entry and start authorisation
- *4 For models with Internet access

Protected by copyright. Copying for private or commercial purposes, in particular for reproduction, is permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

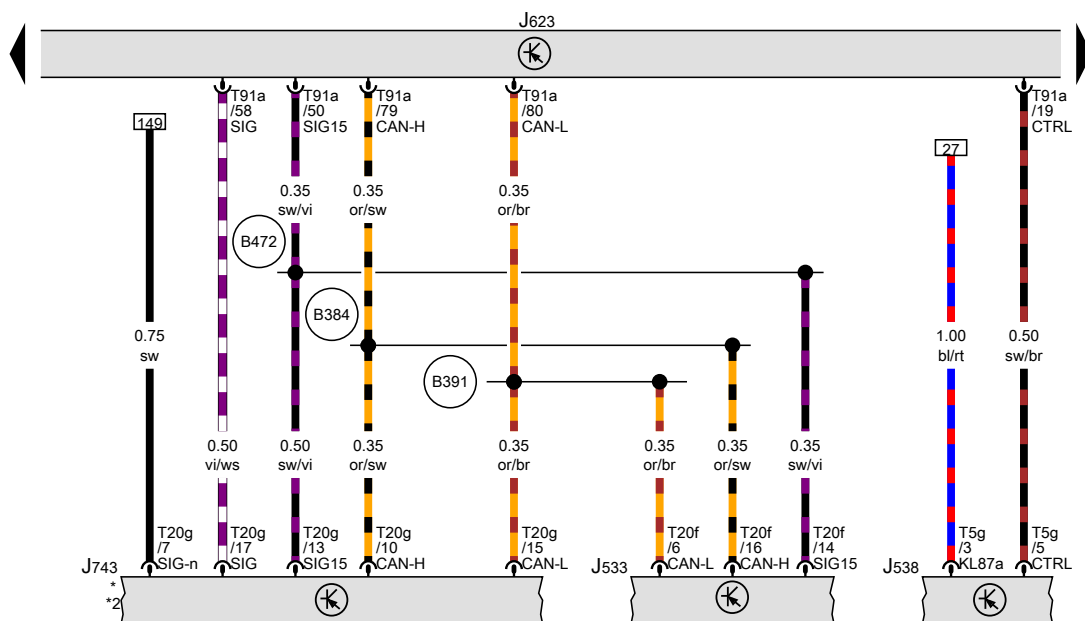


Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox

- J533 Data bus diagnostic interface
- J538 Fuel pump control unit
- J623 Engine/motor control unit
- J743 Mechatronic unit for dual clutch gearbox
- T5g 5-pin connector, black
- T20f 20-pin connector, red
- T20g 20-pin connector, black
- T91a 91-pin connector, black
- B384 Connection 2 (powertrain CAN bus, high), in main wiring harness
- B391 Connection 2 (powertrain CAN bus, low), in main wiring harness
- B472 Connection 8, in main wiring harness
- * For models with dual clutch gearbox 0D9
- *2 see applicable current flow diagram for dual clutch gearbox



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

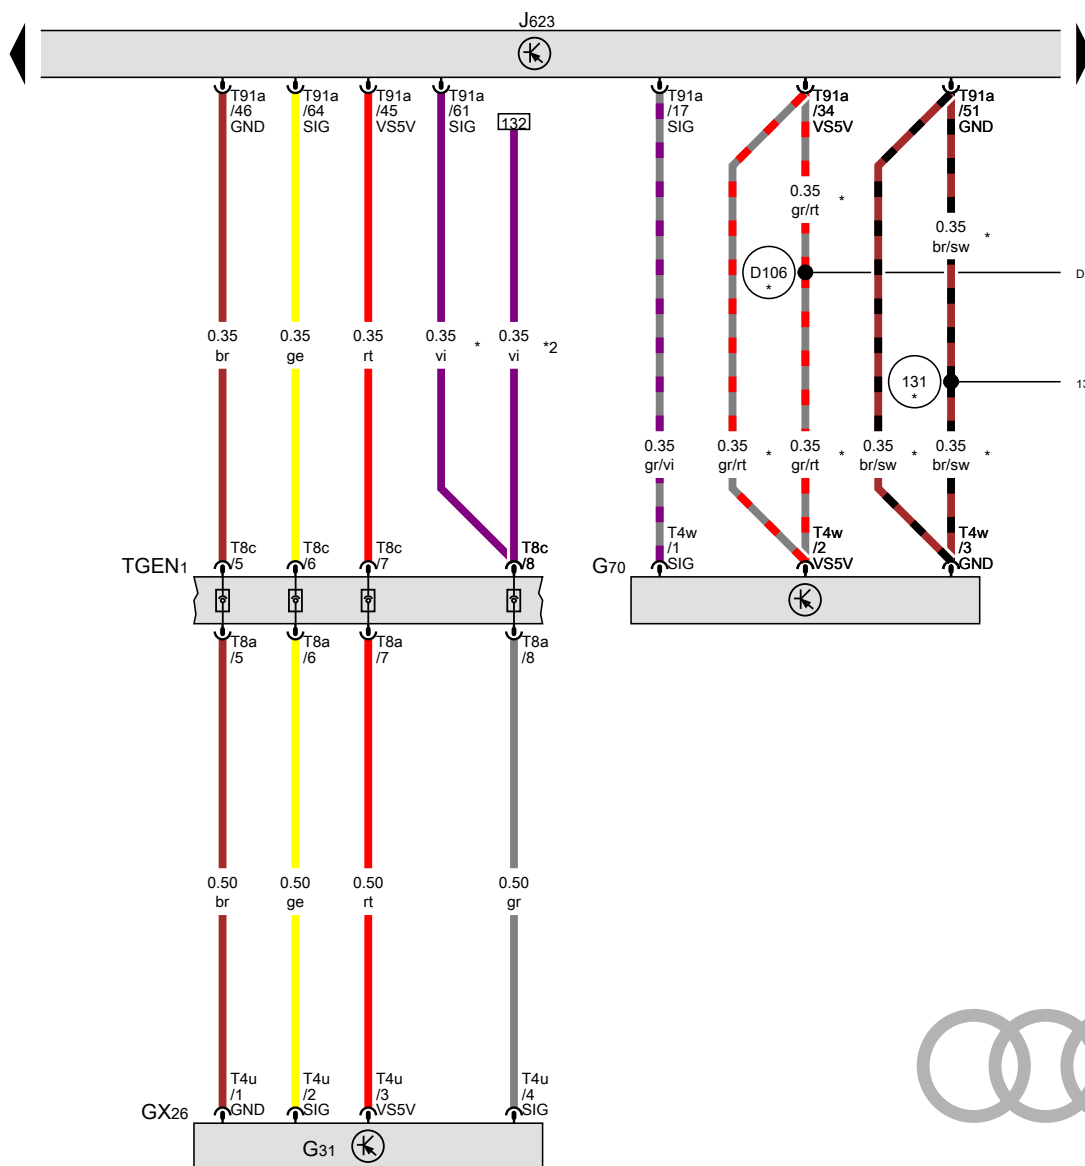

Charge pressure sender, Air mass meter, Engine/motor control unit

- GX26 Charge pressure sender
- G31 Charge pressure sender
- G70 Air mass meter
- J623 Engine/motor control unit
- T4u 4-pin connector, black
- T4w 4-pin connector, black
- T8a 8-pin connector, black
- T8c 8-pin connector, black
- T91a 91-pin connector, black
- TGEN1 Coupling point 1 for alternator

131 Earth connection 2, in engine compartment wiring harness

D106 Connection 4 in engine compartment wiring harness


* For emission standard Euro 6 BG/H/I

*2 For models with Euro 6 plus emission standard

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

16BA-004080R0101

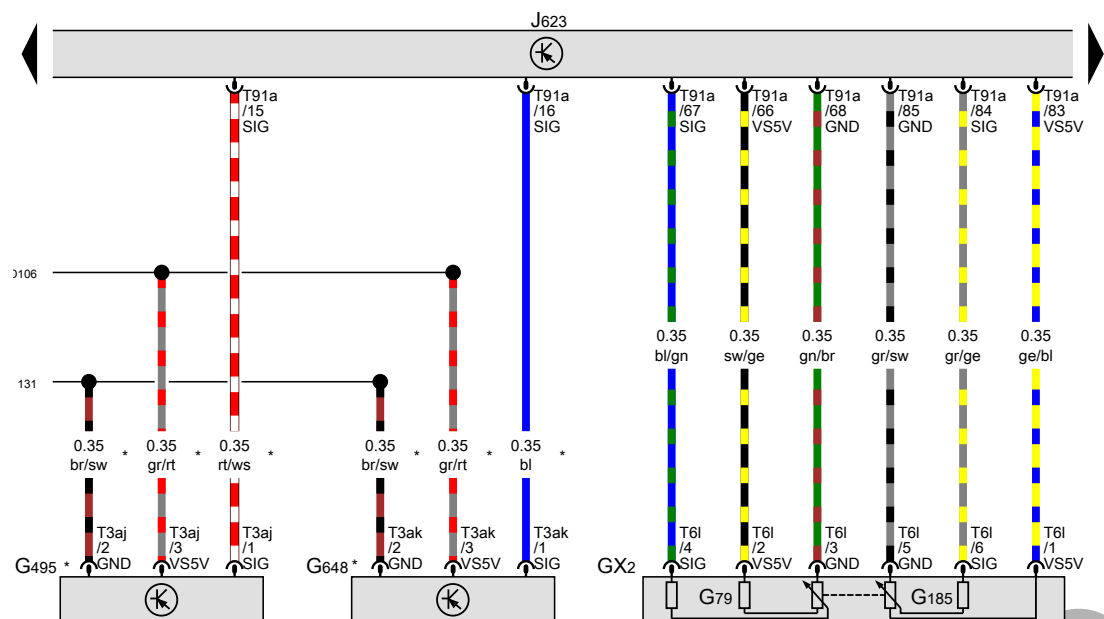

Accelerator pedal module, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit

- GX2 Accelerator pedal module
- G79 Accelerator position sender
- G185 Accelerator position sender 2
- G495 Exhaust gas temperature sender 3
- G648 Exhaust gas temperature sender 4
- J623 Engine/motor control unit
- T3aj 3-pin connector, black
- T3ak 3-pin connector, black
- T6l 6-pin connector, black
- T91a 91-pin connector, black

131 Earth connection 2, in engine compartment wiring harness


D106 Connection 4 in engine compartment wiring harness

* For emission standard Euro 6 BG/H/I


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Lambda probe 1 before catalytic converter, Engine/motor control unit

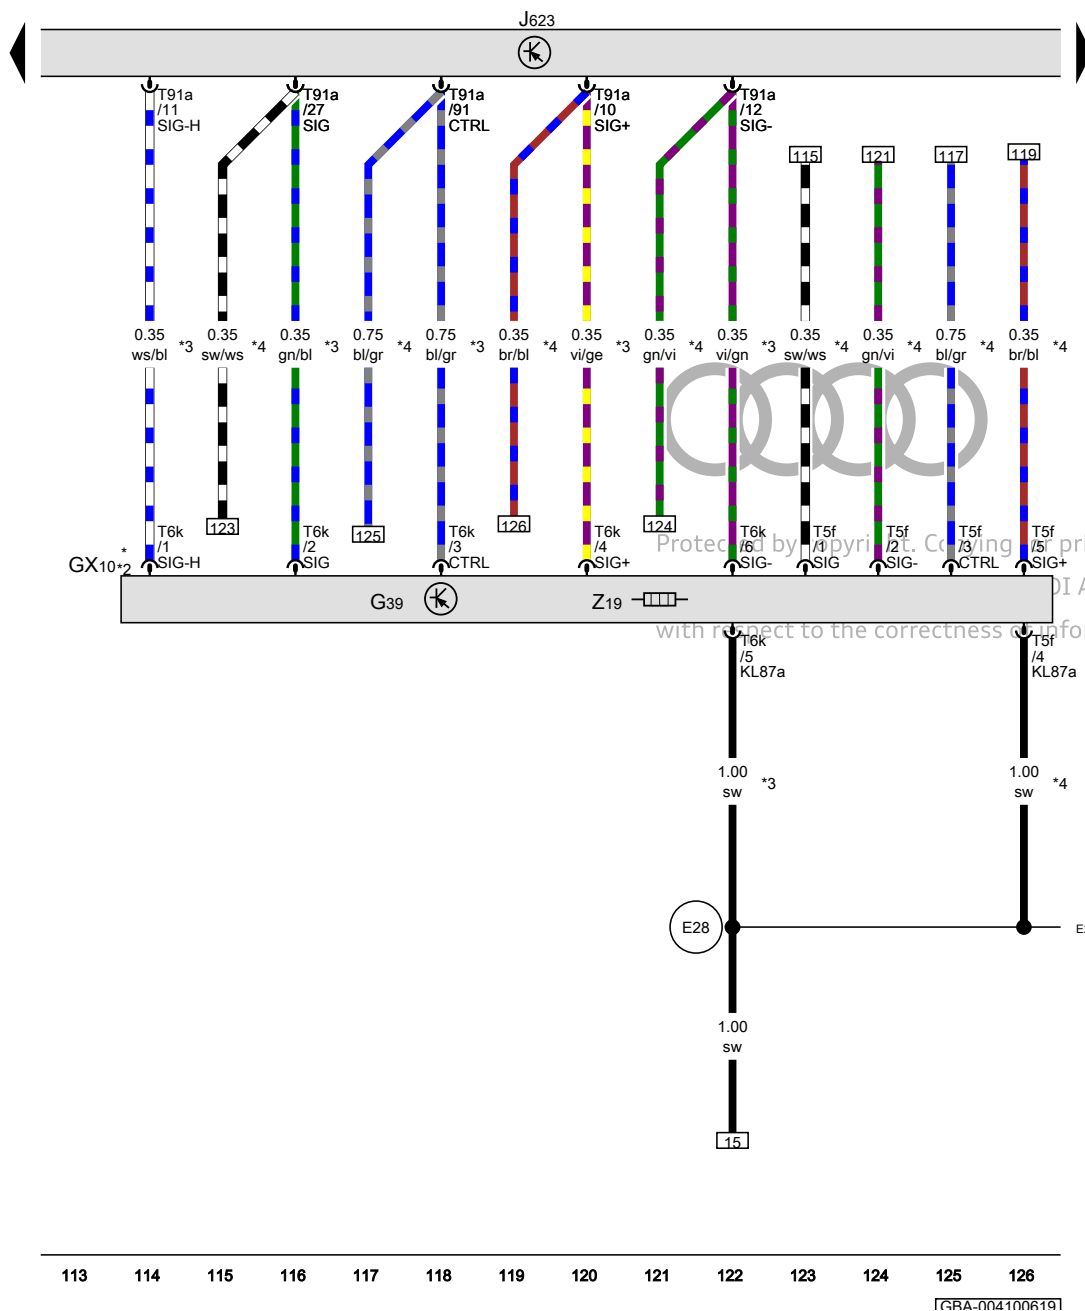

- GX10 Lambda probe 1 before catalytic converter
- G39 Lambda probe
- J623 Engine/motor control unit
- T5f 5-pin connector, grey
- T6k 6-pin connector, black
- T91a 91-pin connector, black
- Z19 Lambda probe heater
- E28 Connection (Lambda probe heating), in Motronic wiring harness
- * According to equipment
- *2 Pre-wired component
- *3 For emission standard Euro 6 BG/H/I
- *4 For models with Euro 6 plus emission standard

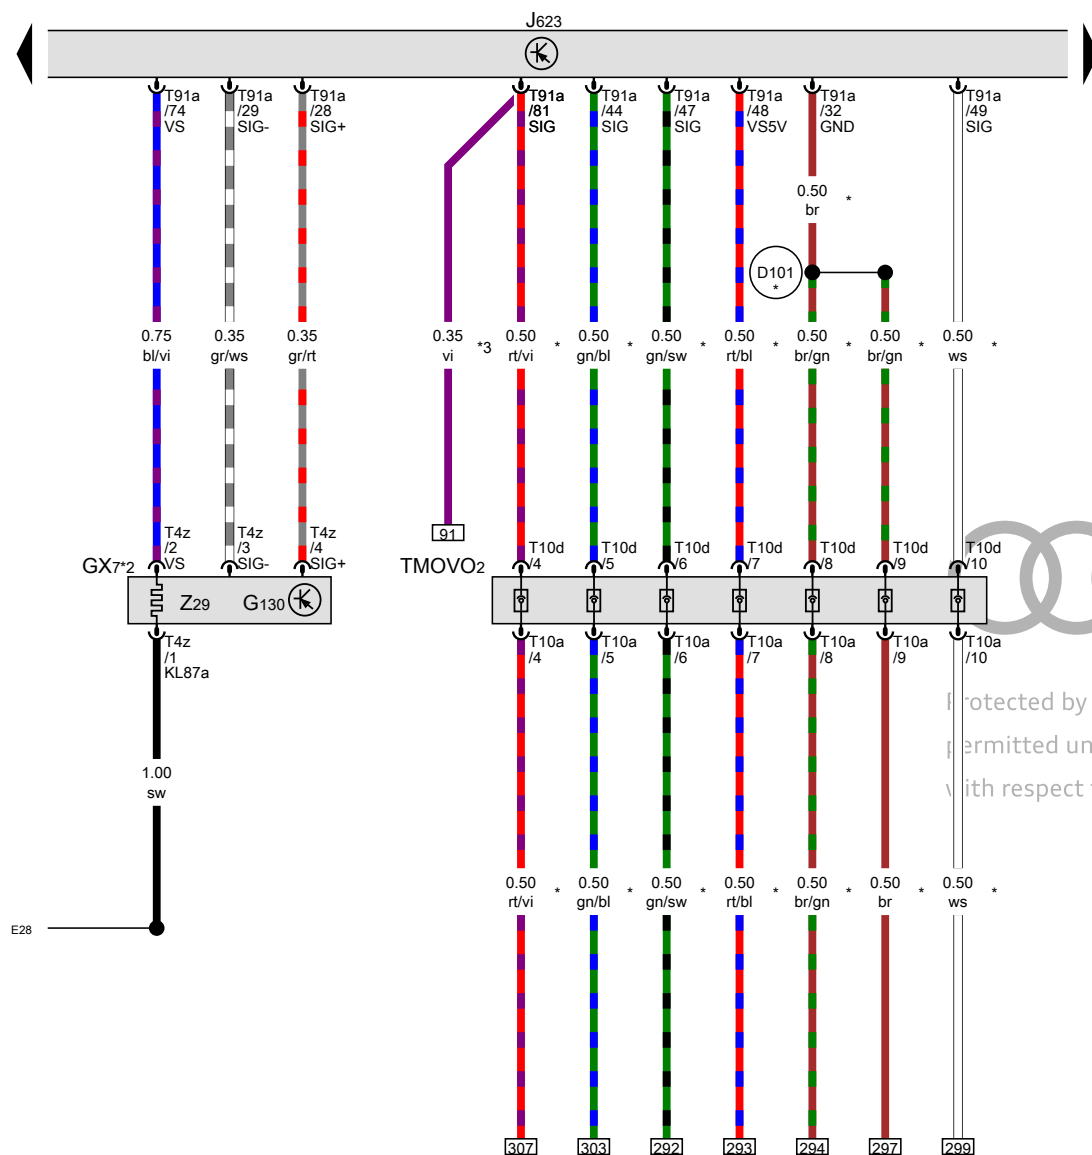

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

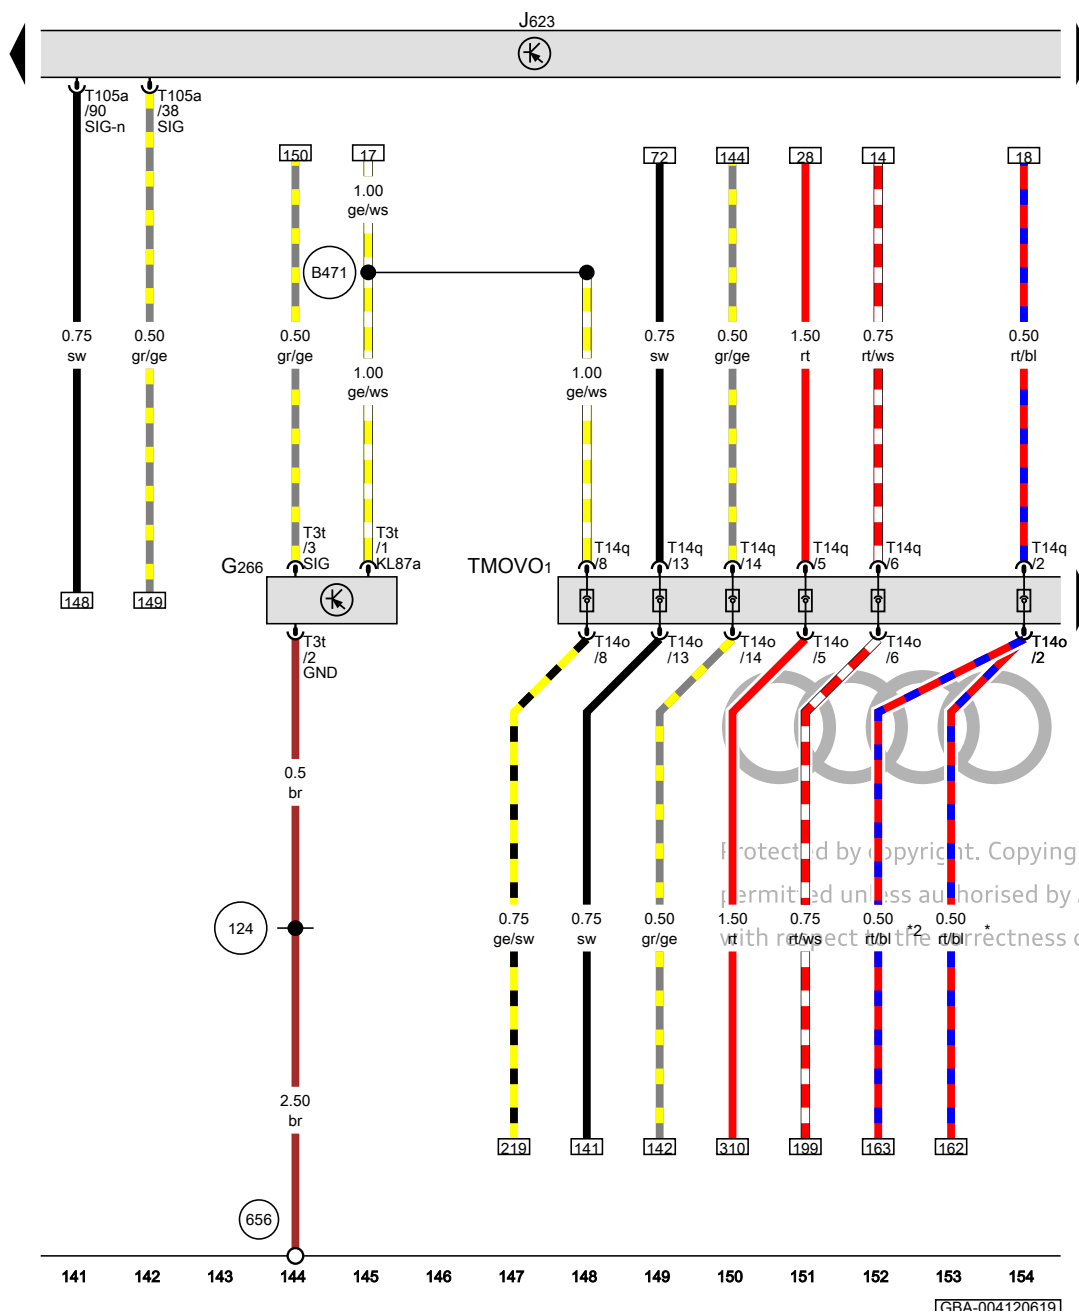

Oil level and oil temperature sender, Engine/motor control unit

- G266 Oil level and oil temperature sender
- J623 Engine/motor control unit
- T3t 3-pin connector, black
- T14o 14-pin connector, grey
- T14q 14-pin connector, grey
- T105a 105-pin connector, black

TMOVO1 Coupling point 1 for engine prewiring harness

124 Earth connection, in right side engine compartment wiring harness


656 Earth point, on right headlight

B471 Connection 7, in main wiring harness

* For emission standard Euro 6 BG/H/I

*2 For models with Euro 6 plus emission standard

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

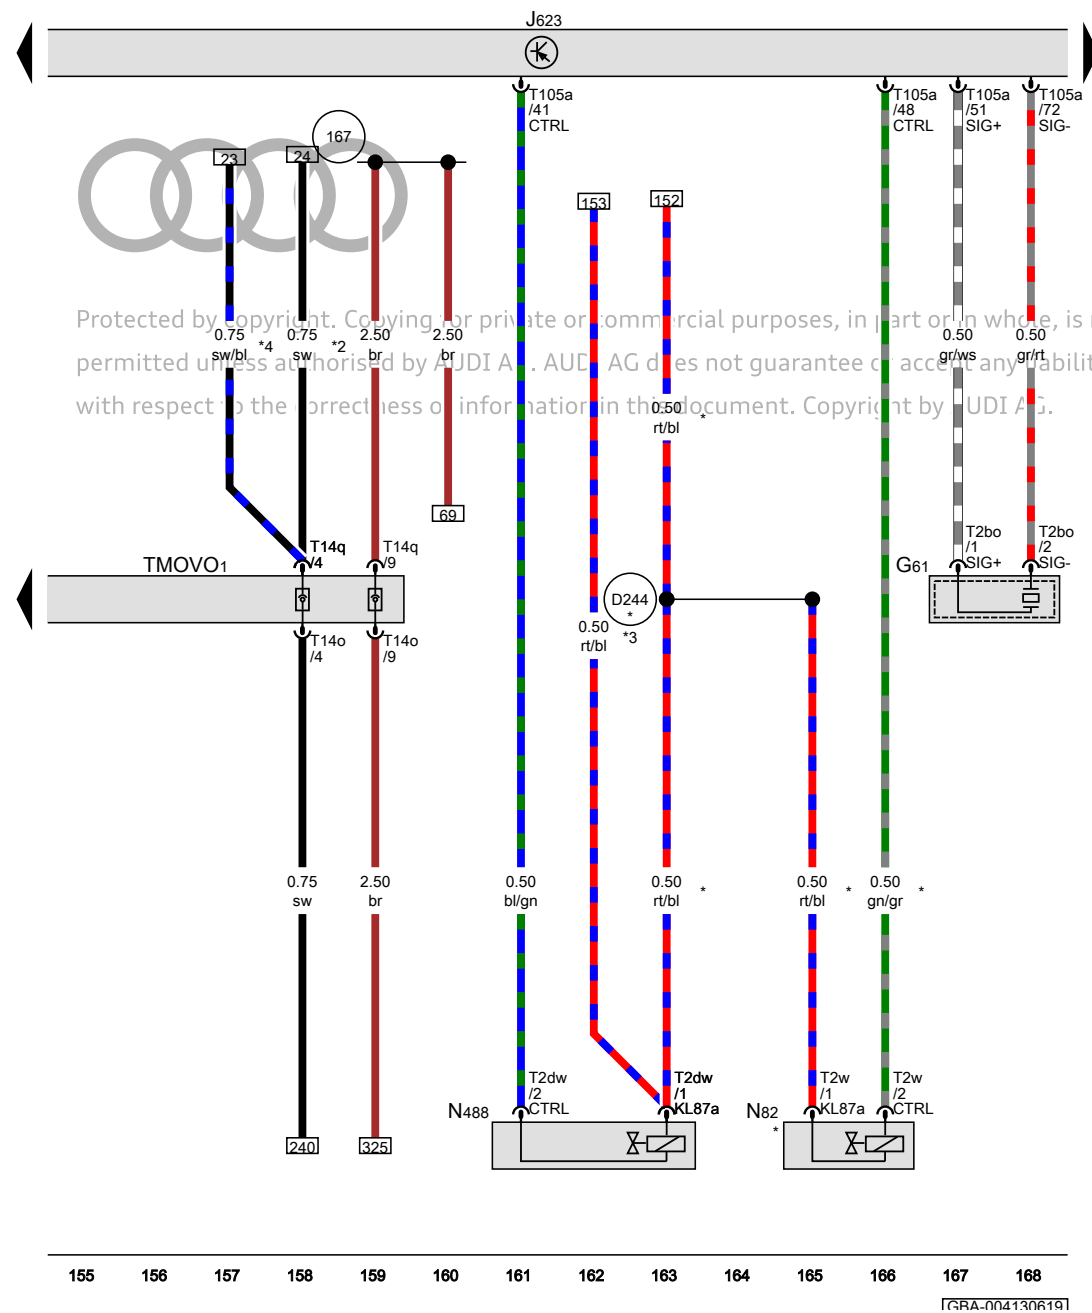

Knock sensor 1, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox


- G61 Knock sensor 1
- J623 Engine/motor control unit
- N82 Coolant shut-off valve
- N488 Coolant valve for gearbox
- T2bo 2-pin connector, black
- T2dw 2-pin connector, black
- T2w 2-pin connector, black
- T14o 14-pin connector, grey
- T14q 14-pin connector, grey
- T105a 105-pin connector, black
- TMOVO1 Coupling point 1 for engine prewiring harness

167 Earth connection 4, in engine compartment wiring harness

D244 Connection 5 (87a) in engine prewiring harness

- * For models with Euro 6 plus emission standard
- *2 Up to July 2019
- *3 For emission standard Euro 6 BG/H/I
- *4 From July 2019

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

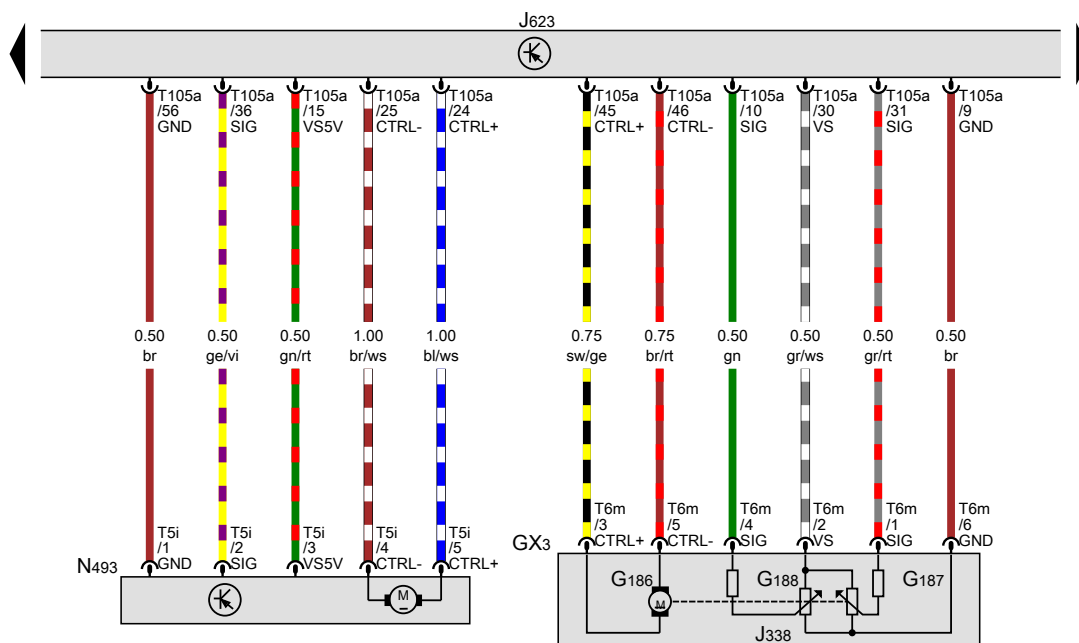


Throttle valve module, Engine/motor control unit, Actuator for engine temperature regulation

- GX3 Throttle valve module
- G186 Throttle valve drive for electric throttle
- G187 Throttle valve drive angle sender 1 for electric throttle
- G188 Throttle valve drive angle sender 2 for electric throttle
- J338 Throttle valve module
- J623 Engine/motor control unit
- N493 Actuator for engine temperature regulation
- T5i 5-pin connector, black
- T6m 6-pin connector, black
- T105a 105-pin connector, black



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

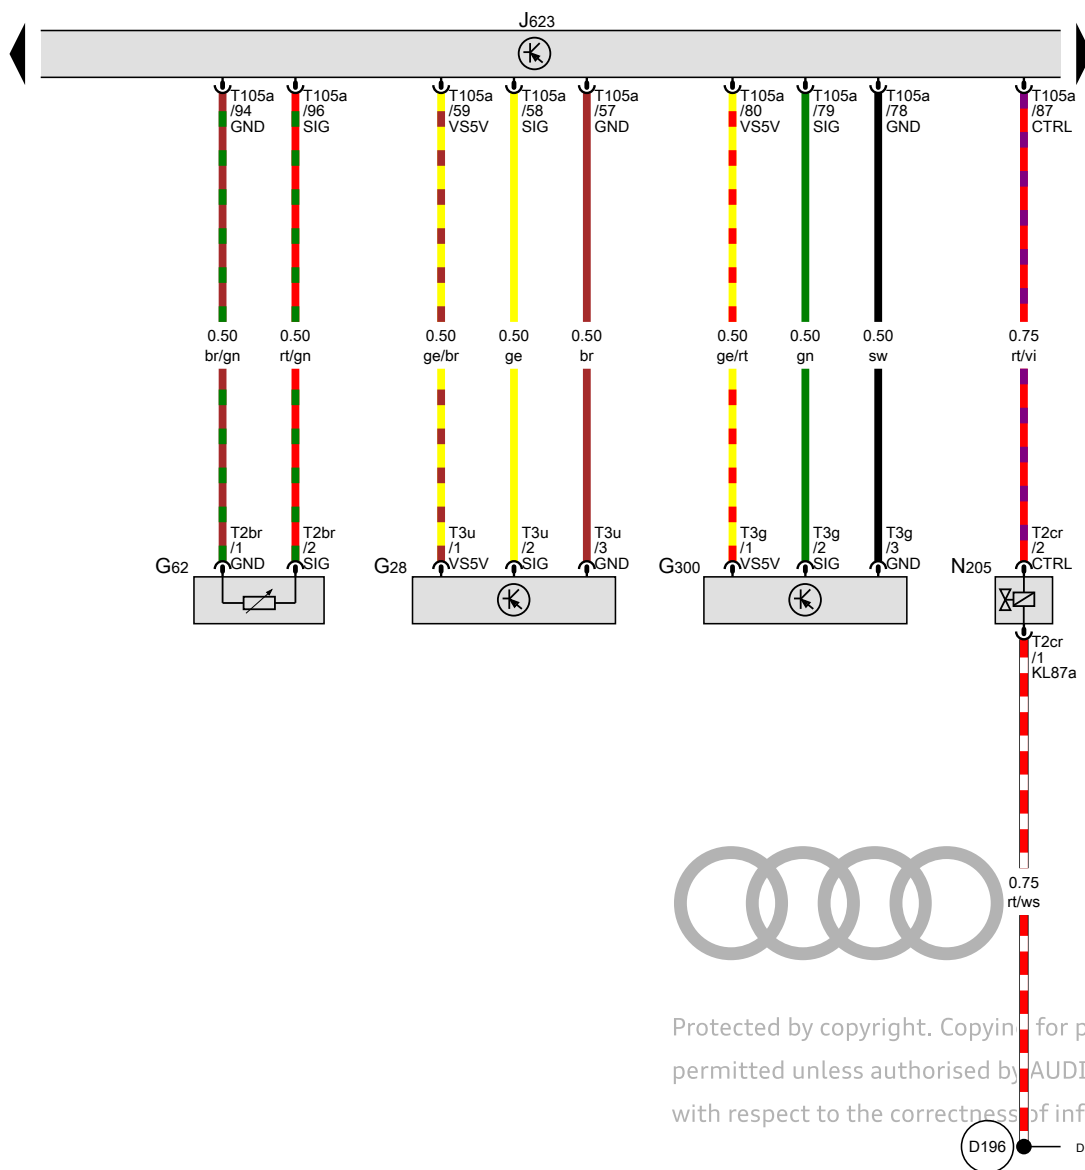


Engine speed sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit, Camshaft control valve 1

- G28 Engine speed sender
- G62 Coolant temperature sender
- G300 Hall sender 3
- J623 Engine/motor control unit
- N205 Camshaft control valve 1
- T2br 2-pin connector, black
- T2cr 2-pin connector, black
- T3g 3-pin connector, black
- T3u 3-pin connector, black
- T105a 105-pin connector, black

D196 Connection 2 (87a) in engine prewiring harness



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

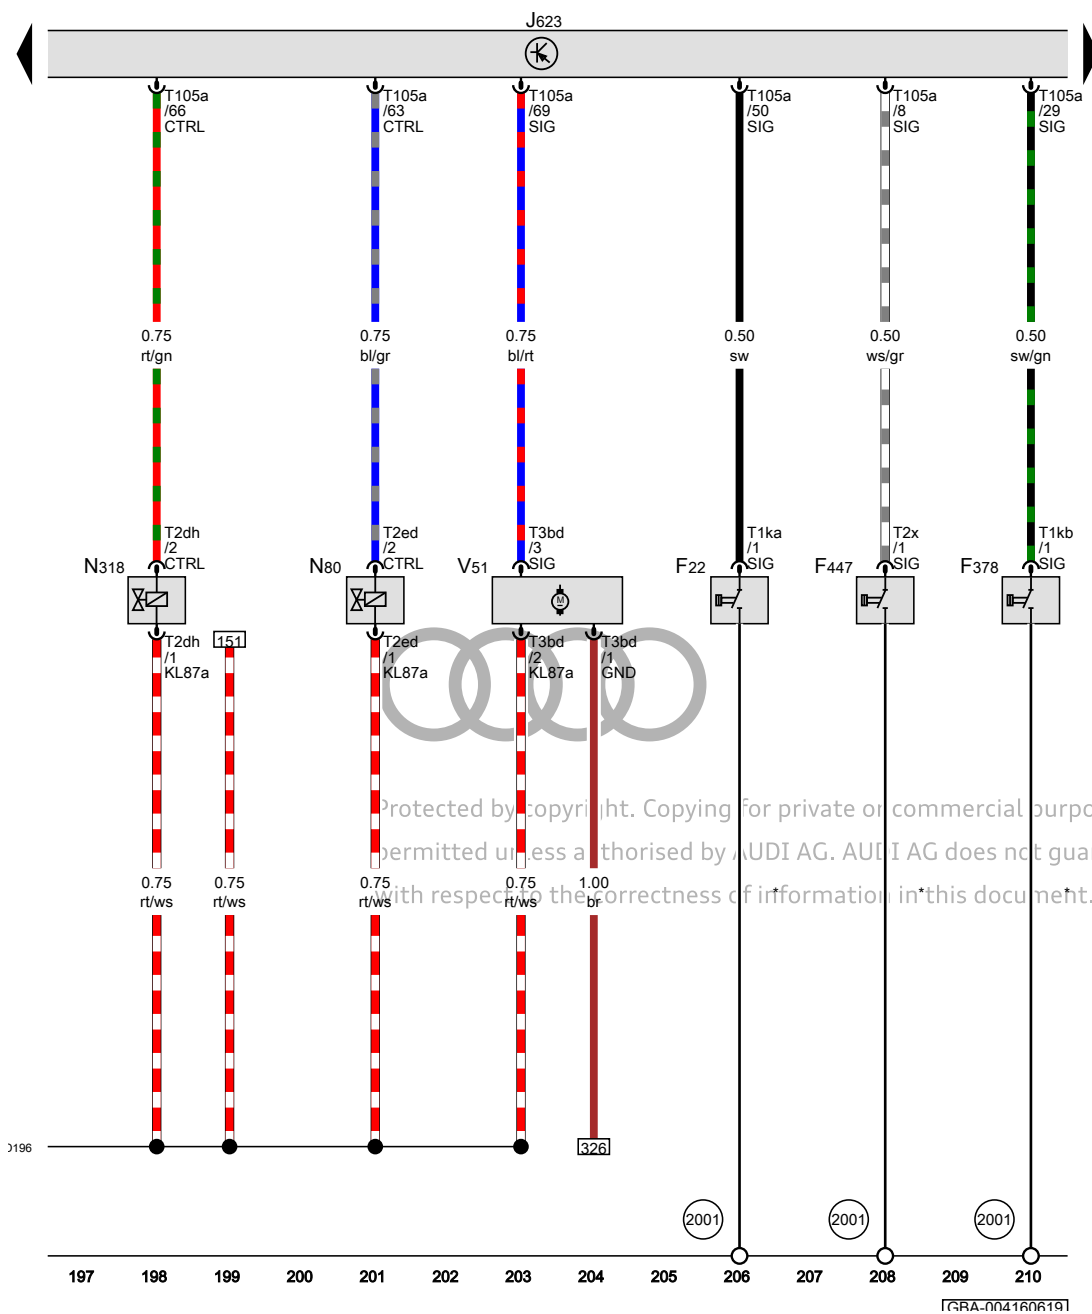


Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump

- F22 Oil pressure switch
- F378 Oil pressure switch for reduced oil pressure
- F447 Stage 3 oil pressure switch
- J623 Engine/motor control unit
- N80 Activated charcoal filter solenoid valve 1
- N318 Exhaust camshaft control valve 1
- T1ka 1-pin connector, dark blue
- T1kb 1-pin connector, black
- T2dh 2-pin connector, black
- T2ed 2-pin connector, black
- T2x 2-pin connector, black
- T3bd 3-pin connector, black
- T105a 105-pin connector, black
- V51 Continued coolant circulation pump

2001 Housing earth

D196 Connection 2 (87a) in engine prewiring harness


* Earth supply via housing

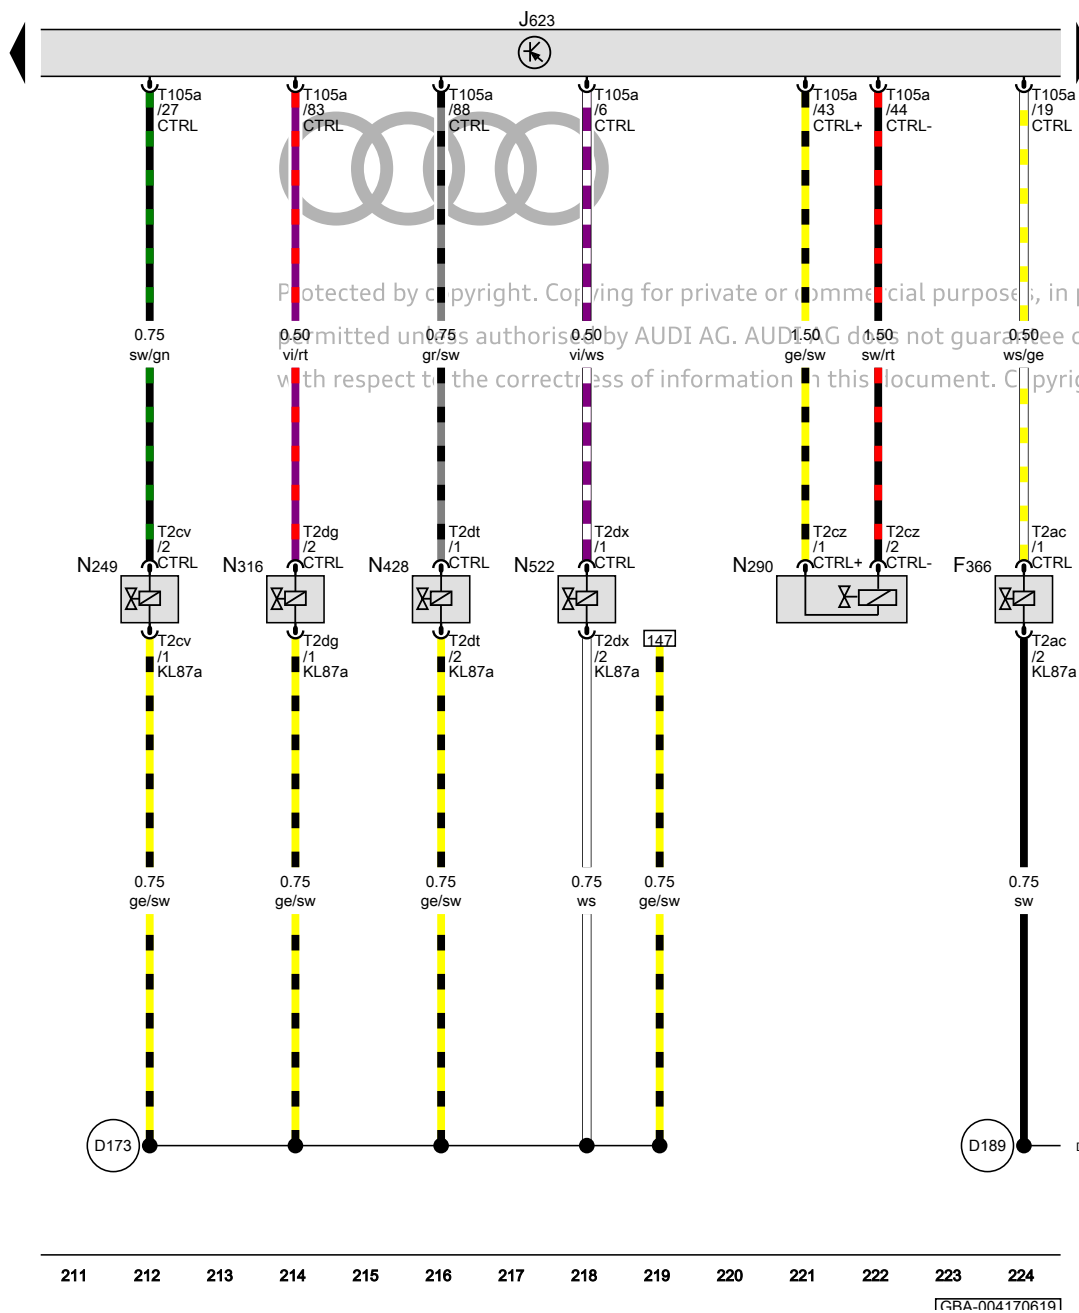

Cam adjustment actuator 1, Engine/motor control unit, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve

- F366 Cam adjustment actuator 1
- J623 Engine/motor control unit
- N249 Turbocharger air recirculation valve
- N290 Fuel metering valve
- N316 Intake manifold flap valve
- N428 Valve for oil pressure control
- N522 Piston cooling jet control valve
- T2ac 2-pin connector, black
- T2cv 2-pin connector, black
- T2cz 2-pin connector, black
- T2dg 2-pin connector, black
- T2dt 2-pin connector, black
- T2dx 2-pin connector, black
- T105a 105-pin connector, black
- D173 Connection (87), in engine prewiring harness
- D189 Connection (87a) in engine prewiring harness


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

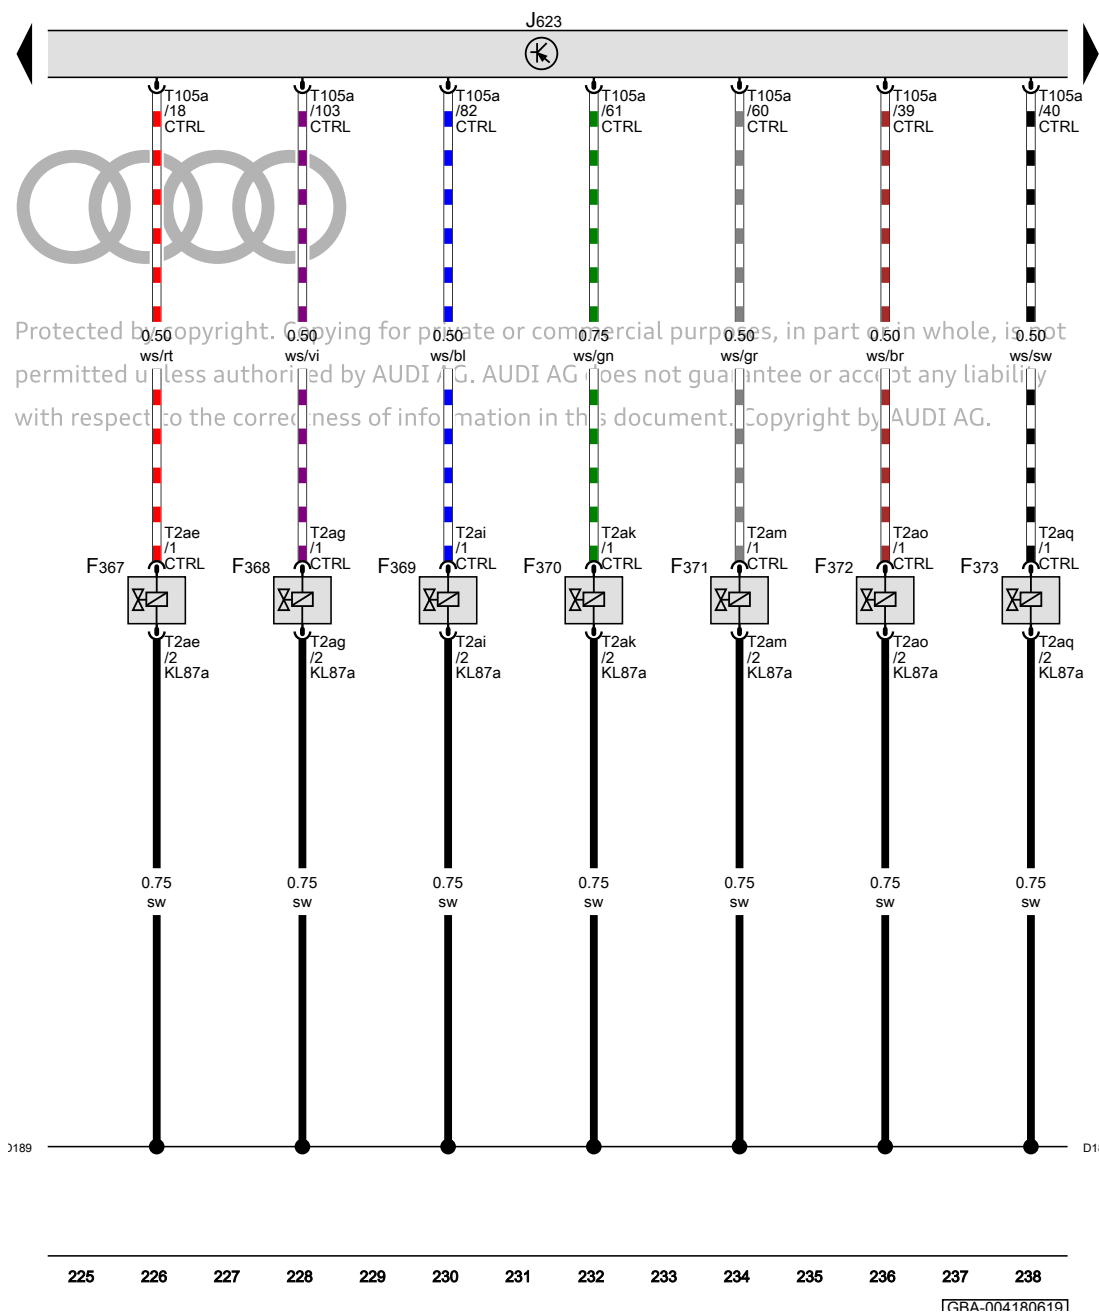

Cam adjustment actuator 2, Cam adjustment actuator 3,
Cam adjustment actuator 4, Cam adjustment actuator 5,
Cam adjustment actuator 6, Cam adjustment actuator 7,
Cam adjustment actuator 8, Engine/motor control unit

- F367 Cam adjustment actuator 2
- F368 Cam adjustment actuator 3
- F369 Cam adjustment actuator 4
- F370 Cam adjustment actuator 5
- F371 Cam adjustment actuator 6
- F372 Cam adjustment actuator 7
- F373 Cam adjustment actuator 8
- J623 Engine/motor control unit
- T2ae 2-pin connector, black
- T2ag 2-pin connector, black
- T2ai 2-pin connector, black
- T2ak 2-pin connector, black
- T2am 2-pin connector, black
- T2ao 2-pin connector, black
- T2aq 2-pin connector, black
- T105a 105-pin connector, black

D189 Connection (87a) in engine prewiring harness

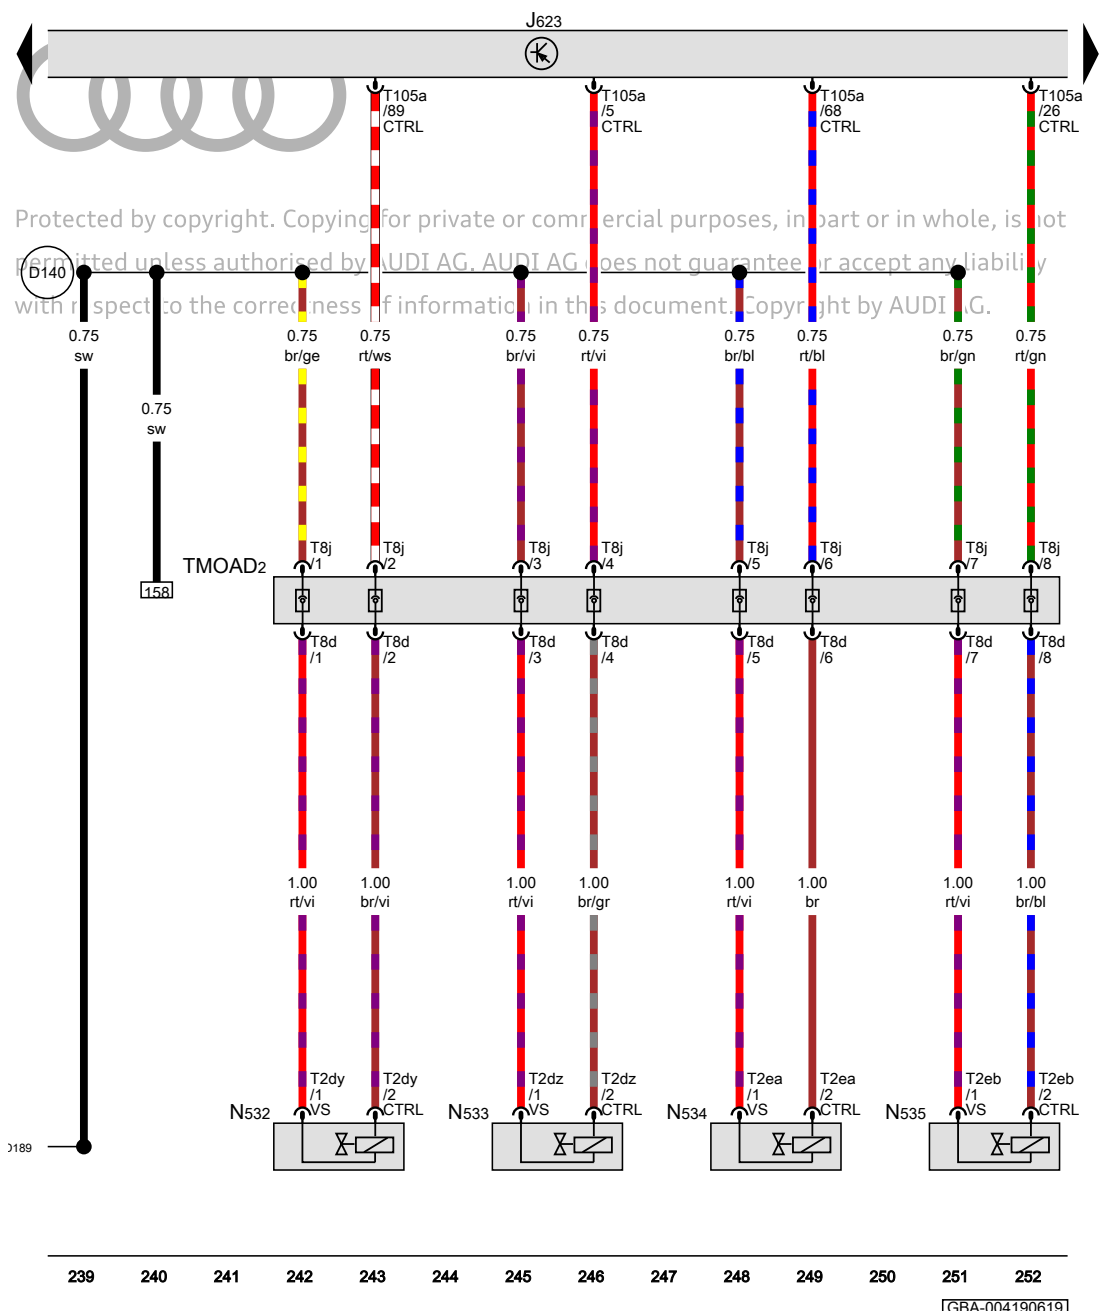

Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4


- J623 Engine/motor control unit
- N532 Injector 2, cylinder 1
- N533 Injector 2, cylinder 2
- N534 Injector 2, cylinder 3
- N535 Injector 2, cylinder 4
- T2dy 2-pin connector, black
- T2dz 2-pin connector, black
- T2ea 2-pin connector, black
- T2eb 2-pin connector, black
- T8d 8-pin connector, black
- T8j 8-pin connector, black
- T105a 105-pin connector, black
- TMOAD2 Coupling point 2 for engine prewiring harness, adapter wire

D140 Connection (injectors), in engine prewiring harness


D189 Connection (87a) in engine prewiring harness

Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4

- J623 Engine/motor control unit
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- T2dc 2-pin connector, black
- T2df 2-pin connector, black
- T2dl 2-pin connector, black
- T2dn 2-pin connector, black
- T8g 8-pin connector, black
- T8i 8-pin connector, black
- T105a 105-pin connector, black
- TMOAD1 Coupling point 1 for engine prewiring harness, adapter wire

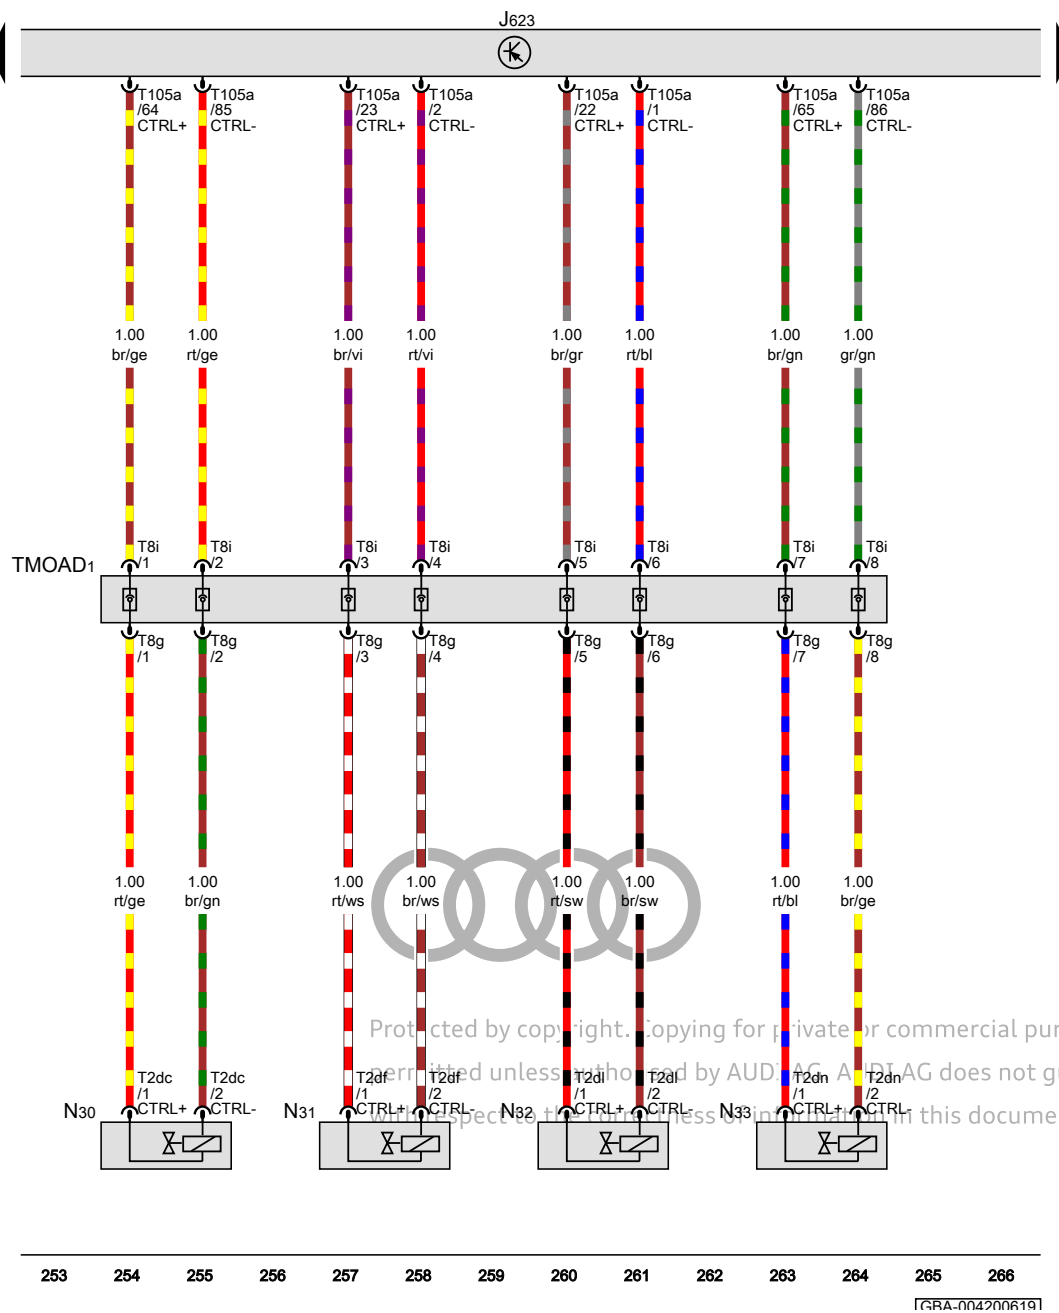

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

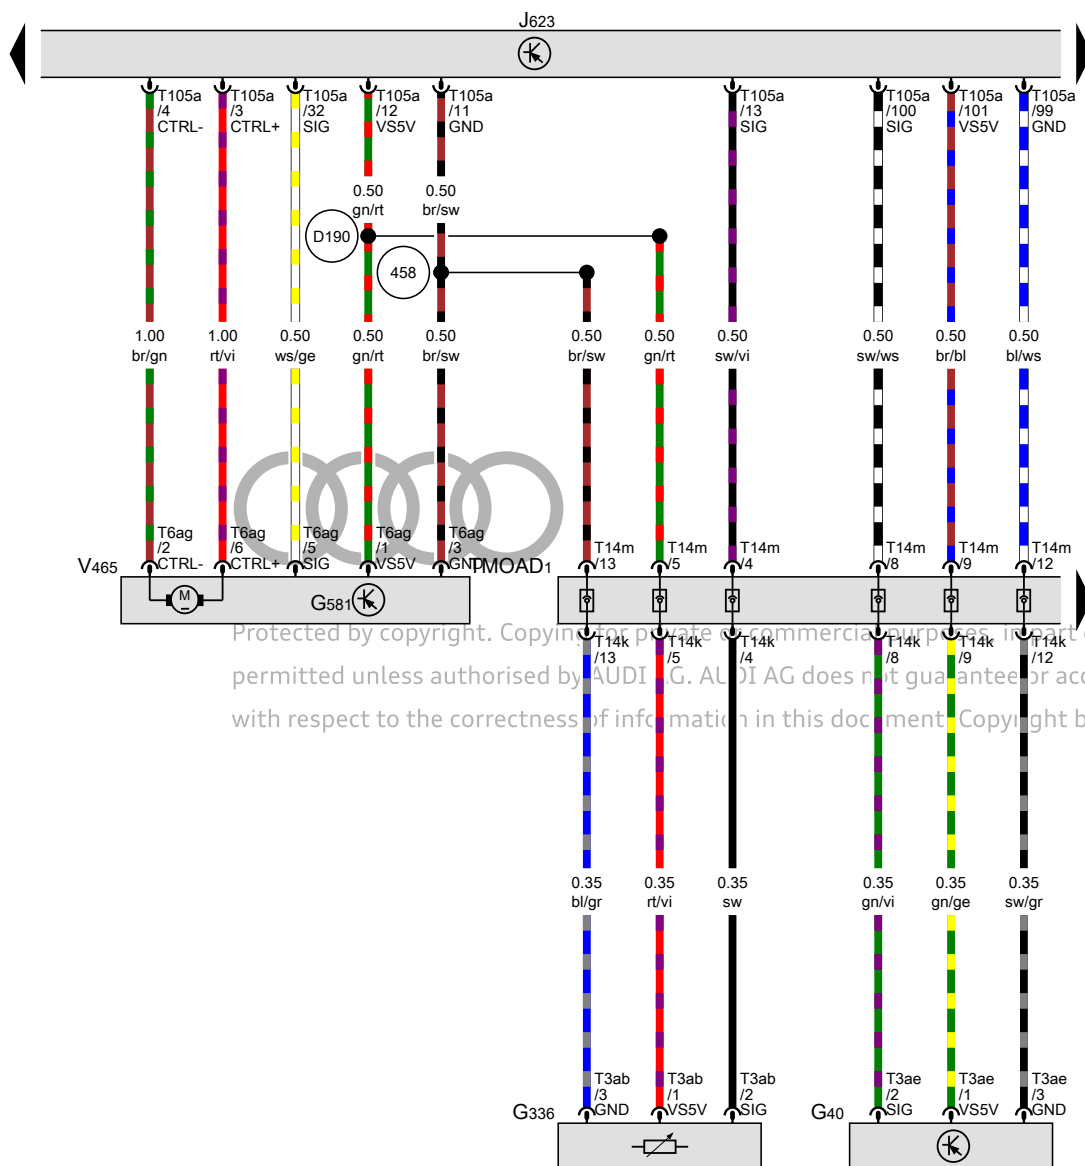

Hall sender, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner


- G40 Hall sender
- G336 Intake manifold flap potentiometer
- G581 Position sender for charge pressure positioner
- J623 Engine/motor control unit
- T3ab 3-pin connector, black
- T3ae 3-pin connector, black
- T6ag 6-pin connector, black
- T14k 14-pin connector, black
- T14m 14-pin connector, black
- T105a 105-pin connector, black
- TMOAD1 Coupling point 1 for engine prewiring harness, adapter wire
- V465 Charge pressure positioner

458 Earth point 3, engine prewiring harness

D190 Connection 3 (5V) in engine prewiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

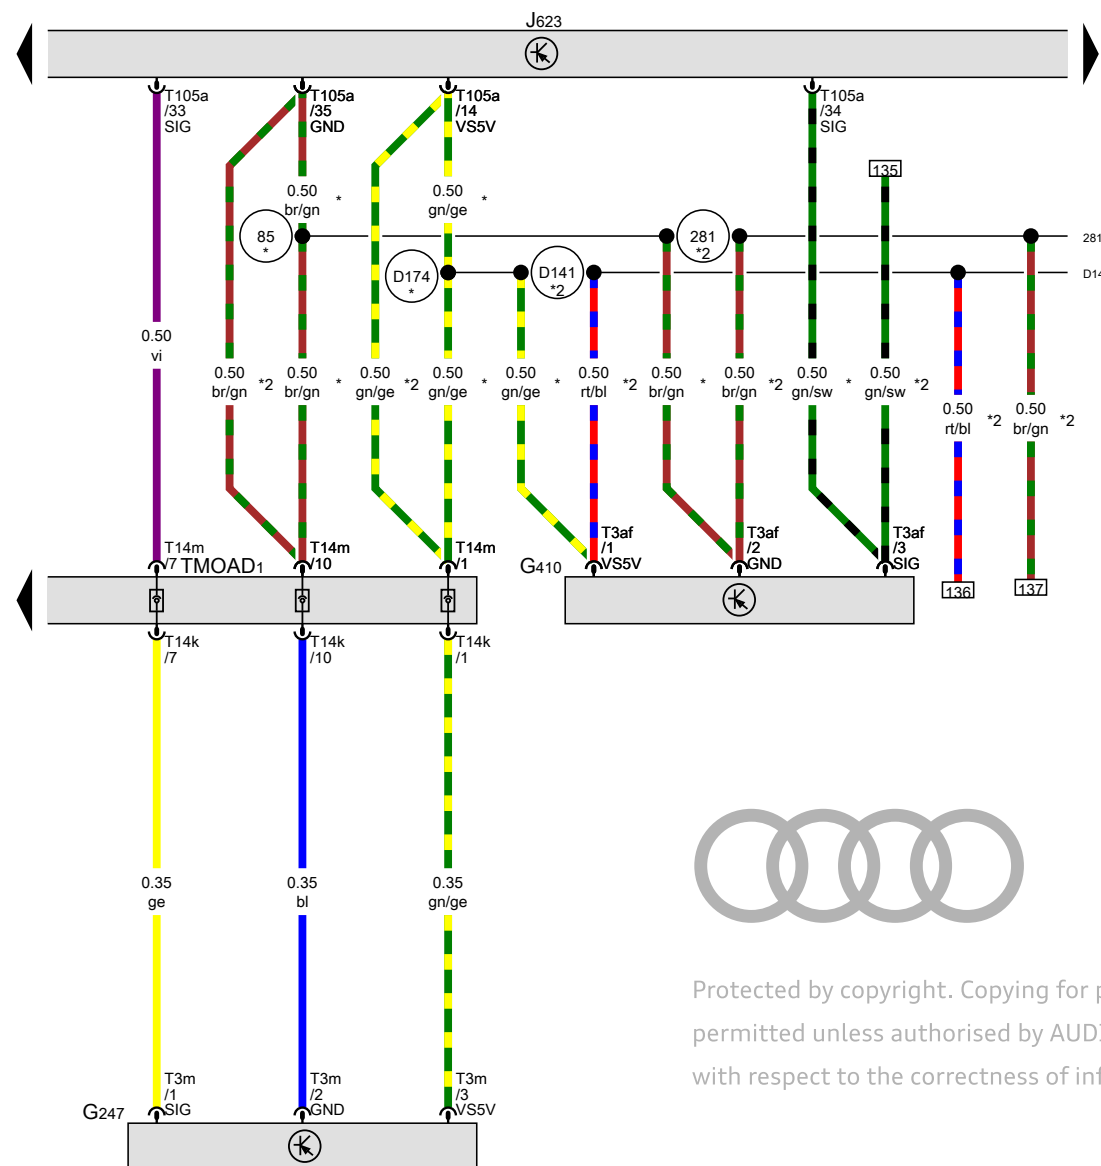

Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit


- G247 Fuel pressure sender
- G410 Fuel pressure sender for low pressure
- J623 Engine/motor control unit
- T3af 3-pin connector, black
- T3m 3-pin connector, black
- T14k 14-pin connector, black
- T14m 14-pin connector, black
- T105a 105-pin connector, black
- TMOAD1 Coupling point 1 for engine prewiring harness, adapter wire

- 85 Earth connection 1, in engine compartment wiring harness
- 281 Earth point 1, engine prewiring harness
- D141 Connection (5V) in engine prewiring harness
- D174 Connection 2 (5V) in engine prewiring harness
- * For models with Euro 6 plus emission standard
- *2 For emission standard Euro 6 BG/H/I



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

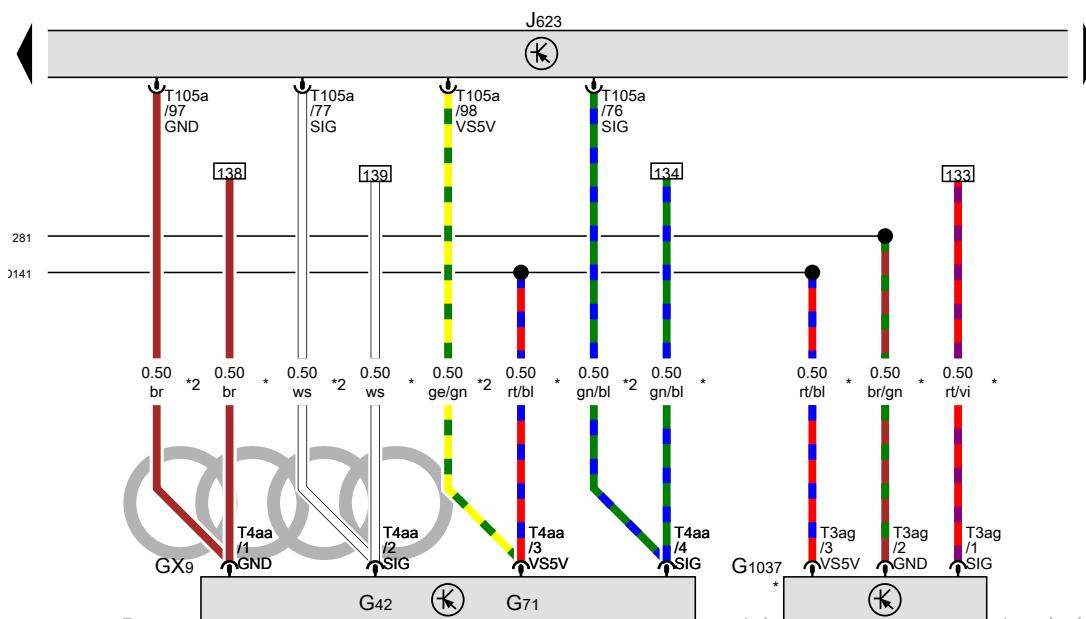

Intake manifold sender, Pressure differential sender for particulate filter, Engine/motor control unit

- GX9 Intake manifold sender
- G42 Intake air temperature sender
- G71 Intake manifold pressure sender
- G1037 Pressure differential sender for particulate filter
- J623 Engine/motor control unit
- T3ag 3-pin connector, black
- T4aa 4-pin connector, black
- T105a 105-pin connector, black

281 Earth point 1, engine prewiring harness

D141 Connection (5V) in engine prewiring harness

* For emission standard Euro 6 BG/H/I


*2 For models with Euro 6 plus emission standard

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

295 296 297 298 299 300 301 302 303 304 305 306 307 308


16BA-0042306191

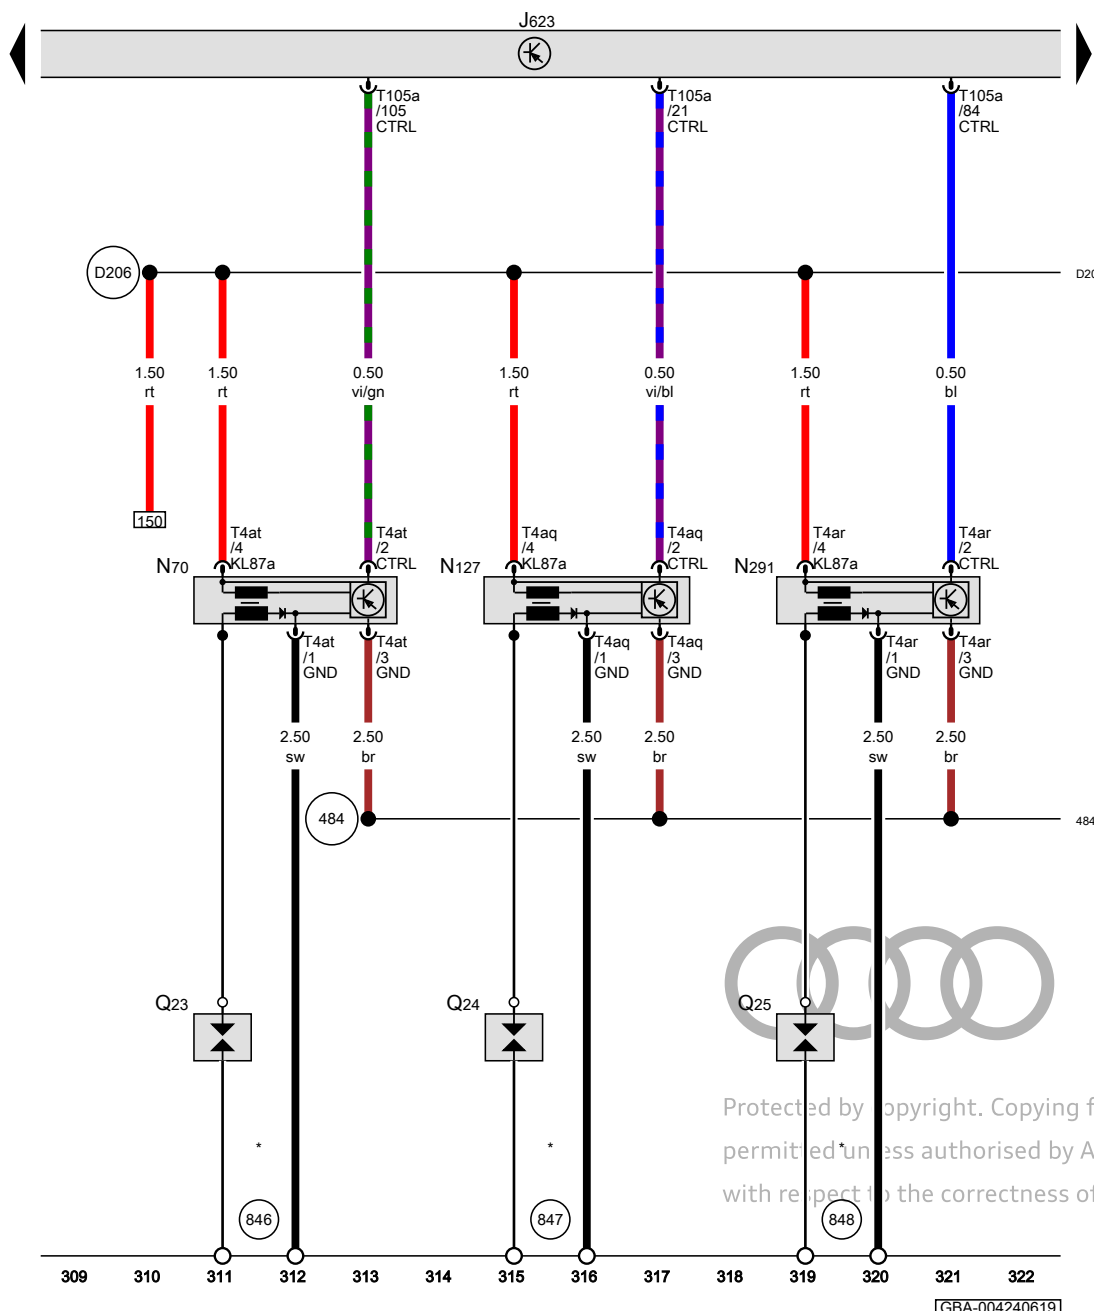

Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3

- J623 Engine/motor control unit
- N70 Ignition coil 1 with output stage
- N127 Ignition coil 2 with output stage
- N291 Ignition coil 3 with output stage
- Q23 Spark plug 1
- Q24 Spark plug 2
- Q25 Spark plug 3
- T4aq 4-pin connector, black
- T4ar 4-pin connector, black
- T4at 4-pin connector, black
- T105a 105-pin connector, black
- 484 Earth connection 2 (ignition coils), in engine prewiring harness
- 846 Earth point on ignition coil 1
- 847 Earth point on ignition coil 2
- 848 Earth point on ignition coil 3
- D206 Connection 4 (87a) in engine prewiring harness
- * Earth supply via housing

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

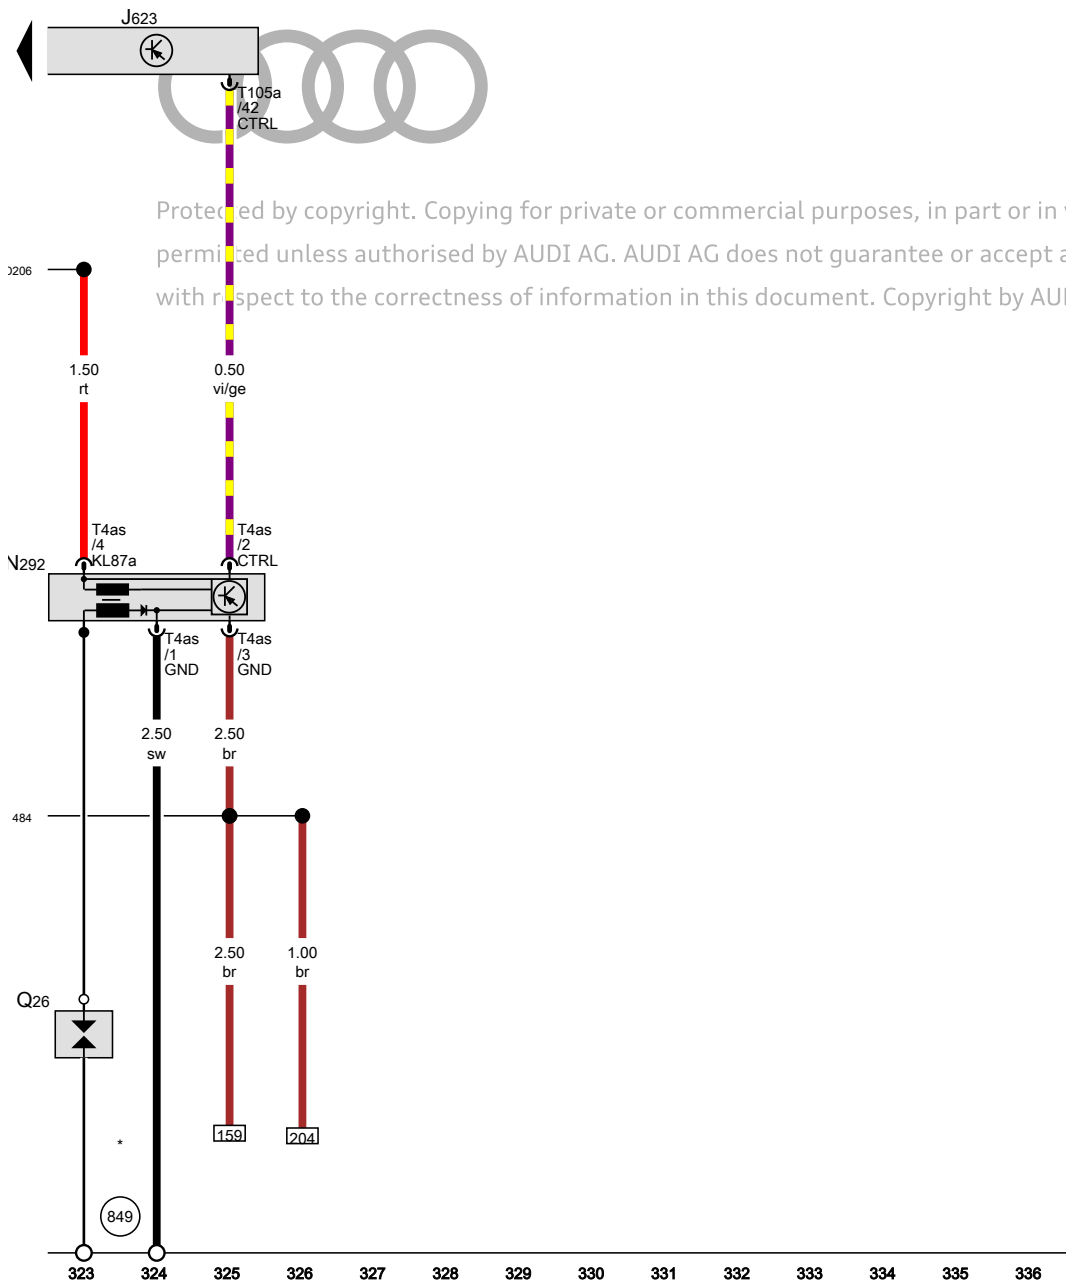

Engine/motor control unit, Ignition coil 4 with output stage, Spark plug 4

J623 Engine/motor control unit
 N292 Ignition coil 4 with output stage
 Q26 Spark plug 4
 T4as 4-pin connector, black
 T105a 105-pin connector, black

- 484 Earth connection 2 (ignition coils), in engine prewiring harness
- 849 Earth point on ignition coil 4
- D206 Connection 4 (87a) in engine prewiring harness
- * Earth supply via housing