

2010 Cadillac SRX

2010 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - SRX

2010 ACCESSORIES & EQUIPMENT

Interior Trim and Paneling - SRX

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Application	Specification	
	Metric	English
Trunk Partition Trac Fastener	N.m	80 lb in
Trunk Tie Down Loop Fastener	0 N.m	lb ft
Center Pillar Upper Trim Panel Fastener	2 N.m	18 lb in
Front Assist Handle Fastener	N.m	lb in
Front Side Door Armrest Fastener	2 N.m	18 lb in
Quarter Upper Trim Panel Fastener	N.m	2 lb in
Rear Compartment Floor Stowage Compartment Fastener	N.m	2 lb in
Rear Compartment Floor Stowage Compartment Tray Fastener	N.m	2 lb in
Rear End Trim Finish Panel Fastener	1 N.m	8 lb in
Rear Side Door Armrest Fastener	2 N.m	18 lb in
Roof Rail Rear Assist Handle Fastener	N.m	lb in
Sunshade Support Fastener	N.m	2 lb in
Sunshade Fastener	N.m	2 lb in

REPAIR INSTRUCTIONS

FRONT SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT

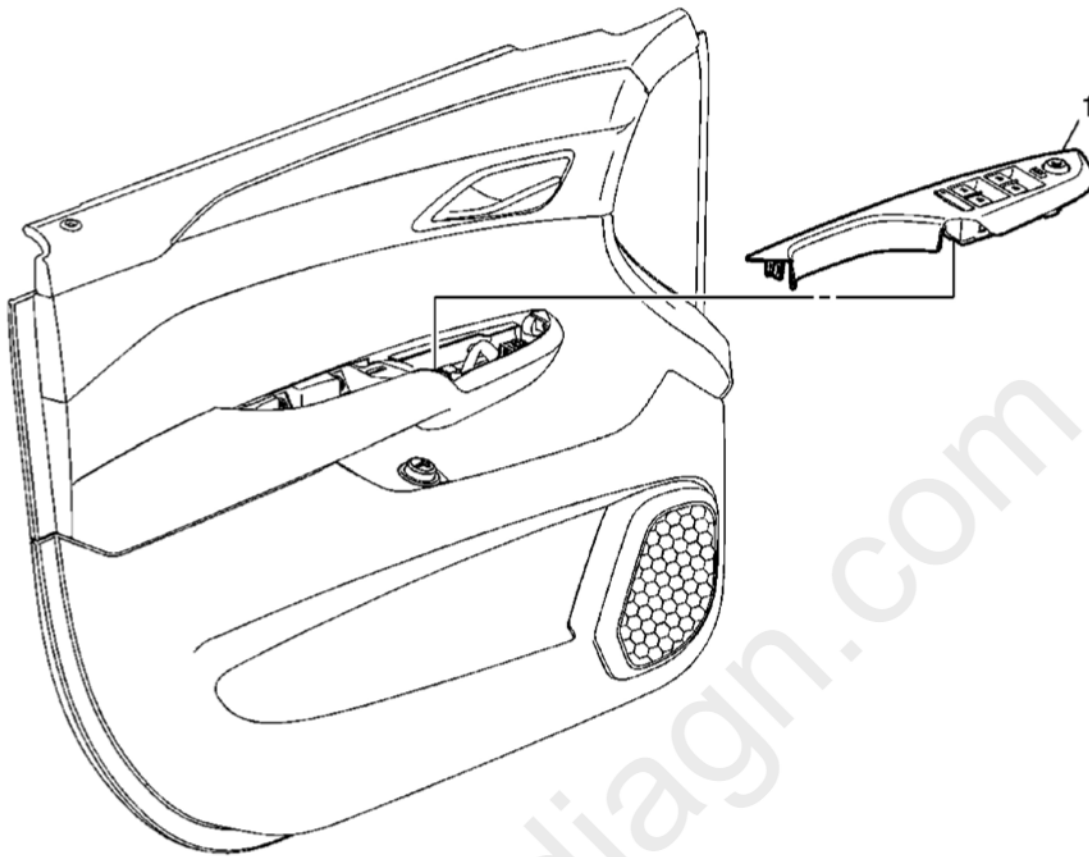


Fig. : Identifying Front Side Door Accessory Switch Mount Plate
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Front Side Door Accessory Switch Mount Plate Procedure 1. Disconnect the electrical connector from the switch assembly. 2. Transfer parts as necessary.

REAR SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT

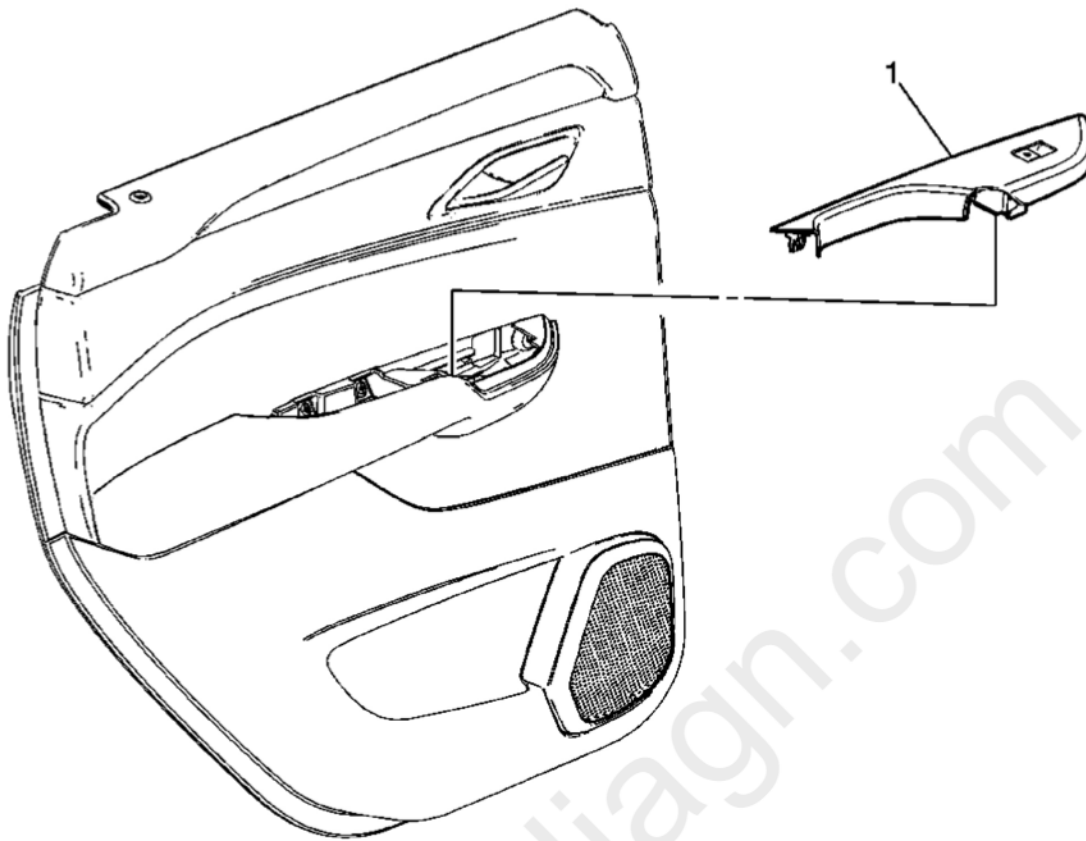


Fig. : Identifying Rear Side Door Accessory Switch Mount Plate
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Rear Side Door Accessory Switch Mount Plate
	Procedure
	1. Pull upward gently from front of accessory switch mount plate while slowly moving plastic trim tool from front to rear of part to disengage from the door trim panel.
	2. Disconnect the electrical connector.

FRONT SIDE DOOR TRIM REPLACEMENT

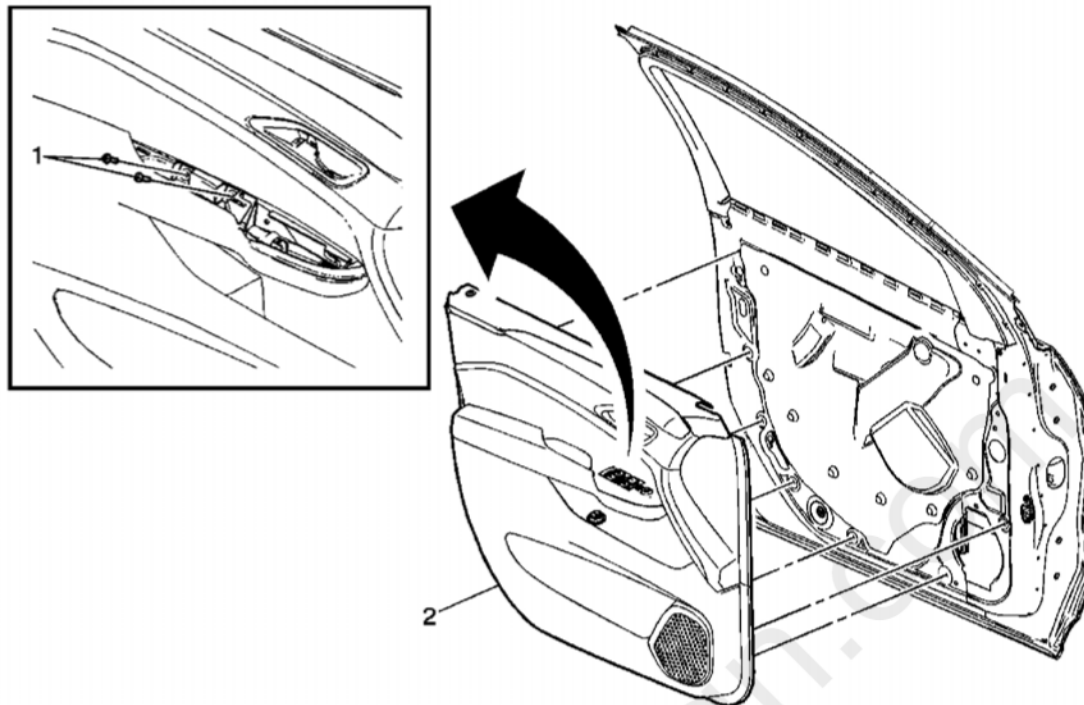


Fig. : View Of Front Side Door Trim
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the front side door accessory switch mount plate. Refer to Front Side Door Accessory Switch Mount Plate Replacement .	
1	Front Side Door Pull andle Fastener (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> .
2	Front Side Door Trim Panel Procedure 1. Use a door trim tool or equivalent to aid in the removal of the door trim. 2. Disconnect the inside handle release cable from the trim panel. . Disconnect the electrical connectors.

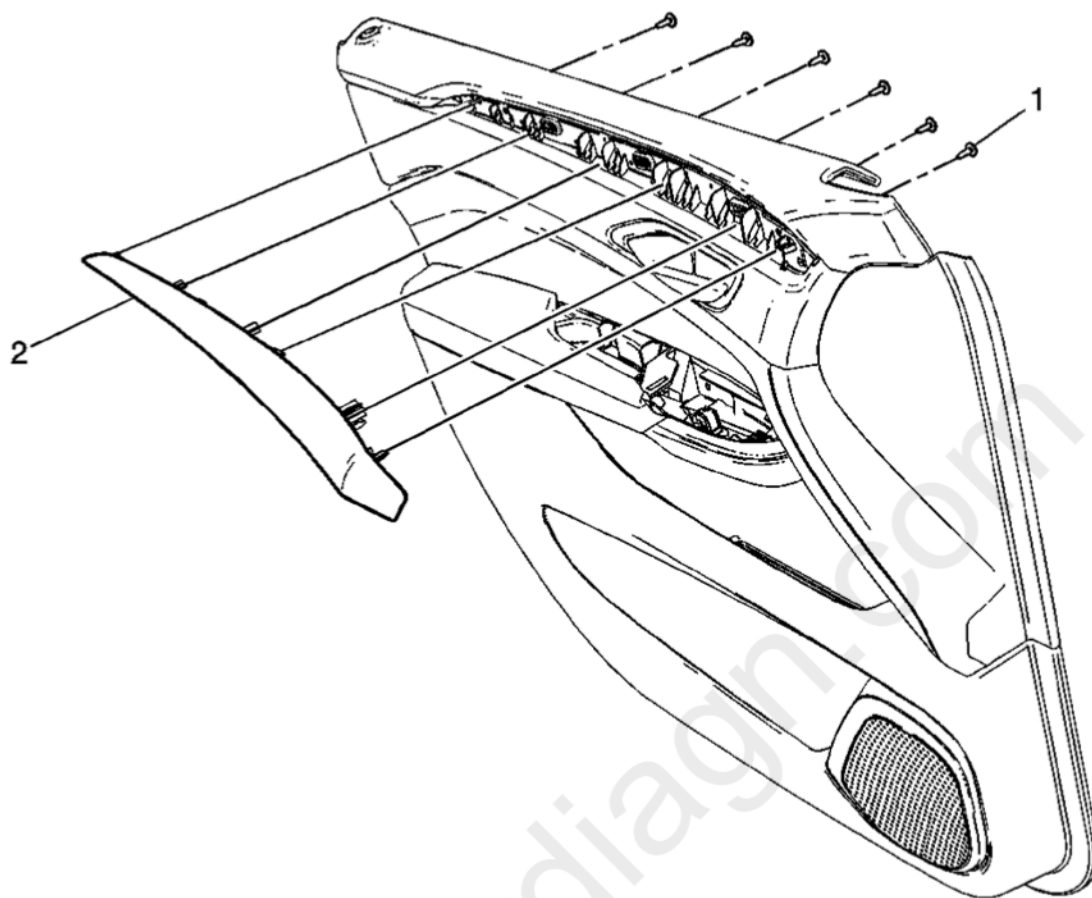


Fig. : View Of Front Side Door Trim Panel Finish Panel Applique
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the front side door trim panel. Refer to Front Side Door Trim Replacement .	
1	Front Side Door Trim Panel Applique Fastener (Qty:) CAUTION: Refer to Fastener Caution .
2	Front Side Door Trim Panel Applique Assembly

REAR SIDE DOOR TRIM PANEL APPLIQUE REPLACEMENT

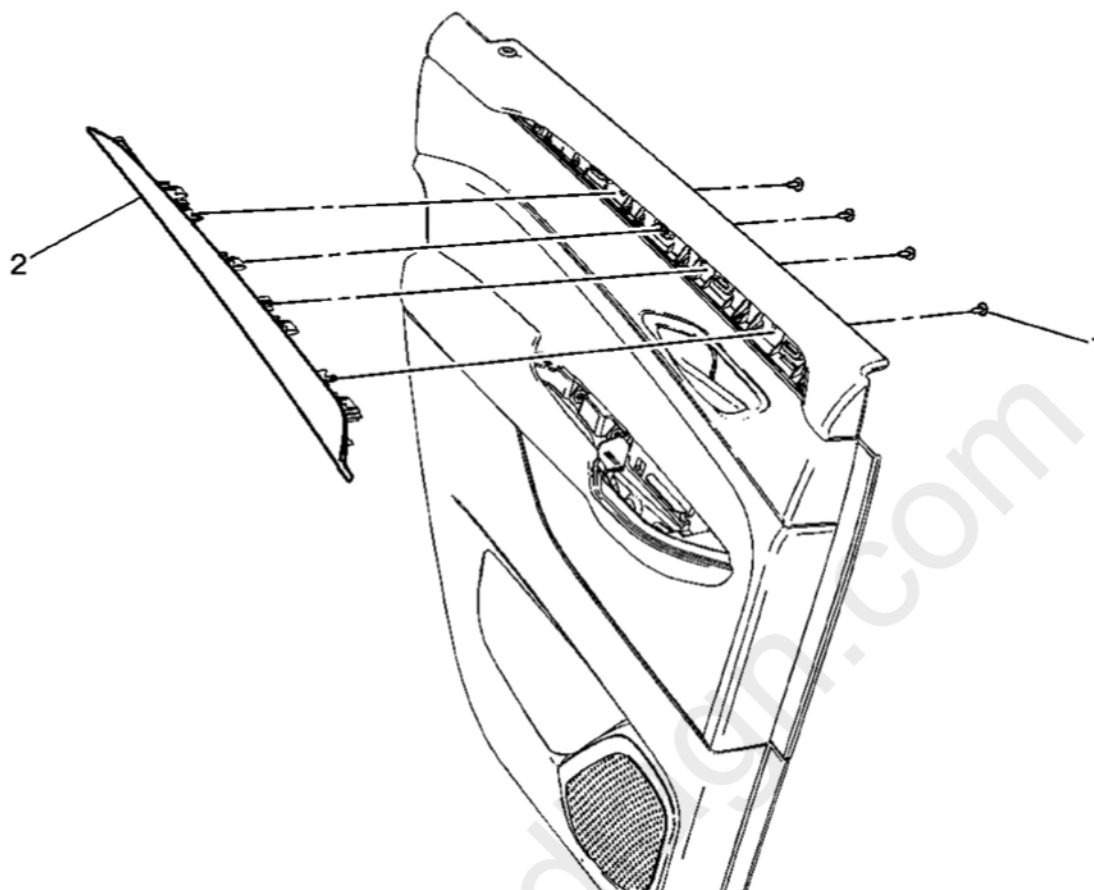


Fig. 5: Identifying Rear Side Door Trim Panel Applique & Fasteners
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Procedure: Remove the rear side door trim panel. Refer to <u>Rear Side Door Trim Replacement</u> .	
1	Rear Side Door Trim Panel Applique Fastener (Qty: 4) CAUTION: Refer to <u>Fastener Caution</u> .
2	Rear Side Door Trim Panel Applique Assembly

REAR SIDE DOOR WINDOW GARNISH MOLDING REPLACEMENT

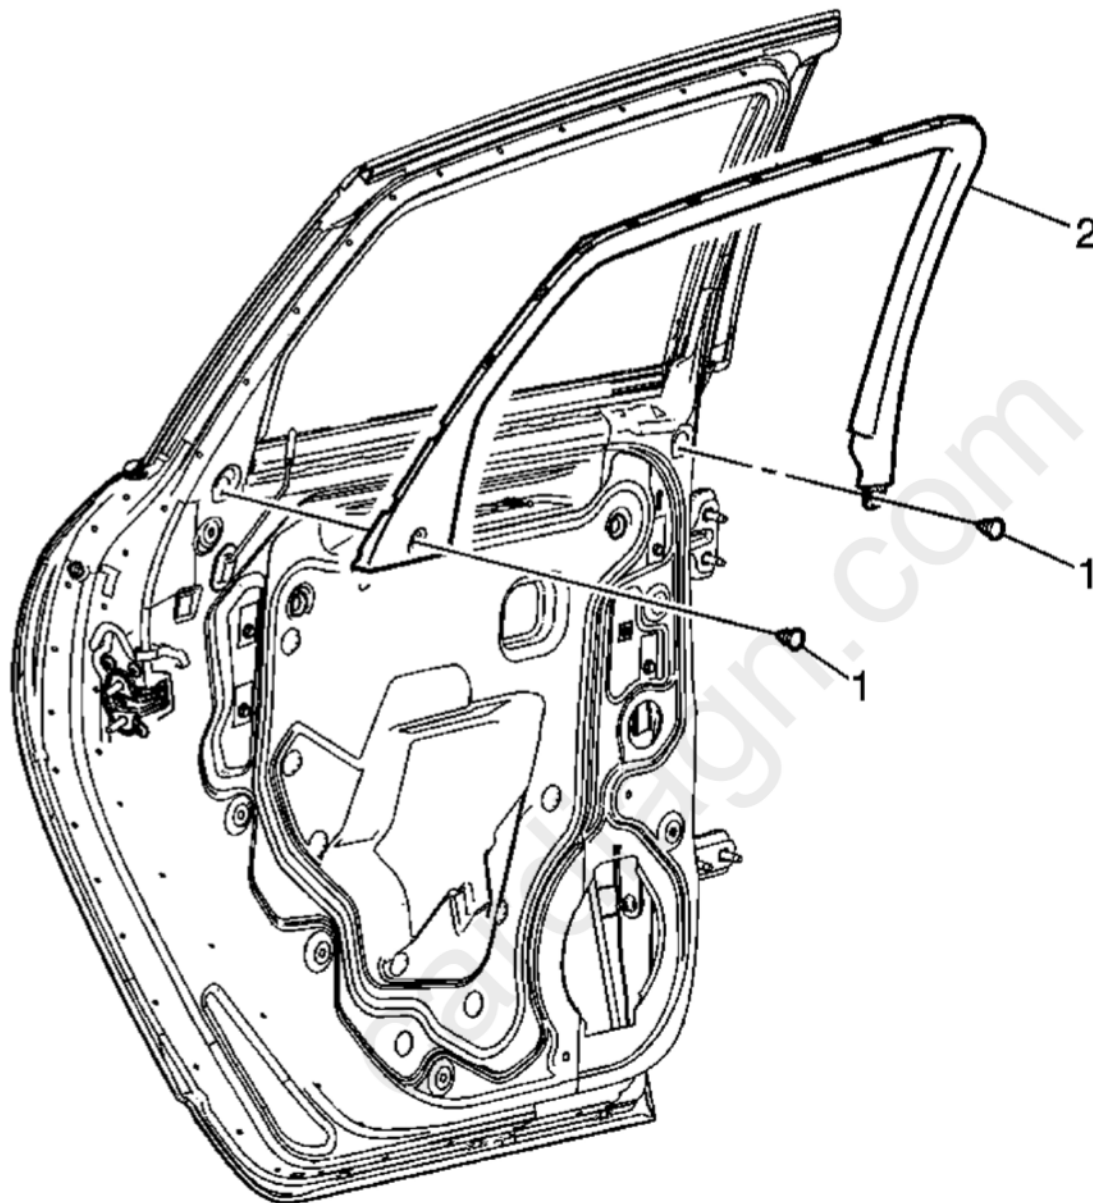


Fig. 6: Identifying Rear Side Door Window Garnish Molding
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the rear side door trim. Refer to Rear Side Door Trim Replacement .	
1	Rear Side Door Window Garnish Molding Retainer (Qty: 2) Procedure: Use a door trim panel removal tool or equivalent to aid in the removal of the retainer.
2	Rear Side Door Window Garnish Molding Procedure:

Pull outward starting at the front and moving slowly rearward to remove the molding.

FRONT SIDE DOOR WINDOW GARNISH MOLDING REPLACEMENT

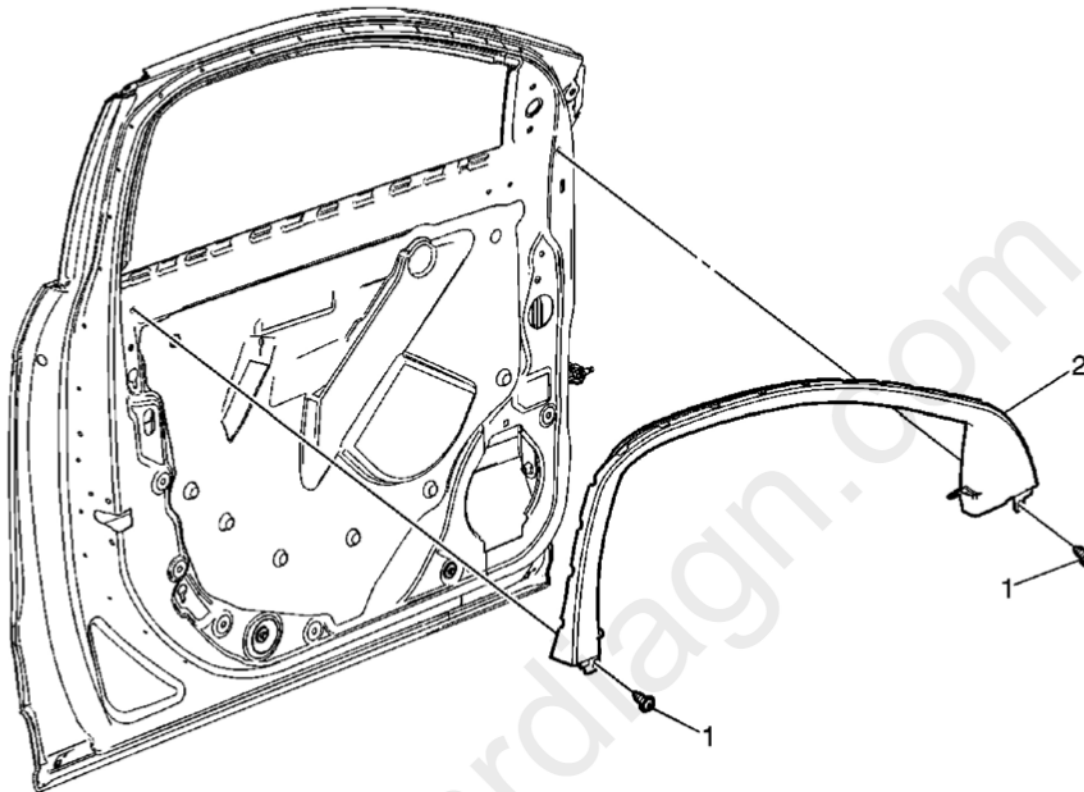
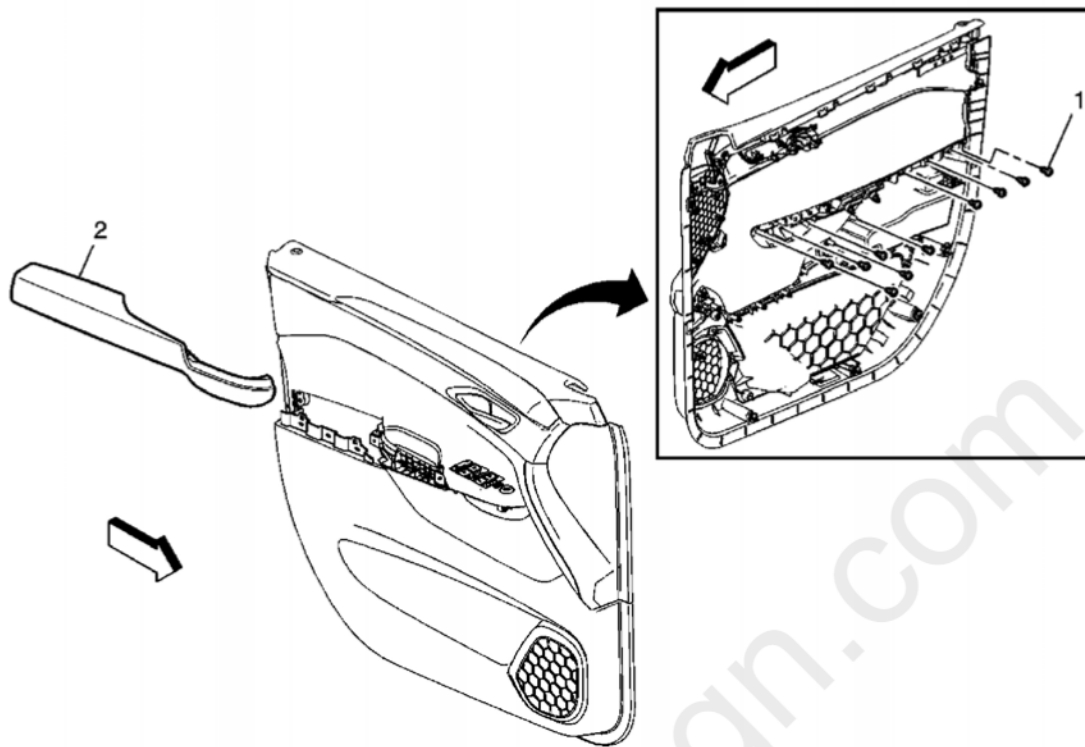


Fig. 7: Identifying Front Side Door Window Garnish Molding
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the interior trim panel. Refer to Front Side Door Trim Replacement .	
1	Front Door Frame Garnish Molding Retainer (Qty: 2)
2	Front Side Door Garnish Molding
Procedure: Use a plastic flat-bladed tool to remove the push-in retainers.	

FRONT SIDE DOOR ARMREST REPLACEMENT

**Fig. 8: Identifying Front Side Door Armrest & Fasteners**

Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedures	
1. Remove the door accessory switch mount plate. Refer to <u>Front Side Door Accessory Switch Mount Plate Replacement</u> .	
2. Remove the door trim panel. Refer to <u>Front Side Door Trim Replacement</u> .	
1	Front Side Door Armrest Fastener (Qty: 10) CAUTION: Refer to <u>Fastener Caution</u> . Tighten: 2 N.m (18 lb in)
2	Front Side Door Armrest Assembly

REAR SIDE DOOR ARMREST REPLACEMENT

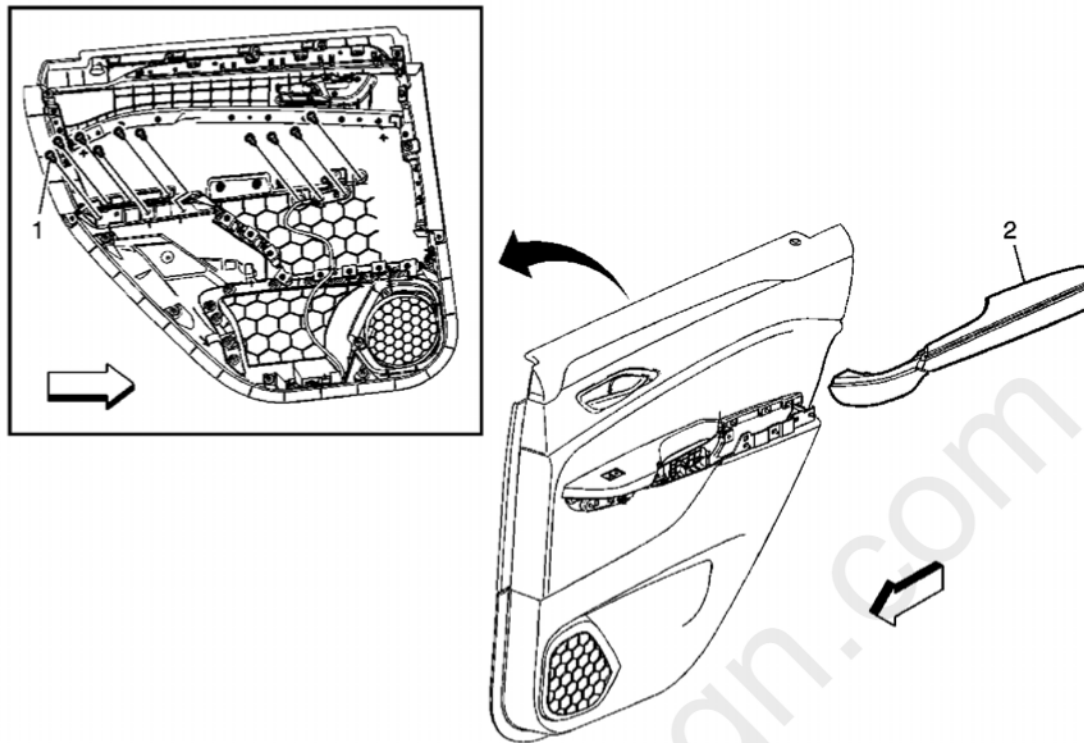


Fig. 9: View Of Rear Side Door Armrest
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure	
1. Remove the rear side door accessory switch mount plate. Refer to <u>Rear Side Door Accessory Switch Mount Plate Replacement</u> . 2. Remove the rear side door trim panel. Refer to <u>Rear Side Door Trim Replacement</u> .	
1	Rear Side Door Armrest Fastener (Qty: 10) CAUTION: Refer to <u>Fastener Caution</u> . Tighten: 2 N.m (18 lb in)
2	Rear Side Door Armrest Assembly

BODY HINGE PILLAR TRIM PANEL REPLACEMENT

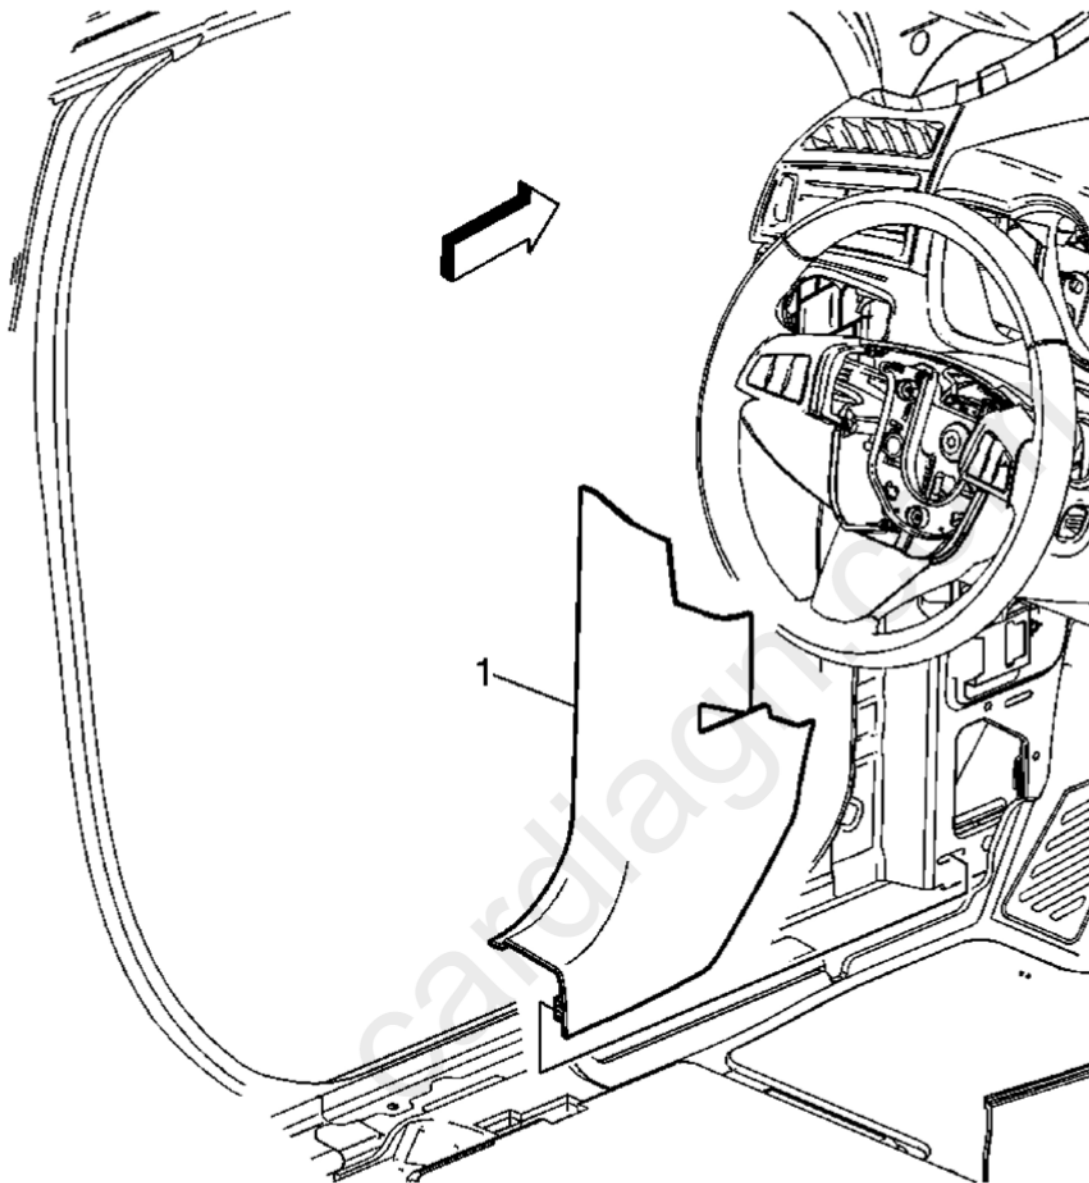


Fig. 1 : View Of Body Hinge Pillar Trim Panel
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the instrument panel side trim panel. Refer to <u>Instrument Panel Side Trim Panel Replacement</u>	
1	Body Hinge Pillar Trim Panel Assembly Procedure: Reposition the front floor panel carpet as needed.

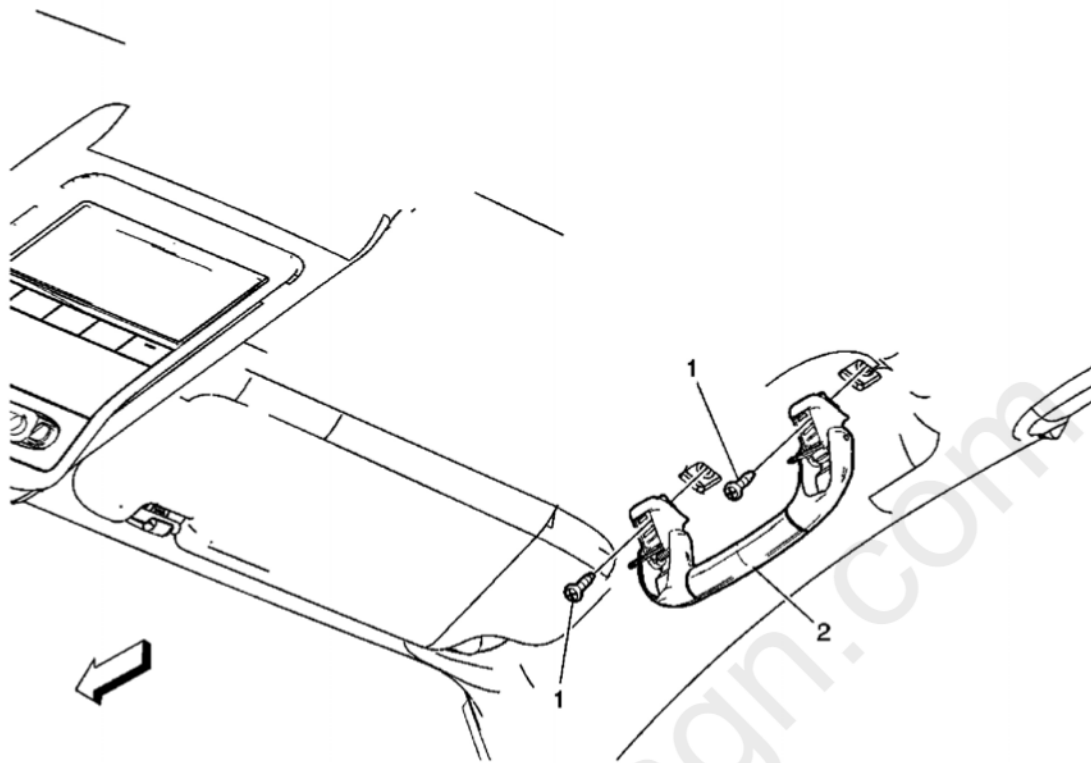


Fig. 11: Identifying Front Assist Handle Components
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Front Assist Handle Fastener (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten: 6 N.m (53 lb in)
2	Front Assist Handle Assembly

ROOF RAIL REAR ASSIST HANDLE REPLACEMENT

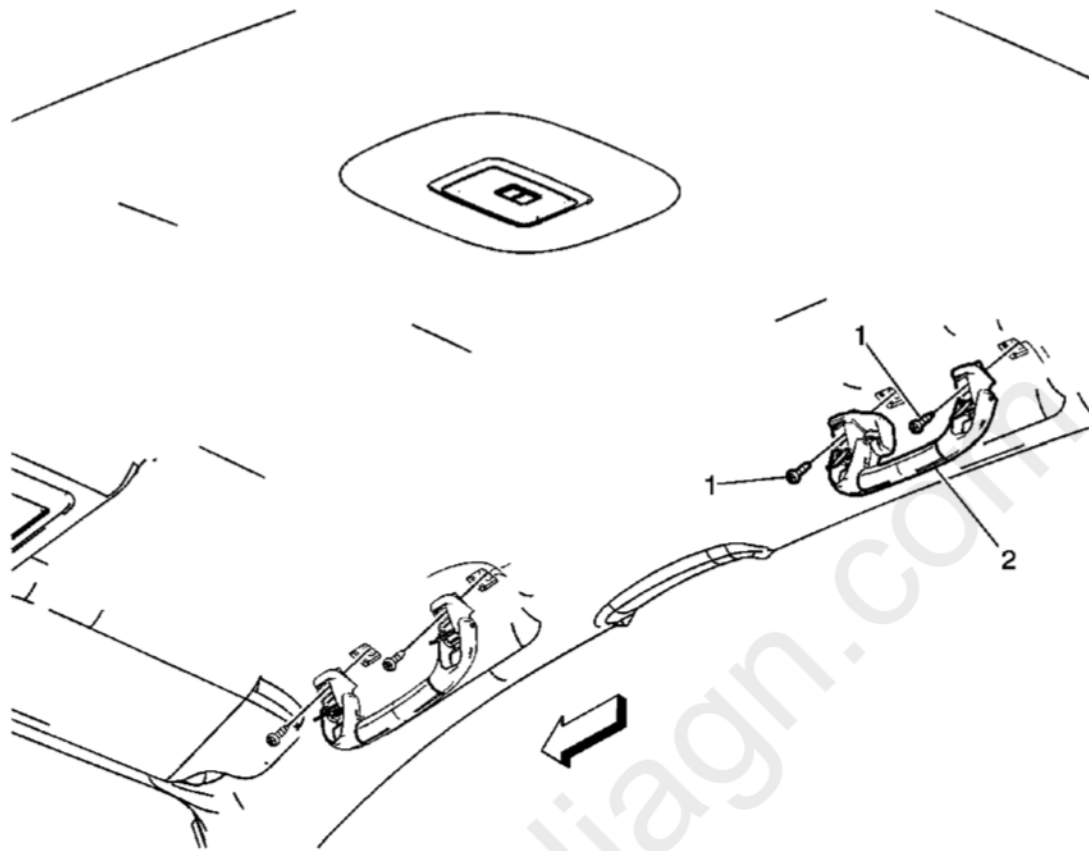
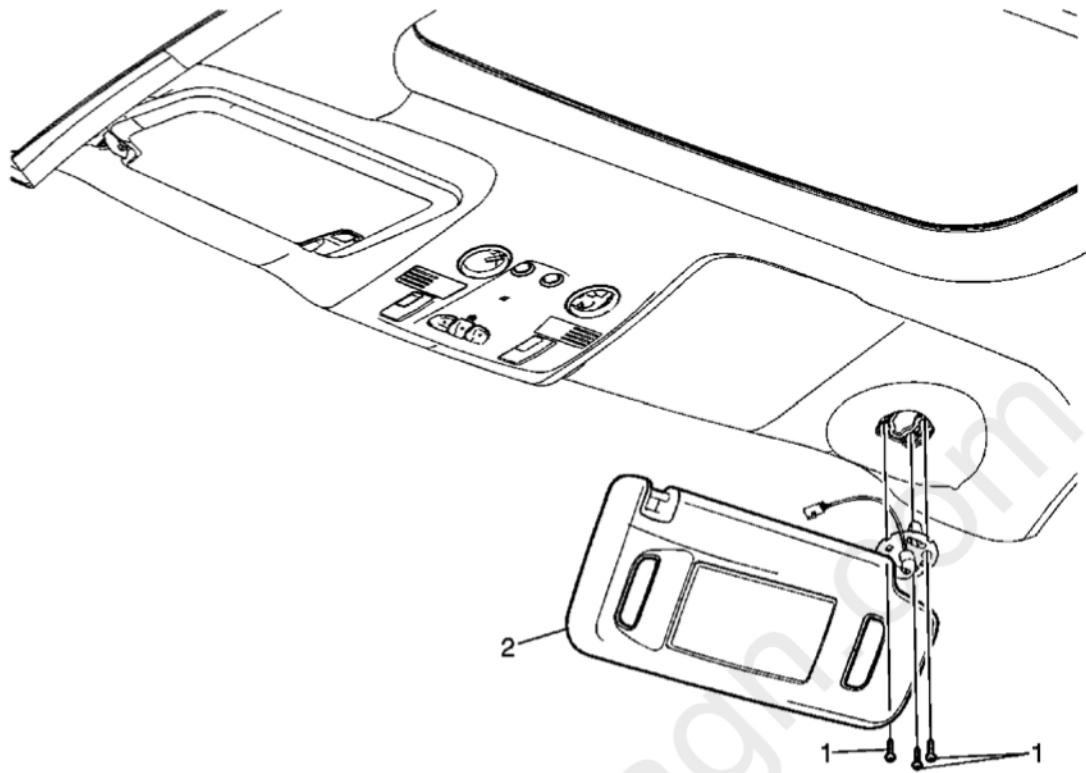


Fig. 1 : Identifying Roof Rail Rear Assist Handle Components
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Roof Rail Rear Assist Handle Fastener (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten: 6 N.m (53 lb in)
2	Roof Rail Rear Assist Handle

SUNSHADE REPLACEMENT

**Fig. 1 : Identifying Sunshade**

Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: It is only necessary to lower the headliner. Only do those step in headliner replacement that will lower the headliner enough to gain access to the part. Refer to <u>Headlining Trim Panel Replacement With C U</u> or <u>Headlining Trim Panel Replacement Without C U</u> .	
1	Sunshade Fastener (Qty: 3) CAUTION: Refer to <u>Fastener Caution</u> . Procedure: The closeout snaps into place, remove the closeout to access the screws. Tighten: 3 N.m (27 lb in)
2	Sunshade Assembly Procedure 1. Squeeze the tabs at the base of the sunshade assembly to remove from the headliner.

2. Disconnect the electrical connector.

SUNSHADE SUPPORT REPLACEMENT

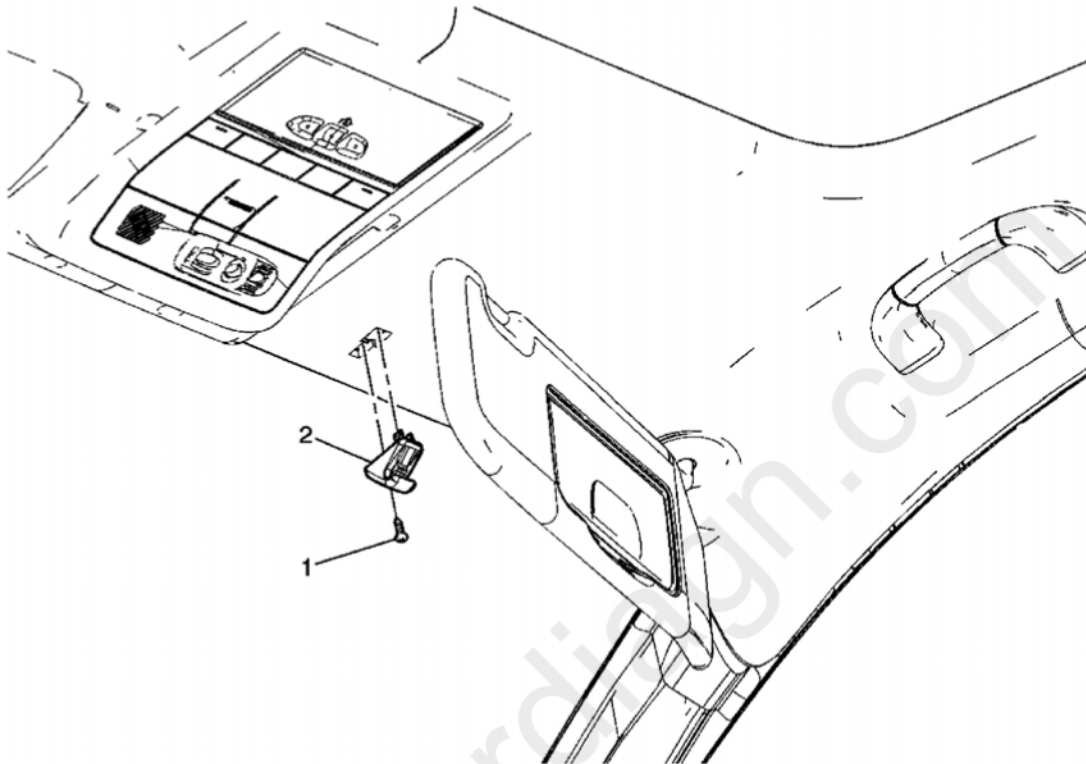


Fig. 1 : Identifying Sunshade Anchor
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Sunshade Support Fastener CAUTION: Refer to <u>Fastener Caution</u> . Tip: Pull the cover downward to access the fastener. Tighten: 3 N.m (27 lb in)
2	Sunshade Support Procedure 1. Disengage the sunshade from the support.

2. Unclip the sunshade from the support and reposition.

WINDSHIELD GARNISH MOLDING REPLACEMENT

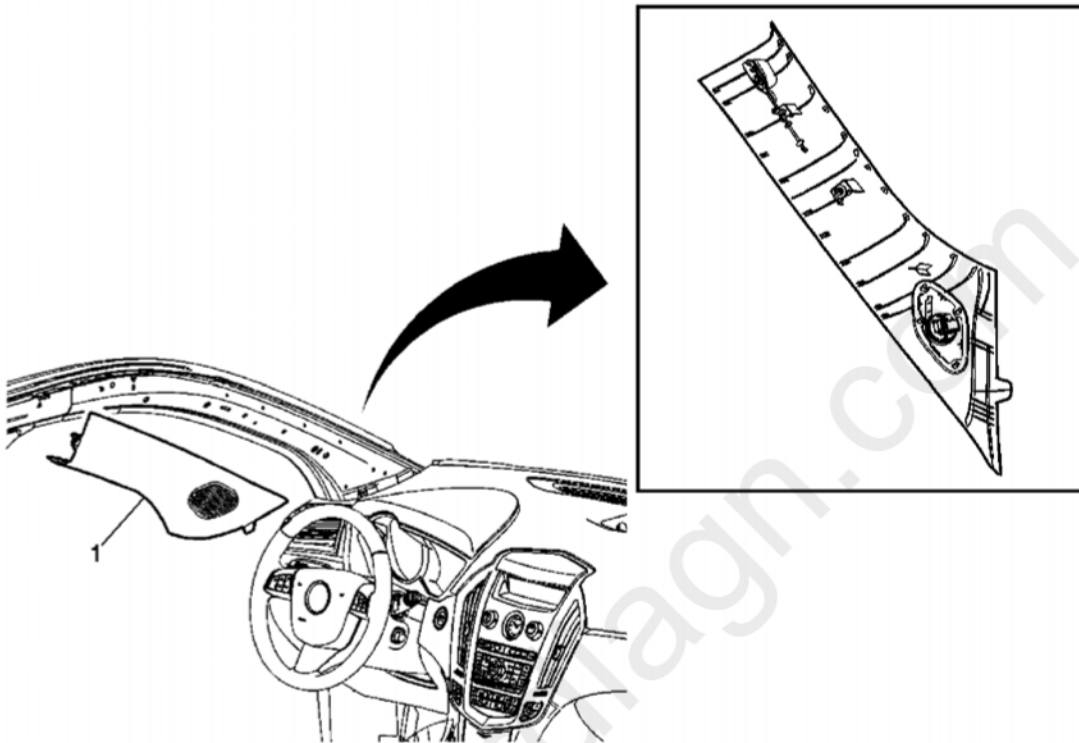


Fig. 15: Identifying Windshield Garnish Molding
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Windshield Garnish Molding Assembly Procedure 1. Starting at the top, gently pull on the garnish molding to disengage the clip. 2. Tab must be installed prior to retainer clip. 3. Tab to be fully seated in instrument panel trim panel retainer and valance panel. 4. Disconnect the electrical connector. 5. Transfer all necessary components. 6. The tether clip at the upper portion of the garnish molding MUST be replaced every time the windshield garnish molding is removed.

CENTER PILLAR UPPER TRIM PANEL REPLACEMENT

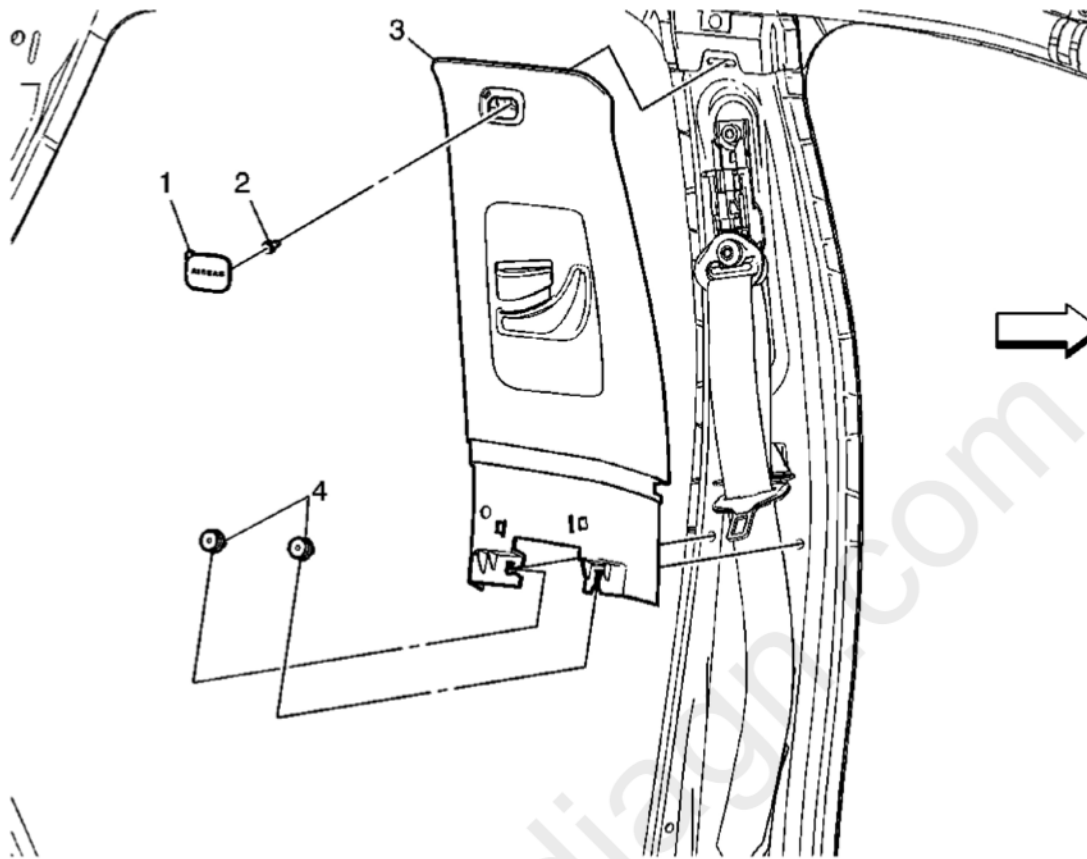


Fig. 16: Identifying Center Pillar Upper Trim Panel & Fasteners
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedures	
1. Disable the roof rail SIR system. Refer to <u>SIR Disabling and Enabling</u> . 2. Remove the seat belt tensioner fastener and feed seat belt through center pillar upper trim panel. Refer to <u>Seat Belt Retractor Pretensioner Replacement - Front</u> . 3. Remove the center pillar lower trim panel. Refer to <u>Center Pillar Lower Trim Panel Replacement</u> .	
1	Center Pillar Upper Trim Panel Bolt Cap
2	Center Pillar Upper Trim Panel Fastener
	CAUTION: Refer to <u>Fastener Caution</u> . Tighten: 2 N.m (18 lb in)
3	Center Pillar Upper Trim Panel Assembly Procedure:

Pull the trim panel toward the inside of the vehicle to disengage the retainers.

4 Center Pillar Upper Trim Clip (Qty: 2)

CENTER PILLAR LOWER TRIM PANEL REPLACEMENT

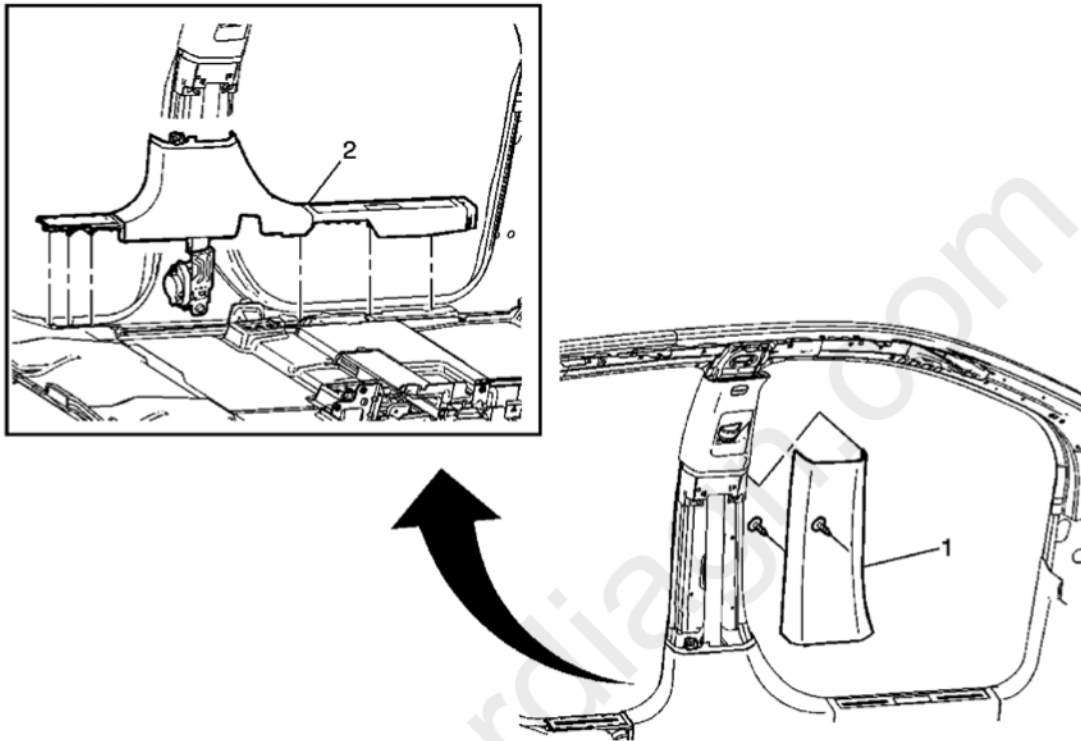


Fig. 17: Locating Center Pillar Lower Trim Panel

Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the body hinge pillar trim panel. Refer to <u>Body Hinge Pillar Trim Panel Replacement</u> .	
1	Center Pillar Lower Trim Panel Assembly Procedure: Grasp both sides and pull out toward the inside of the vehicle to release the 2 push pins on the backside.
2	Center Pillar Lower Trim Procedure: Disconnect the electrical connector, if equipped.

QUARTER UPPER TRIM PANEL REPLACEMENT

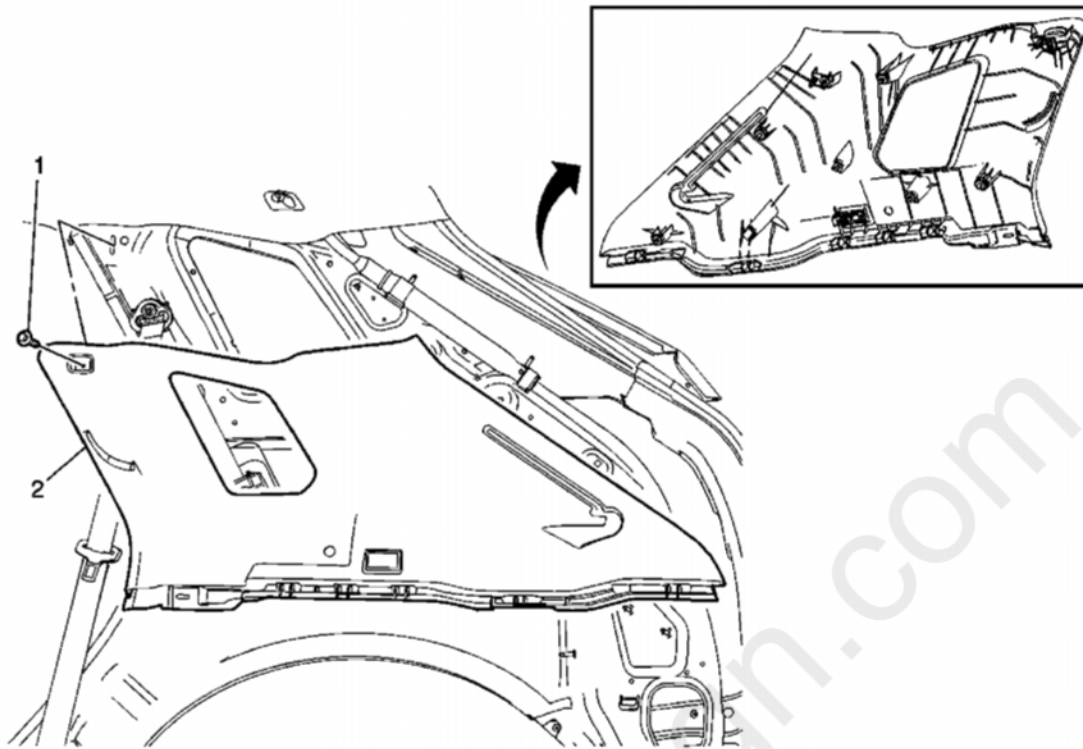


Fig. 18: View Of Quarter Upper Trim Panel
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedures 1. Disable the SIR system. Refer to <u>SIR Disabling and Enabling</u> . 2. Remove the body side trim panel. Refer to <u>Body Side Trim Panel Replacement</u>. 3. Remove the rear seat lower anchor plate bolt on the side of the trim panel being replaced. Refer to <u>Rear Seat Retractor Side Belt Replacement</u> .	
1	Quarter Upper Trim Panel Fastener CAUTION: Refer to <u>Fastener Caution</u> . Tighten: 3 N.m (27 lb in)
2	Quarter Upper Trim Panel Assembly Procedure 1. Loosen the rear compartment opening weather-strip. 2. Route the seat belt through trim panel.

3. Disconnect the electrical connector.

BODY SIDE TRIM PANEL REPLACEMENT

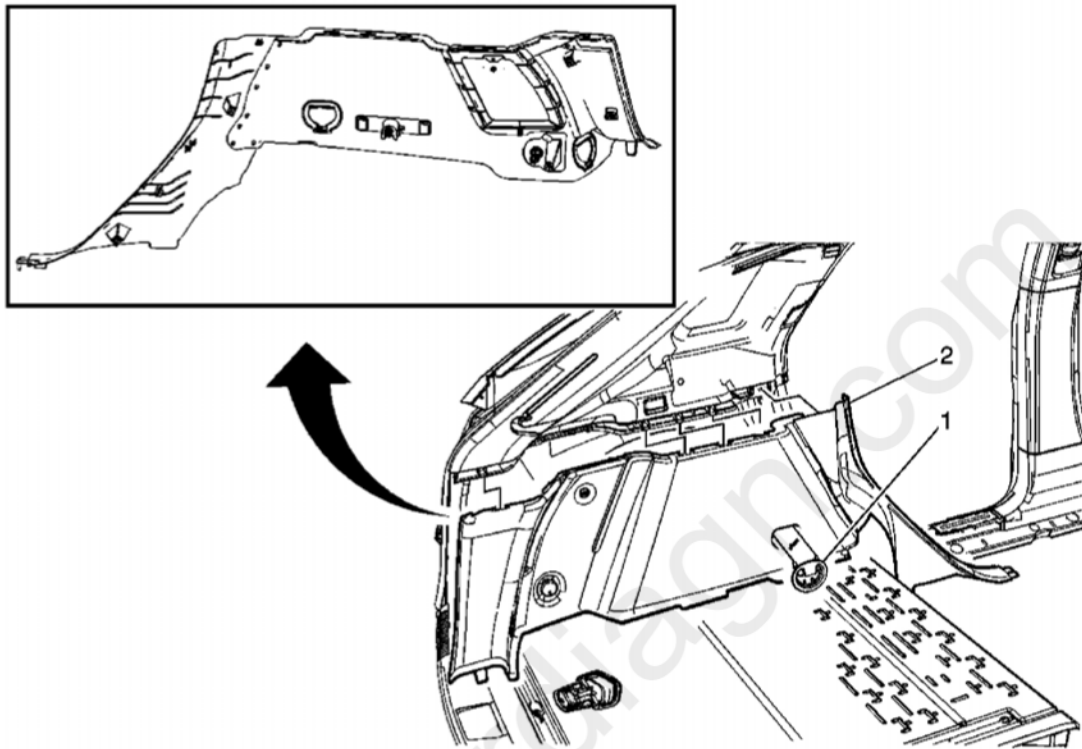


Fig. 19: Identifying Body Side Trim Panel
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedures	
1. Move the rear seat to the full forward position. 2. Remove the load floor panel rear extension panel. Refer to <u>Load Floor Panel Rear Extension Panel Replacement</u>. 3. Remove the rear compartment floor stowage compartment cover. Refer to <u>Rear Compartment Floor Stowage Compartment Cover Replacement</u>. 4. Reposition the center pillar lower trim panel to allow body side trim to pass. Refer to <u>Center Pillar Lower Trim Panel Replacement</u>.	
1	Cargo Tie Down Loop Bezel
2	Trim Panel Assembly
Procedure	

1. Pull outward to disengage the trim panel retainers.
2. Disconnect the electrical connectors.

REAR END TRIM FINISH PANEL REPLACEMENT

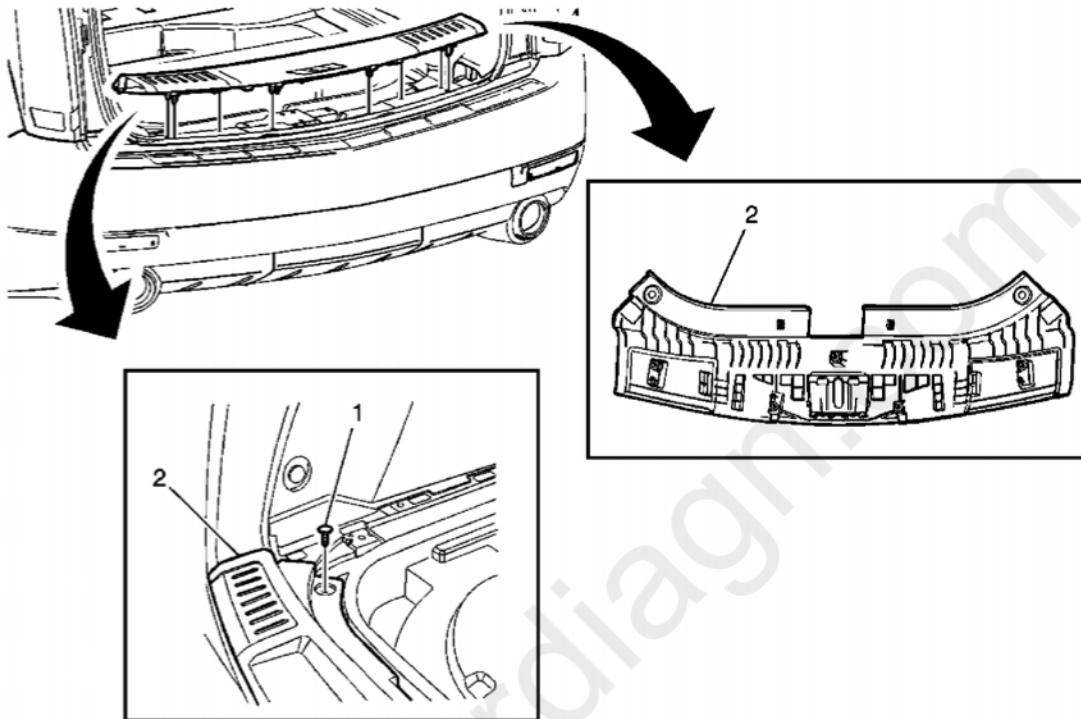


Fig. 2 : Identifying Rear End Trim Finish Panel
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the rear compartment floor panel rail. Refer to <u>Rear Compartment Floor Panel Rail Replacement</u> .	
1	Rear End Trim Finish Panel Fastener (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> . Procedure 1. Lift the storage compartment lid. 2. Remove the foam over the spare tire, if equipped. 3. Use a flat bladed plastic trim tool in order to release the clips and remove the sill plate.

	Tighten: 1 N.m (8 lb in)
2	Rear nd Trim Finish Panel Assembly

LOAD FLOOR PANEL REAR E TENSION PANEL REPLACEMENT

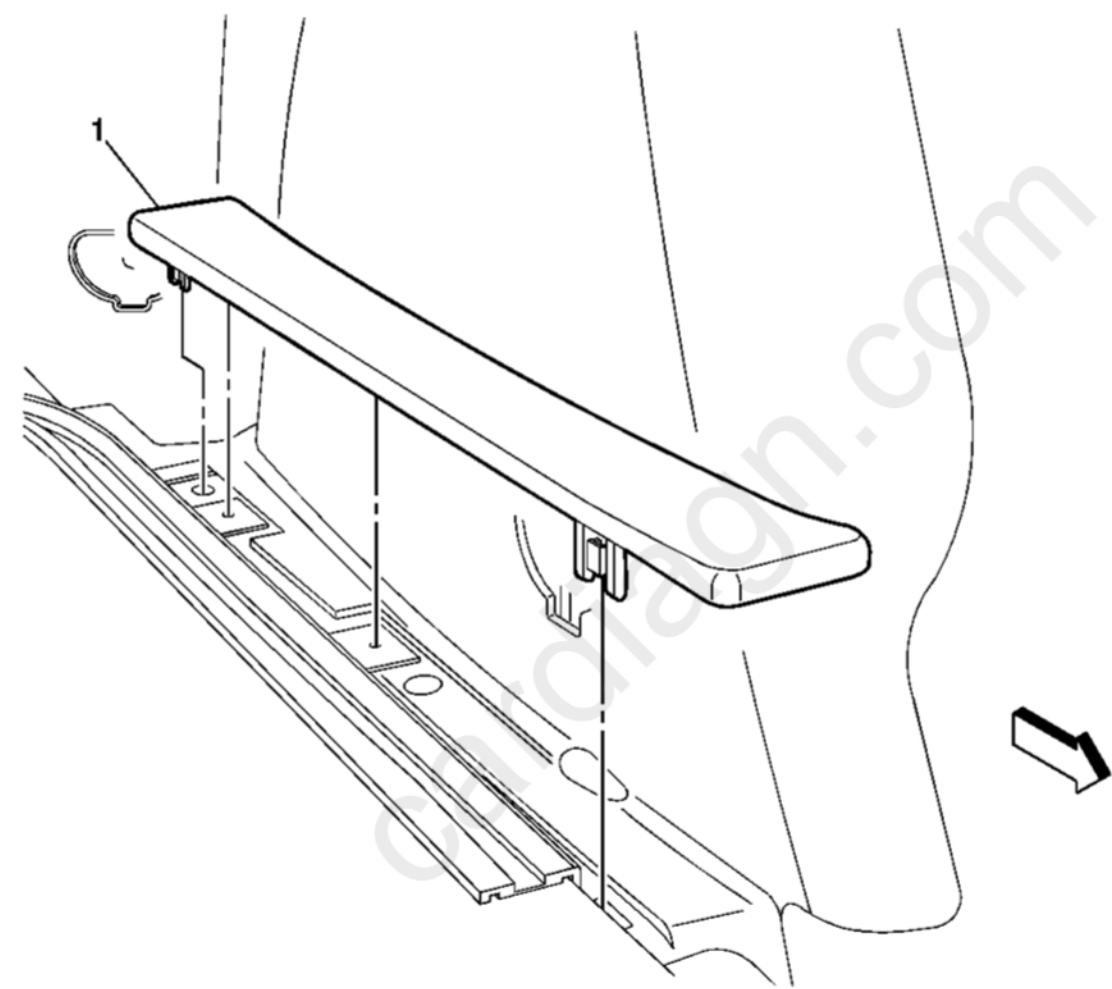


Fig. 2 : View Of Load Floor Panel Rear E tension Panel
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Load Floor Panel Rear tension Panel Assembly Procedure: Pull upward to disengage the integral clips and integral hook and loop fasteners from the rear compartment floor stowage compartment assembly.

REAR COMPARTMENT FLOOR STOWAGE COMPARTMENT COVER REPLACEMENT

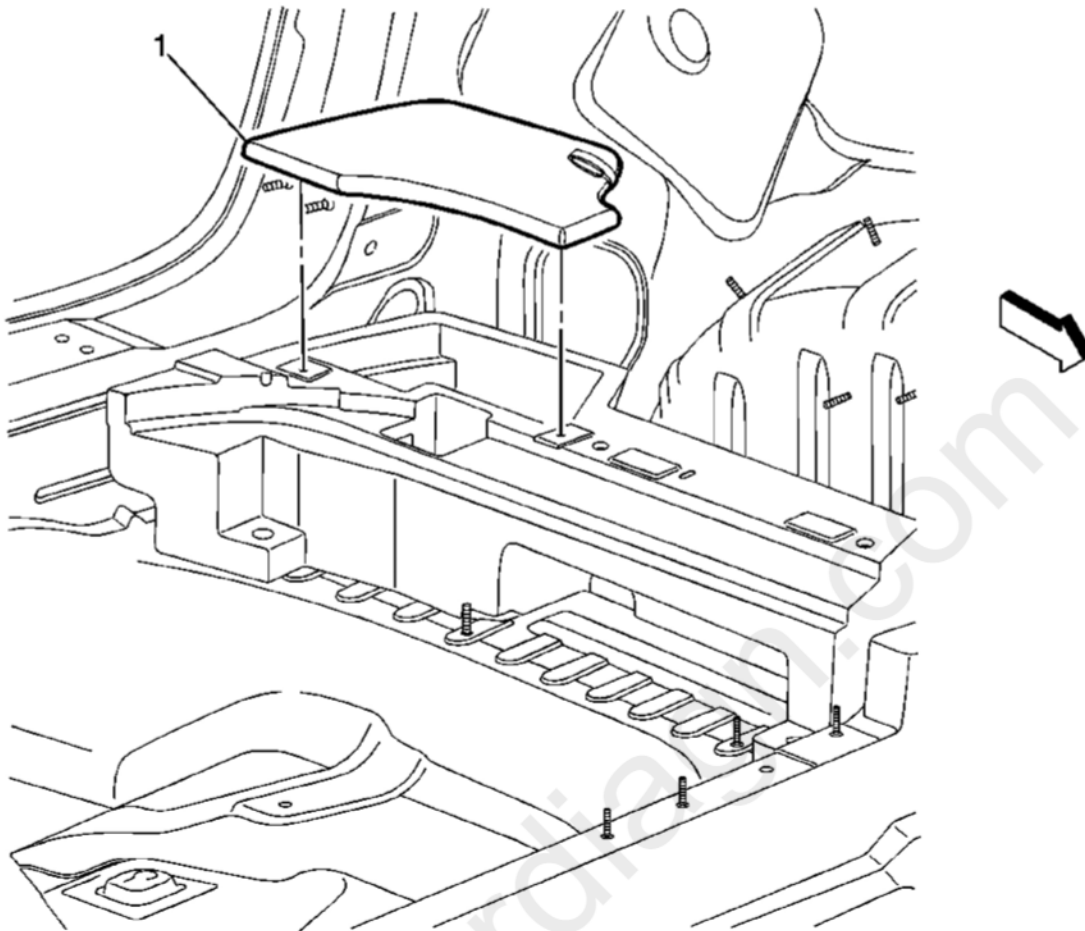


Fig. 22: Identifying Rear Compartment Floor Stowage Compartment Cover
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Rear Compartment Floor Stowage Compartment Cover Assembly Procedure: Pull upward to disengage the integral hook and loop fasteners from the rear compartment floor stowage compartment assembly.

REAR COMPARTMENT FLOOR STOWAGE TRIM COMPARTMENT REPLACEMENT

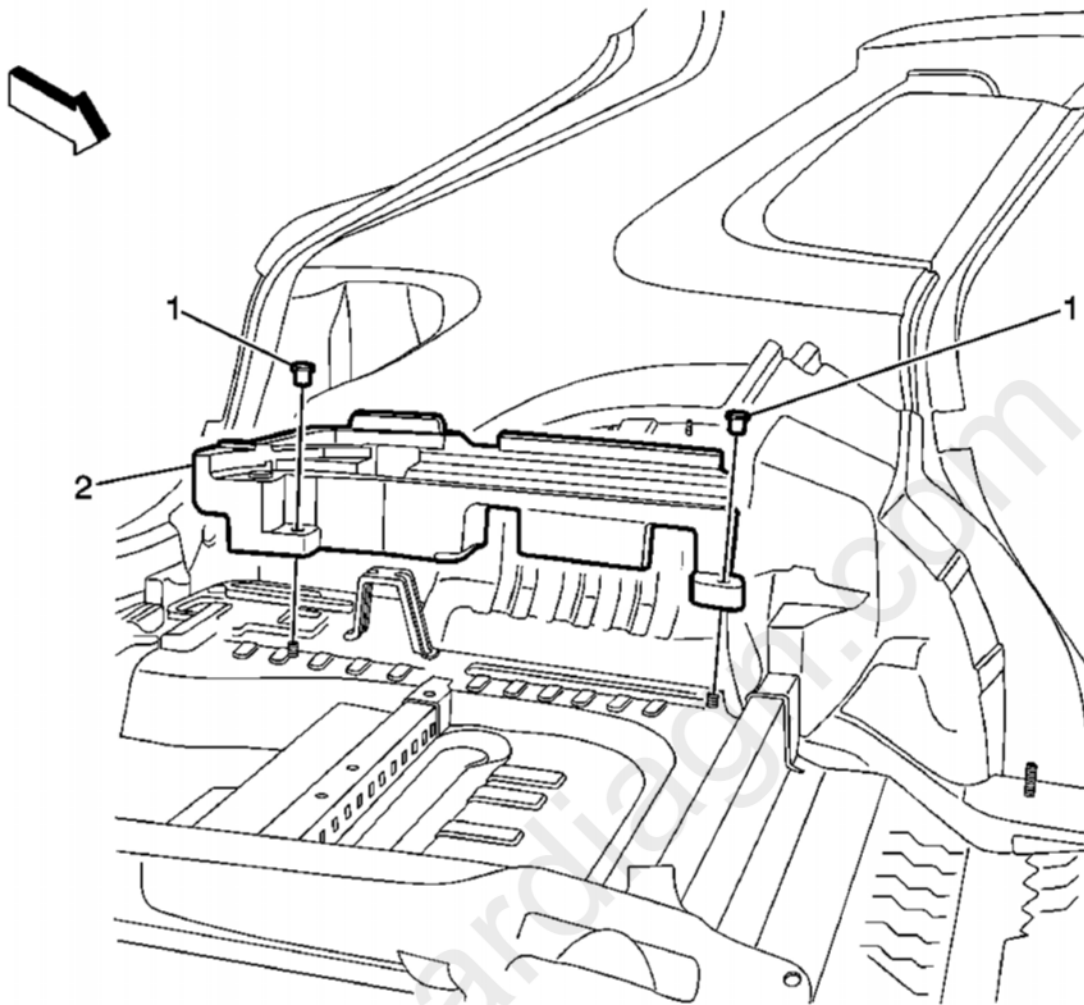


Fig. 2 : Locating Rear Compartment Floor Stowage Trim Compartment

Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedures	
1.	Remove the rear end trim finish panel. Refer to <u>Rear End Trim Finish Panel Replacement</u> .
2.	Remove the rear compartment floor stowage compartment cover. Refer to <u>Rear Compartment Floor Stowage Compartment Cover Replacement</u> .
3.	Remove rear compartment floor stowage compartment tray. Refer to <u>Rear Compartment Floor Stowage Compartment Tray Replacement</u> .
.	Remove the load floor panel rear e tension panel. Refer to <u>Load Floor Panel Rear E tension Panel Replacement</u> .
.	Remove the rear compartment floor panel rail. Refer to <u>Rear Compartment Floor Panel Rail Replacement</u> .
.	Remove left bodyside trim panel. Refer to <u>Body Side Trim Panel Replacement</u> .

1	Rear Compartment Floor Stowage Trim Compartment Fastener (Qty: 2)
	CAUTION: Refer to <u>Fastener Caution</u> .
	Tighten: 3 N.m (27 lb in)
2	Rear Compartment Floor Stowage Trim Compartment Assembly

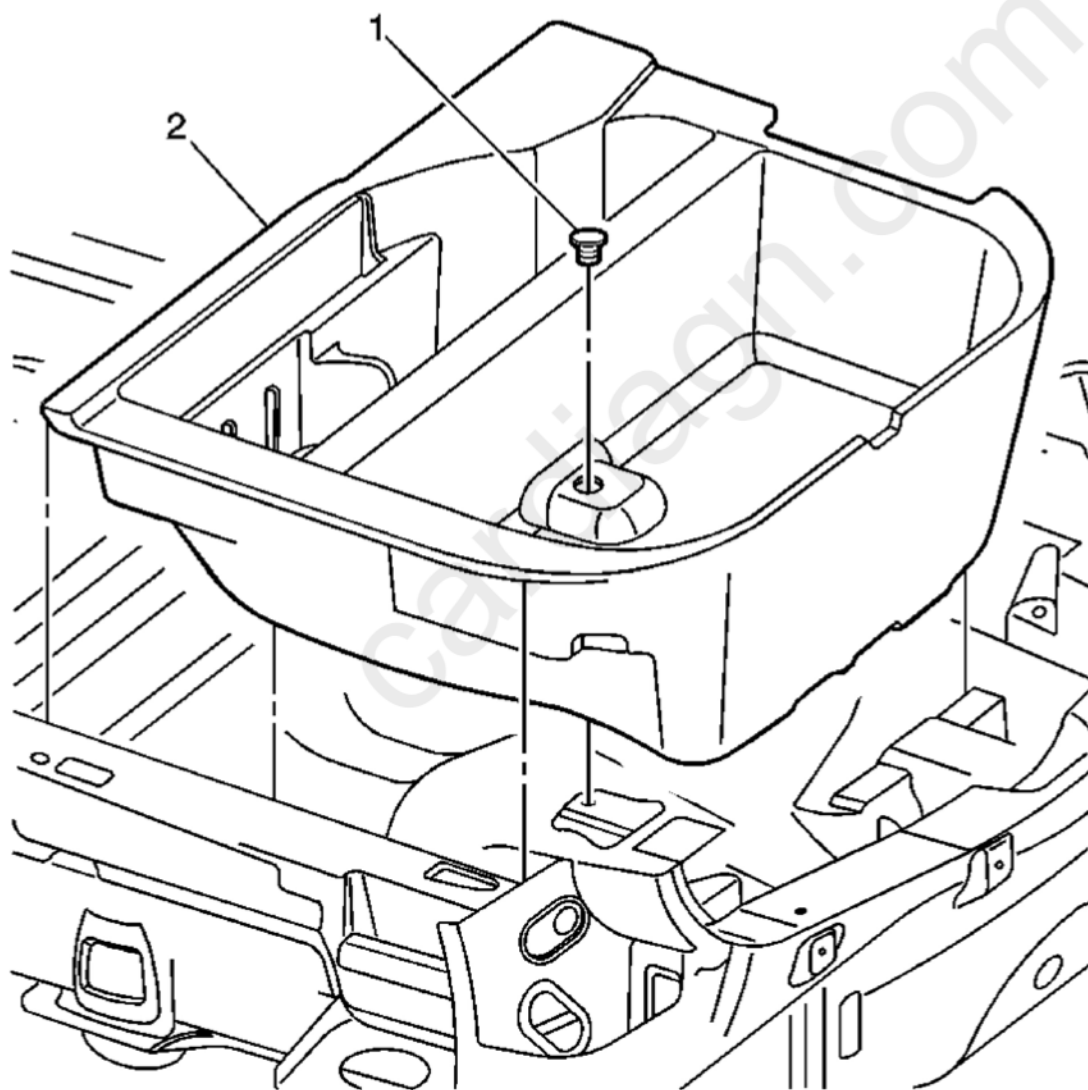
REAR COMPARTMENT FLOOR STOWAGE COMPARTMENT TRA REPLACEMENT

Fig. 2 : Identifying Rear Compartment Floor Stowage Compartment Tray
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
---------	----------------

Preliminary Procedure:

Remove the rear compartment floor stowage compartment cover.

1	Rear Compartment Floor Stowage Compartment Tray Fastener CAUTION: Refer to <u>Fastener Caution</u> . Tighten: 3 N.m (27 lb in)
2	Rear Compartment Floor Stowage Compartment Tray Assembly

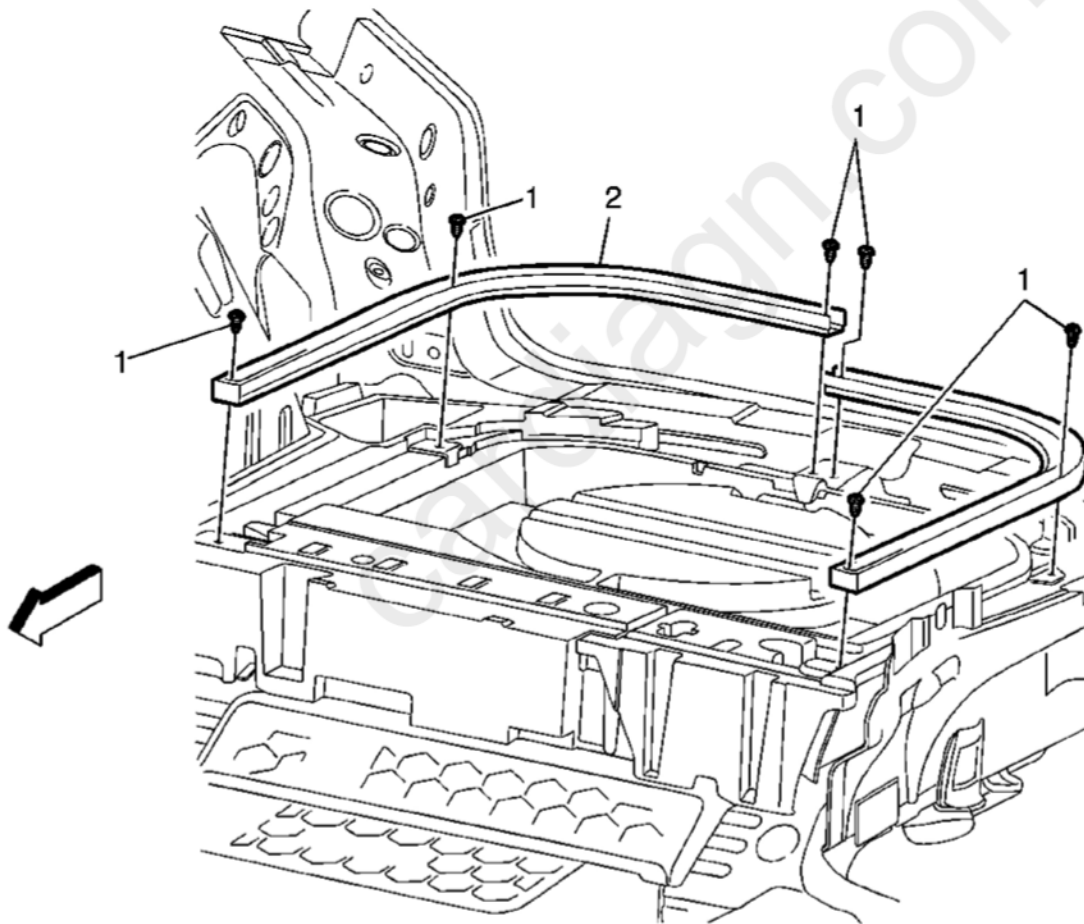
REAR COMPARTMENT FLOOR PANEL RAIL REPLACEMENT

Fig. 25: View Of Rear Compartment Floor Panel Rail & Fasteners
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedures: Remove the rear compartment floor stowage compartment cover.	

2010 Cadillac SRX

2010 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - SRX

1	Cargo Partition Track Fastener (Qty: 2)
	CAUTION: Refer to <u>Fastener Caution</u> .
	Tighten: 9 N.m (80 lb in)
2	Cargo Partition Track Slide Assembly

LOAD FLOOR REAR COMPARTMENT COVER HANDLE REPLACEMENT

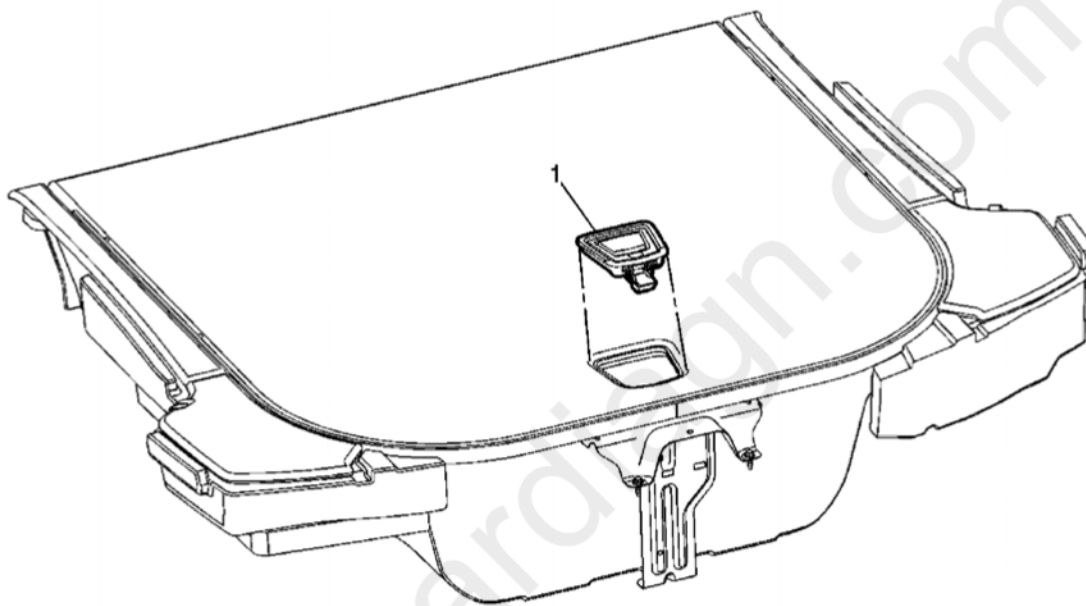


Fig. 26: Locating Load Floor Rear Compartment Cover Handle
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Load Floor Rear Compartment Cover Handle Assembly Procedure: Pull handle upward. From the backside squeeze the retaining clips to release part from cover assembly.

REAR SIDE DOOR TRIM REPLACEMENT

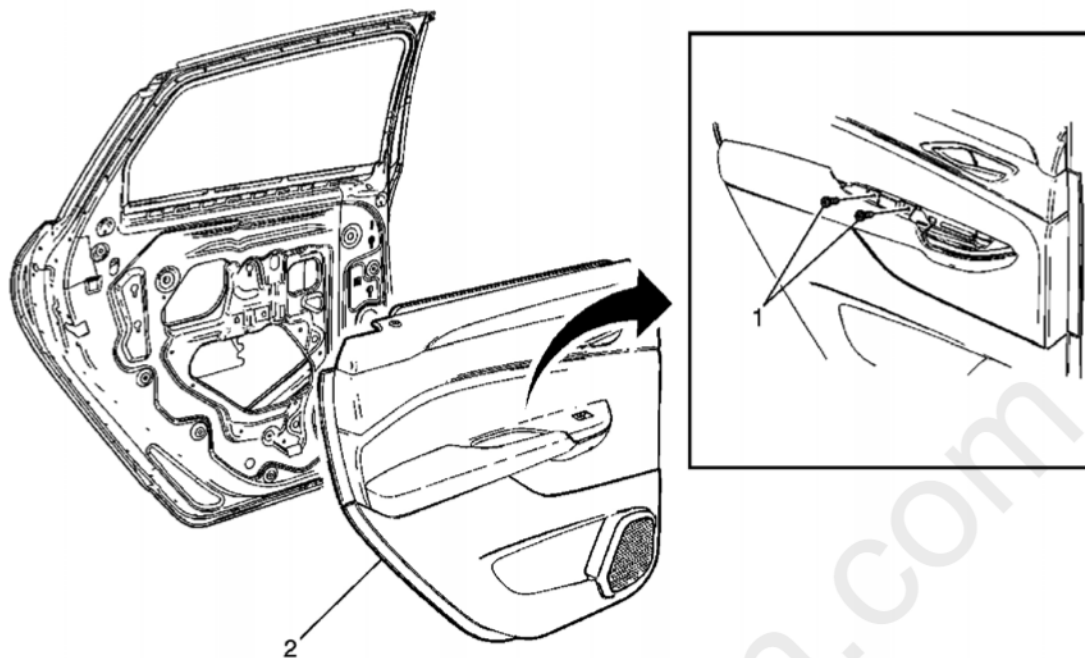


Fig. 27: View Of Rear Side Door Trim
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the rear side door accessory switch mount plate. Refer to <u>Rear Side Door Accessory Switch Mount Plate Replacement</u> .	
1	Rear Side Door Pull Handle Fastener (Qty: 2)
2	Rear Side Door Trim Assembly Procedure 1. Use a door trim tool or equivalent to aid in the removal of the door trim. 2. Disengage the door lock cable. 3. Disconnect the electrical connector.

LIFTGATE UPPER TRIM FINISH PANEL REPLACEMENT

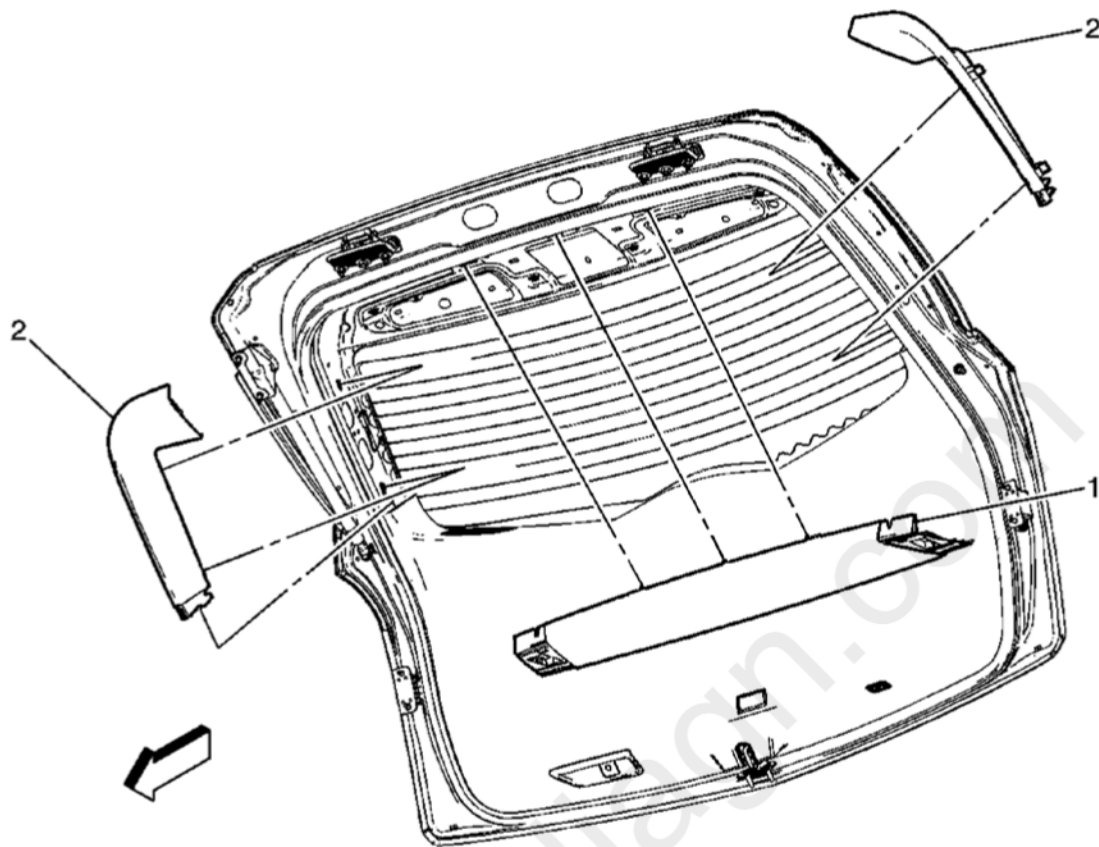


Fig. 28: Identifying Liftgate Upper Trim Finish Panel
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure	
1. Remove the liftgate lower trim finish panel. Refer to <u>Liftgate Lower Trim Finish Panel Replacement</u> .	
2. Remove upper and lower together. Separate after removal, if necessary.	
3. Pull outward to disengage the trim panel retainers.	
1	Liftgate Upper Trim Finish Panel Assembly
2	Liftgate Trim Finish Panel Assembly (Qty: 2)

LIFTGATE LOWER TRIM FINISH PANEL REPLACEMENT

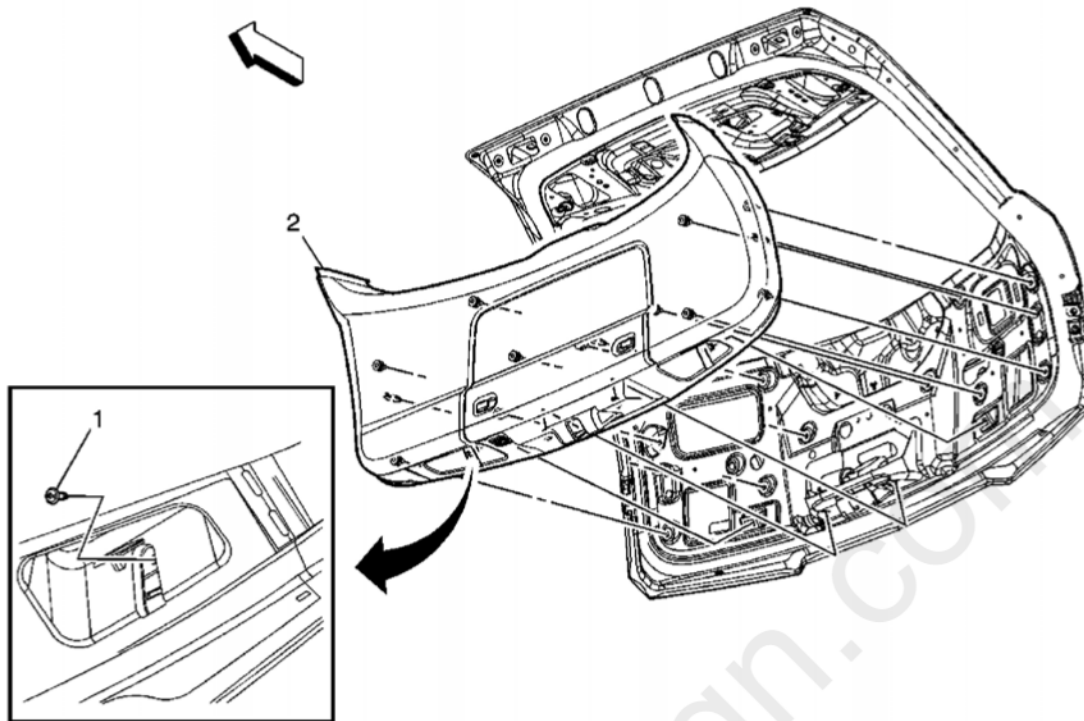


Fig. 29: View Of Liftgate Lower Trim Finish Panel
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure	
1. Remove the liftgate upper trim finish panel. Refer to <u>Liftgate Upper Trim Finish Panel Replacement</u>. 2. Remove upper and lower together. Separate after removal, if necessary. 3. Pull outward to disengage the trim panel retainers.	
1	Liftgate Lower Trim Finish Panel Fastener CAUTION: Refer to <u>Fastener Caution</u> .
2	Liftgate Lower Trim Finish Panel Assembly Procedure 1. Use a trim panel removal tool to aid in the removal of the trim panel from the liftgate assembly. 2. Disconnect the electrical connector, if equipped.

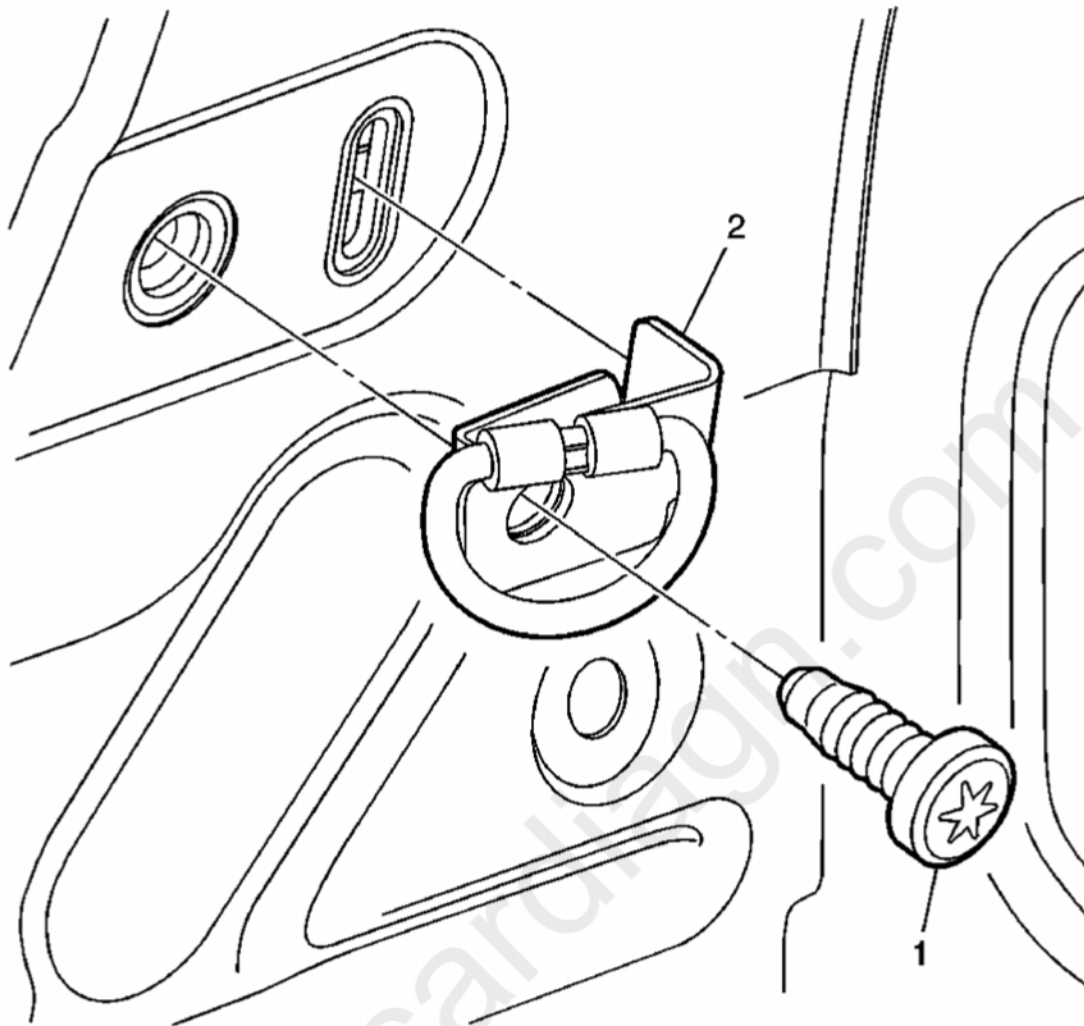


Fig. 30: Identifying Cargo Tie Down Hook & Fastener
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
1	Cargo Tie Down Loop Fastener CAUTION: Refer to <u>Fastener Caution</u> . Procedure: Remove the cargo tie down loop bezel to access the fastener. Tighten: 50 N.m (37 lb ft)
2	Cargo Tie Down Loop Assembly

QUARTER OUTER PANEL PRESSURE RELIEF VALVE REPLACEMENT

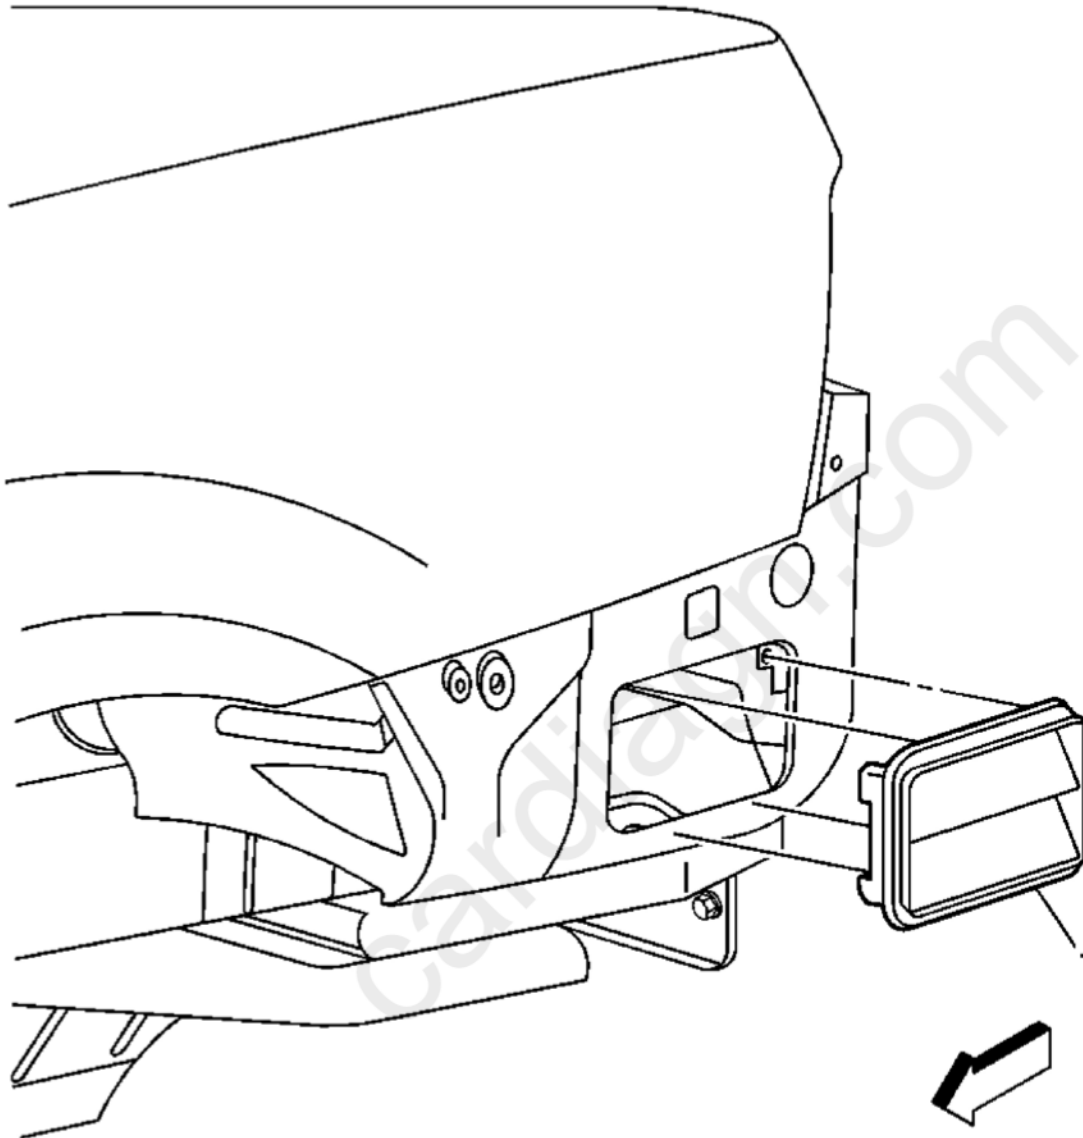


Fig. 31: Identifying Quarter Outer Panel Pressure Relief Valve
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedures	
1. Remove the rear bumper fascia. Refer to <u>Rear Bumper Fascia Replacement</u> .	
2. Reposition any wiring to gain access to pressure relief valve.	
1	Pressure Relief Valve

