

Fuses in engine compartment

From July 2018




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse holder A


- B Starter
- C Alternator
- SA Fuse holder A
- SA1 Fuse 1 on fuse holder A
- SA3 Fuse 3 on fuse holder A
- SA4 Fuse 4 on fuse holder A
- SA5 Fuse 5 on fuse holder A
- T1jz 1-pin connector, black
- 507 Threaded connection (30), on battery fuse holder

- * see applicable current flow diagram for voltage supply for fuses, battery, starter and alternator
- *2 For models with battery in engine compartment
- *3 Up to July 2019
- *4 For models with battery in luggage compartment
- *5 see applicable current flow diagram for fuses in interior
- *6 From July 2019

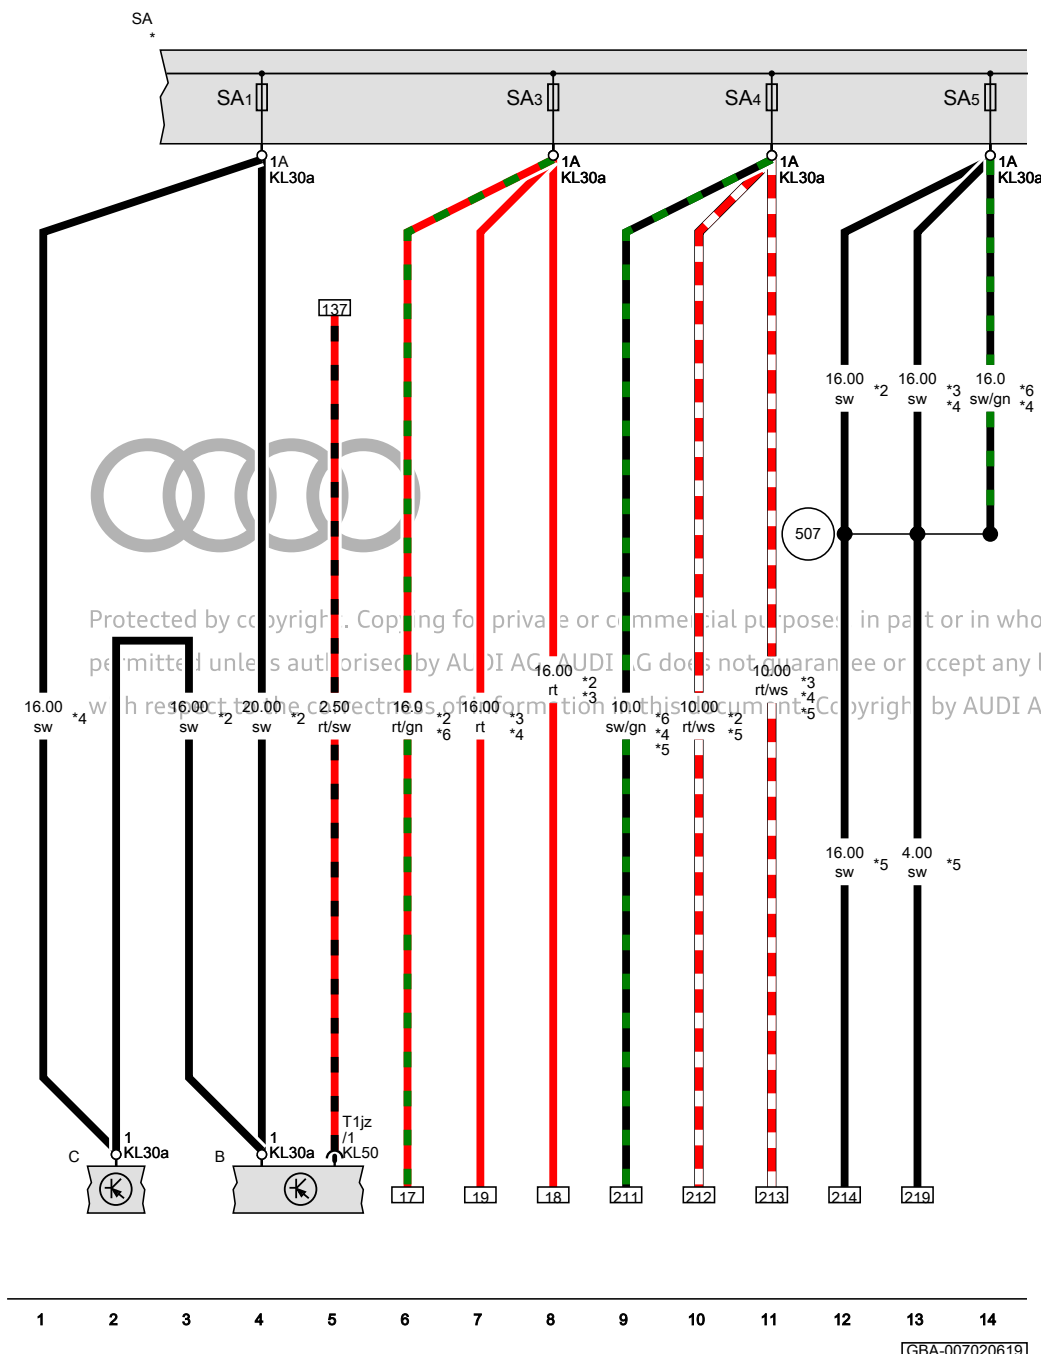

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

17SA-0070206191

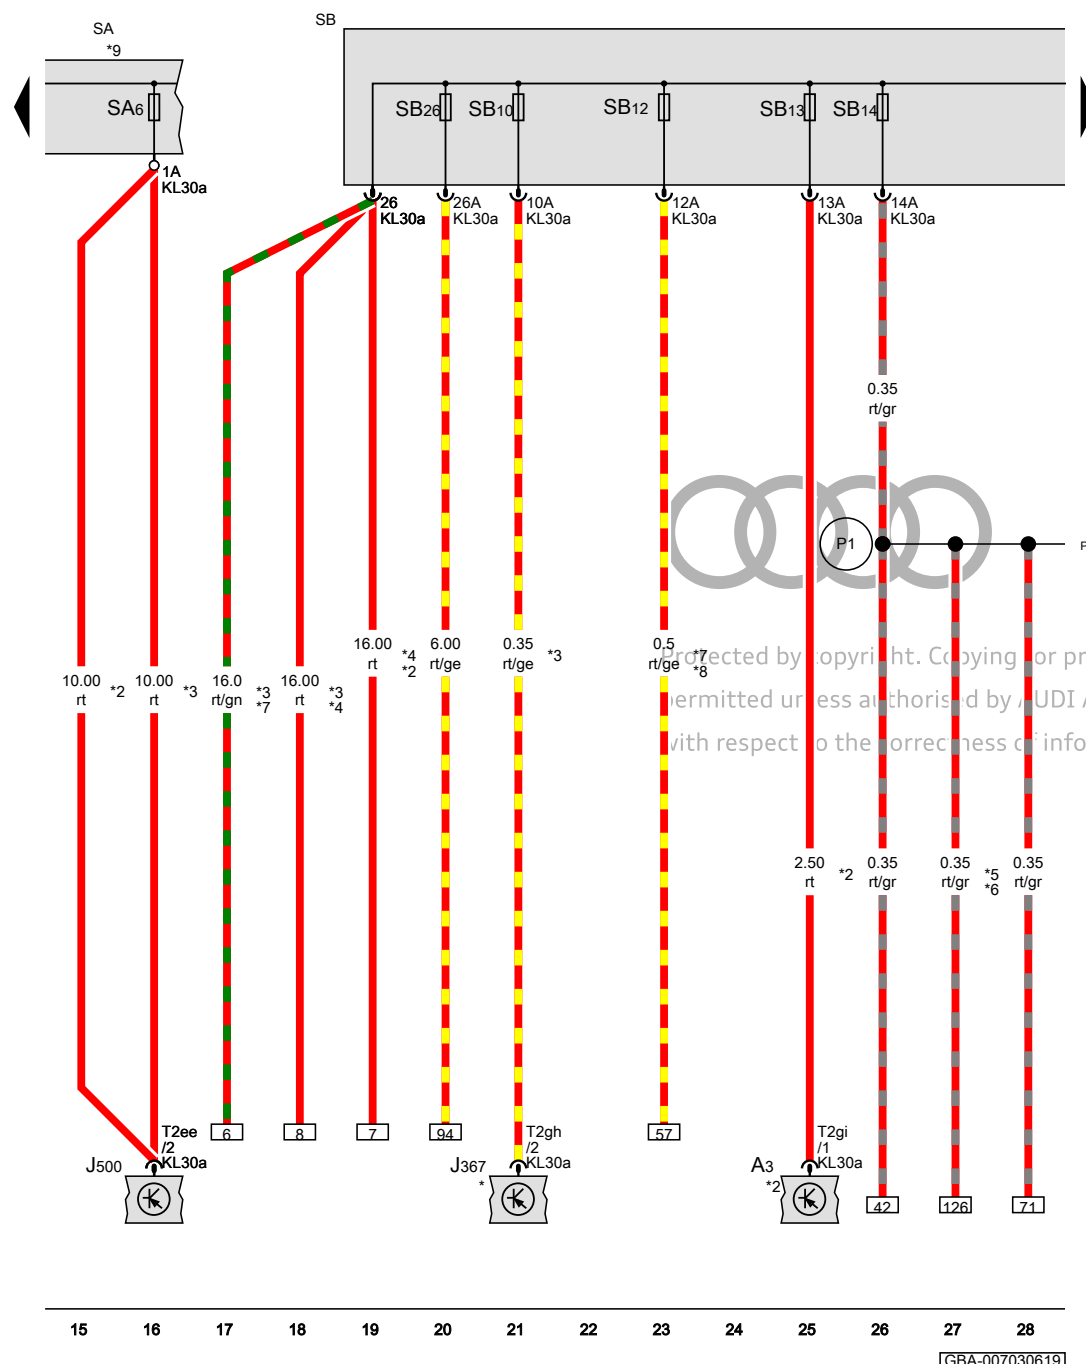


Fuse holder A, Fuse holder B

- A3 Front module vehicle battery
- J367 Battery monitor control unit
- J500 Power steering control unit
- SA Fuse holder A
- SA6 Fuse 6 on fuse holder A
- SB Fuse holder B
- SB10 Fuse 10 on fuse holder B
- SB12 Fuse 12 on fuse holder B
- SB13 Fuse 13 on fuse holder B
- SB14 Fuse 14 on fuse holder B
- SB26 Fuse 26 on fuse holder B
- T2ee 2-pin connector, black
- T2gh 2-pin connector, black
- T2gi 2-pin connector, black

P1 Positive connection (30), in battery fuse holder

- * see applicable current flow diagram for fuses in luggage compartment
- *2 For models with battery in luggage compartment
- *3 For models with battery in engine compartment
- *4 Up to July 2019
- *5 For models with 1.0l petrol engine
- *6 For models with 1.5l petrol engine
- *7 From July 2019
- *8 For emission standard Euro 6 DG
- *9 see applicable current flow diagram for voltage supply for fuses, battery, starter and alternator

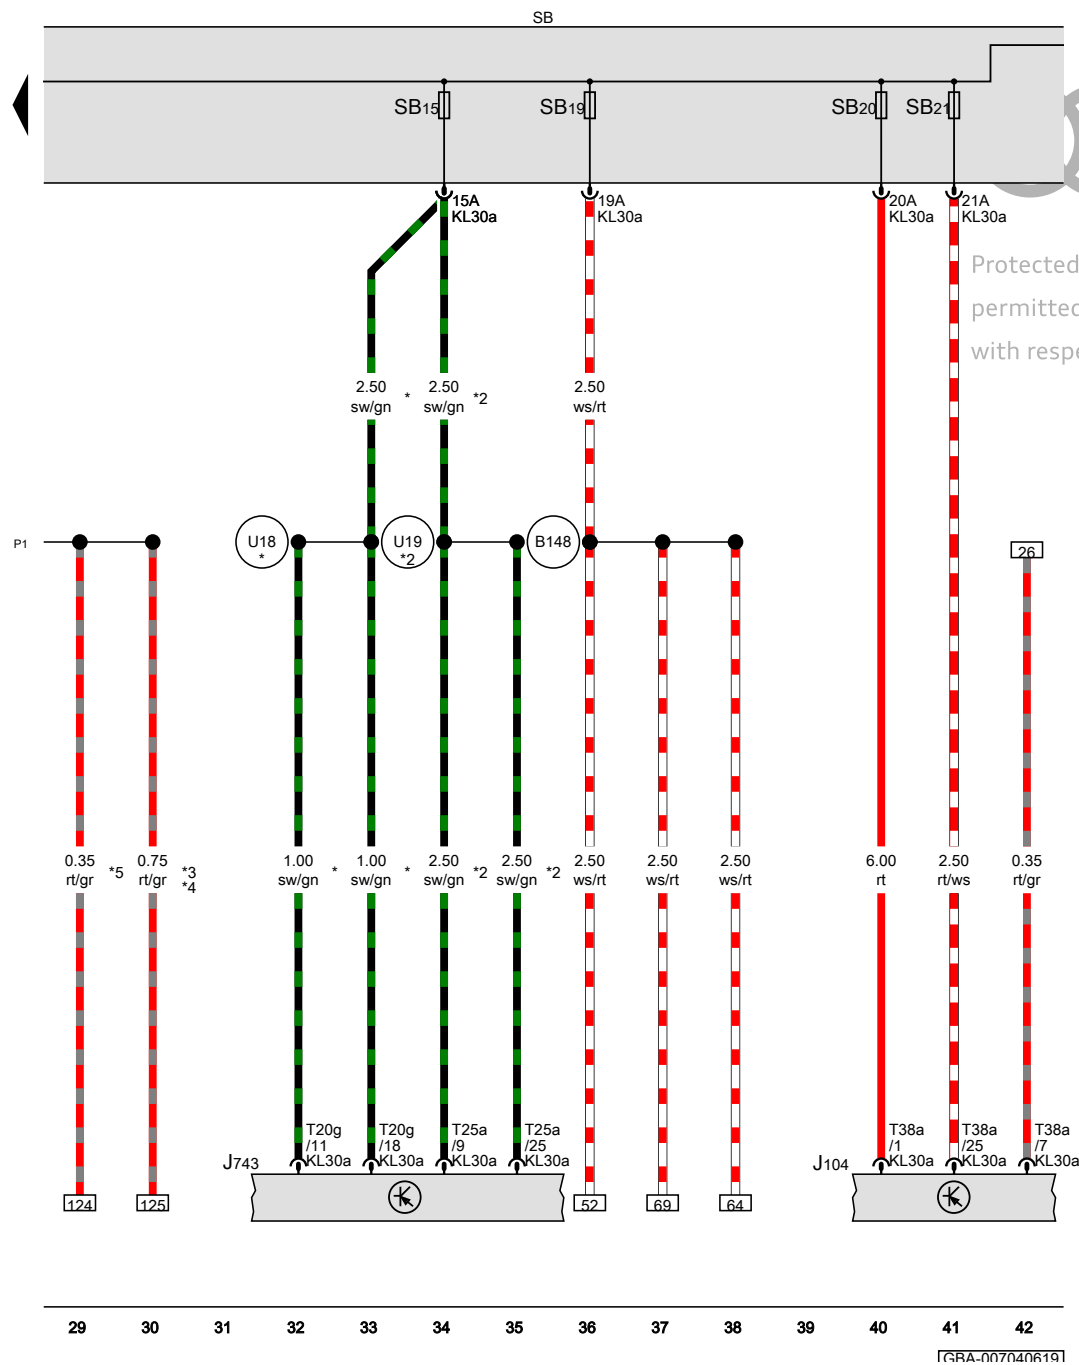

Fuse holder B


- J104 ABS control unit
- J743 Mechatronic unit for dual clutch gearbox
- SB Fuse holder B
- SB15 Fuse 15 on fuse holder B
- SB19 Fuse 19 on fuse holder B
- SB20 Fuse 20 on fuse holder B
- SB21 Fuse 21 on fuse holder B
- T20g 20-pin connector, black
- T25a 25-pin connector, black
- T38a 38-pin connector, brown

Protected by copyright. Copying for private use or for purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- B148 Positive connection 3 (87), in interior wiring harness
- P1 Positive connection (30), in battery fuse holder
- U18 Positive connection (30a), in automatic gearbox wiring harness
- U19 Positive connection 2 (30a) in automatic gearbox wiring harness

- * For models with dual clutch gearbox 0D9
- *2 For models with dual clutch gearbox 0CW
- *3 For models with 1.0l petrol engine
- *4 For models with 1.5l petrol engine
- *5 For models with 2.0l petrol engine

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

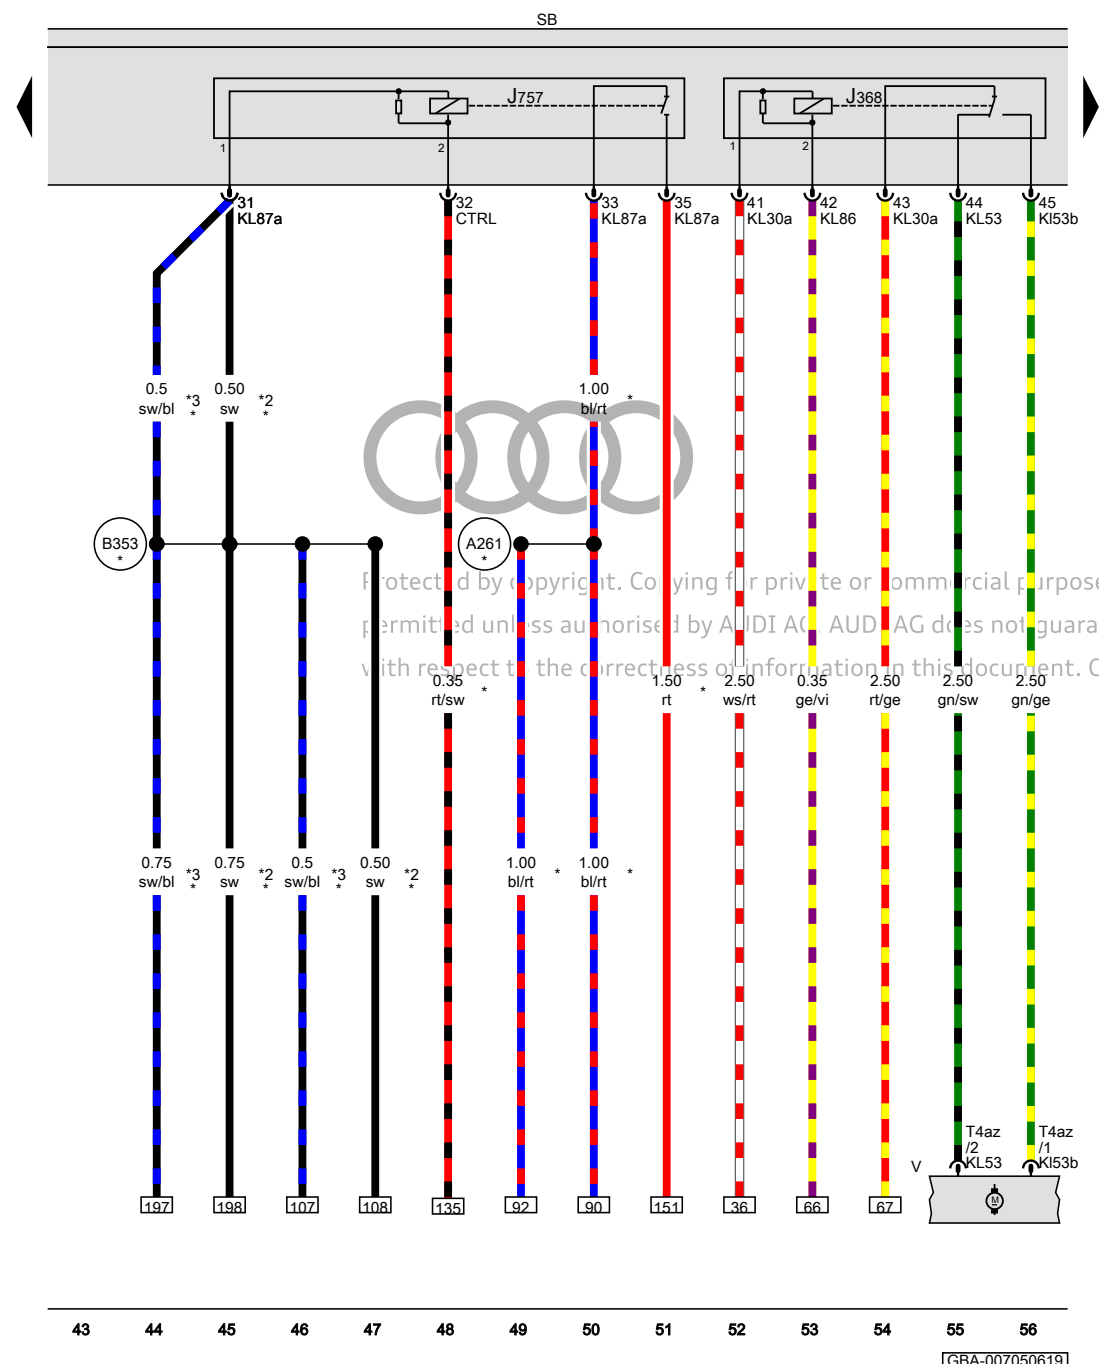

Wiper motor relay 1, Engine component current supply relay, Fuse holder B


- J368 Wiper motor relay 1
- J757 Engine component current supply relay
- SB Fuse holder B
- T4az 4-pin connector, black
- V Windscreen wiper motor

A261 Connection 5, in dash panel wiring harness

B353 Positive connection 4 (87a) in main wiring harness

- * For models with 2.0l petrol engine
- *2 Up to July 2019
- *3 From July 2019

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

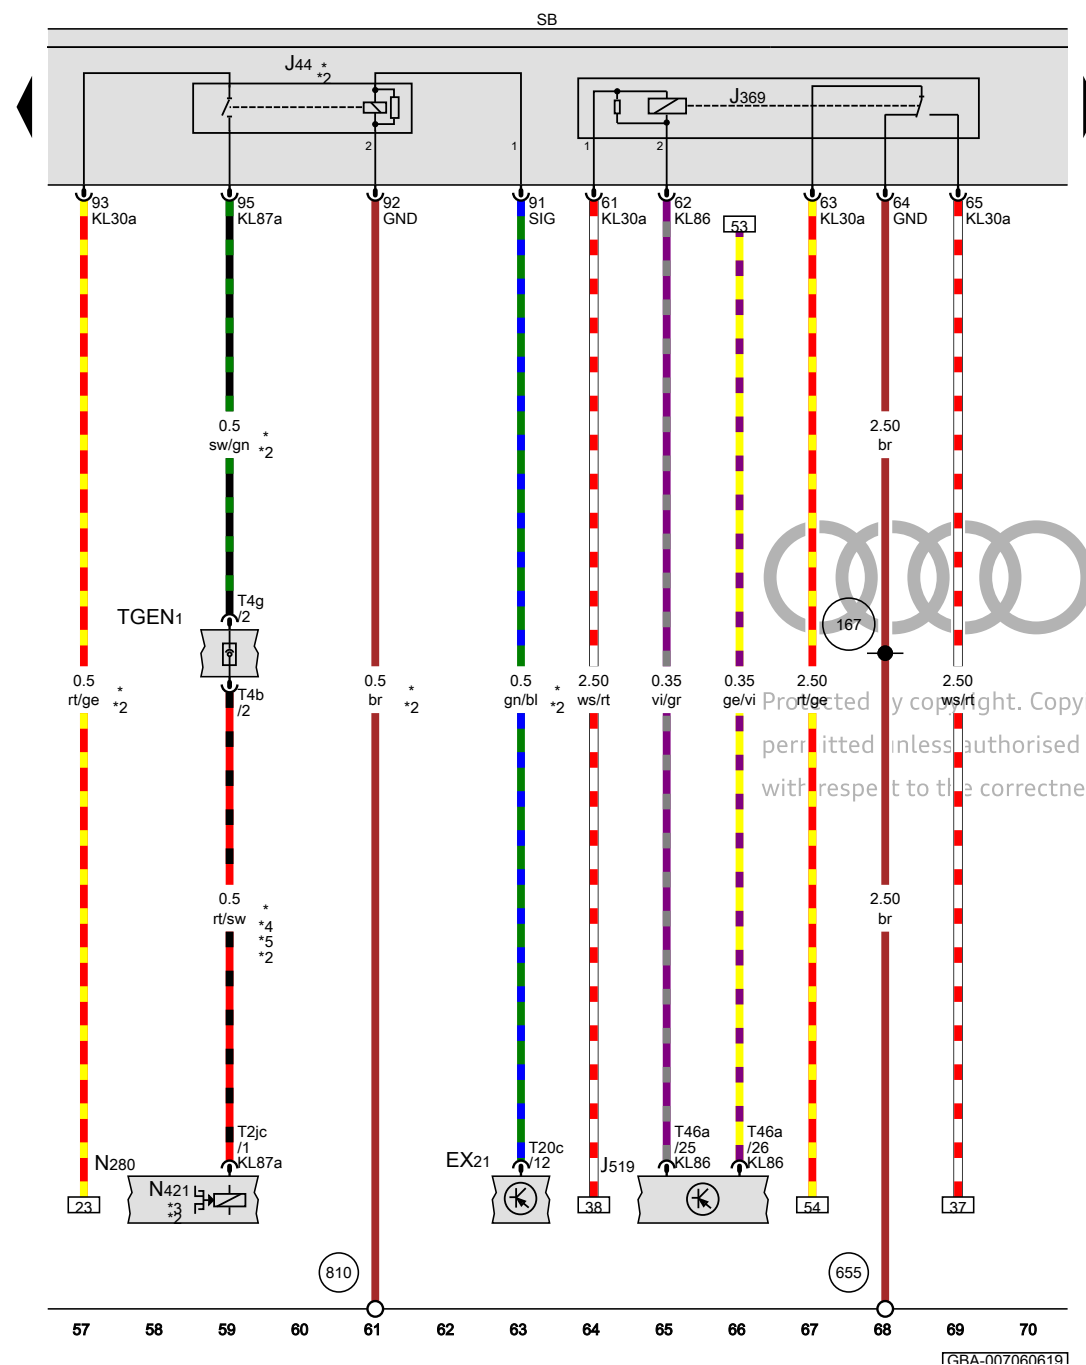

Heater and air conditioning controls, Magnetic clutch relay, Wiper motor relay 2, Air conditioner compressor regulating valve, Magnetic clutch for supercharger, Fuse holder B

- EX21 Heater and air conditioning controls
- J44 Magnetic clutch relay
- J369 Wiper motor relay 2
- J519 Onboard supply control unit
- N280 Air conditioner compressor regulating valve
- N421 Magnetic clutch for supercharger
- SB Fuse holder B
- T2jc 2-pin connector, brown
- T4b 4-pin connector, black
- T4g 4-pin connector, black
- T20c 20-pin connector, black
- T46a 46-pin connector, black
- TGEN1 Coupling point 1 for alternator

167 Earth connection 4, in engine compartment wiring harness


655 Earth point, on left headlight

810 Earth point on central tube for dash panel, centre left

- * From July 2019
- *2 For emission standard Euro 6 DG
- *3 Pre-wired component
- *4 For models with 1.0l petrol engine
- *5 For models with 1.5l petrol engine

Copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not assume any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

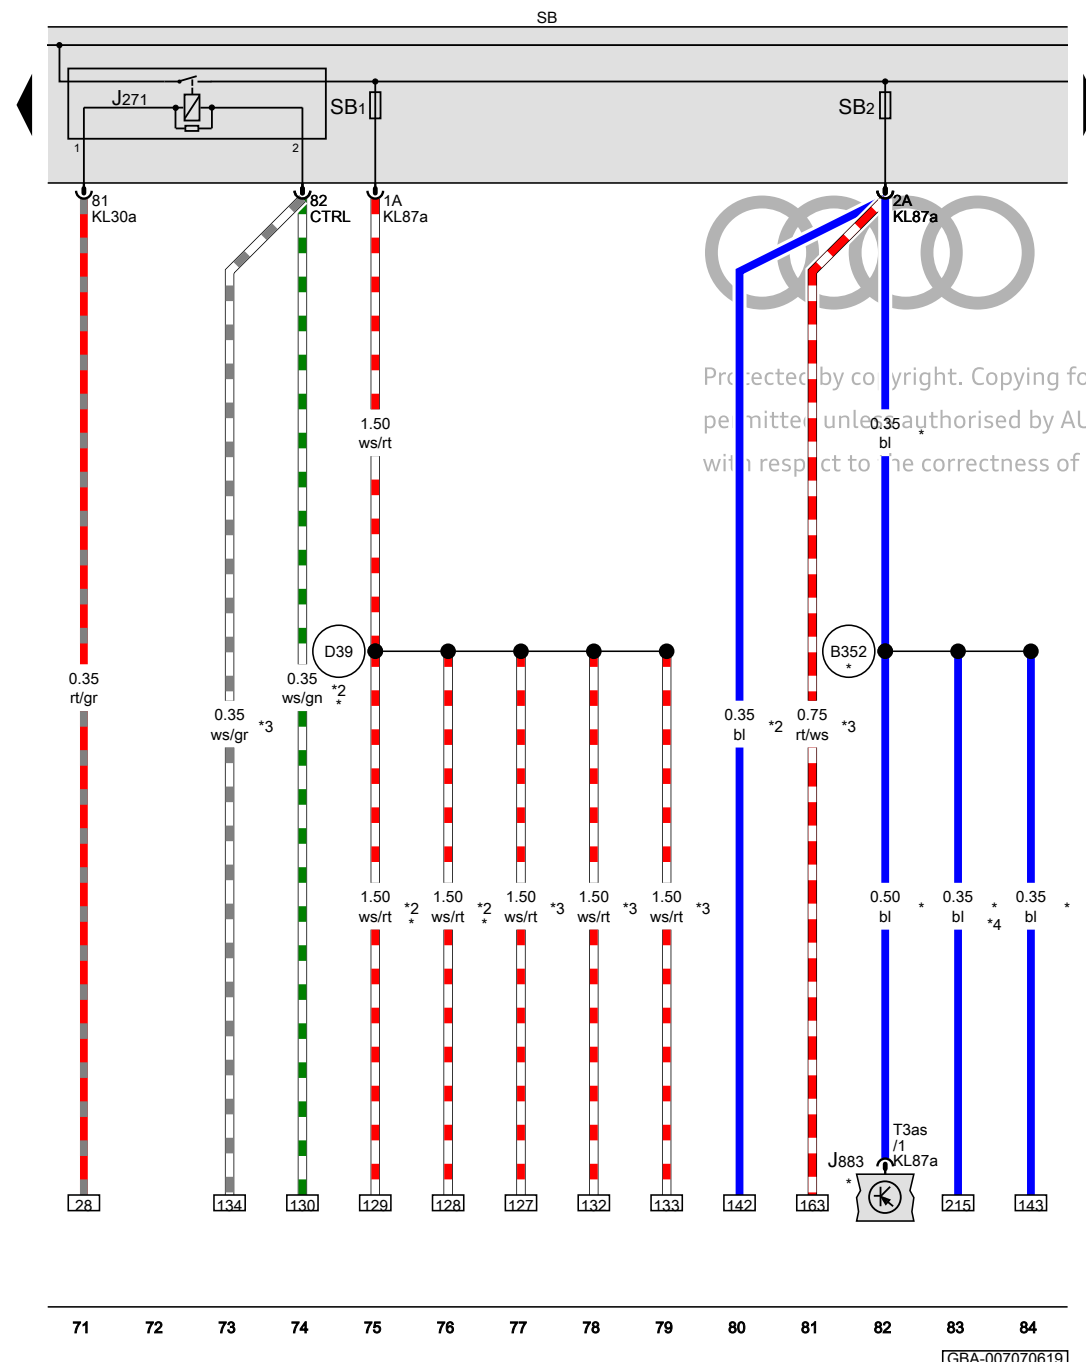

Main relay, Fuse holder B

- J271 Main relay
- J883 Exhaust flap control unit
- SB Fuse holder B
- SB1 Fuse 1 on fuse holder B
- SB2 Fuse 2 on fuse holder B
- T3as 3-pin connector, black

B352 Positive connection 3 (87a) in main wiring harness


D39 Connection 1, in engine prewiring harness

- * For models with 1.5l petrol engine
- *2 For models with 1.0l petrol engine
- *3 For models with 2.0l petrol engine
- *4 see applicable current flow diagram for fuses in interior

Protected by copyright. Copying for private or commercial purposes without the written permission of Audi AG is prohibited. Audi AG does not guarantee the accuracy of the information with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[6BA-007070619]

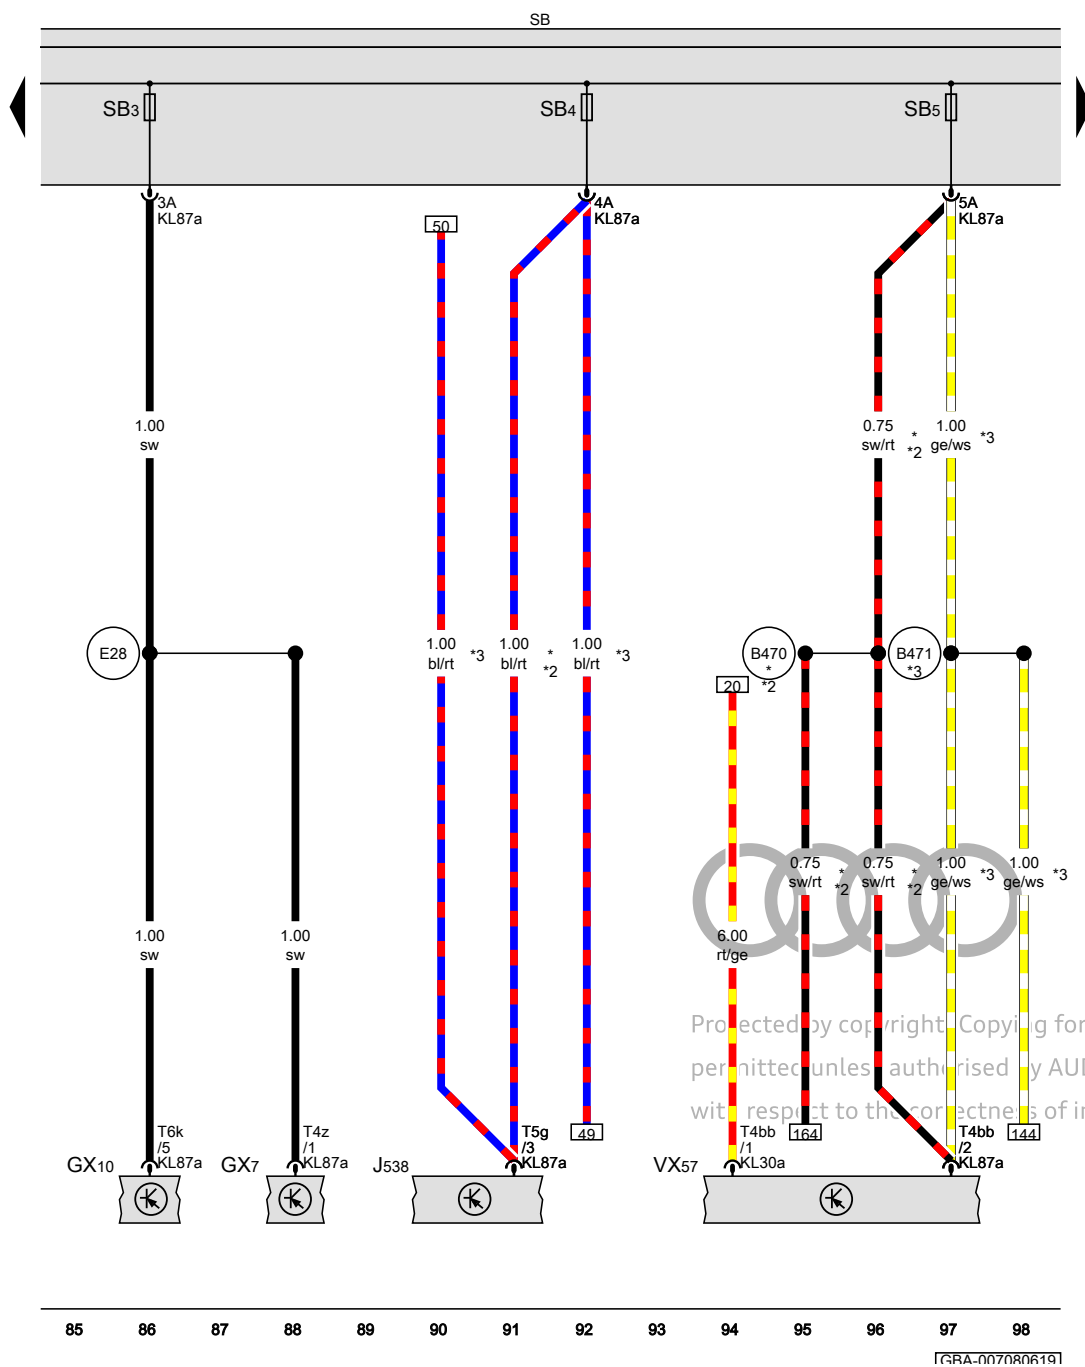

Fuse holder B

- | | |
|------|---|
| GX7 | Lambda probe 1 after catalytic converter |
| GX10 | Lambda probe 1 before catalytic converter |
| J538 | Fuel pump control unit |
| SB | Fuse holder B |
| SB3 | Fuse 3 on fuse holder B |
| SB4 | Fuse 4 on fuse holder B |
| SB5 | Fuse 5 on fuse holder B |
| T4bb | 4-pin connector, black |
| T4z | 4-pin connector, black |
| T5g | 5-pin connector, black |
| T6k | 6-pin connector, black |
| VX57 | Radiator fan |

(B470) Connection 6, in main wiring harness

(B471) Connection 7, in main wiring harness


(E28) Connection (Lambda probe heating), in Motronic wiring harness

* For models with 1.0l petrol engine

*2 For models with 1.5l petrol engine

*3 For models with 2.0l petrol engine


ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	purple
vi	=	purple
ge	=	yellow
or	=	orange
rs	=	pink

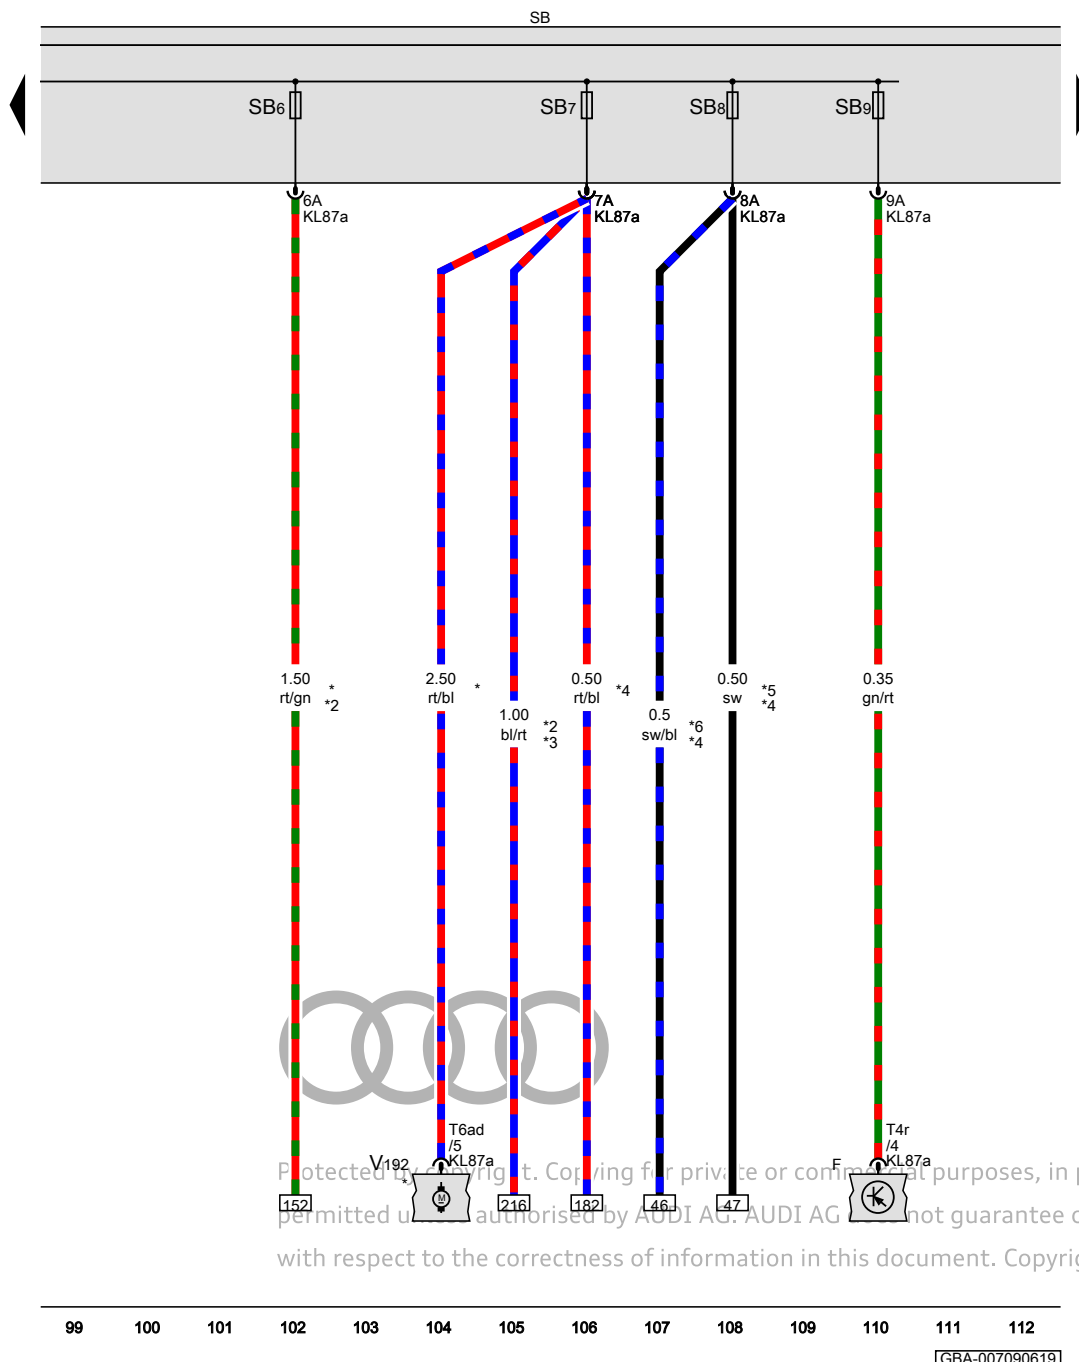

Fuse holder B

- F Brake light switch
- SB Fuse holder B
- SB6 Fuse 6 on fuse holder B
- SB7 Fuse 7 on fuse holder B
- SB8 Fuse 8 on fuse holder B
- SB9 Fuse 9 on fuse holder B
- T4r 4-pin connector, black
- T6ad 6-pin connector, black
- V192 Vacuum pump for brakes
- * For models with 1.0l petrol engine
- *2 For models with 1.5l petrol engine
- *3 see applicable current flow diagram for fuses in interior
- *4 For models with 2.0l petrol engine
- *5 Up to July 2019
- *6 From July 2019

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

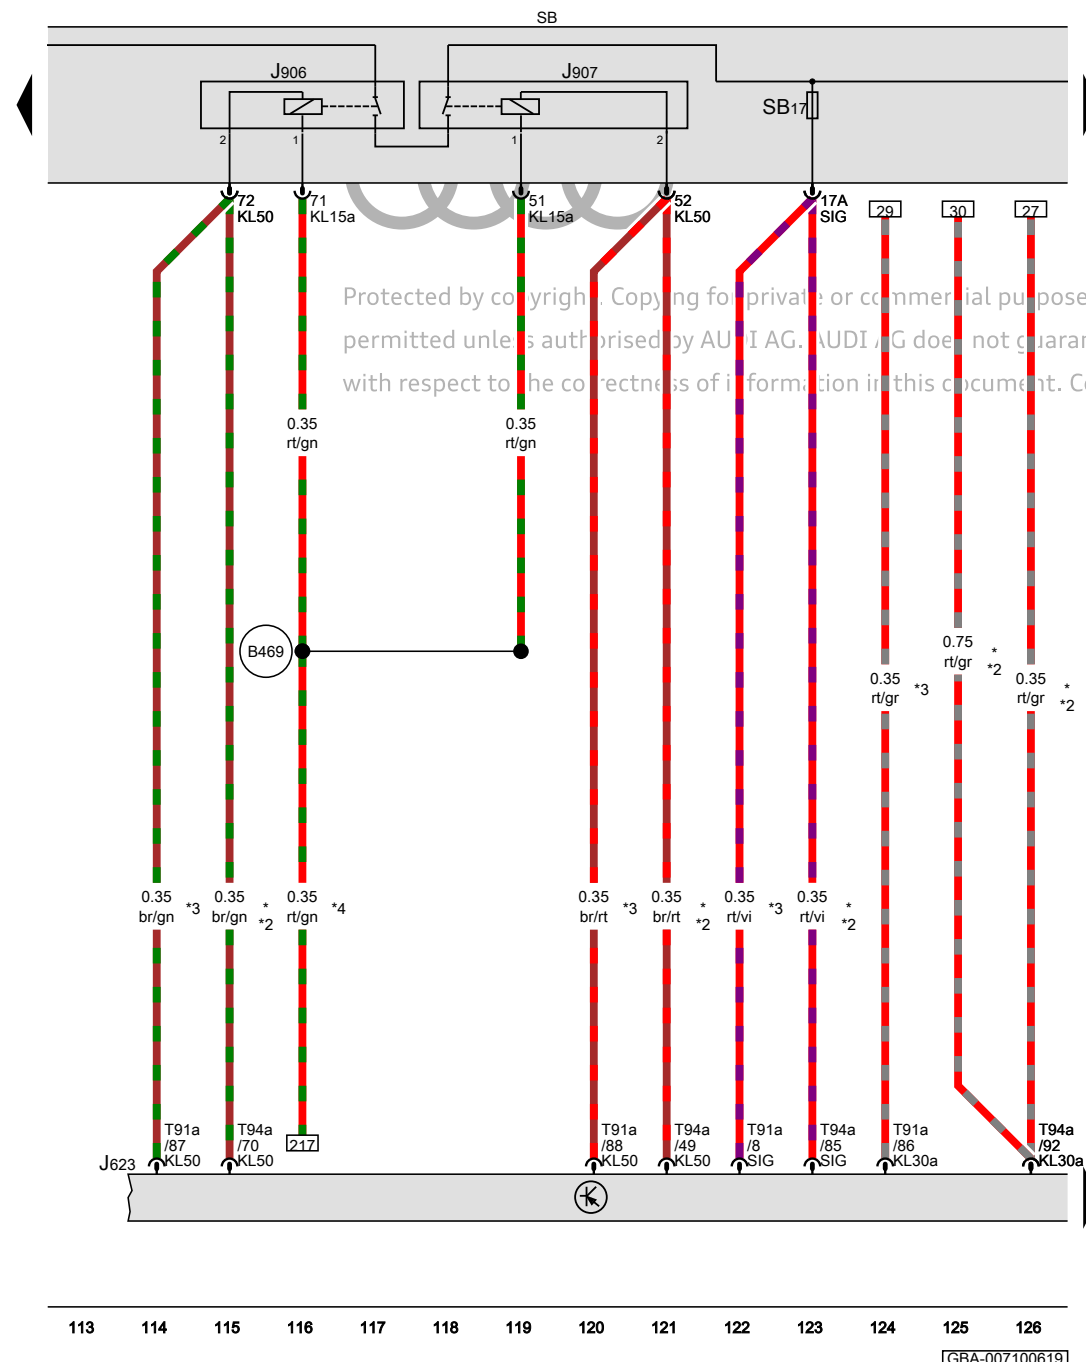


Starter relay 1, Starter relay 2, Fuse holder B

- J623 Engine/motor control unit
- J906 Starter relay 1
- J907 Starter relay 2
- SB Fuse holder B
- SB17 Fuse 17 on fuse holder B
- T91a 91-pin connector, black
- T94a 94-pin connector, black

B469 Connection 5, in main wiring harness

- * For models with 1.0l petrol engine
- *2 For models with 1.5l petrol engine
- *3 For models with 2.0l petrol engine
- *4 see applicable current flow diagram for fuses in interior

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

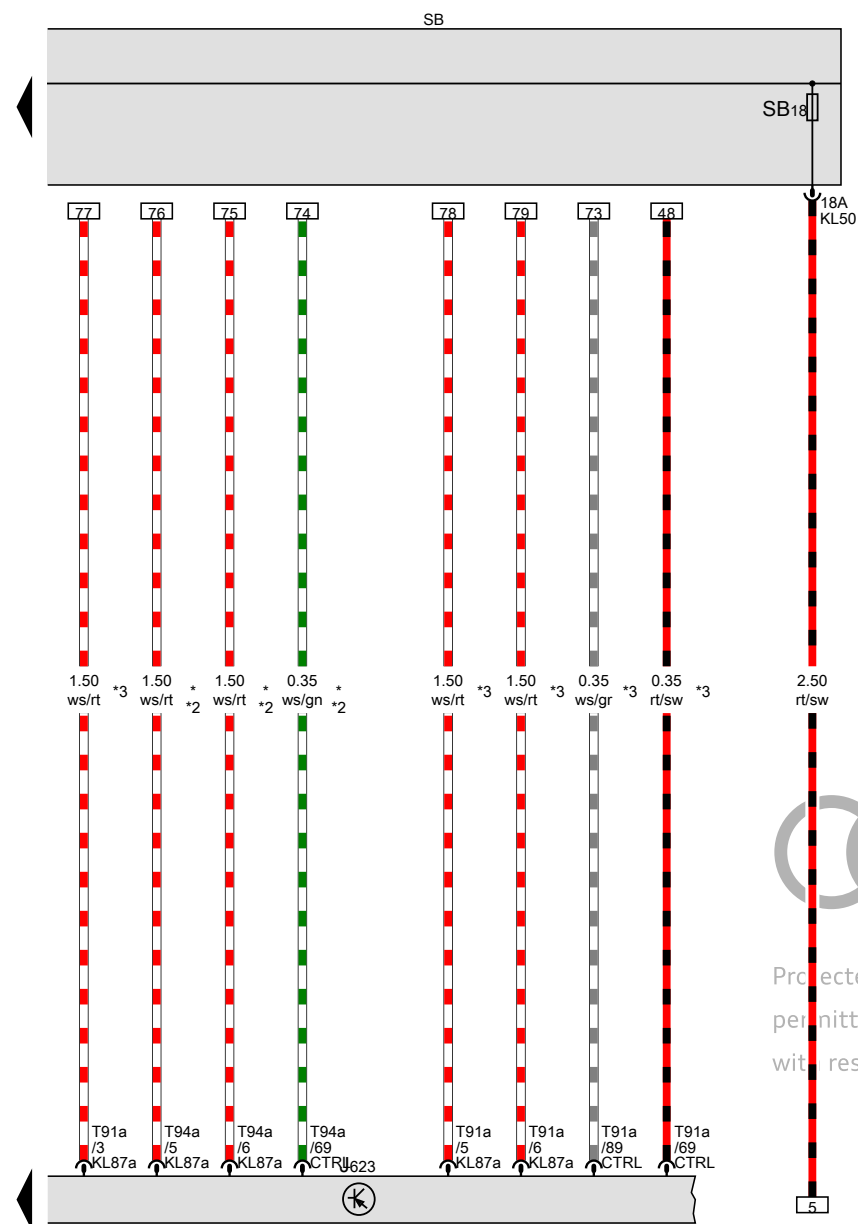

Fuse holder B

- J623 Engine/motor control unit
- SB Fuse holder B
- SB18 Fuse 18 on fuse holder B
- T91a 91-pin connector, black
- T94a 94-pin connector, black
- * For models with 1.0l petrol engine
- *2 For models with 1.5l petrol engine
- *3 For models with 2.0l petrol engine



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

127 128 129 130 131 132 133 134 135 136 137 138 139 140

[6BA-007110610]

Coupling point 1 for engine prewiring harness


- N127 Ignition coil 2 with output stage
- N249 Turbocharger air recirculation valve
- N291 Ignition coil 3 with output stage
- N316 Intake manifold flap valve
- N428 Valve for oil pressure control
- N522 Piston cooling jet control valve
- T2cv 2-pin connector, black
- T2dg 2-pin connector, black
- T2dt 2-pin connector, black
- T2dx 2-pin connector, black
- T3bc 3-pin connector, black
- T4aq 4-pin connector, black
- T4ar 4-pin connector, black
- T14q 14-pin connector, grey
- TMOVO1 Coupling point 1 for engine prewiring harness
- V51 Continued coolant circulation pump
- V188 Charge air cooling pump

(D25) Positive connection (15), in engine prewiring harness

(D173) Connection (87), in engine prewiring harness

(D206) Connection 4 (87a) in engine prewiring harness

- * For models with 1.0l petrol engine
- *2 For models with 1.5l petrol engine
- *3 see applicable current flow diagram for engine
- *4 For models with 2.0l petrol engine

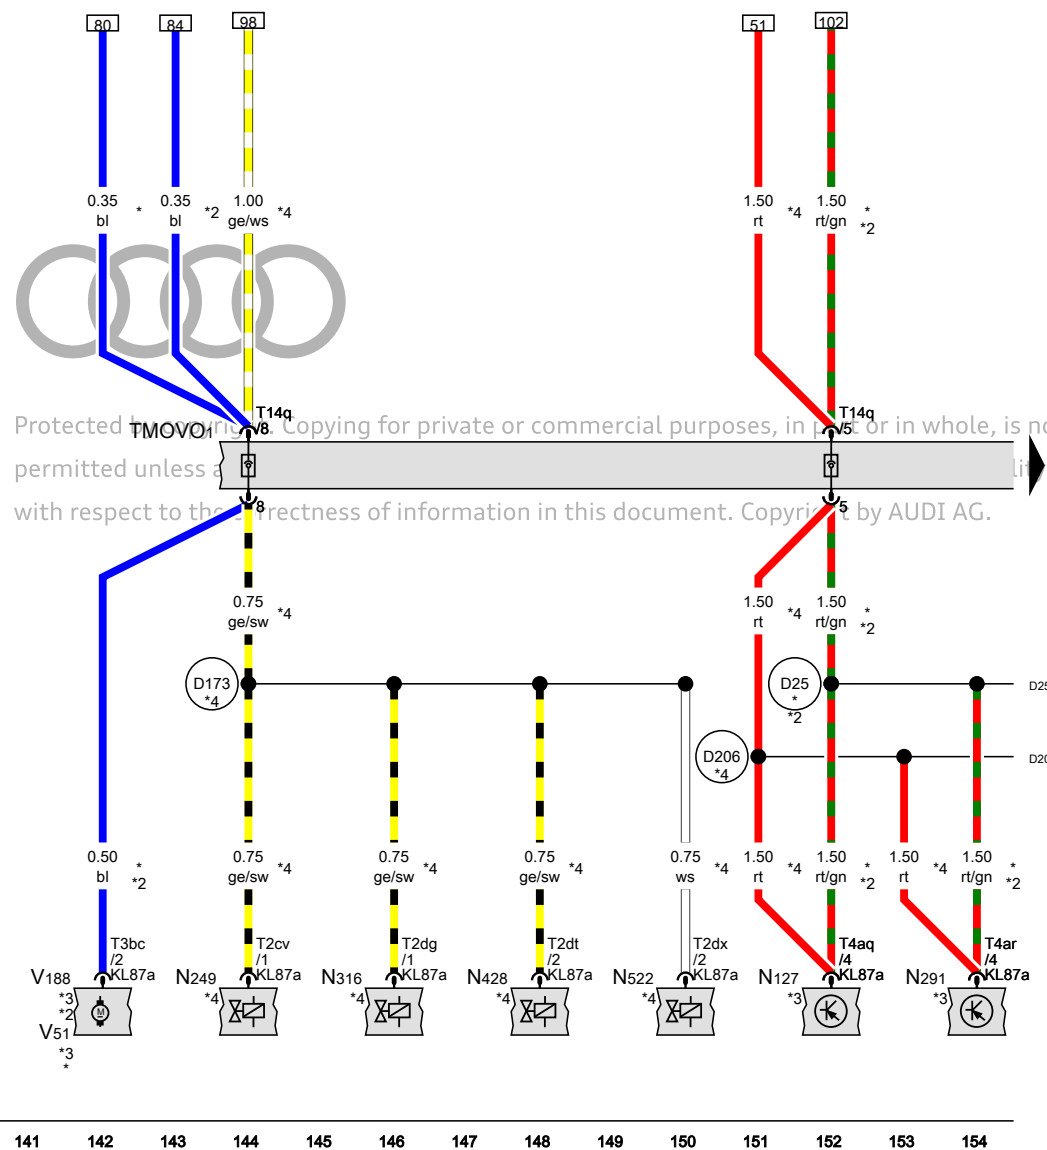


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

16BA-007120R101

Coupling point 1 for engine prewiring harness

- N70 Ignition coil 1 with output stage
- N80 Activated charcoal filter solenoid valve 1
- N205 Camshaft control valve 1
- N292 Ignition coil 4 with output stage
- T2cr 2-pin connector, black
- T2cu 2-pin connector, black
- T2ec 2-pin connector, black
- T2ed 2-pin connector, black
- T3bd 3-pin connector, black
- T4as 4-pin connector, black
- T4at 4-pin connector, black
- T14q 14-pin connector, grey
- TMOVO1 Coupling point 1 for engine prewiring harness
- V51 Continued coolant circulation pump

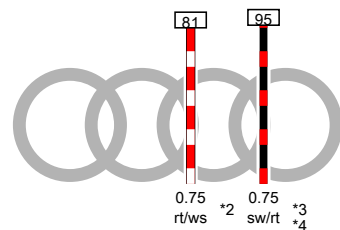

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

TMOVO1

T14q

V6

6

0.75

rt/ws

*2

0.75

sw/rt

*3

*4

D109

0.75

rt/ws

*2

0.75

sw/rt

*3

*4

V51

T3bd

T2

KL87a

N205

T2cu

T2

KL87a

T2cr

T1

KL87a

N80

T2ed

T1

KL87a

T2ec

T1

KL87a

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

155 156 157 158 159 160 161 162 163 164 165 166 167 168

168BA-0071306191

Coupling point 1 for engine prewiring harness


- N318 Exhaust camshaft control valve 1
- N428 Valve for oil pressure control
- N488 Coolant valve for gearbox
- N583 Inlet cam actuator for cylinder 2
- N587 Exhaust cam actuator for cylinder 2
- N591 Inlet cam actuator for cylinder 3
- N595 Exhaust cam actuator for cylinder 3
- T2dh 2-pin connector, black
- T2dv 2-pin connector, black
- T2dw 2-pin connector, black
- T3av 3-pin connector, black
- T3aw 3-pin connector, black
- T3ax 3-pin connector, black
- T3ay 3-pin connector, black
- T14q 14-pin connector, grey

TMOVO1 Coupling point 1 for engine prewiring harness

D109 Connection 7 in engine compartment wiring harness

D196 Connection 2 (87a) in engine prewiring harness

- * see applicable current flow diagram for engine
- *2 For models with 1.5l petrol engine
- *3 For models with 2.0l petrol engine
- *4 For models with 1.0l petrol engine

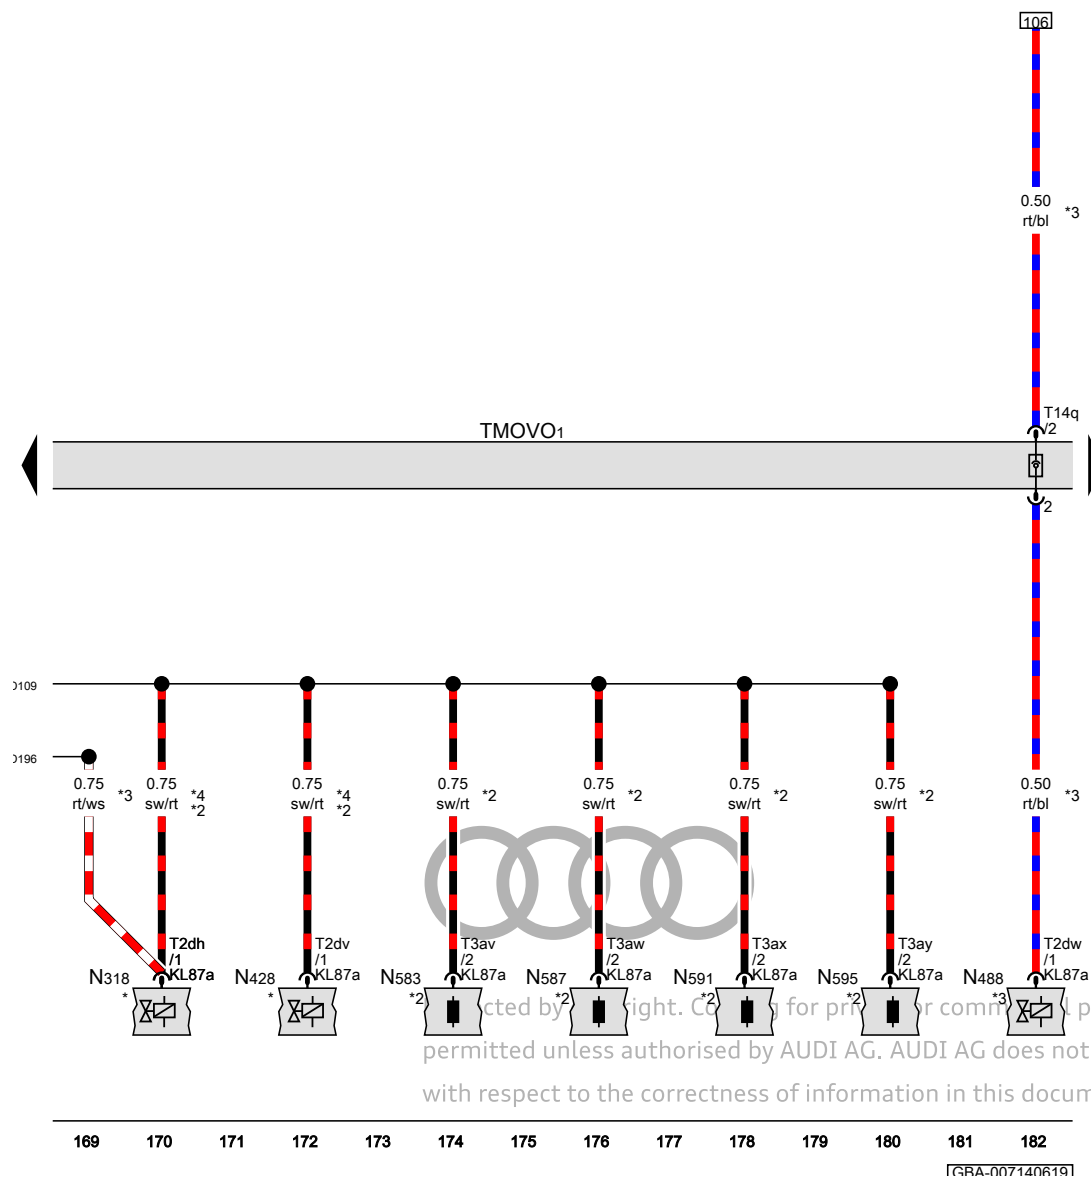

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


 
Coupling point 1 for engine prewiring harness

- F366 Cam adjustment actuator 1
- F367 Cam adjustment actuator 2
- F368 Cam adjustment actuator 3
- F369 Cam adjustment actuator 4
- F370 Cam adjustment actuator 5
- F371 Cam adjustment actuator 6
- F372 Cam adjustment actuator 7
- T2ac 2-pin connector, black
- T2ae 2-pin connector, black
- T2ag 2-pin connector, black
- T2ai 2-pin connector, black
- T2ak 2-pin connector, black
- T2am 2-pin connector, black
- T2ao 2-pin connector, black

TMOVO1 Coupling point 1 for engine prewiring harness

D189 Connection (87a) in engine prewiring harness

* For models with 2.0l petrol engine

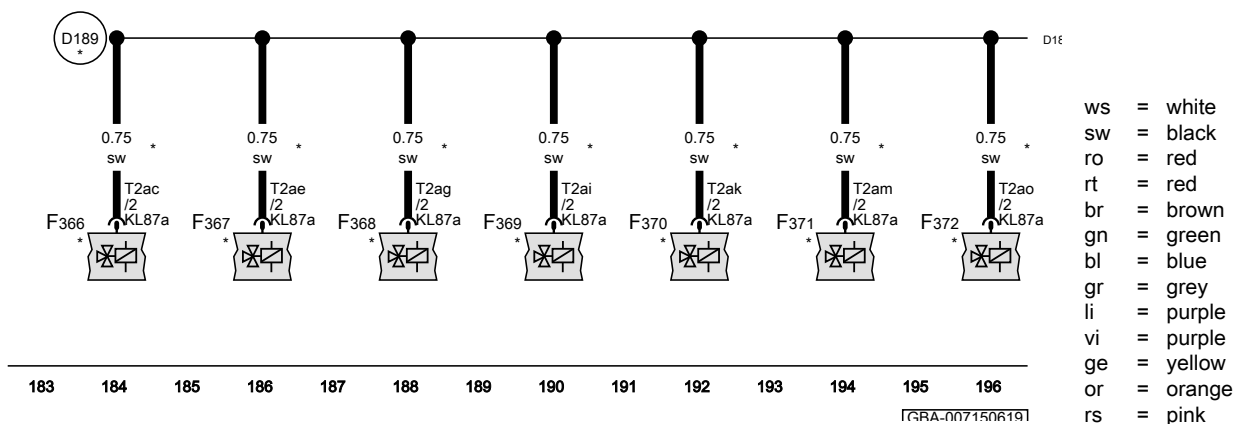

Coupling point 1 for engine prewiring harness


- F373 Cam adjustment actuator 8
- N532 Injector 2, cylinder 1
- N533 Injector 2, cylinder 2
- N534 Injector 2, cylinder 3
- N535 Injector 2, cylinder 4
- T2aq 2-pin connector, black
- T2dy 2-pin connector, black
- T2dz 2-pin connector, black
- T2ea 2-pin connector, black
- T2eb 2-pin connector, black
- T8d 8-pin connector, black
- T8j 8-pin connector, black
- T14q 14-pin connector, grey

TMOVO1 Coupling point 1 for engine prewiring harness
TMOAD2 Coupling point 2 for engine prewiring harness, adapter wire

D140 Connection (injectors), in engine prewiring harness

D189 Connection (87a) in engine prewiring harness

- * For models with 2.0l petrol engine
- *2 Up to July 2019
- *3 From July 2019

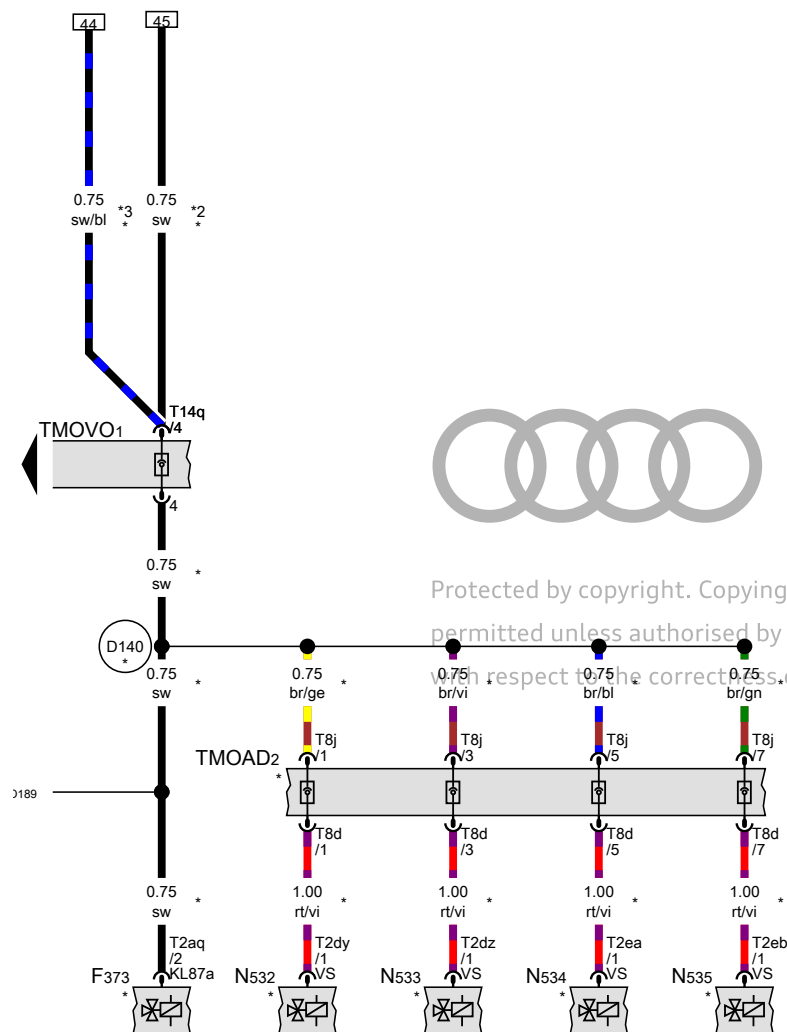


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Vacuum pump relay, Relay for power sockets, Fuse holder C

- J318 Vacuum pump relay
- J807 Relay for power sockets
- SC Fuse holder C
- SC42 Fuse 42 on fuse holder C
- * see applicable current flow diagram for fuses in interior
- *2 For models with battery in engine compartment
- *3 Up to July 2019
- *4 For models with battery in luggage compartment
- *5 For models with 1.5l petrol engine
- *6 From July 2019

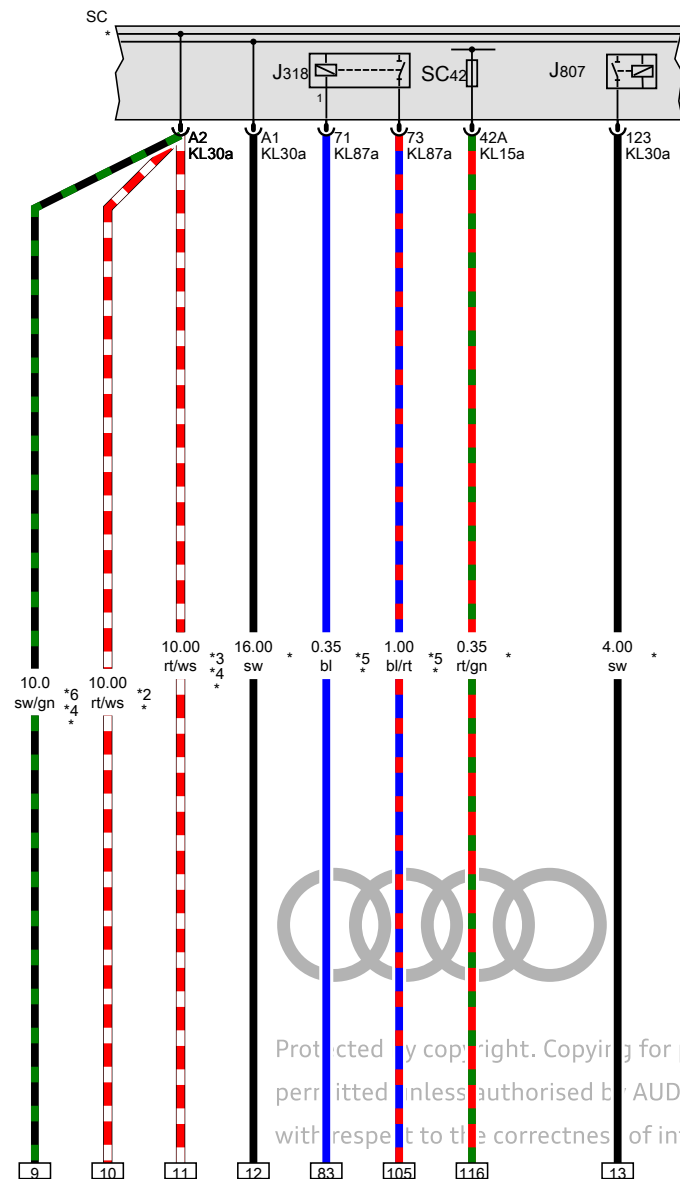

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.