



Body Hardware and Trim



Section02

Floor Coverings and Headlinings
Exterior Trim

Instrument Panel and Console Trim
Interior Trim and Paneling





Floor Coverings and Headlinings



- Floor Carpet Drying
- Floor Panel Carpet Replacement
- Headlining Trim Panel Replacement (C100/Long Body)

- Headlining Trim Panel Replacement (C105/Short Body)
- Fastener Tightening Specifications



Floor Carpet Drying

If the carpet or the pad or insulator is wet, use the following criteria for drying or for replacing the components.

- For a 1-piece carpet assembly bonded to a cotton or a fiber padding, replace the entire assembly.
- For a 2-piece carpet assembly with a cotton or a fiber padding, replace the padding only. While the carpet is out of the vehicle, dry the carpet using the method described below.
- For a 1-piece carpet assembly bonded to a foam padding or attached to a synthetic padding, dry the carpet using the method described below.
- For a 2-piece carpet assembly with a synthetic padding, dry the assembly using the method described below.

Drying Method


1. If you observe puddles of liquid on the carpet face, use a wet vacuum to remove the excess moisture.
2. Blot the face of the carpet with a towel in order to absorb as much moisture as possible.
3. Point a fan at the affected area and air dry the carpet.

Floor Panel Carpet Replacement


Removal Procedure

Caution: Refer to [Battery Disconnect Caution](#) in the Preface section.


- 1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
- 2. Remove the rear seat . Refer to [Rear Seat Replacement](#) and [Rear Number 2 Folding Seat Replacement](#) .
- 3. Remove the left and the right rear door sill plates. Refer to [Rear Side Door Sill Plate Replacement](#) .

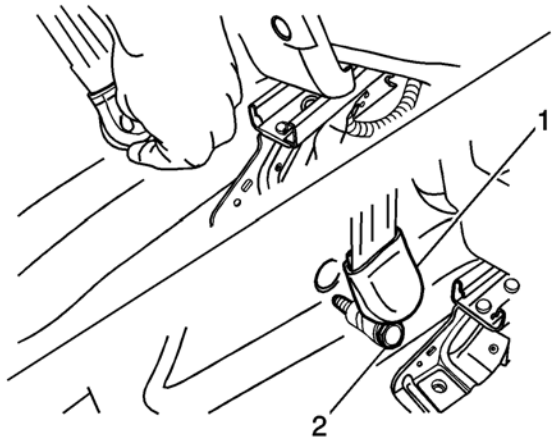

- 4. Remove the bolts (2) and the left and the right lower front seat belt anchors (1) from the center pillar garnish molding.
- 5. Remove the left and the right front door sill plates. Refer to [Front Side Door Sill Plate Replacement](#) .
- 6. Remove the left and the right center pillar lower garnish molding. Refer to [Center Pillar Lower Garnish Molding Replacement](#) .
- 7. Remove the front seats. Refer to [Bucket Seat Replacement](#) .
- 8. Remove the floor console. Refer to [Console Replacement](#) .

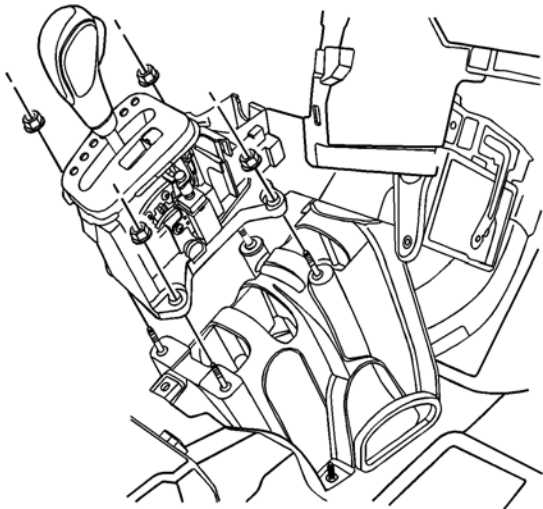


- 9. Remove the gearshift housing bolts and reposition the gearshift housing.
- 10. Remove the floor carpet retaining clips.

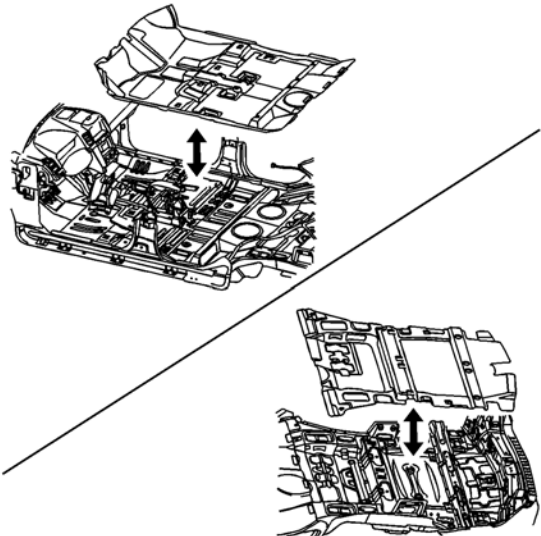


- 11. Remove the floor carpet.

Installation Procedure

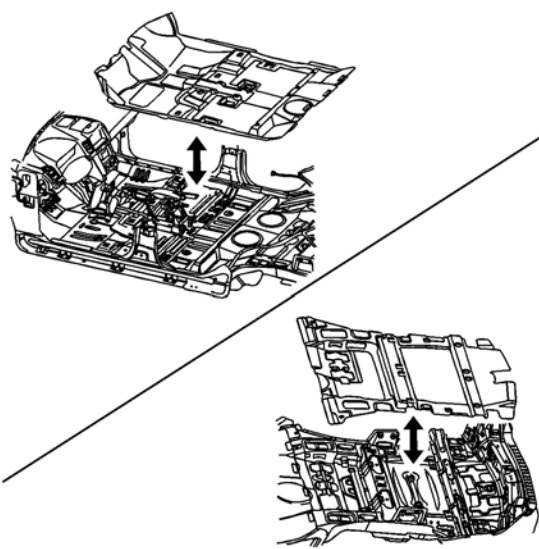

1. Install the floor carpet.
2. Install the floor carpet retaining clips.

Notice: Refer to [Fastener Notice](#) in the Preface section.

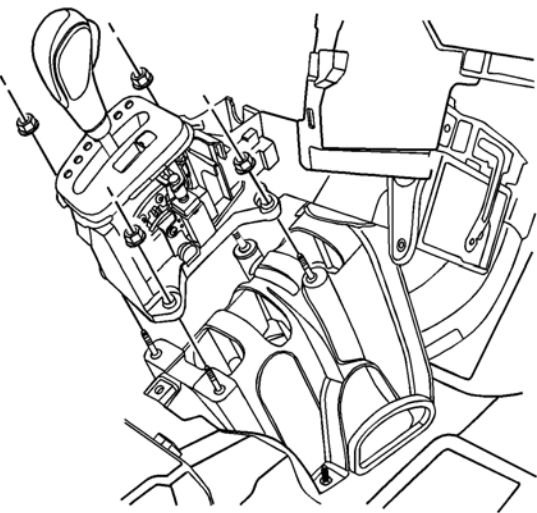


3. Install the gearshift housing with the bolts.

Tighten

Tighten the gearshift housing bolts to 8 N·m (70 lb in).

4. Install the floor console. Refer to [Console Replacement](#) .
5. Install the front seats. Refer to [Bucket Seat Replacement](#) .
6. Remove the left and the right center pillar lower garnish molding. Refer to [Center Pillar Lower Garnish Molding Replacement](#) .
7. Install the left and the right front door sill plates. Refer to [Front Side Door Sill Plate Replacement](#) .

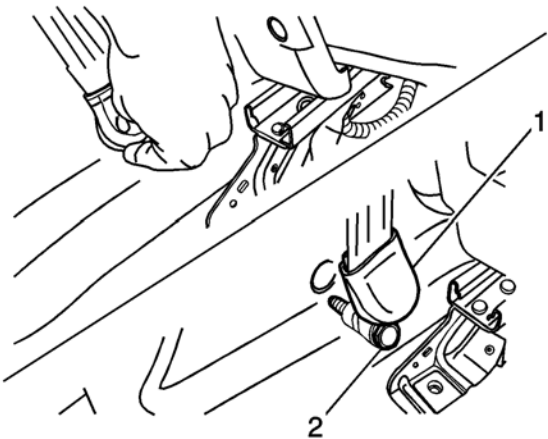

8. Install the left and the right lower front seat belt anchors (1) to the center pillar garnish molding with the bolts (2).


Tighten

Tighten the seat belt anchor bolts to 38 N·m (28 lb ft).

9. Install the left and the right rear door sill plates. Refer to [Rear Side Door Sill Plate Replacement](#) .
10. Install the rear seat . Refer to [Rear Seat Replacement](#) and [Rear Number 2 Folding Seat Replacement](#) .
11. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .


Headlining Trim Panel Replacement (C100/Long Body)

Removal Procedure

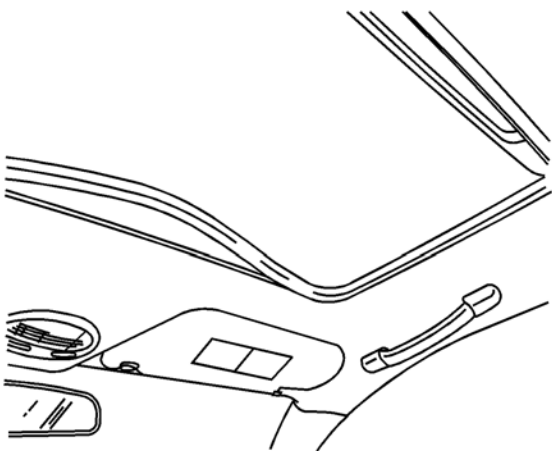


1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the sunroof molding, if equipped.
3. Remove the passenger assist handles. Refer to [Assist Handle Replacement](#) .
4. Remove the plastic retaining clips in the headliner on the driver's side.
5. Remove the sun visors. Refer to [Sunshade Replacement](#) .
6. Remove the power sunroof control switch, if equipped. Refer to [Sunroof Switch Replacement](#) .
7. Remove the windshield garnish molding. Refer to [Windshield Garnish Molding Replacement](#) .
8. Remove the center pillar upper garnish molding. Refer to [Center Pillar Upper Garnish Molding Replacement](#) .
9. Remove the quarter window garnish molding. Refer to [Body Side Window Rear Garnish Molding Replacement](#) .
10. Remove the plastic retainers in the headliner.
11. Recline both front seats.
12. Remove the headliner through a rear door.

Installation Procedure

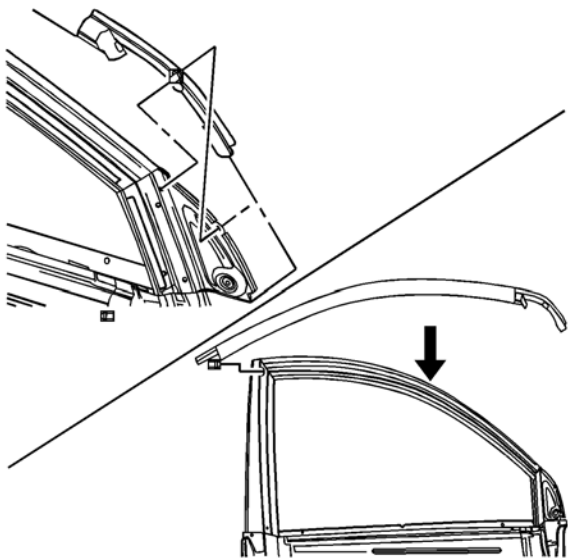


1. Recline both front seats.
2. Insert the headliner through a rear door.
3. Install the headliner behind the seats around the doors.
4. Install the plastic retainers.

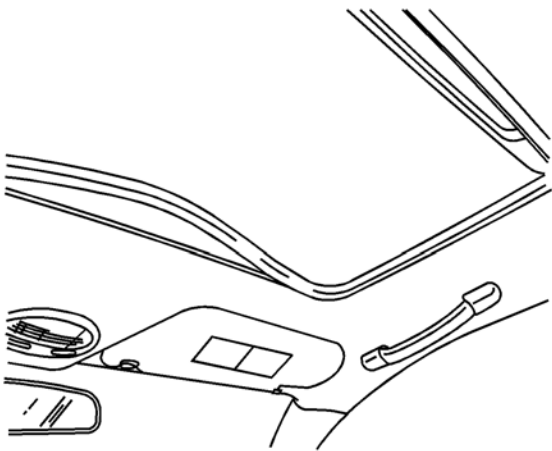


5. Install the windshield garnish molding. Refer to [Windshield Garnish Molding Replacement](#) .
6. Instal the center pillar upper garnish molding. Refer to [Center Pillar Upper Garnish Molding Replacement](#) .
7. Install the quarter window garnish molding. Refer to [Body Side Window Rear Garnish Molding Replacement](#) .
8. Install the power sunroof control switch, if equipped. Refer to [Sunroof Switch Replacement](#) .
9. Install the sun visors. Refer to [Sunshade Replacement](#) .
10. Install the plastic retainers in the headliner on the driver's side.
11. Install the passenger assist handles. Refer to [Assist Handle Replacement](#) .
12. Install the sunroof molding, if equipped.
13. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .

Headlining Trim Panel Replacement (C105/Short Body)

Removal Procedure

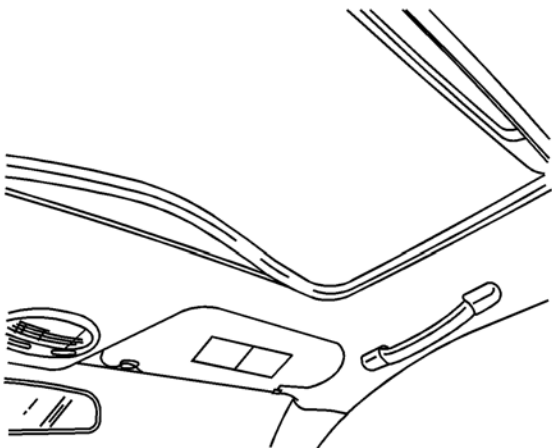


1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the sunroof molding, if equipped.
3. Remove the passenger assist handles. Refer to [Assist Handle Replacement](#) .
4. Remove the dome lamp. Refer to [Dome Lamp Replacement](#) .
5. Remove the sun visors. Refer to [Sunshade Replacement](#) .
6. Remove the power sunroof control switch, if equipped. Refer to [Sunroof Switch Replacement](#) .
7. Remove the windshield garnish molding. Refer to [Windshield Garnish Molding Replacement](#) .
8. Remove the center pillar upper garnish molding. Refer to [Center Pillar Upper Garnish Molding Replacement](#) .
9. Remove the quarter window garnish molding. Refer to [Body Side Window Rear Garnish Molding Replacement](#) .

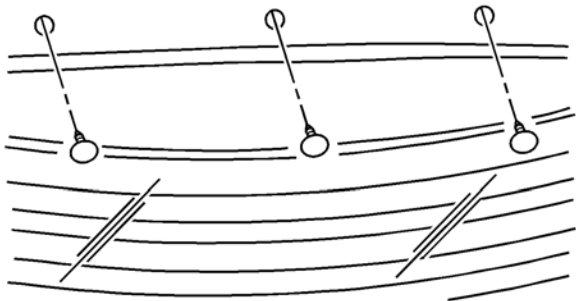


10. Remove the plastic retainers in the headliner.
11. Recline both front seats.
12. Remove the headliner through a rear door.

Installation Procedure

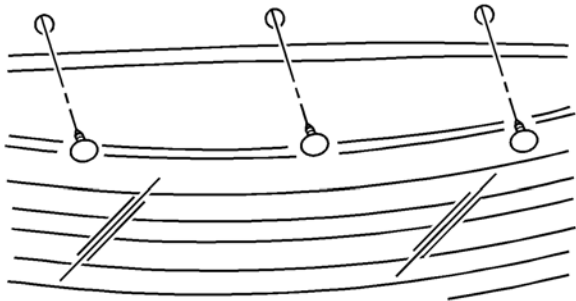

1. Recline both front seats.

2. Insert the headliner through a rear door.
3. Install the headliner behind the seats around the doors.
4. Install the plastic retainers.

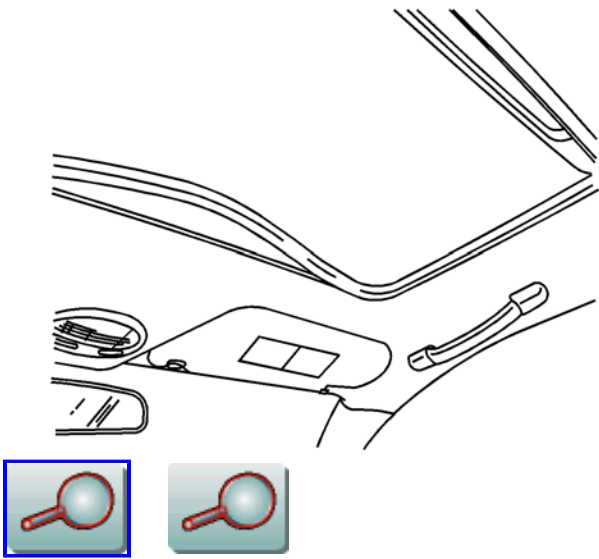

6. Install the center pillar upper garnish molding. Refer to [Center Pillar Upper Garnish Molding Replacement](#)
5. Install the windshield garnish molding. Refer to [Windshield Garnish Molding Replacement](#)
7. Install the quarter window garnish molding. Refer to [Body Side Window Rear Garnish Molding Replacement](#).
8. Install the power sunroof control switch, if equipped. Refer to [Sunroof Switch Replacement](#).
9. Install the sun visors. Refer to [Sunshade Replacement](#).
10. Install the dome lamp. Refer to [Dome Lamp Replacement](#).
11. Install the plastic retainers in the headliner on the driver's side.
12. Install the passenger assist handles. Refer to [Assist Handle Replacement](#).
13. Install the sunroof molding, if equipped.
14. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#).

Fastener Tightening Specifications


Application	Specification	
	Metric	English
Gearshift Housing Bolts	8 N·m	70 lb in
Seatbelt Anchor Bolts	38 N·m	28 lb ft

Exterior Trim

- Front Door Frame Applique Replacement (C100/Long Body)
- Front Door Frame Applique Replacement (C105/Short Body)
- Liftgate Applique Replacement
- Liftgate Upper Applique Replacement (C100/Long Body)
- Liftgate Upper Applique Replacement (C105/Short Body)
- Rear Door Frame Applique Replacement (C100/Long Body)
- Rear Door Frame Applique Replacement (C105/Short Body)
- Grille Replacement (C100/Long Body)
- Grille Replacement (C105/Short Body)
- Front Side Door Lower Molding Replacement
- Front Fender Wheel Opening Molding Replacement
- Rear Side Door Lower Molding Replacement
- Rear Wheel Opening Molding Replacement
- Rocker Panel Molding Replacement
- Roof Panel Joint Finish Molding Replacement
- Fastener and Tightening Specifications

Front Door Frame Applique Replacement (C100/Long Body)


Removal Procedure

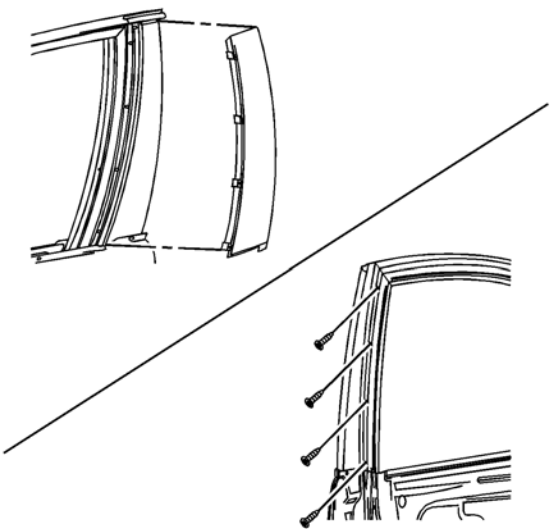

1. Reposition the weatherstrip in order to access the screws.
2. Remove the screws and the front side door window frame applique.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

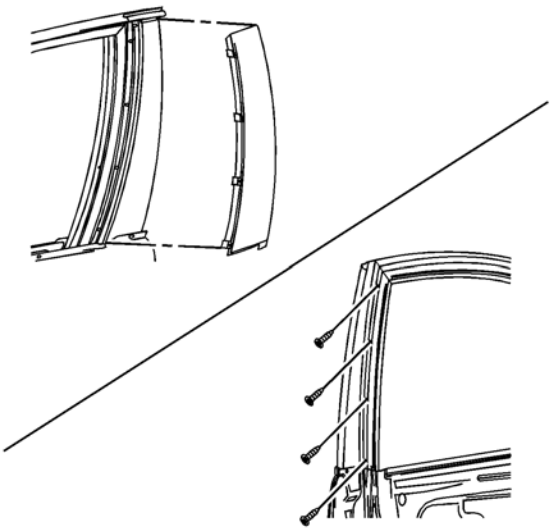

1. Install the screws and the Front side door window frame applique.


Tighten

Tighten the front side door window frame applique screws to 1.3 N·m (12 lb in).

2. Install the weatherstrip to its original position.

Front Door Frame Applique Replacement (C105/Short Body)


Removal Procedure

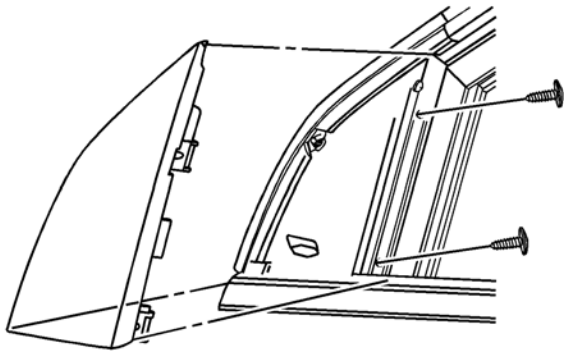

1. Remove the front door applique screws.
2. Remove the front door frame applique.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

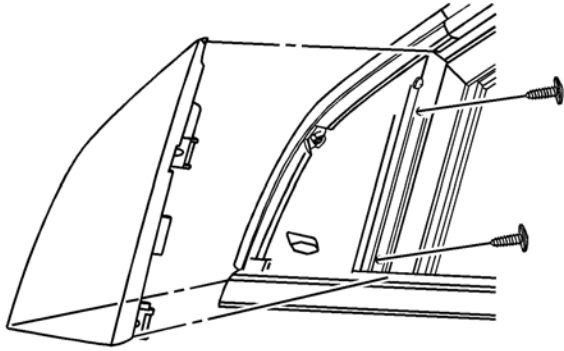


1. Install the front door frame applique.
2. Install the screws to the front door frame applique.

Tighten
Tighten the front door applique screws to 1.3 N·m (12 lb in).

Liftgate Applique Replacement


Removal Procedure

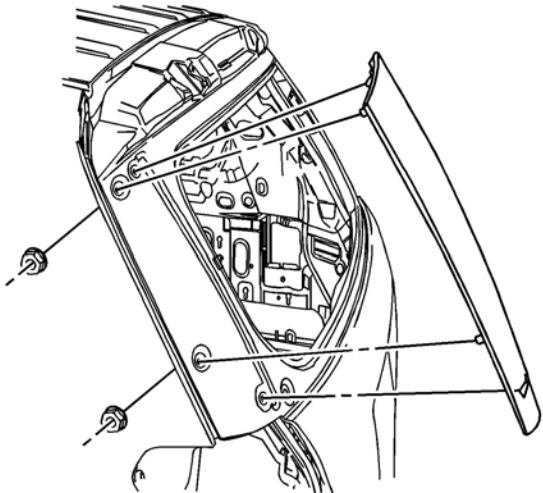

1. Remove the nuts from the applique.
2. Remove the liftgate applique from the vehicle.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

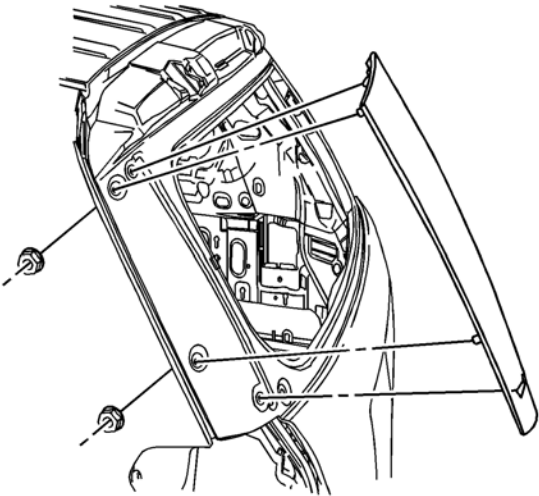


Install the liftgate applique with the nuts.

Tighten


Tighten the liftgate applique nuts to 6 N·m (53 lb in).

Liftgate Upper Applique Replacement (C100/Long Body)

Removal Procedure

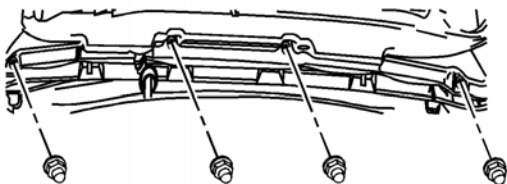


1. Open the liftgate.
2. Remove the nuts from the liftgate upper applique.

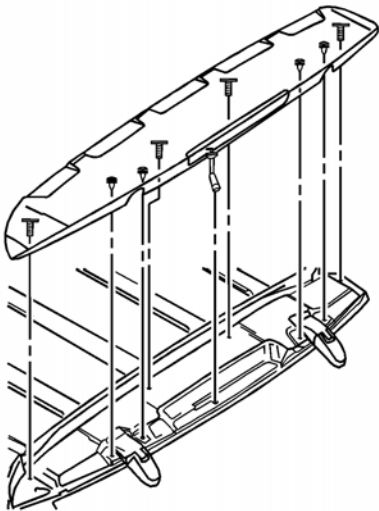

3. Close the liftgate.
4. Remove the liftgate upper applique from the vehicle.

Installation Procedure

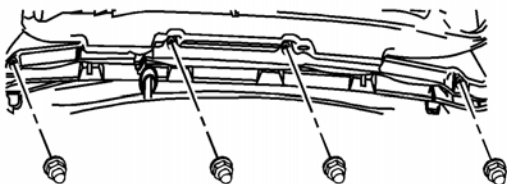


1. Position the upper applique to the liftgate.
2. Install the liftgate upper applique nuts.

Notice: Refer to [Fastener Notice](#) in the Preface section.

Tighten
Tighten the liftgate upper applique nuts to 6 N·m (53 lb in).


Liftgate Upper Applique Replacement (C105/Short Body)

Removal Procedure

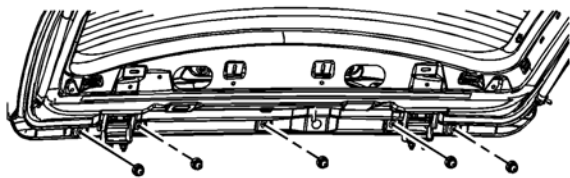

1. Open the liftgate.
2. Remove the nuts from the liftgate upper applique.
3. Close the liftgate.
4. Remove the liftgate upper applique from the vehicle.

Installation Procedure

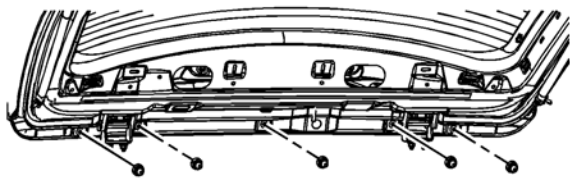


1. Position the upper applique to the liftgate.
2. Install the liftgate upper applique nuts.

Tighten

Tighten the liftgate upper applique nuts to 6 N·m (53 lb in).

Rear Door Frame Applique Replacement (C100/Long Body)


Removal Procedure

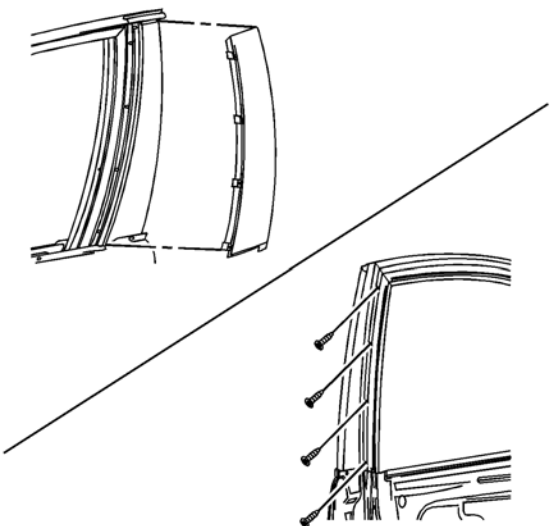

1. Reposition the weatherstrip in order to access the screws.
2. Remove the screws and the rear side door window frame applique.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

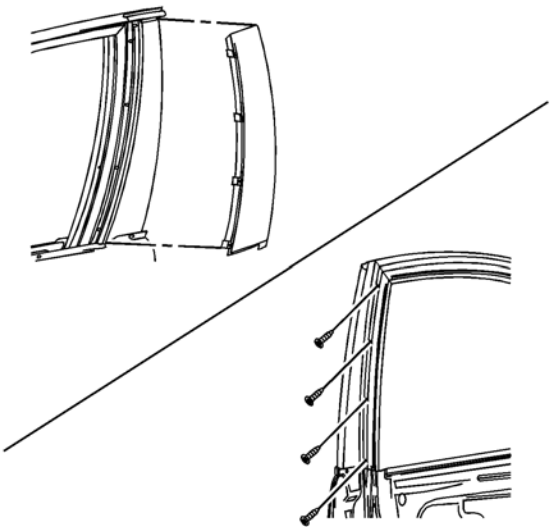

1. Install the screws and the reart side door window frame applique.

Tighten


Tighten the rear side door window frame applique screws to 1.3 N·m (12 lb in).

2. Install the weatherstrip to its original position.


Rear Door Frame Applique Replacement (C105/Short Body)

Removal Procedure


1. Open the rear door.

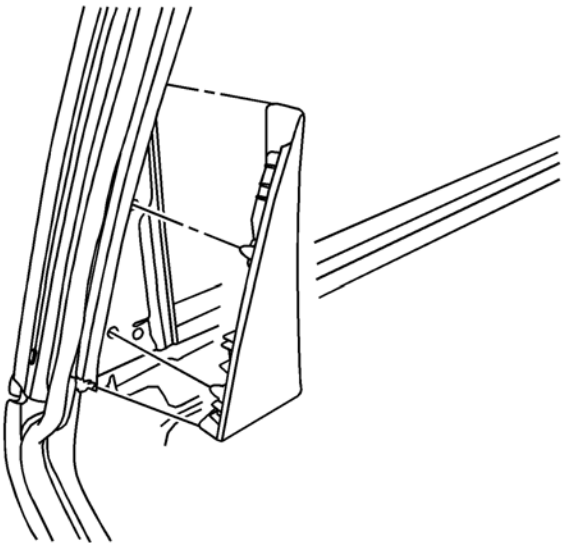

2. Remove the rear door upper trim panel.

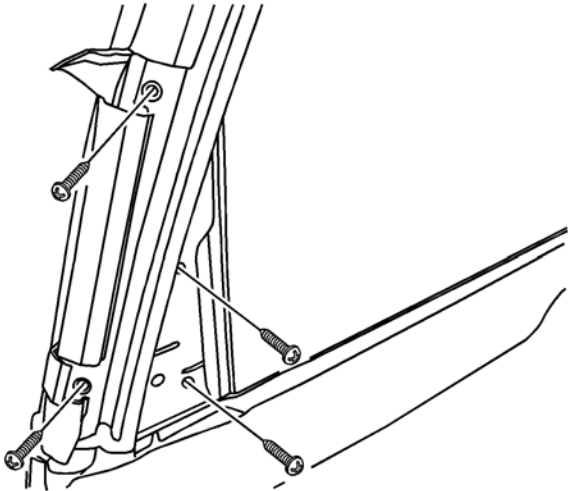


3. Remove the rear door frame applique screws.

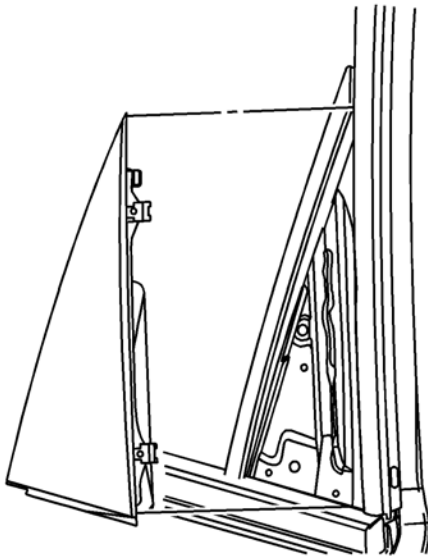


4. Remove the rear door frame applique.

Installation Procedure

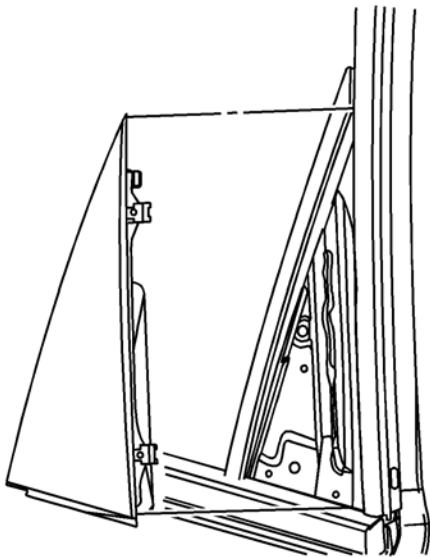


1. Install the rear door frame applique.

Notice: Refer to [Fastener Notice](#) in the Preface section.

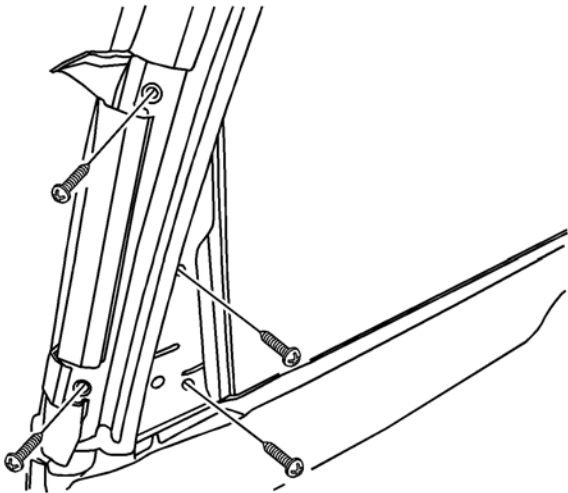

2. Install the screws to the rear door frame applique.


Tighten
Tighten the rear door frame applique screws to 1.3 N·m (12 lb in).

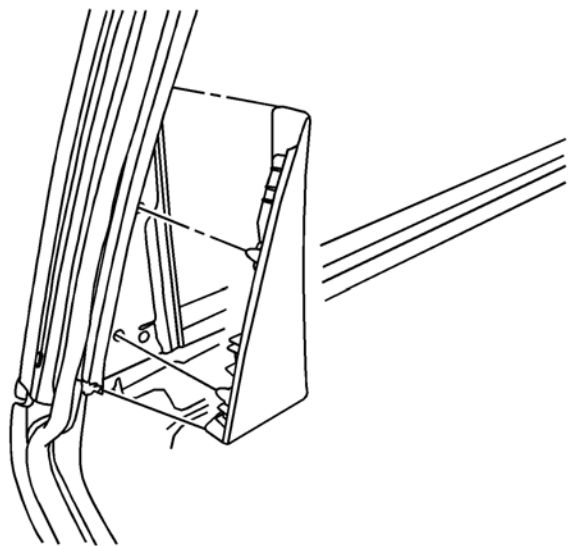

3. Install the rear door upper trim panel.

Grille Replacement (C100/Long Body)


Removal Procedure

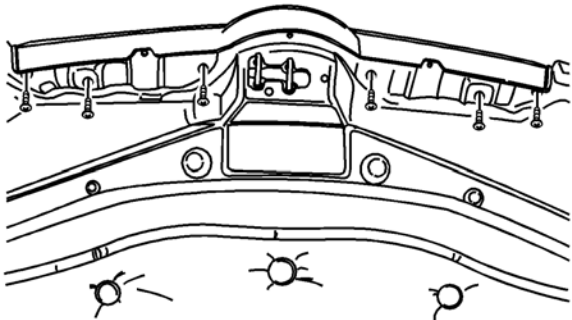

1. Open the hood.
2. Remove the nuts and the radiator grille.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

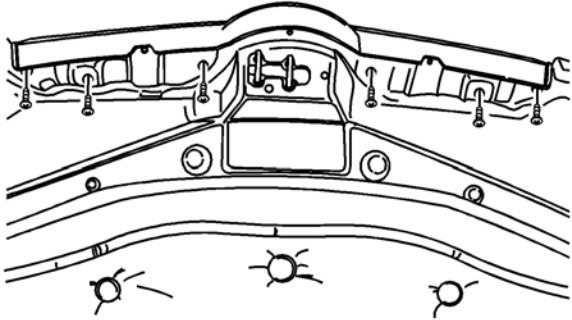

1. Install the radiator grille with the nuts.


Tighten

Tighten the radiator grille nuts to 4.5 N·m (40 lb in).

2. Close the hood.

Grille Replacement (C105/Short Body)


Removal Procedure

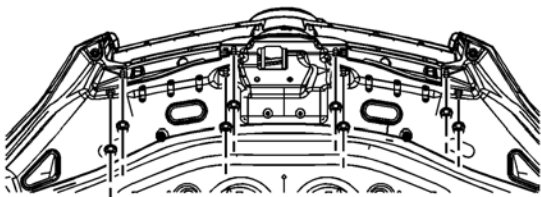

1. Open the hood.
2. Remove the nuts and the radiator grille.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

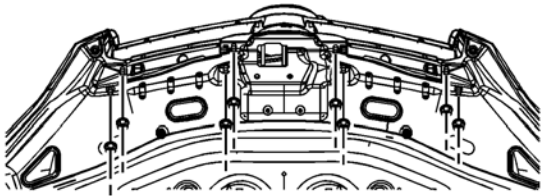


1. Install the radiator grille with the nuts.

Tighten
Tighten the radiator grille nuts to 4.5 N·m (40 lb in).

2. Close the hood.


Front Side Door Lower Molding Replacement

Removal Procedure

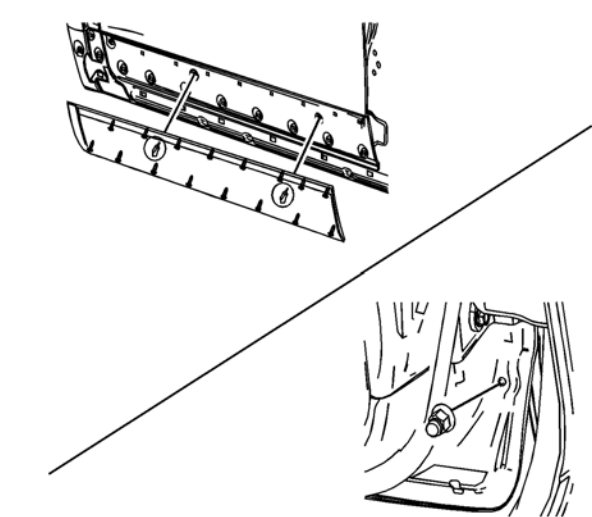

Remove the nut and the front side door lower molding.

Installation Procedure

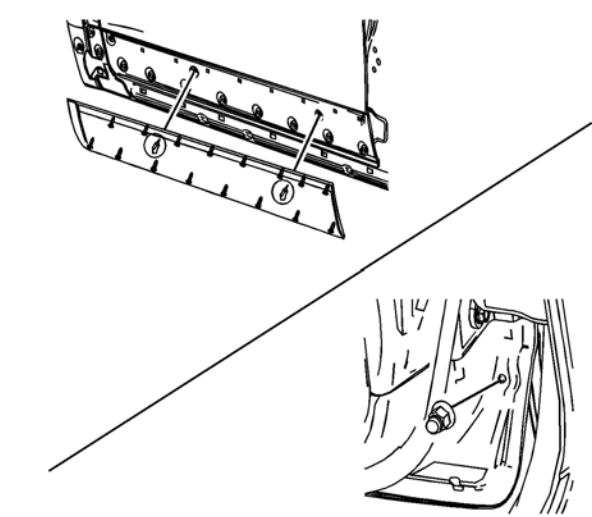

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.


Install the front side door lower molding with the nut.

Tighten

Tighten the front side door lower molding nut to 4.5 N·m (40 lb in).

Front Fender Wheel Opening Molding Replacement


Removal Procedure

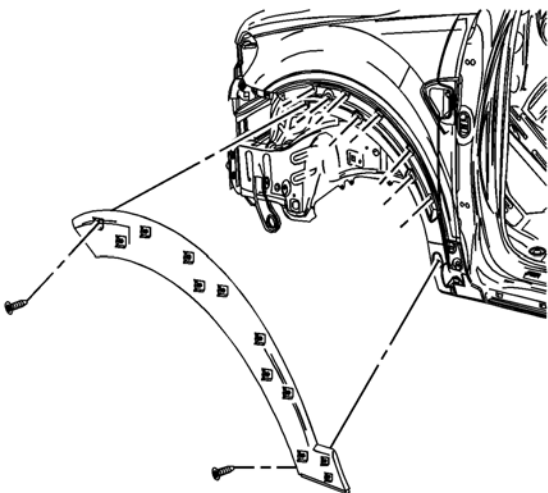

1. Remove the front mud guards.
2. Remove the screws and front fender wheel opening molding.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

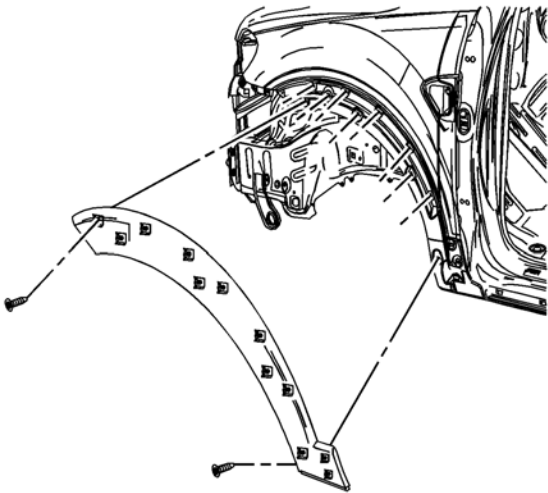


1. Install the front fender wheel opening molding with the screws.

Tighten
Tighten the front fender wheel opening molding screws to 4 N·m (35 lb in).

2. Install the front mud guard.


Rear Side Door Lower Molding Replacement

Removal Procedure

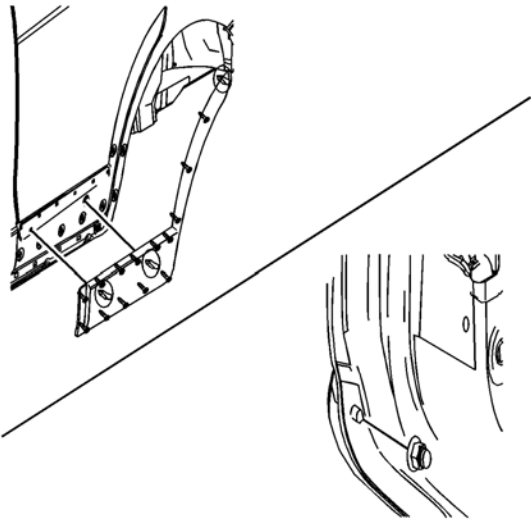

Remove the nut and the rear side door lower molding.

Installation Procedure

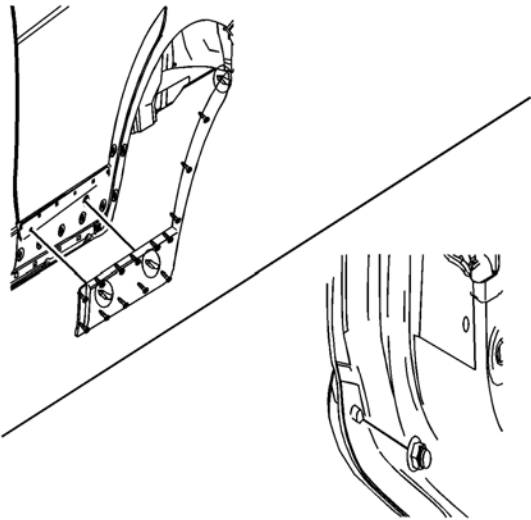

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.


Install the rear side door lower molding with the nut.

Tighten

Tighten the rear side door lower molding nut to 4.5 N·m (40 lb in).


Rear Wheel Opening Molding Replacement

Removal Procedure

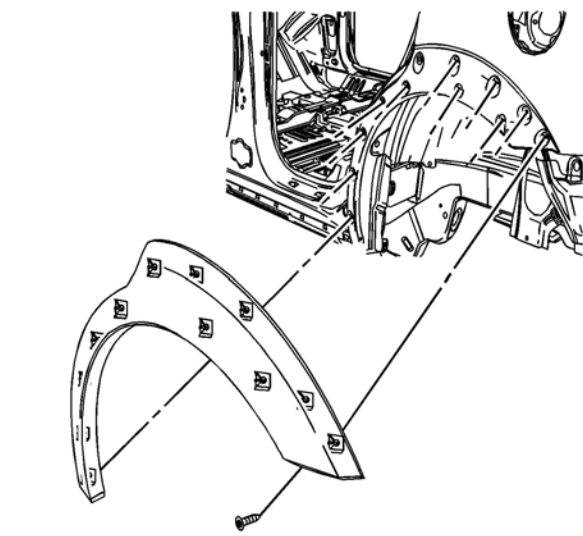

Remove the rear wheel opening molding.


Installation Procedure

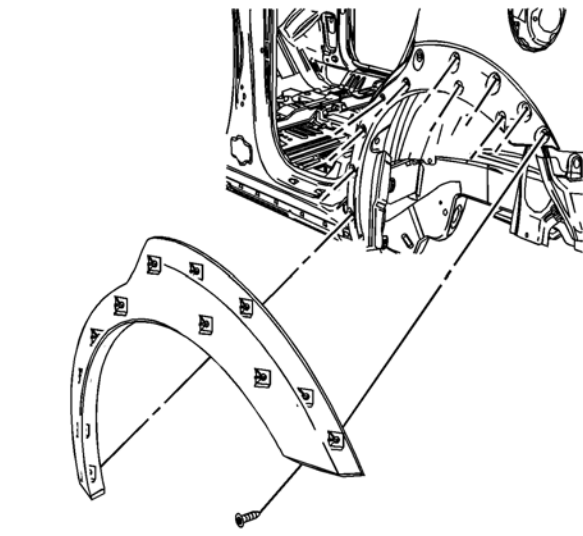

Install the rear wheel opening molding.


Rocker Panel Molding Replacement

Removal Procedure

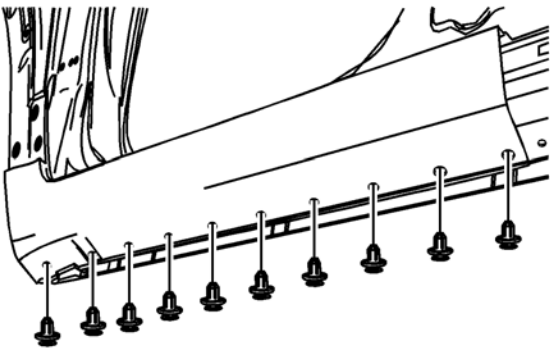

1. Remove the front mud guards.
2. Remove the clips and the rocker panel molding.


Installation Procedure

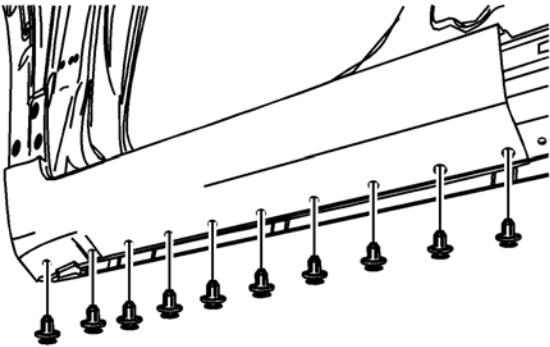

1. Install the rocker panel molding with the clips.
2. Install the front mud guards.


Roof Panel Joint Finish Molding Replacement

Removal Procedure

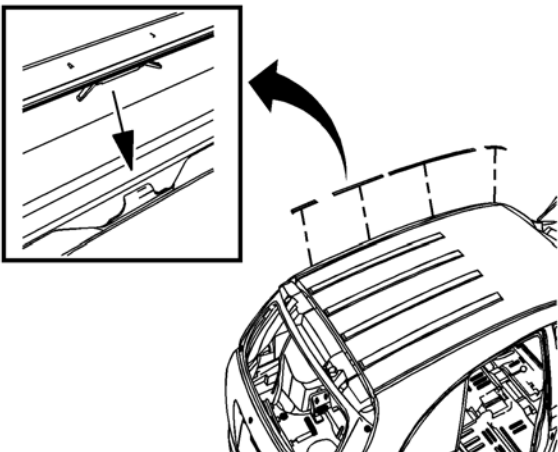

Remove the roof molding from the metal clips.

Installation Procedure

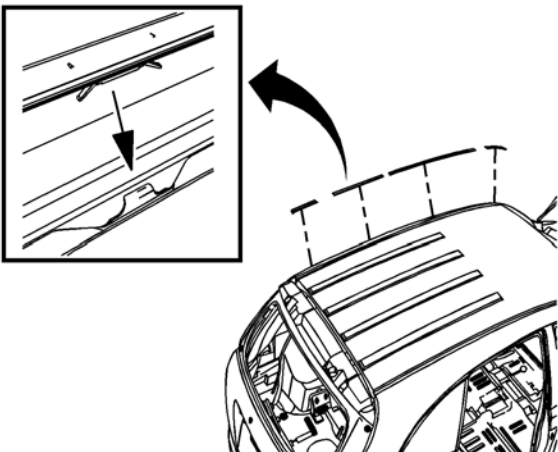

Press the roof molding onto the metal clips.

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Front Fender Wheel Opening Molding	4 N·m	35 lb in
Front Side Door Lower Molding	4.5 N·m	40 lb in
Front Side Door Window Frame Rear Applique	1.3 N·m	12 lb in
Mud Guard Bolts	2 N·m	18 lb in
Rear Side Door Lower Molding	4.5 N·m	40 lb in



Instrument Panel and Console Trim




- Knee Bolster Replacement
- Instrument Panel Upper Trim Panel Replacement
- Instrument Panel Accessory Bezel Replacement
- Driver Information Display Bezel Replacement
- Instrument Panel Lower Trim Panel Replacement - Left Side
- Instrument Panel Storage Compartment Replacement
- Instrument Panel Lower Compartment Replacement
- Instrument Panel Assembly Replacement (C105/Short Body)
- Instrument Panel Assembly Replacement (C100/Long Body)
- Console Replacement
- Fastener and Tightening Specifications



Knee Bolster Replacement

Removal Procedure


Important: Left - Hand Drive Shown, Right - Hand Drive Similar.

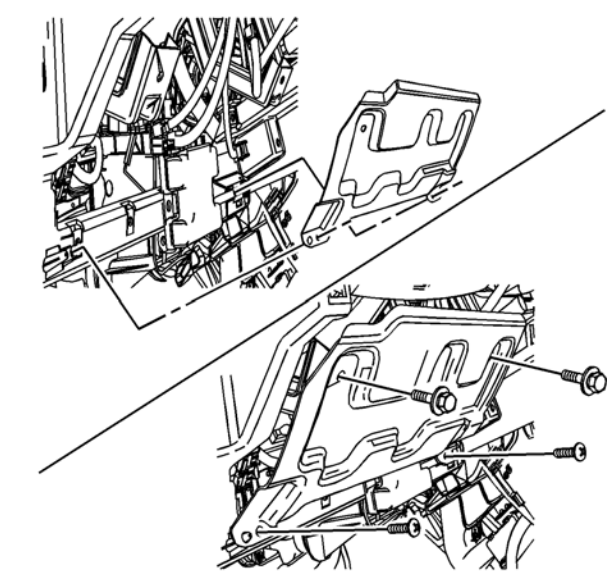

1. Remove the instrument panel lower left trim. Refer to [Instrument Panel Lower Trim Panel Replacement - Left Side](#) .
2. Remove the screws and bolts.
3. Remove the driver knee bolster.

Installation Procedure


Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

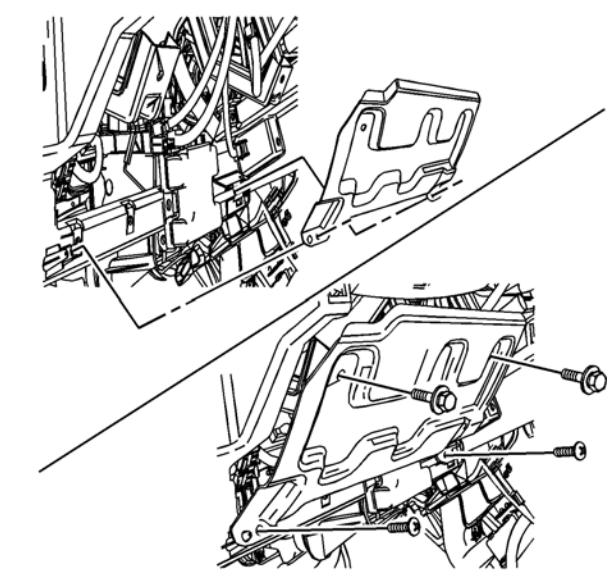

1. Install the driver knee bolster with the screws and bolts.
Tighten
 - Tighten the driver knee bolster screws to 2.5 N·m (23 lb in).
 - Tighten the driver knee bolster bolts to 20 N·m (15 lb ft).
2. Install the instrument panel lower left trim. Refer to [Instrument Panel Lower Trim Panel Replacement - Left Side](#) .


Instrument Panel Upper Trim Panel Replacement

Removal Procedure

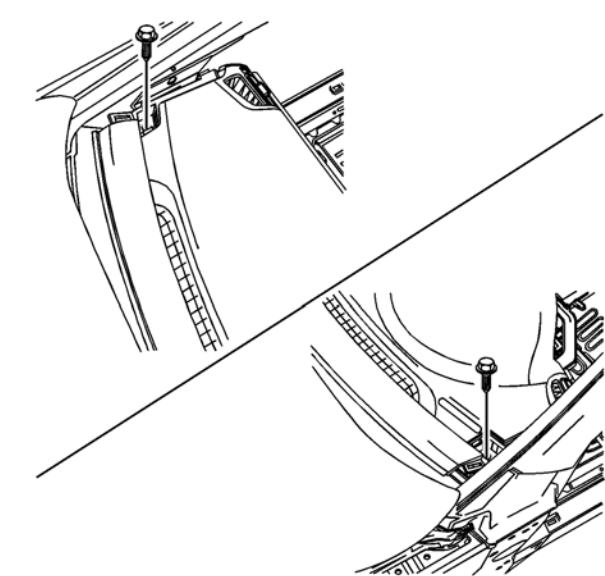

1. Remove the bolts from the left and right sides of the instrument panel upper I/P trim panel.
2. Remove the upper I/P trim panel from the instrument panel.

Installation Procedure

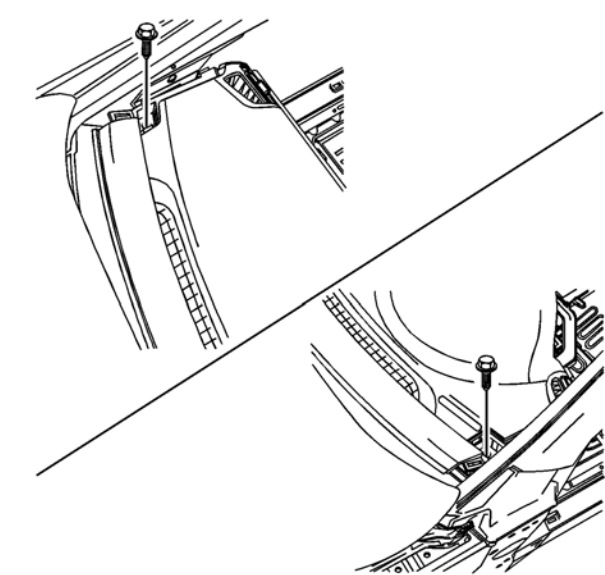

1. Position the upper I/P trim panel to the instrument panel .

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.


2. Install the bolts securing the sides of the upper I/P trim panel to the instrument panel.

Tighten

Tighten the upper I/P trim panel bolts to 2 N·m (18 lb in).

Instrument Panel Accessory Bezel Replacement


Removal Procedure

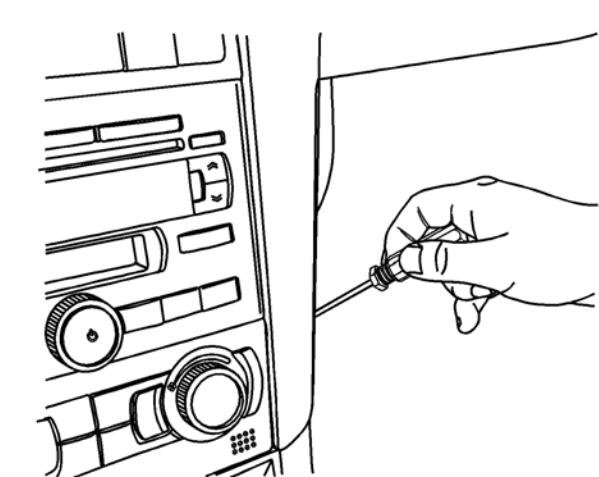

Important: Use tape around center trim bezel and the end of the flat bladed tool to protect from scratches.

1. Using a flat bladed tool, unfasten the center trim bezel clips from the instrument panel.
2. Remove the center trim bezel from the instrument panel.

Installation Procedure

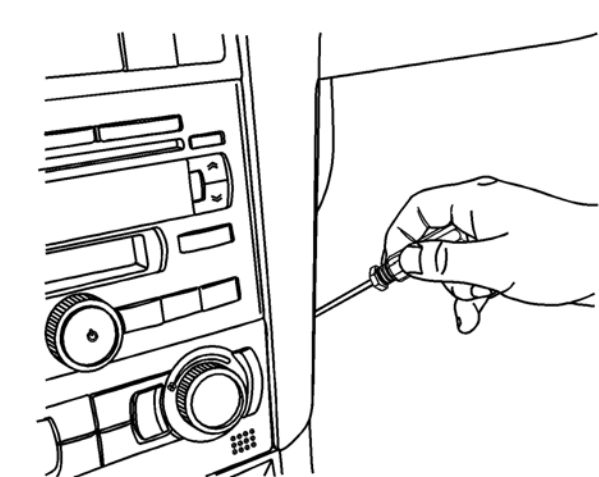


1. Position the center trim bezel to the instrument panel.
2. Press the center trim bezel to the instrument panel making sure the clips are fully seated.

Driver Information Display Bezel Replacement

Removal Procedure


1. Remove the instrument panel center trim bezel. Refer to [Instrument Panel Accessory Bezel Replacement](#) .

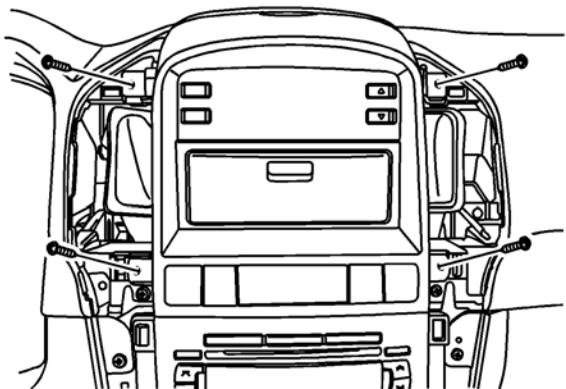

2. Remove the screws and the driver information bezel.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

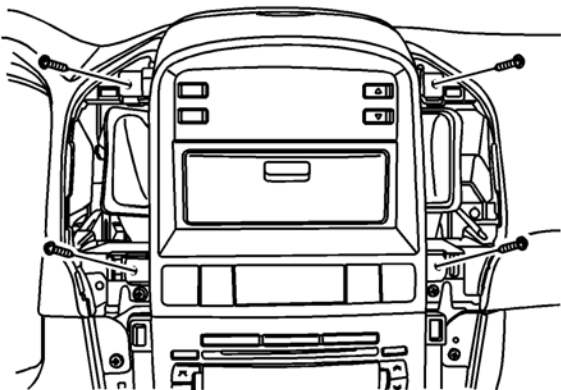

1. Install the driver information bezel with the screws.


Tighten
Tighten the driver information bezel screws to 2 N·m (18 lb in).

2. Install the instrument panel center trim bezel. Refer to [Instrument Panel Accessory Bezel Replacement](#) .

Instrument Panel Lower Trim Panel Replacement - Left Side

Removal Procedure


Important: Left - Hand Drive Shown, Right - Hand Drive Similar.

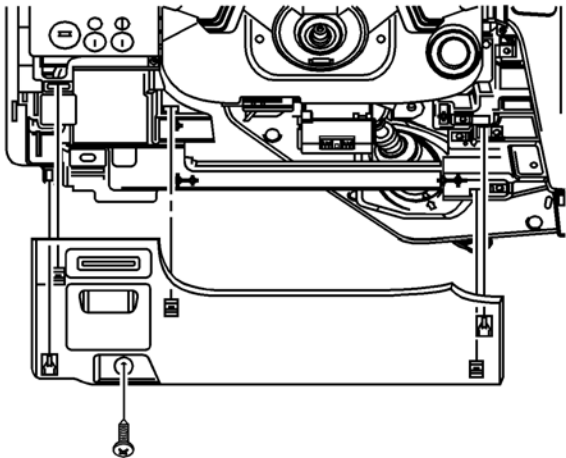

1. Remove the hood prime latch release handle. Refer to [Hood Latch Release Cable Replacement](#) .
2. Remove the screw and the instrument panel lower left trim.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

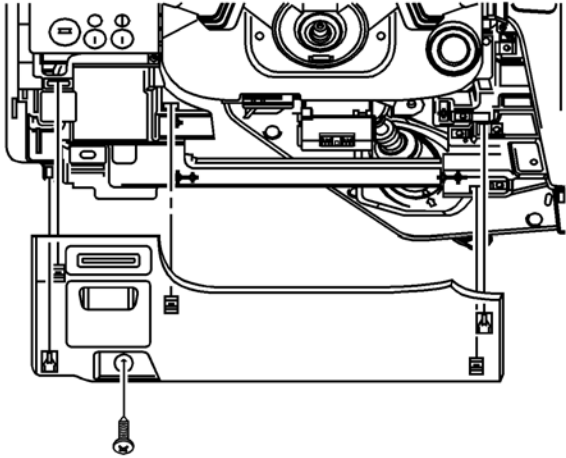

1. Install the instrument panel lower left trim.

Tighten
Tighten the instrument panel steering column opening pillar screw to 2 N·m (18 lb in).


2. Install the hood prime latch release handle. Refer to [Hood Latch Release Cable Replacement](#) .

Instrument Panel Storage Compartment Replacement

Removal Procedure


Important: Left - Hand Drive Shown, Right - Hand Drive Similar.

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .

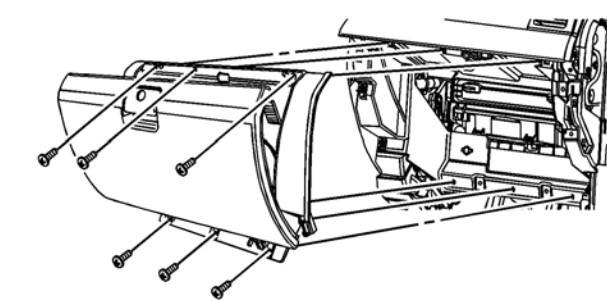

2. Remove the screws at the base of the storage compartment.
3. Open and remove the screws.
4. Disconnect the electrical connector.
5. Remove the storage compartment.

Installation Procedure

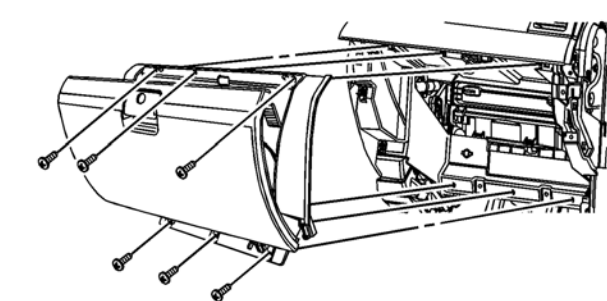

1. Position the storage compartment in the instrument panel.
2. Connect the electrical connector.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

3. Install the storage compartment with the screws.

Tighten


Tighten the storage compartment screws to 2 N·m (18 lb in).

4. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .

Instrument Panel Lower Compartment Replacement

Removal Procedure


- 1. Remove the instrument panel center trim bezel. Refer to [Instrument Panel Accessory Bezel Replacement](#) .
- 2. Remove the driver information center bezel. Refer to [Driver Information Display Bezel Replacement](#) .

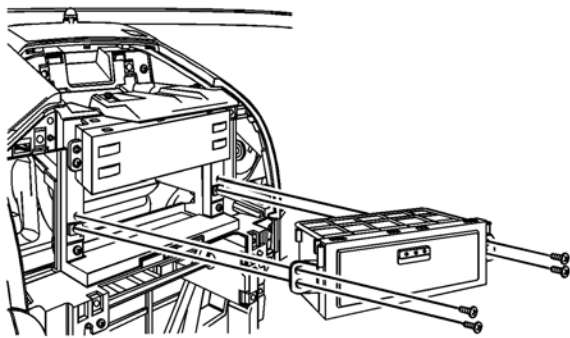

- 3. Remove the screws and the instrument panel lower compartment.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

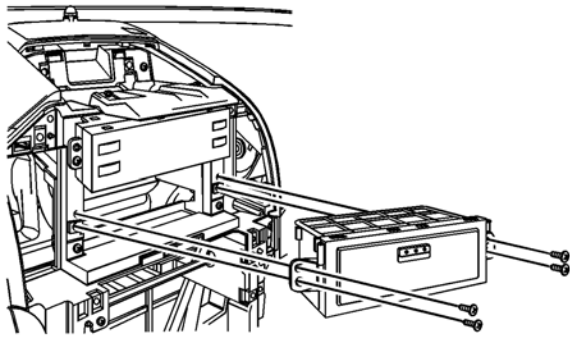

- 1. Install the instrument lower compartment with the screws.

Tighten

Tighten the instrument lower compartment with the screws to 2 N·m (18 lb in).


- 2. Install the instrument panel driver information center bezel. Refer to [Driver Information Display Bezel Replacement](#) .
- 3. Install the instrument panel center trim bezel. Refer to [Instrument Panel Accessory Bezel Replacement](#) .

Instrument Panel Assembly Replacement (C105/Short Body)


Removal Procedure

Caution: Refer to [Battery Disconnect Caution](#) in the Preface section.


Important: Left - Hand Drive Shown, Right - Hand Drive Similar.

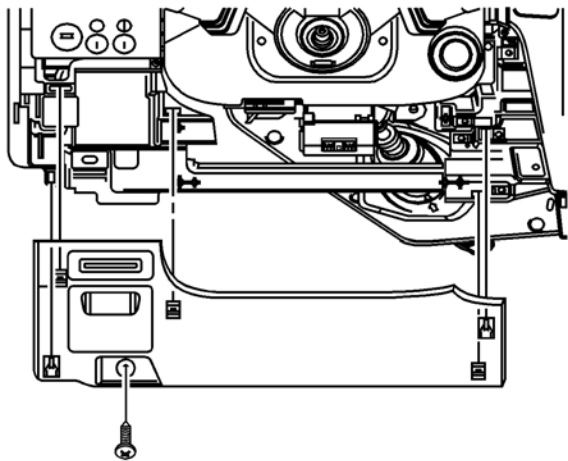

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the instrument panel lower left trim. Refer to [Instrument Panel Lower Trim Panel Replacement - Left Side](#) .
3. Remove the front, rear floor console. Refer to [Console Replacement](#) .
4. Remove the radio . Refer to [Radio Replacement](#) .
5. Remove the headlamp leveling switch assembly. Refer to [Headlamp Leveling Switch Replacement](#) .
6. Remove the instrument cluster trim panel.
7. Remove the automatic temperature controls assembly. Refer to [Heater and Air Conditioning Control Replacement](#) .

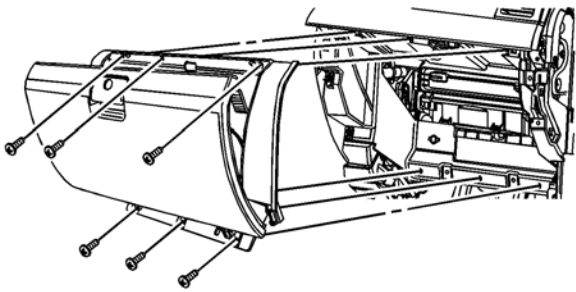


8. Remove the instrument cluster. Refer to [Instrument Cluster Replacement](#) .
9. Remove the kick panels.
10. Remove the storage compartment. Refer to [Instrument Panel Storage Compartment Replacement](#) .
11. Disconnect the instrument compartment electrical connectors.
12. Remove the knee bolster. Refer to [Knee Bolster Replacement](#) .

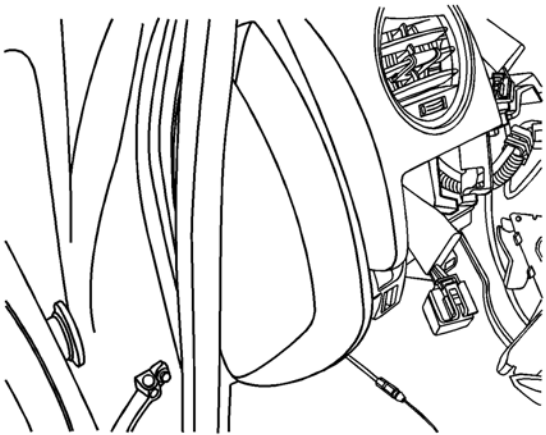


13. Remove the instrument panel side covers.


- 14. Remove the body control module. Refer to [Body Control Module Replacement](#) .
- 15. Remove the steering wheel. Refer to [Steering Wheel Replacement](#) .
- 16. Remove the headlamp switch. Refer to [Headlamp Switch Replacement](#) .
- 17. Remove the wiper/washer switch. Refer to [Windshield Wiper and Washer Switch Replacement](#) .

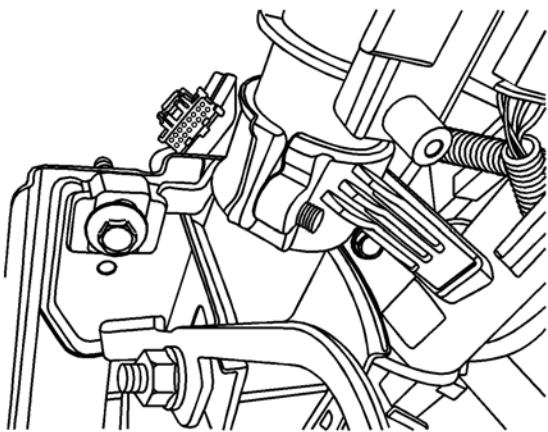


- 18. Remove the nuts and the bolts securing the steering column.
- 19. Disconnect the steering column electrical connector.
- 20. Lower the steering column.
- 21. Remove the A-pillar trim.

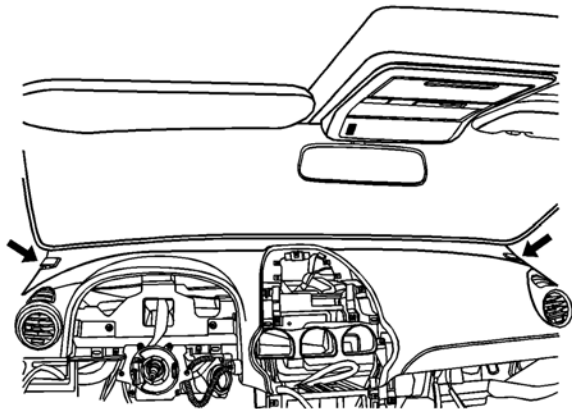


- 22. Remove the instrument panel bolts below the windshield.

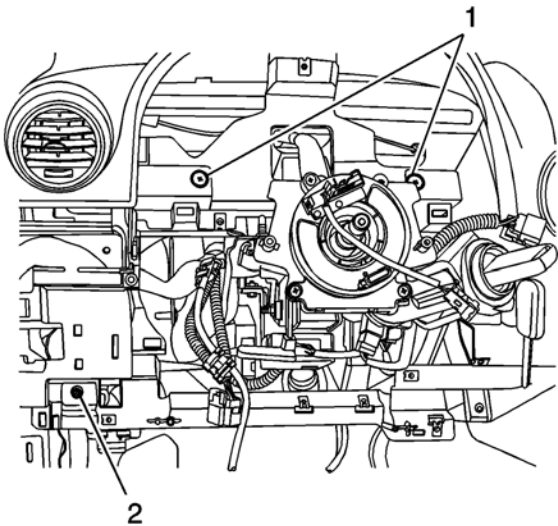


- 23. Remove the screws (1) and the left lower instrument panel retaining bolt (2).

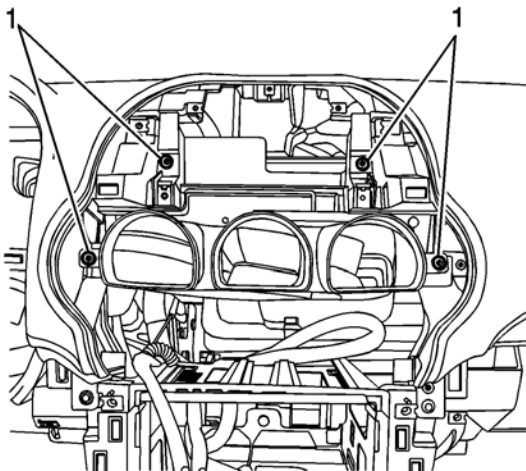


- 24. Remove the screws (1) securing the instrument panel center.

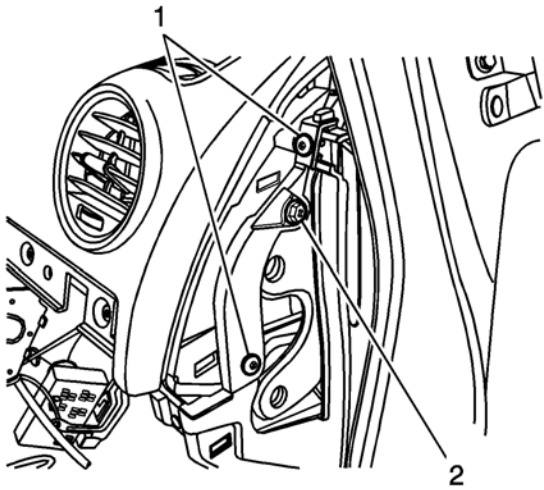

25. Remove the instrument panel left and right side screws (1) and bolt (2).

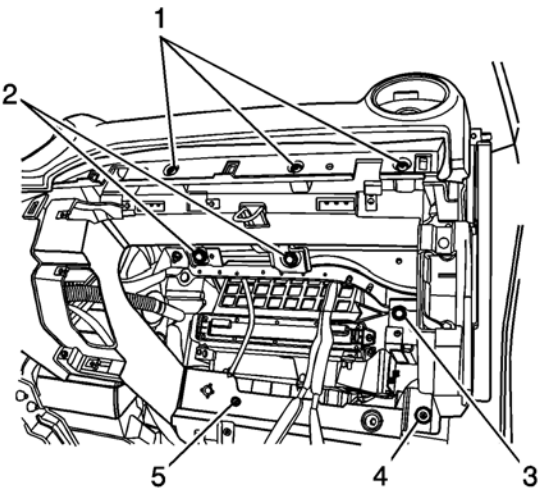


26. Remove the screws (1) near the instrument panel compartment.
27. Remove the air bag retaining bolts (2).
28. Remove the screw (5) near the blower motor.
29. Remove the right lower instrument panel retaining bolt (4).
30. Remove the nut (3) securing the instrument panel backside.

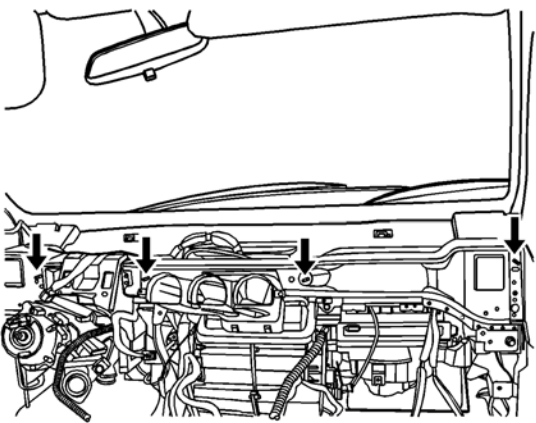

31. Lift up the instrument panel and remove the instrument panel to T-bar nuts.
32. Disconnect the electrical connectors.
33. Remove the instrument panel from the vehicle.

Installation Procedure

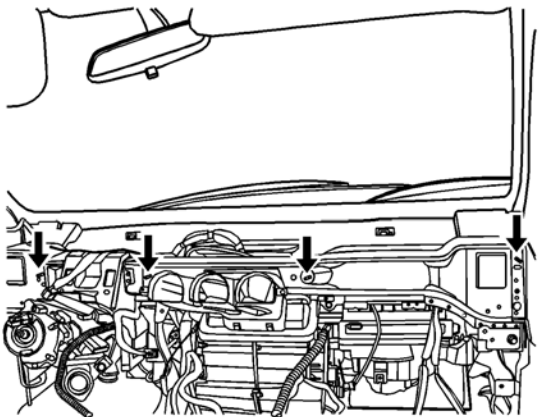


1. Position the instrument panel in the vehicle.
2. Connect the instrument panel electrical connectors.

Notice: Refer to [Fastener Notice](#) in the Preface section.

3. Lift up the instrument panel and install the instrument panel to T-bar nuts.

Tighten

Tighten the instrument panel to T-bar nuts to 10 N·m (89 lb in).

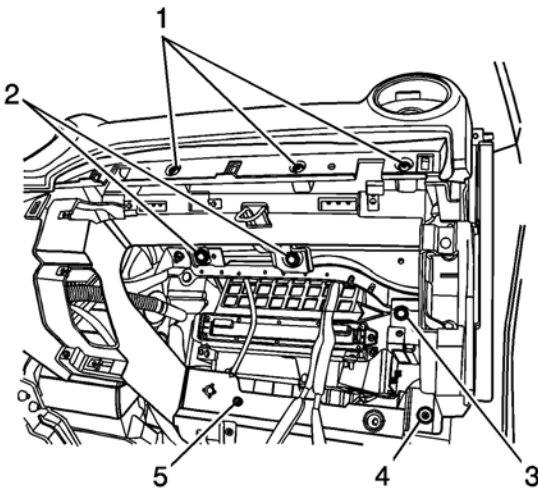

4. Install the nut (3) securing the instrument panel backside.

Tighten

Tighten the instrument panel backside nut to 10 N·m (89 lb in).

5. Install the right lower instrument panel retaining bolt (4).

Tighten

Tighten the right lower instrument panel retaining bolt to 10 N·m (89 lb in).

6. Install the screw (5) near the blower motor and the screws (1) near the instrument panel compartment.


Tighten

Tighten the screws near the blower motor and the instrument panel compartment to 2 N·m (18 lb in).

7. Install the air bag retaining bolts (2).

Tighten

Tighten the air bag retaining bolts to 10 N·m (89 lb in).

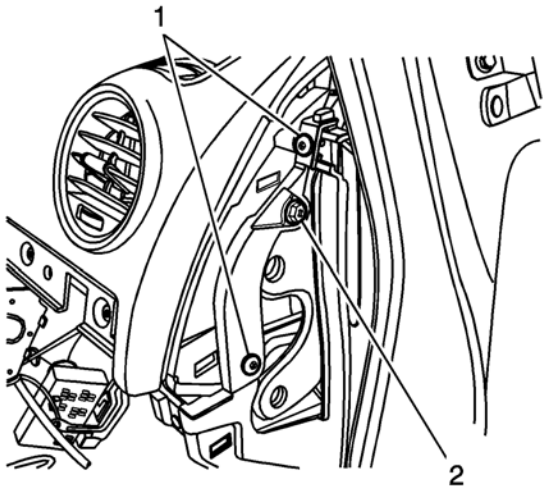

8. Install the instrument panel left and right side screws (1).


Tighten

Tighten the left and right side instrument panel screws to 2 N·m (18 lb in).

9. Install the instrument panel bolt (2).

Tighten


Tighten the instrument panel bolt to 10 N·m (89 lb in).

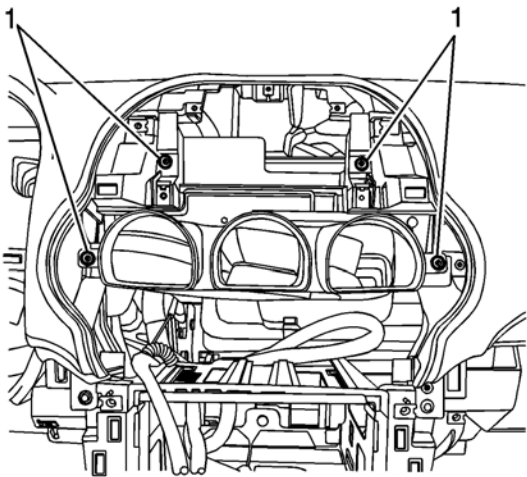

10. Install the screws (1) securing the instrument panel center.

Tighten

Tighten the instrument panel center screws to 2 N·m (18 lb in).

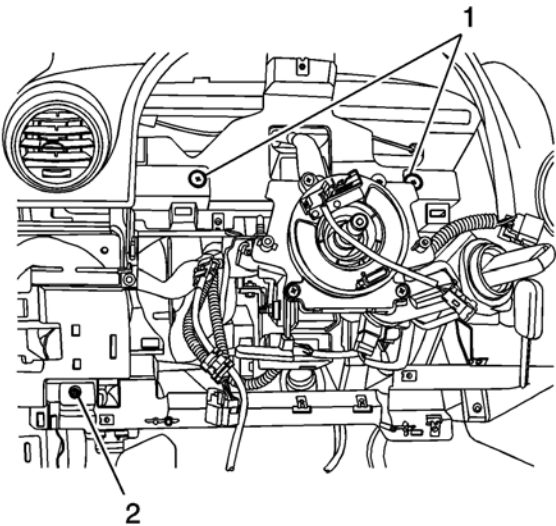

11. Install the instrument panel screws (1).


Tighten

Tighten the instrument panel screws to 10 N·m (89 lb in).

12. Install the instrument panel retaining bolt (2).

Tighten

Tighten the instrument panel retaining bolt to 10 N·m (89 lb in).

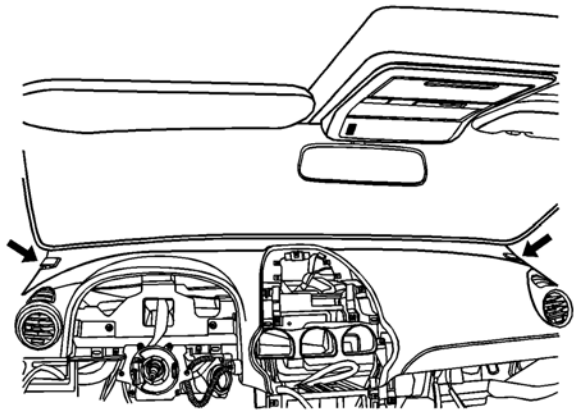


13. Install the instrument panel bolts below the windshield.

Tighten

Tighten the instrument panel bolts below the windshield to 23 N·m (17 lb ft).

14. Install the A-pillar trim.

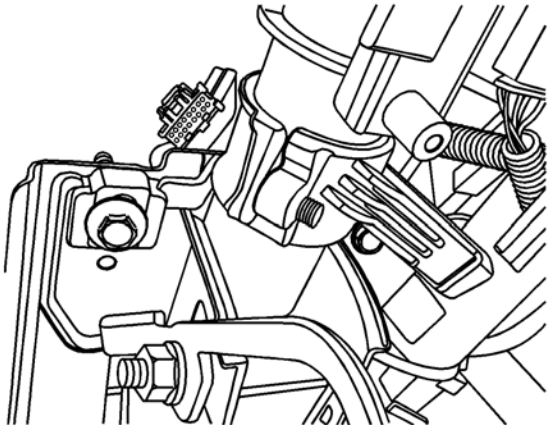


15. Raise the steering column.
16. Connect the steering column electrical connector.
17. Install the bolts securing the steering column.


Tighten

Tighten the steering column bolts to 22 N·m (16 lb ft).

18. Install the headlamp switch. Refer to [Headlamp Switch Replacement](#) .
19. Install the wiper/washer switch. Refer to [Windshield Wiper and Washer Switch Replacement](#) .
20. Install the steering wheel. Refer to [Steering Wheel Replacement](#) .

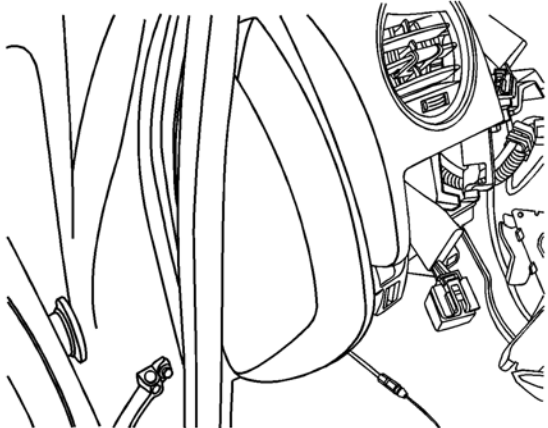

21. Install the body control module. Refer to [Body Control Module Replacement](#) .
22. Install the instrument panel side covers.

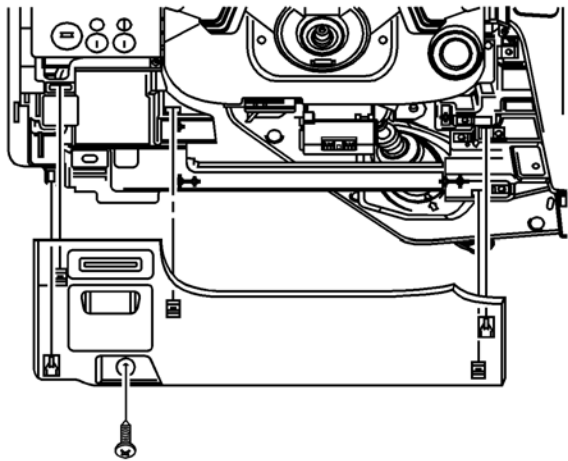


- 23. Install the knee bolster. Refer to [Knee Bolster Replacement](#) .
- 24. Install the instrument panel lower left trim. Refer to [Instrument Panel Lower Trim Panel Replacement - Left Side](#) .
- 25. Connect the instrument compartment electrical connectors.
- 26. Install the storage compartment. Refer to [Instrument Panel Storage Compartment Replacement](#) .
- 27. Install the kick panels.
- 28. Install the instrument cluster. Refer to [Instrument Cluster Replacement](#) .
- 29. Install the automatic temperature controls assembly. Refer to [Heater and Air Conditioning Control Replacement](#) .
- 30. Install the instrument cluster trim panel.
- 31. Install the headlamp leveling switch assembly. Refer to [Headlamp Leveling Switch Replacement](#) .
- 32. Install the radio . Refer to [Radio Replacement](#) .
- 33. Install the ambient light sensor . Refer to [Ambient Light Sensor Replacement](#)
- 34. Install the floor console. Refer to [Console Replacement](#) .
- 35. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .


Instrument Panel Assembly Replacement (C100/Long Body)

Removal Procedure


Caution: Refer to [Battery Disconnect Caution](#) in the Preface section.

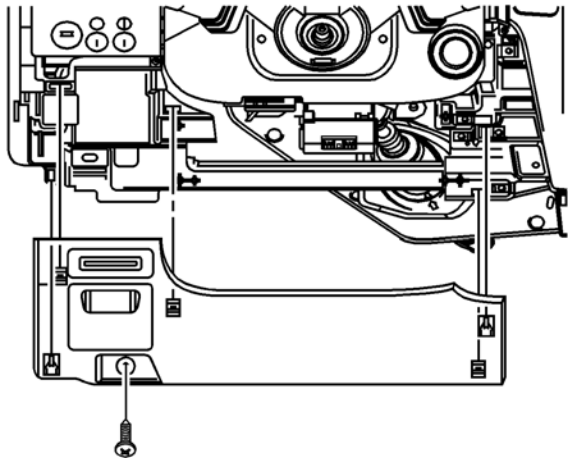

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the instrument panel lower left trim. Refer to [Instrument Panel Lower Trim Panel Replacement - Left Side](#) .
3. Remove the front, rear floor console. Refer to [Console Replacement](#) .
4. Remove the ambient light sensor . Refer to [Ambient Light Sensor Replacement](#) .
5. Remove the radio . Refer to [Radio Replacement](#) .
6. Remove the headlamp leveling switch assembly. Refer to [Headlamp Leveling Switch Replacement](#) .
7. Remove the instrument cluster trim panel.
8. Remove the automatic temperature controls assembly. Refer to [Heater and Air Conditioning Control Replacement](#) .
9. Remove the instrument cluster. Refer to [Instrument Cluster Replacement](#) .
10. Remove the kick panels.
11. Disconnect the necessary instrument compartment electrical connectors.
12. Remove the knee bolster. Refer to [Knee Bolster Replacement](#) .

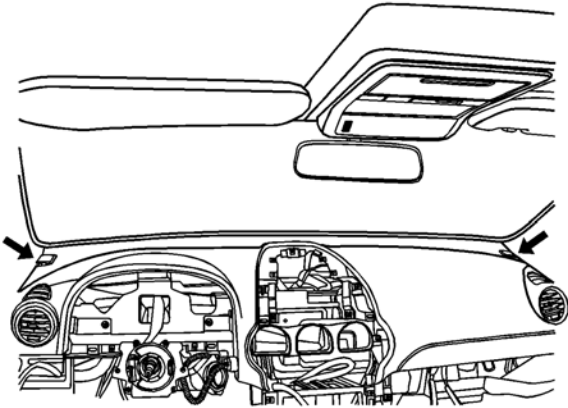


13. Remove the left and right upper instrument panel bolt covers.
14. Remove the body control module. Refer to [Body Control Module Replacement](#) .

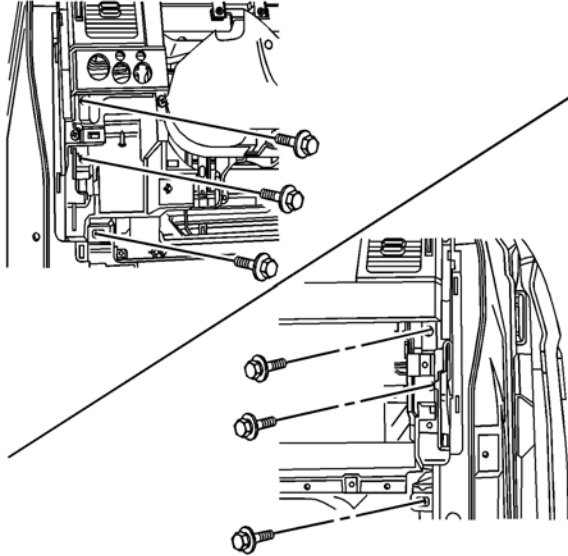


15. Remove the nuts and the bolts securing the steering column and lower the steering column. Refer to [Steering Column Replacement](#)


16. Remove the bolts on the left and right sides of the instrument panel.

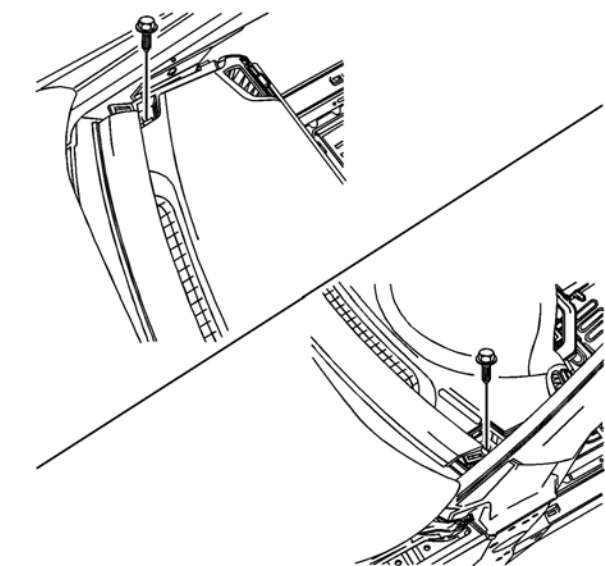

17. Remove the instrument panel bolts below the windshield.

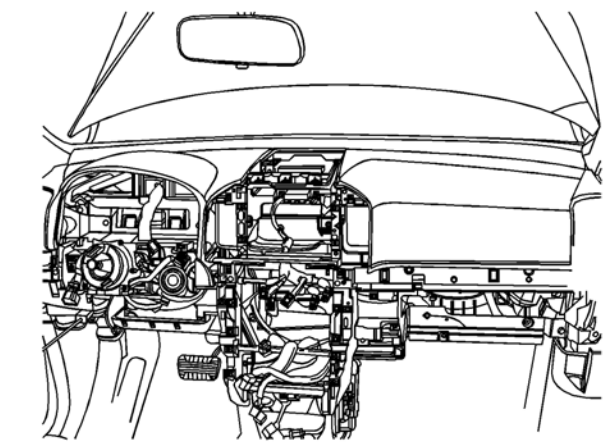


18. Remove the necessary fixing screws securing the instrument panel.

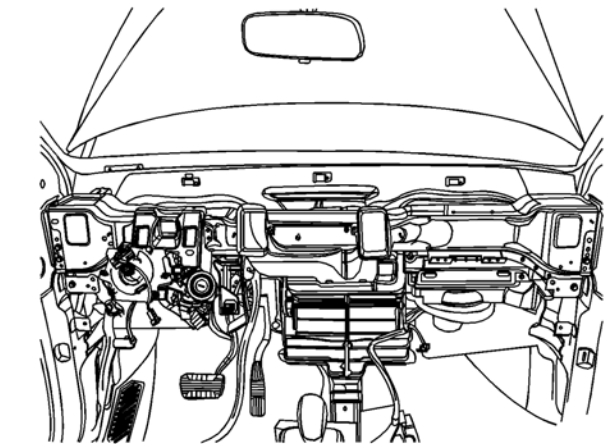

19. Remove the bolts securing the sides of the instrument panel to the body.
20. Disconnect the necessary instrument panel electrical connectors.
21. Remove the instrument panel by pulling back to release the three upper retainers..

Installation Procedure

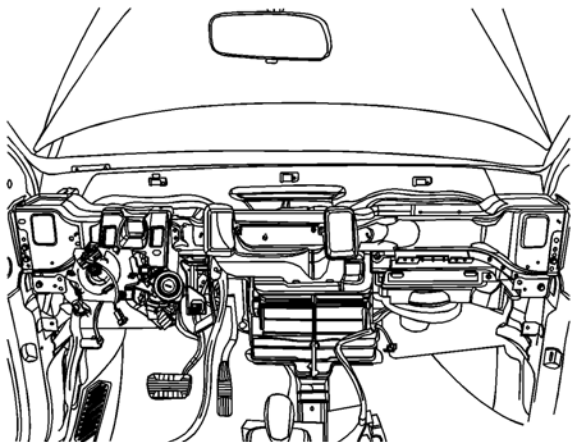


1. Position the instrument panel in the vehicle, making sure the three upper retainers are fastened.
2. Connect the necessary instrument panel electrical connectors.

Notice: Refer to [Fastener Notice](#) in the Preface section.


3. Install the bolts securing the sides of the instrument panel to the body.

Tighten

Tighten the instrument panel-to-body bolts to 23 N·m (17 lb ft).

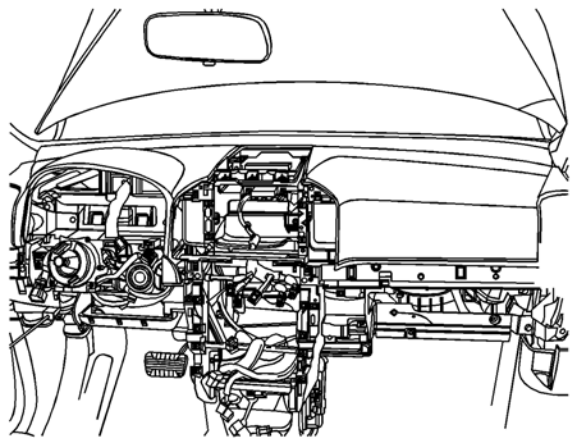


4. Install the necessary fixing screws securing the instrument panel.

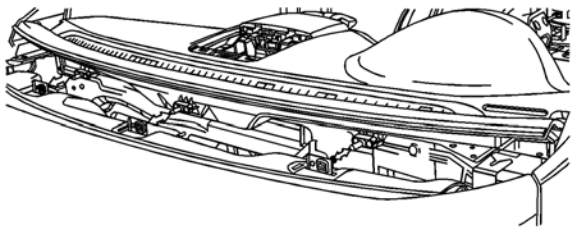

5. Install the instrument panel bolts below the windshield.

Tighten


Tighten the instrument panel bolts below the windshield to 23 N·m (17 lb ft).

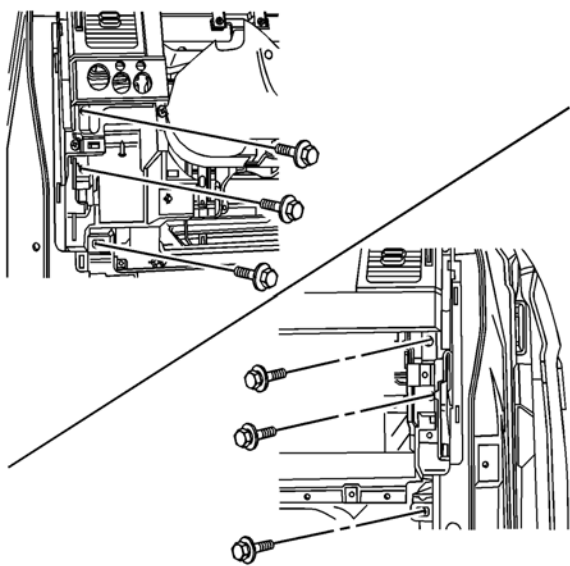


6. Raise the steering column and install the nuts and bolts. Refer to [Steering Column Replacement](#) .
7. Install the bolts securing the left and right sides of the instrument panel.

Tighten


Tighten the bolts on the left and right sides of the instrument panel to 10 N·m (89 lb in).

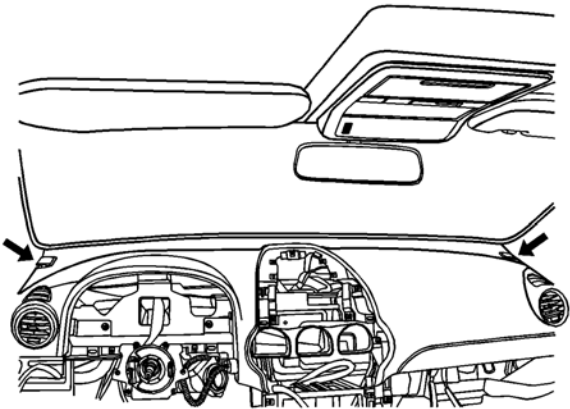

8. Install the left and right upper instrument panel bolt covers.
9. Install the body control module. Refer to [Body Control Module Replacement](#) .

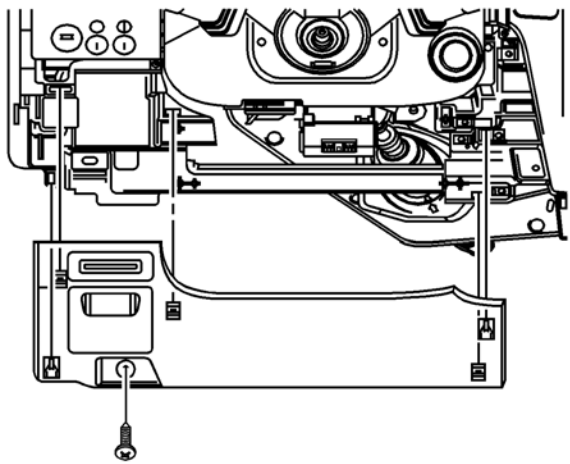

10. Install the knee bolster. Refer to [Knee Bolster Replacement](#) .
11. Install the instrument panel lower left trim. Refer to [Instrument Panel Lower Trim Panel Replacement - Left Side](#) .
12. Connect the necessary instrument compartment electrical connectors.
13. Install the kick panels.
14. Install the instrument cluster. Refer to [Instrument Cluster Replacement](#) .
15. Install the automatic temperature controls assembly. Refer to [Heater and Air Conditioning Control Replacement](#) .

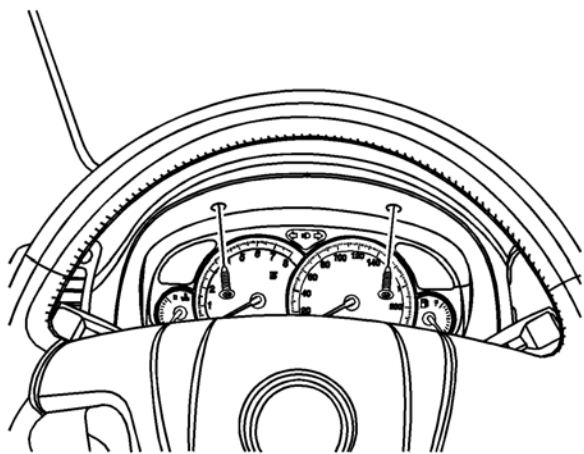


- 16. Install the instrument cluster trim panel.
- 17. Install the headlamp leveling switch assembly. Refer to [Headlamp Leveling Switch Replacement](#) .
- 18. Install the radio . Refer to [Radio Replacement](#) .
- 19. Install the ambient light sensor . Refer to [Ambient Light Sensor Replacement](#) .
- 20. Install the floor console. Refer to [Console Replacement](#) .
- 21. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .




Console Replacement

Removal Procedure


Caution: Refer to [Battery Disconnect Caution](#) in Cautions and Notices.

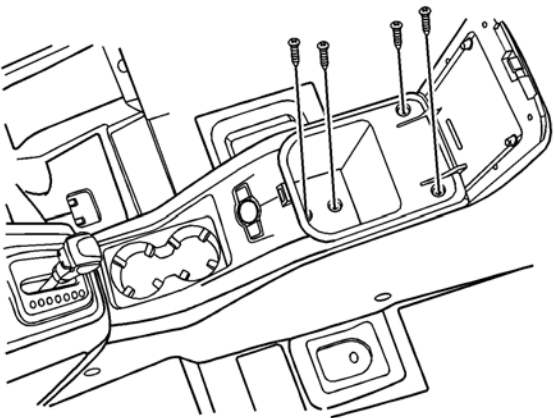

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the instrument compartment lower. Refer to [Instrument Panel Lower Compartment Replacement](#) .
3. Remove the radio. Refer to [Radio Replacement](#) .
4. Remove the front seats. Refer to [Bucket Seat Replacement](#)
5. Remove the screws and cup holder, console cover.

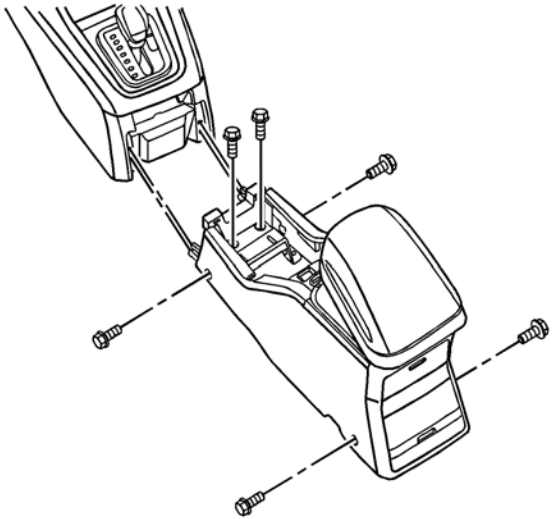


6. Disconnect the electrical connector.
7. Remove the bolts from the floor console.
8. Remove the instrument panel storage compartment. Refer to [Instrument Panel Storage Compartment Replacement](#) .

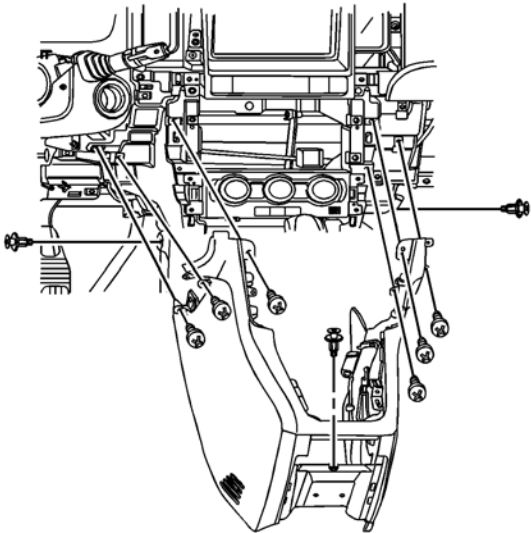

9. Remove the floor console.
10. Remove the screws from the front console retainer.

Installation Procedure

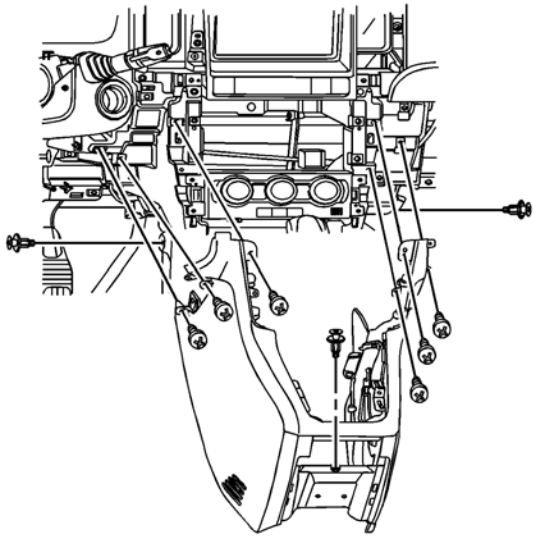

1. Connect the electrical connectors.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the front console retainer with screws.

Tighten


Tighten the front console retainer screws to 8 N·m (71 lb in).

3. Install the floor console with the bolts.


Tighten

Tighten the front console screw to 8 N·m (71 lb in).

4. Install the instrument panel storage compartment. Refer to [Instrument Panel Storage Compartment Replacement](#) .

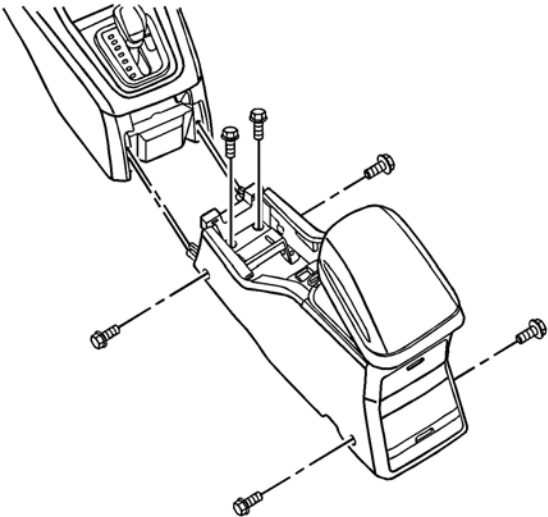

5. Connect the electrical connectors.
6. Install the cupholder and console cover.

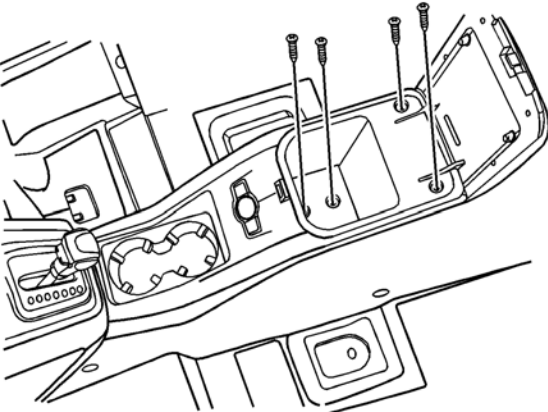

7. Install the instrument compartment lower . Refer to [Instrument Panel Lower Compartment Replacement](#) .
8. Install the front seats. Refer to [Bucket Seat Replacement](#) .
9. Install the radio. Refer to [Radio Replacement](#) .
10. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Floor Console Screws	8 N·m	71 lb in
Instrument Panel Accessory Bezel Screws	2 N·m	18 lb in
Instrument Panel Lower Compartment Screws	2 N·m	18 lb in
Instrument Panel Lower Left Trim Panel Screws	2 N·m	18 lb in
Instrument Panel Compartment Screws	2 N·m	18 lb in
Instrument Panel-to-Body Bolts	23 N·m	17 lb ft
Knee Bolster Bolts	20 N·m	15 lb ft
Knee Bolster Screws	2.5 N·m	23 lb in
Steering Column Bolts	22 N·m	16 lb ft
Steering Column Nuts	22 N·m	16 lb ft

Interior Trim and Paneling

- Front Side Door Trim Panel Replacement (C 100/Long Body)
- Front Side Door Trim Panel Replacement (C 105/Short Body)
- Door Water Deflector Replacement
- Rear Door Trim Panel Replacement (C 105/Short Body)
- Rear Door Trim Panel Replacement (C 100/Long Body)
- Front Side Door Sill Plate Replacement
- Rear Side Door Sill Plate Replacement
- Assist Handle Replacement
- Sunshade Replacement (C 105/Short Body)
- Sunshade Replacement (C 100/Long Body)
- Windshield Garnish Molding Replacement
- Center Pillar Upper Garnish Molding Replacement
- Center Pillar Lower Garnish Molding Replacement
- Rear Quarter Lower Trim Panel Replacement (C 100/Long Body)
- Rear Quarter Lower Trim Panel Replacement (C 105/Short Body)
- Rear Storage Compartment Replacement
- Liftgate Garnish Molding Replacement (Side - C 100/Long Body)
- Liftgate Garnish Molding Replacement (Side - C 105/Short Body)
- Liftgate Garnish Molding Replacement (Upper)
- Liftgate Trim Panel Replacement
- Rear Compartment Sill Trim Plate Replacement
- Body Side Window Rear Garnish Molding Replacement (C 105/Short Body)
- Body Side Window Rear Garnish Molding Replacement (C 100/Long Body)
- Fastener and Tightening Specifications
- Special Tools


Front Side Door Trim Panel Replacement (C 100/Long Body)

Tools Required


[KM 475-A](#) Trim Remover

Removal Procedure

1. Lower the front window.

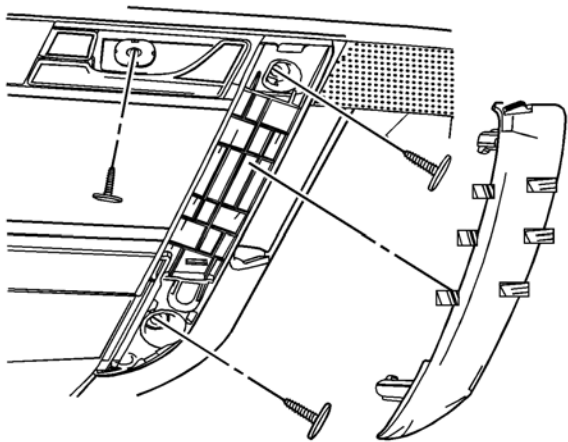


2. Remove the front door handle cover.
3. Remove the front door trim panel screws.

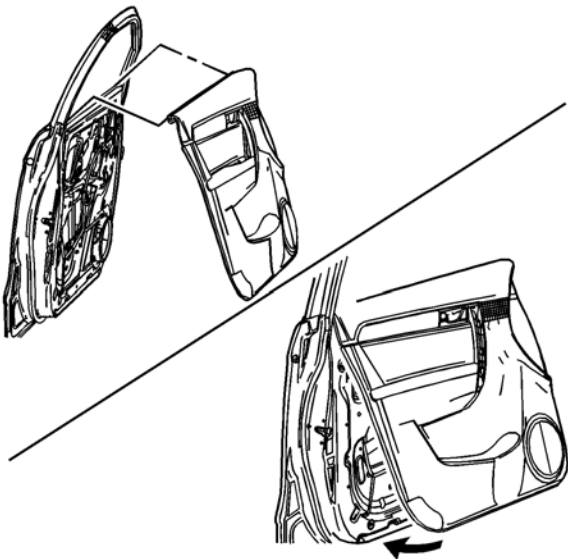


4. Pry off the front door trim panel [KM 475-A](#) .
5. Disconnect the electrical connectors.

Installation Procedure

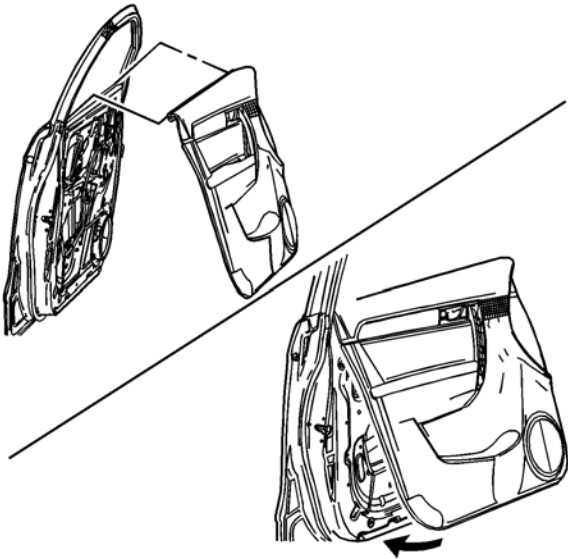

1. Install the front door trim panel.
2. Connect the electrical connectors.

Notice: Refer to [Fastener Notice](#) in the Preface section.

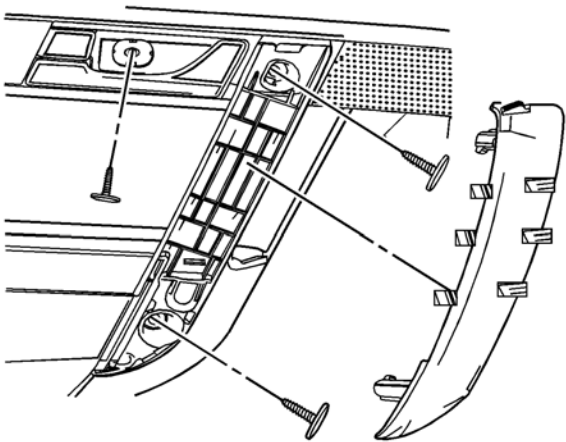

3. Install the front door trim screws.

Tighten

Tighten the front door trim screws to 3 N·m (27 lb in).


4. Install the front door handle cover.
5. Raise the front window.

Front Side Door Trim Panel Replacement (C 105/Short Body)


Tools Required

[KM 475-A](#) Trim Remover

Removal Procedure

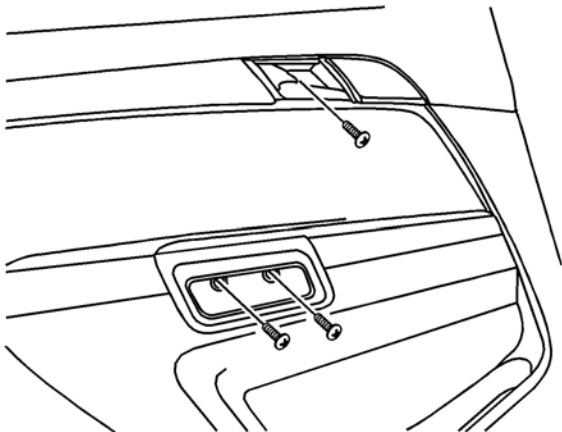


1. Lower the front window.
2. Remove the front door trim panel screws.

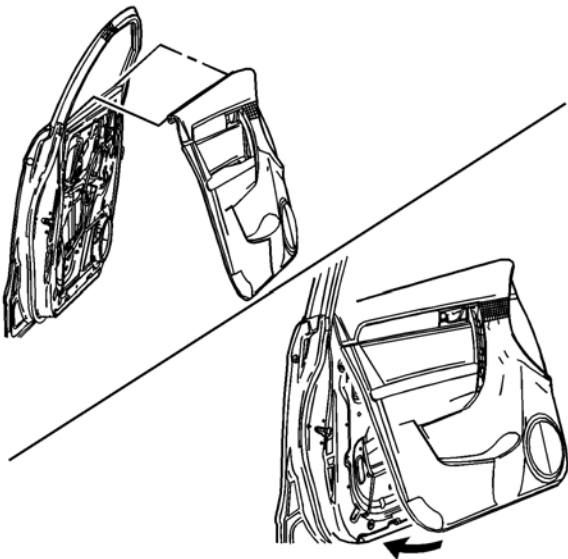


3. Pry off the front door trim panel using the trim remover [KM 475-A](#) .
4. Remove the door inner handle cable.
5. Disconnect the electrical connectors.

Installation Procedure

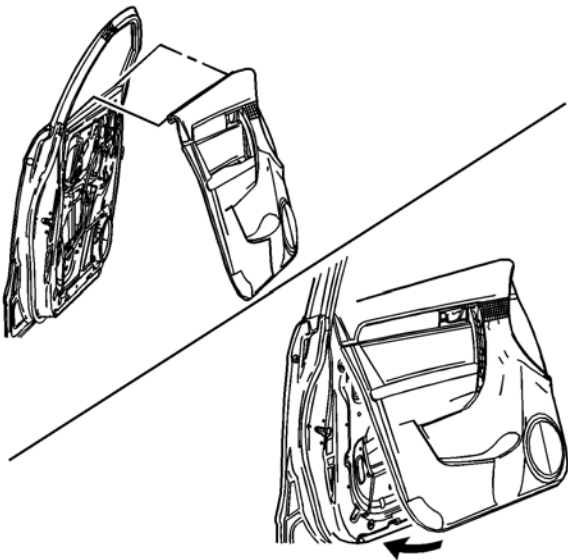

1. Connect the electrical connectors.
2. Install the door inner handle cable.
3. Install the front door trim panel.

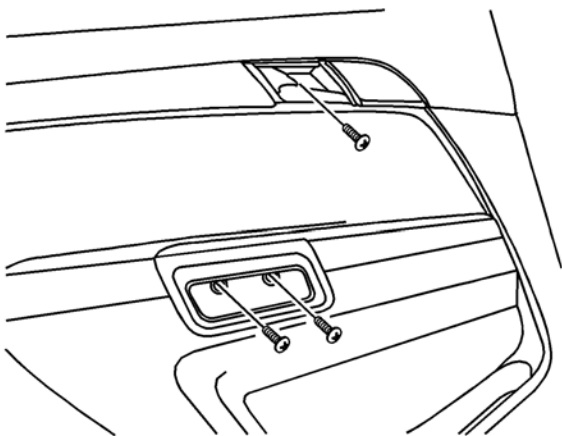

4. Install the front door trim screws.


Tighten

Tighten the front door trim screws to 3 N·m (27 lb in).

5. Raise the front window.


Door Water Deflector Replacement

Removal Procedure

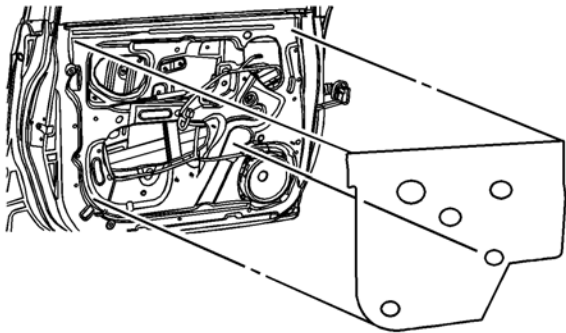

- 1. Remove the door trim panel. Refer to [Front Side Door Trim Panel Replacement](#) or [Rear Door Trim Panel Replacement](#) .
- 2. Remove the door water deflector.

Installation Procedure

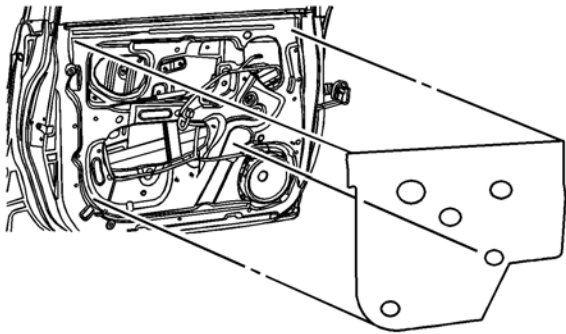


- 1. Install the door water deflector.
- 2. Install the door trim panel. Refer to [Front Side Door Trim Panel Replacement](#) or [Rear Door Trim Panel Replacement](#) .

Rear Door Trim Panel Replacement (C 105/Short Body)


Tools Required

[KM 475-A](#) Trim Remover


Removal Procedure

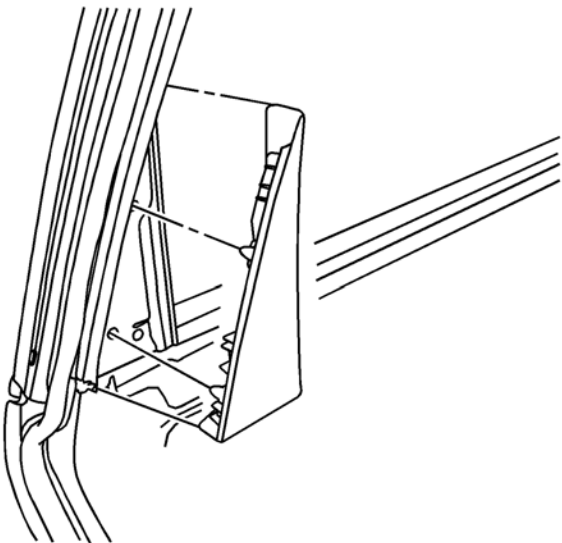

1. Lower the rear window.
2. Remove the rear door upper trim panel.

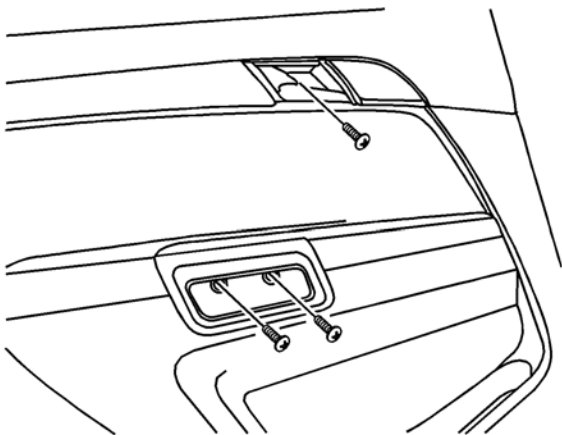


3. Remove the rear door handle screws.

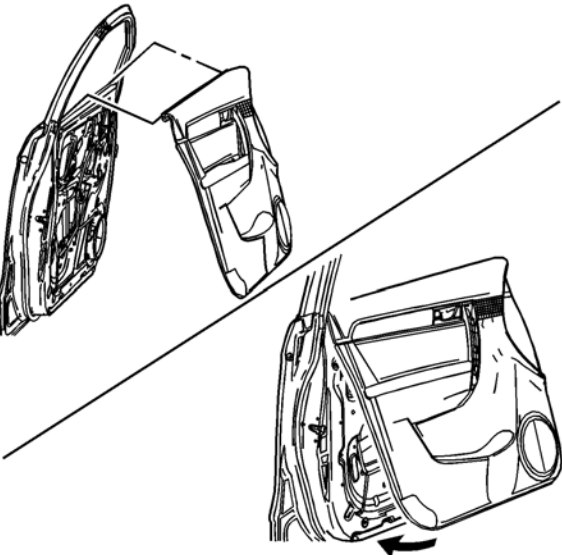


4. Pry off the trim panel using the trim remover [KM 475-A](#) .
5. Remove the door inner handle cable.
6. Disconnect the electrical connectors.

Installation Procedure

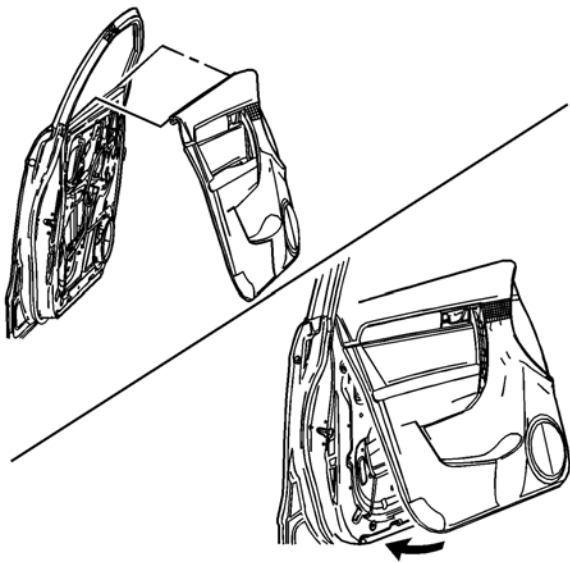


1. Connect the electrical connectors.
2. Install the rear door inner handle cable.
3. Install the rear door trim panel.

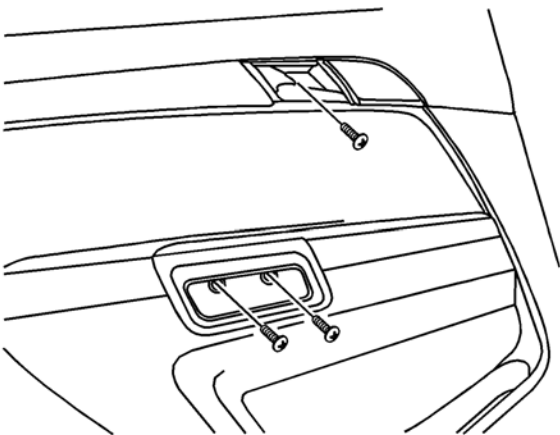

4. Install the rear door trim screws.

Tighten

Tighten the rear door trim screws to 3 N·m (27 lb in).

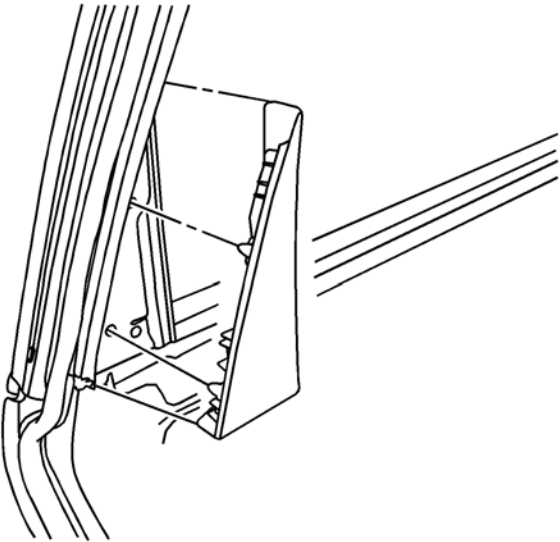


5. Install the rear door upper trim panel.
6. Raise the rear window.

Rear Door Trim Panel Replacement (C 100/Long Body)


Tools Required

[KM 475-A](#) Trim Remover

Removal Procedure

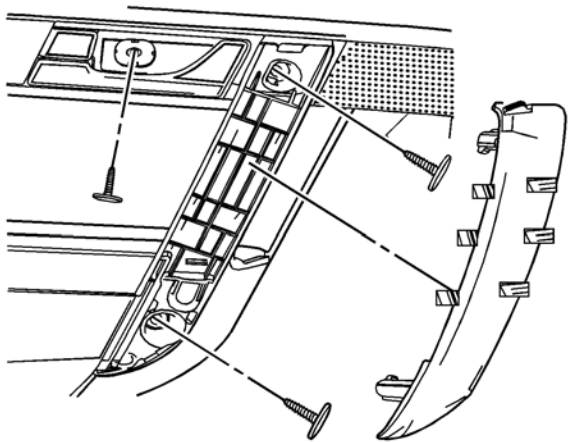


- 1. Lower the rear window.
- 2. Remove the rear door handle cover.
- 3. Remove the rear door handle screws.

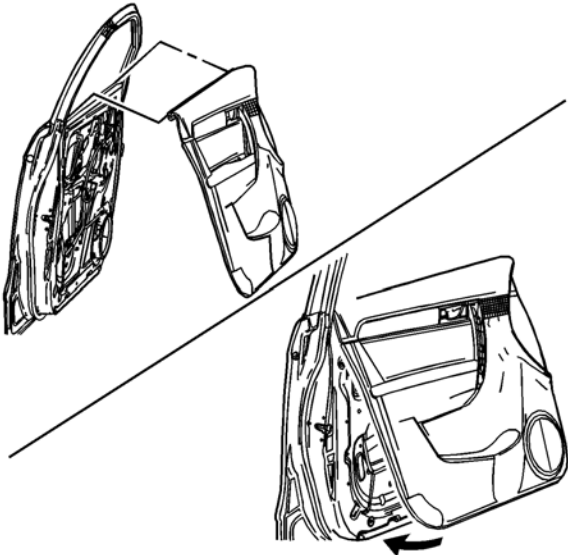


- 4. Pry off the trim panel [KM 475-A](#) .
- 5. Disconnect the electrical connectors.

Installation Procedure

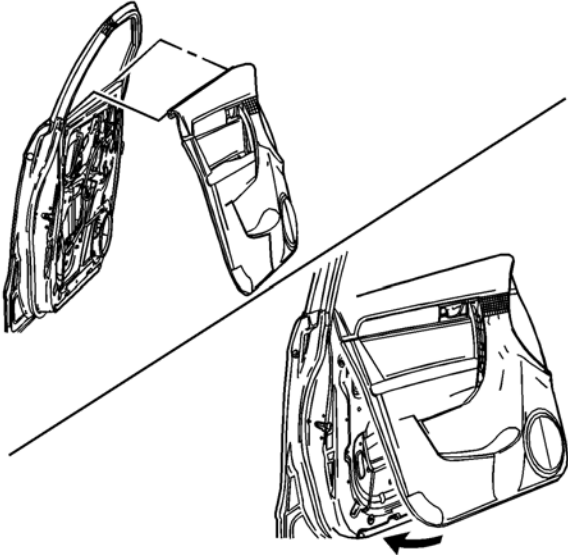

- 1. Install the rear door trim panel.
- 2. Connect the electrical connectors.

Notice: Refer to [Fastener Notice](#) in the Preface section.

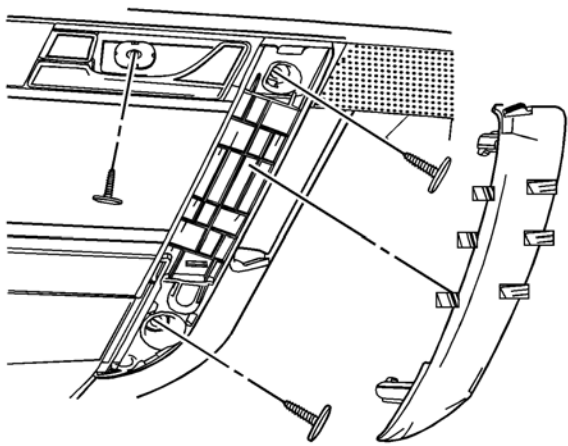

3. Install the rear door trim screws.


Tighten

Tighten the rear door trim screws to 3 N·m (27 lb in).

4. Install the rear door handle cover.
5. Raise the rear window.


Front Side Door Sill Plate Replacement

Removal Procedure

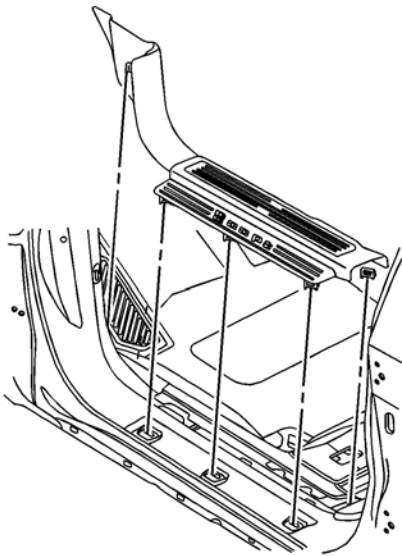

Remove the front side door retainer.


Installation Procedure

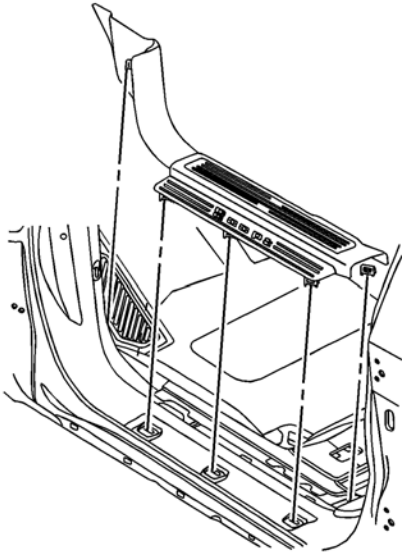

Install the front side door retainer.


Rear Side Door Sill Plate Replacement

Removal Procedure

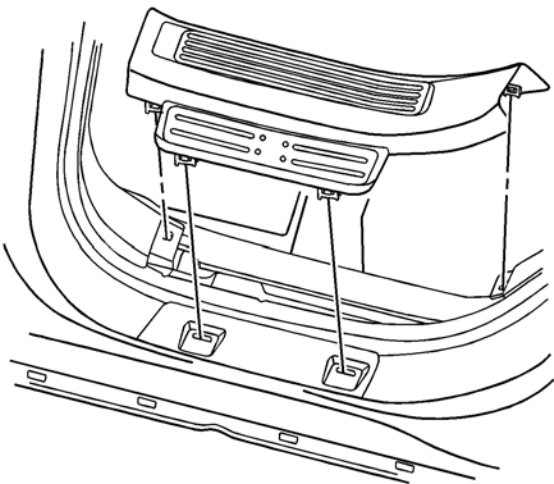

Remove the rear side door retainer.


Installation Procedure

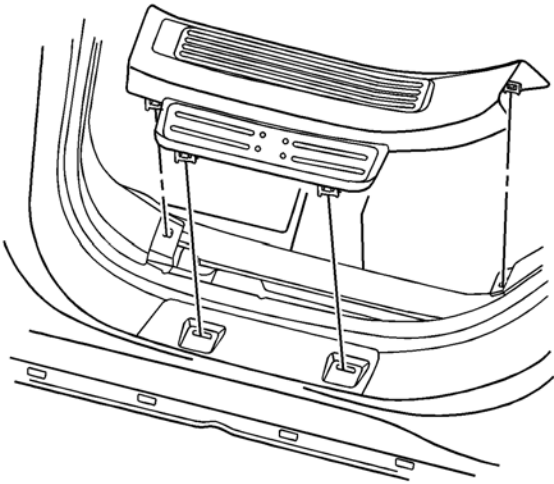

Install the rear side door retainer.


Assist Handle Replacement

Removal Procedure

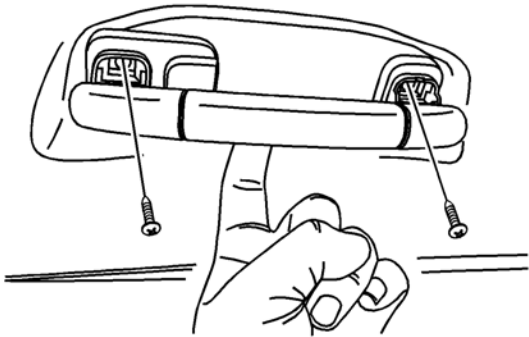

1. Reveal the assist handle screws.
2. Remove the screws and the assist handle from the headliner.

Installation Procedure

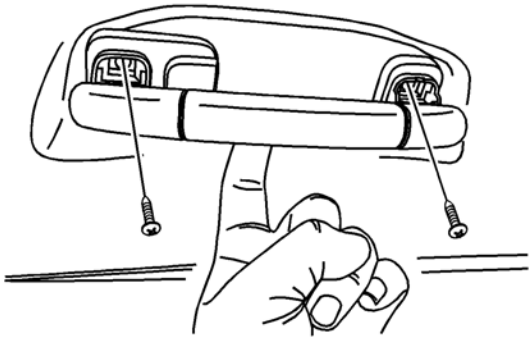

1. Position the assist handle to the headliner .

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.


2. Install the screws.

Tighten

Tighten the passenger assist handle screws 3 N·m (27 lb in).

Sunshade Replacement (C 105/Short Body)


Removal Procedure

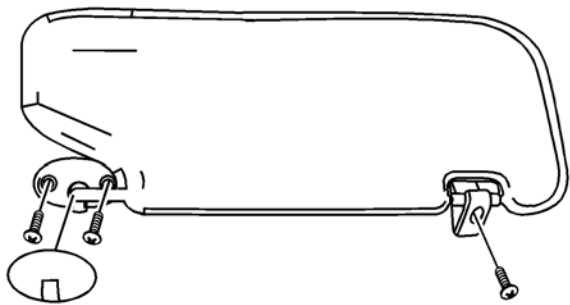

1. Remove the sunshade bracket cover.
2. Remove the screws and the sunshade from the headliner.
3. Disconnect the vanity mirror electrical connector.
4. Remove the screw and the sunshade support from the headliner.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

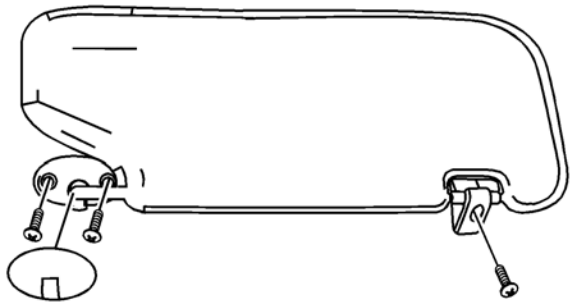

1. Install the sunshade support to the headliner with the screw.

Tighten

Tighten the sunshade support screws 3 N·m (27 lb in).

2. Connect the vanity mirror electrical connector.
3. Install the sunshade bracket to the headliner with the screws.


Tighten

Tighten the sunshade screws to 3 N·m (27 lb in).

4. Install the sunshade bracket cover.

Sunshade Replacement (C 100/Long Body)


Removal Procedure

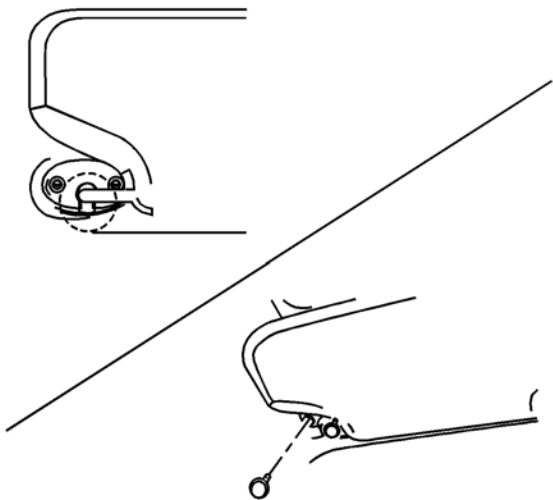

1. Remove the screws and the sunshade from the headliner.
2. Disconnect the vanity mirror electrical connector.
3. Remove the screw and the sunshade support from the headliner.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

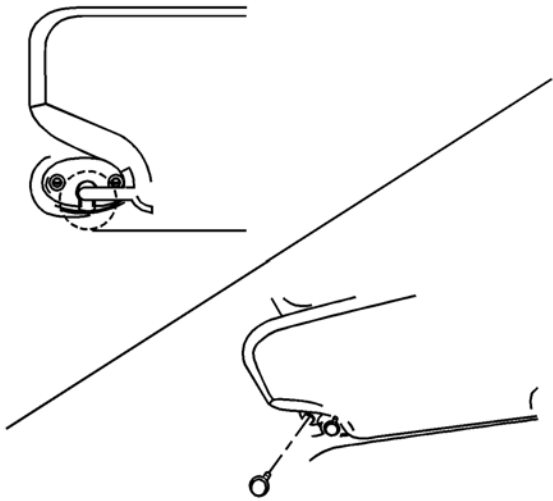

1. Install the sunshade support to the headliner with the screw.

Tighten

Tighten the sunshade support screws 3 N·m (27 lb in).


2. Connect the vanity mirror electrical connector.
3. Install the sunshade to the headliner with the screws.

Tighten

Tighten the sunshade screws to 3 N·m (27 lb in).


Windshield Garnish Molding Replacement

Removal Procedure

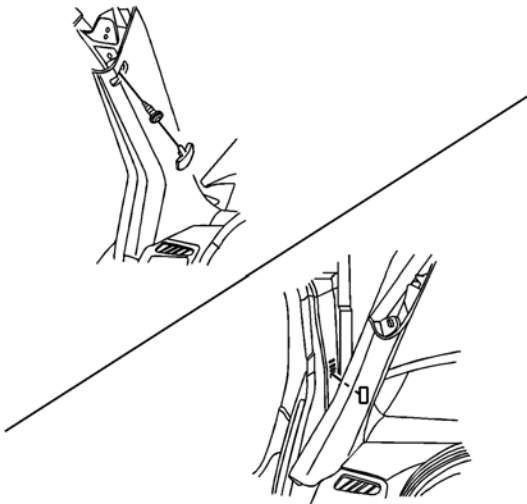

Remove the bolt and the windshield garnish molding.

Installation Procedure

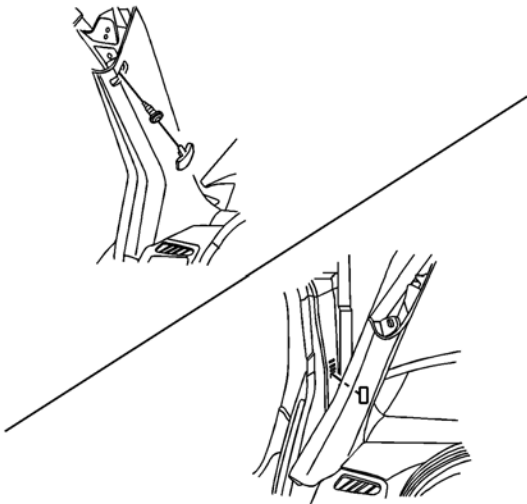


Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

Install the windshield garnish molding with the bolt.

Tighten
Tighten the windshield garnish molding bolt to 2 N·m (18 lb in).


Center Pillar Upper Garnish Molding Replacement

Removal Procedure

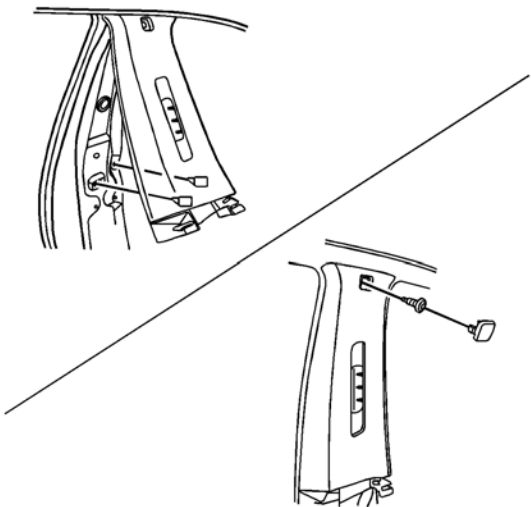

1. Remove the bolt and the upper front seat belt anchor.
2. Reposition the upper portion of the center pillar lower garnish molding.
3. Remove the screw and pry off the center pillar upper garnish molding.

Installation Procedure

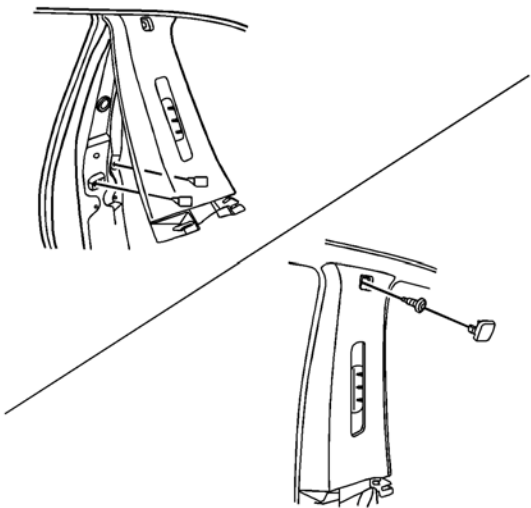

1. Install the center pillar upper garnish molding.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the upper portion of the center pillar lower garnish molding.

Tighten

Tighten the center pillar lower garnish molding screw to 22 N·m (16 lb ft).


3. Install the upper front seat belt anchor with the bolt.

Tighten

Tighten the seat belt anchor bolt to 38 N·m (28 lb ft).


Center Pillar Lower Garnish Molding Replacement

Removal Procedure

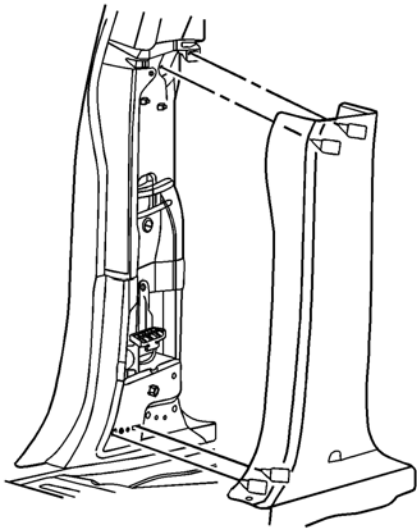

1. Reposition the rear portion of the front side door retainer and the front portion of the rear side door retainer.
2. Remove the center pillar lower garnish molding.


Installation Procedure

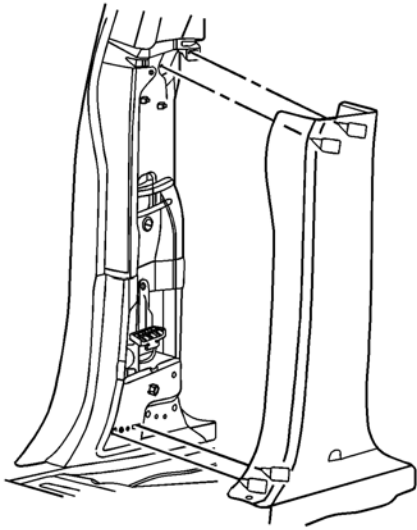

1. Install the center pillar lower garnish molding.
2. Install the front side door retainer and the rear side door retainer to their original positions.

Rear Quarter Lower Trim Panel Replacement (C 100/Long Body)


Removal Procedure

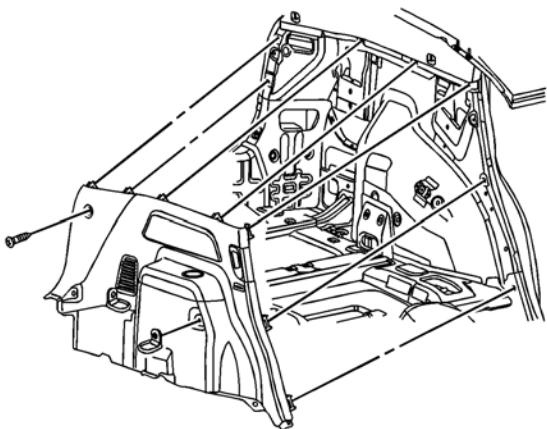

1. Remove the rear seat lower bolts. Refer to [Seat Belt Retractor Replacement - No. 1 Rear](#) and [Seat Belt Retractor Replacement - No. 2 Rear](#) .
2. Remove the rear compartment stow tray. Refer to [Rear Storage Compartment Replacement](#) .
3. Remove the screws and the rear quarter lower trim panel.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

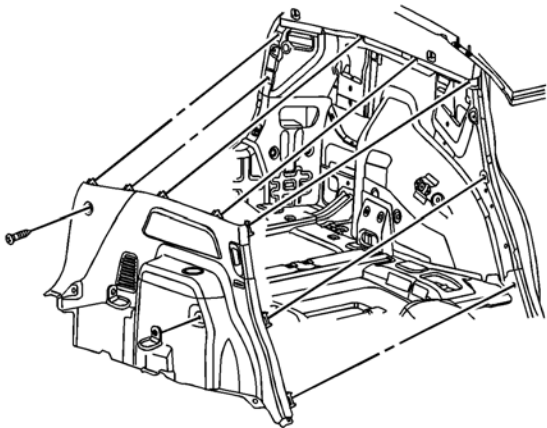

1. Install the rear quarter lower trim panel with the screws.


Tighten

Tighten the rear trim panel screws to 2 N·m (18 lb in).

2. Install the rear compartment stow tray. Refer to [Rear Storage Compartment Replacement](#) .
3. Install the rear seat lower bolts. Refer to [Seat Belt Retractor Replacement - No. 1 Rear](#) and [Seat Belt Retractor Replacement - No. 2 Rear](#) .

Rear Quarter Lower Trim Panel Replacement (C 105/Short Body)


Removal Procedure

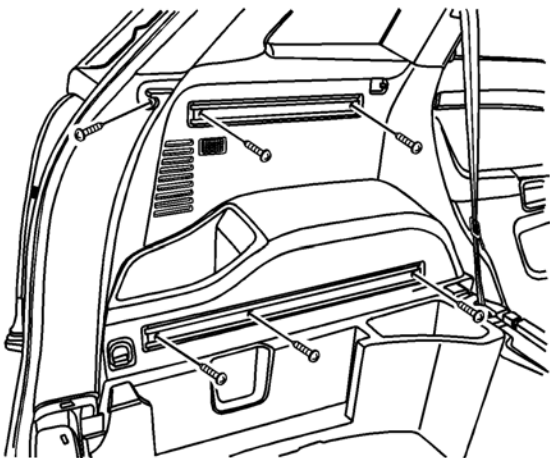

1. Remove the rear seat lower bolts. Refer to [Seat Belt Retractor Replacement - No. 1 Rear](#) and [Seat Belt Retractor Replacement - No. 2 Rear](#) .
2. Remove the rear compartment stow tray. Refer to [Rear Storage Compartment Replacement](#) .
3. Remove the screws and the rear quarter lower trim panel.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

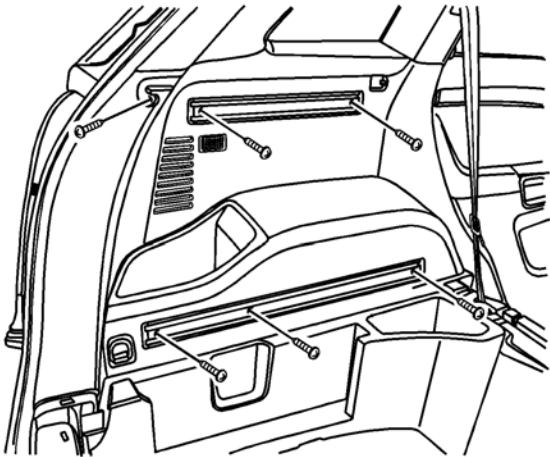

1. Install the rear quarter lower trim panel with the screws.


Tighten

Tighten the rear trim panel screws to 2 N·m (18 lb in).

2. Install the rear compartment stow tray. Refer to [Rear Storage Compartment Replacement](#) .
3. Install the rear seat lower bolts. Refer to [Seat Belt Retractor Replacement - No. 1 Rear](#) and [Seat Belt Retractor Replacement - No. 2 Rear](#) .

Rear Storage Compartment Replacement


Removal Procedure

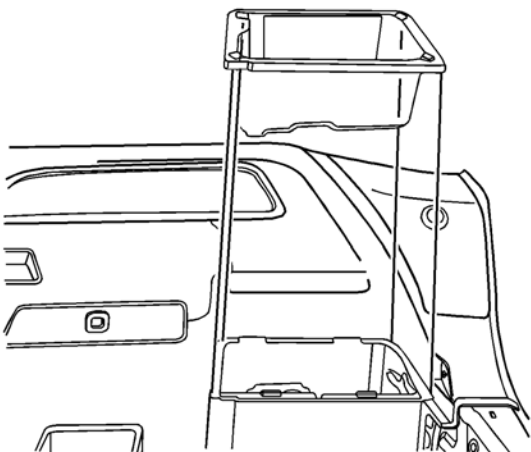

Remove the bolts and the rear compartment stow tray.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

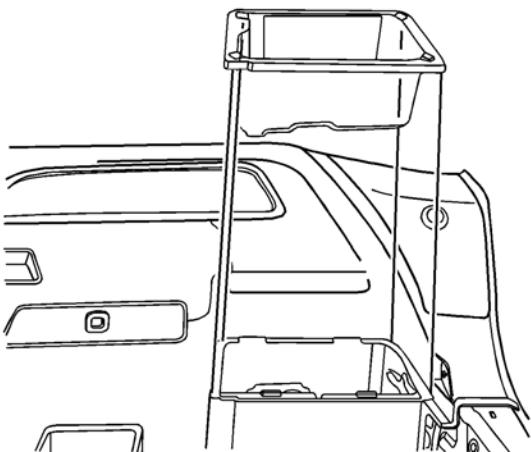


Install the rear compartment stow tray with the bolts.

Tighten

Tighten the rear compartment stow tray bolts to 8 N·m (11 lb ft).


Liftgate Garnish Molding Replacement (Side - C 100/Long Body)

Removal Procedure

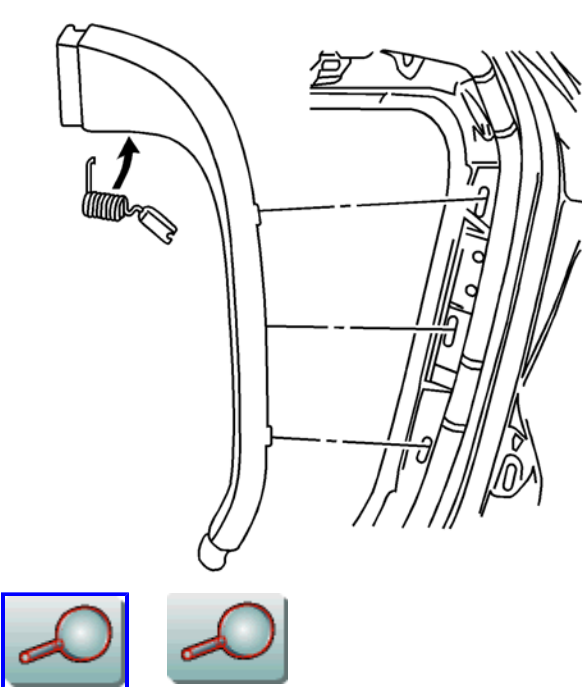

1. Open the liftgate.
2. Remove the liftgate window side garnish molding


Installation Procedure

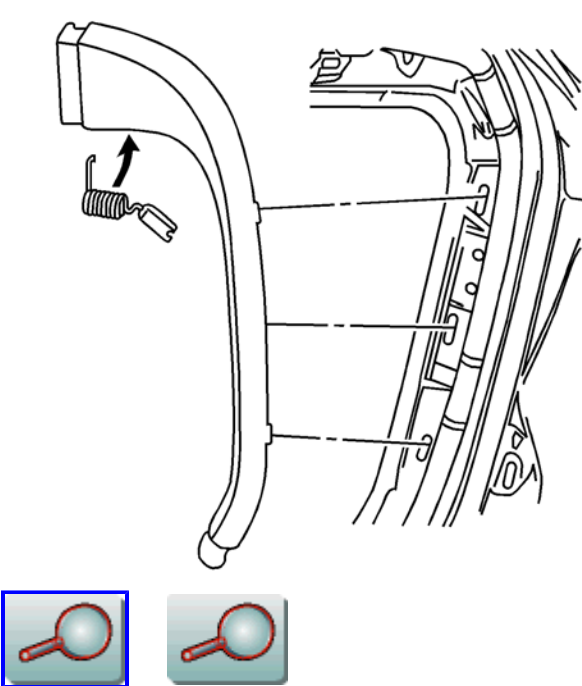

1. Install the liftgate window side garnish molding.
2. Close the liftgate.


Liftgate Garnish Molding Replacement (Side - C 105/Short Body)

Removal Procedure

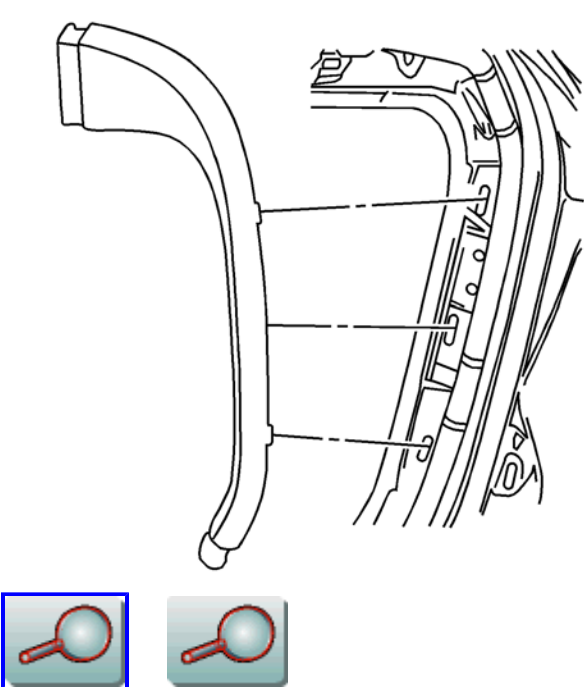

- 
- 
1. Open the liftgate.
 2. Remove the liftgate window side garnish molding


Installation Procedure

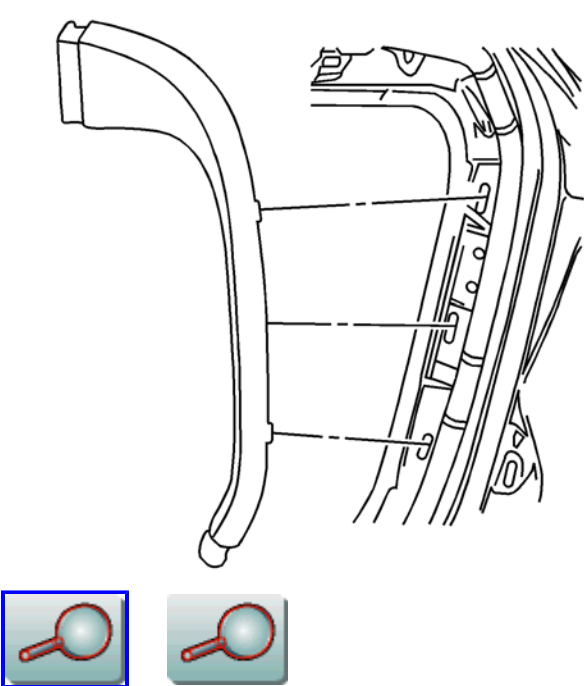

- 
- 
1. Install the liftgate window side garnish molding.
 2. Close the liftgate.


Liftgate Garnish Molding Replacement (Upper)

Removal Procedure

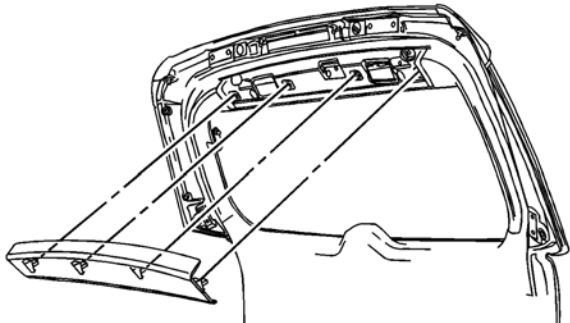

1. Open the liftgate.
2. Remove the liftgate window upper garnish molding.


Installation Procedure

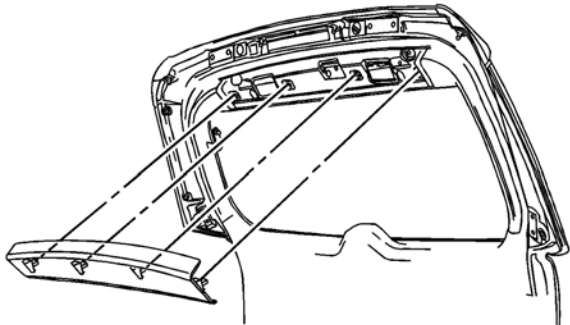


1. Install the liftgate window upper garnish molding.
2. Close the liftgate.

Liftgate Trim Panel Replacement

Removal Procedure

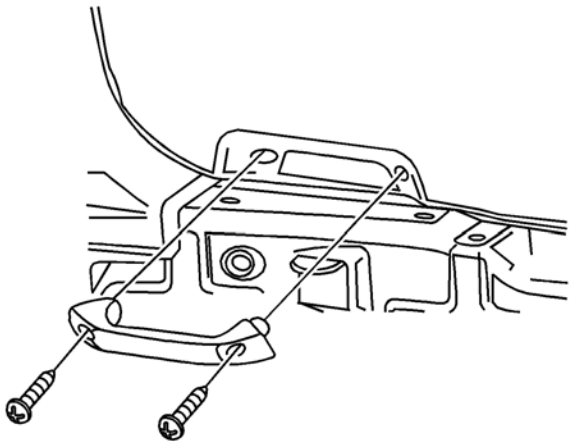


1. Remove the screws and the liftgate inside pull handle.

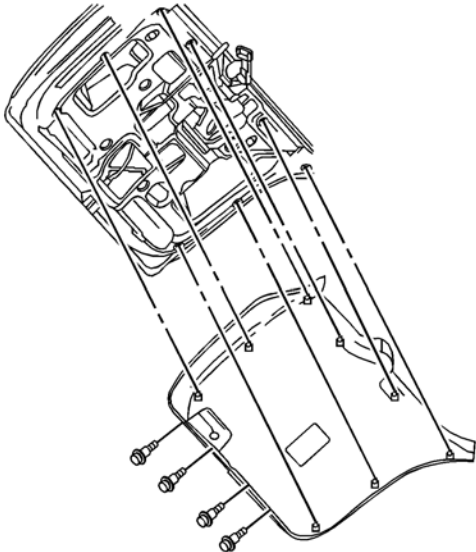


2. Remove the retainers from liftgate trim.
3. Remove the liftgate trim from the vehicle.

Installation Procedure

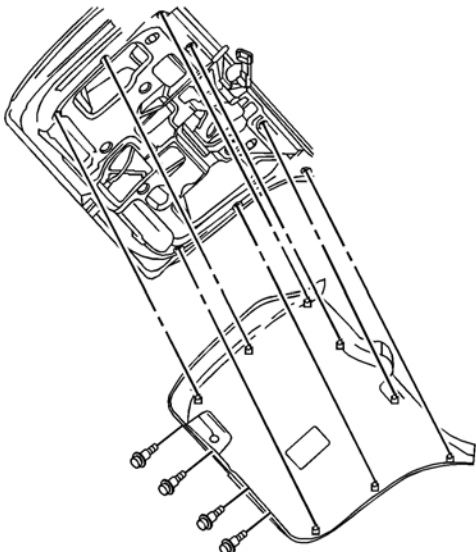


1. Install the liftgate trim with the retainers.

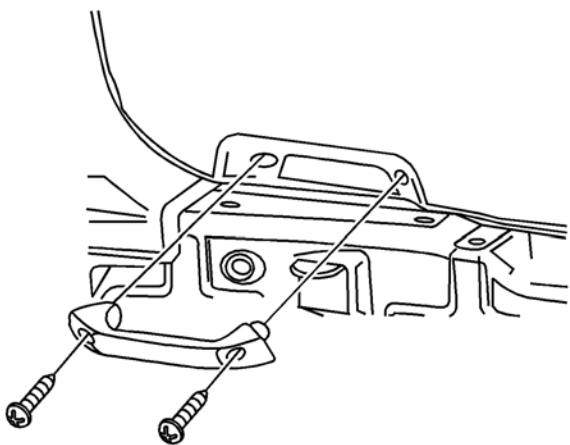

2. Install the liftgate inside pull handle with the screws.


Rear Compartment Sill Trim Plate Replacement

Removal Procedure

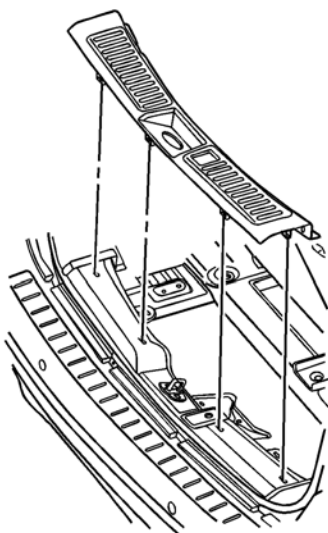

Remove the floor panel rear extension.


Installation Procedure

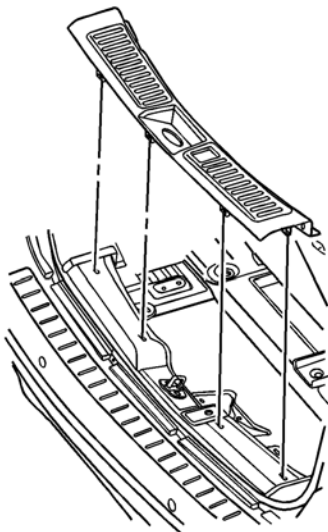

Install the floor panel rear extension.

Body Side Window Rear Garnish Molding Replacement (C 105/Short Body)


Removal Procedure

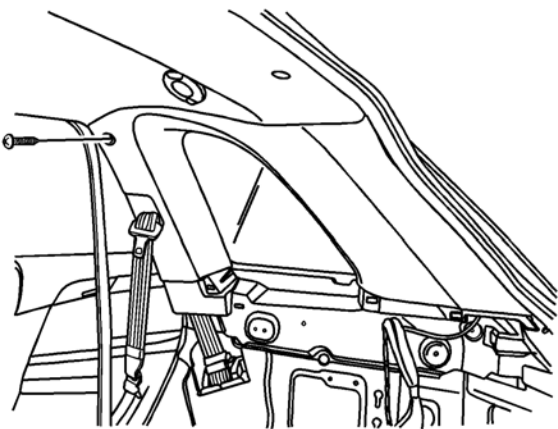

1. Remove the rear seat lower belts. Refer to [Seat Belt Retractor Replacement - No. 1 Rear](#) or [Seat Belt Retractor Replacement - No. 2 Rear](#) .
2. Remove the screws and the quarter window garnish molding.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

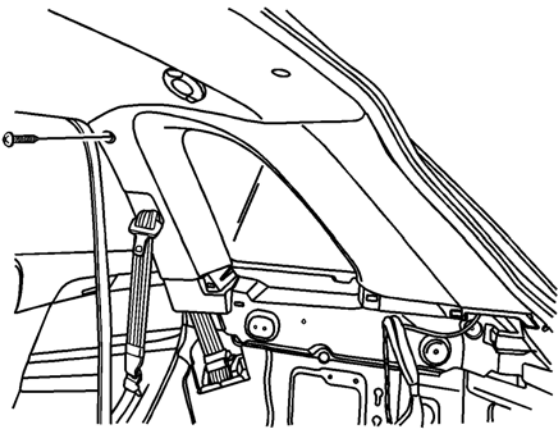

1. Install the quarter window garnish molding with the screws.


Tighten

Tighten the quarter window garnish molding screws to 2 N·m (18 lb in).

2. Install the rear seat lower belts. Refer to [Seat Belt Retractor Replacement - No. 1 Rear](#) or [Seat Belt Retractor Replacement - No. 2 Rear](#) .

Body Side Window Rear Garnish Molding Replacement (C 100/Long Body)


Removal Procedure

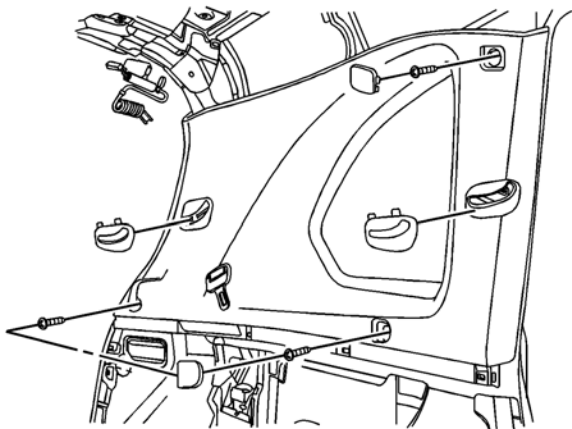

1. Remove the rear seat lower belts. Refer to [Seat Belt Retractor Replacement - No. 1 Rear](#) or [Seat Belt Retractor Replacement - No. 2 Rear](#) .
2. Remove the screws and the quarter window garnish molding.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

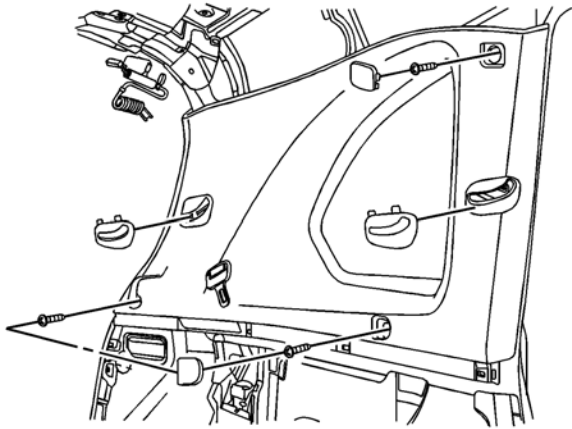

1. Install the quarter window garnish molding with the screws.

Tighten


Tighten the quarter window garnish molding screws to 2 N·m (18 lb in).

2. Install the rear seat lower belts. Refer to [Seat Belt Retractor Replacement - No. 1 Rear](#) or [Seat Belt Retractor Replacement - No. 2 Rear](#) .

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Center Pillar Lower Garnish Molding Screw	22 N·m	16 lb ft
Driver Knee Bolster Bolts	20 N·m	15 lb ft
Driver Knee Bolster Screws	2.5 N·m	23 lb in
Floor Console Bolts	8 N·m	71 lb in
Front Console Retainer Screw	2 N·m	18 lb in
Hood Latch Release Handle Mounting Screw	3 N·m	27 lb in
Quarter Window Garnish Molding Screw	2 N·m	18 lb in
Rear Compartment Stow Tray Bolts	8 N·m	71 lb in
Rear Wheelhouse Trim Panel Screws	2 N·m	18 lb in
Windshield Garnish Molding Screw	2 N·m	18 lb in

Special Tools

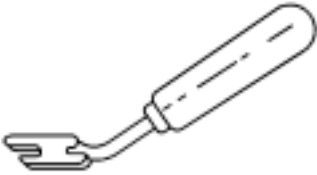Illustration	Tool Number/Description
  	J-21104-B (KW-475-B) Weatherstrip Remover Universal
  	KM-475-A Trim Remover