

A

Accessory socket	
Engine overhaul.....	90-180
Circuit diagrams.....	90-180
Accessory socket	
Removal and installation	54A-146
Air bag module disposal procedures	52B-268
Air cleaner	
Removal and installation	15-5
Ambient temperature sensor	
Inspection	55B-46
Removal and installation	55B-46
Antenna	
Removal and installation	54A-212
Anti-lock braking system (ABS), active stability control system (ASC) and hill start assist system (HSA)	
Engine overhaul.....	90-182
Circuit diagrams.....	90-182
ASC off switch	
Inspection	35C-136
Removal and installation	35C-136
Audio system	
Engine overhaul.....	90-162
Circuit diagrams.....	90-162
Automatic A/C diagnosis	
Actuator test table.....	55B-37
Automatic air conditioning troubleshooting strategy	55B-4
Check at A/C-ECU terminals.....	55B-38
Data list reference table.....	55B-35
Diagnostic function	55B-4
Diagnostic trouble code chart	55B-8
Diagnostic trouble code procedures	
Code No. B1083 EEPROM error	55B-13
Code No. U1000: OSS/f.a.s.t._OSS CAN timeout	55B-14
Code No. U1109: ETACS-ECU CAN time-out/not equipped	55B-21
Code No.B1001: inside temperature sensor low	
code No.B1002: inside temperature sensor high.....	55B-9
Code No.B1041: a/m damper potentiometer high	
code No.B1042: a/m damper potentiometer low	55B-9
Code No.B1045: air mix damper motor	55B-10
Code No.B1061: air outlet damper potentio.high	
code No.B1062: air outlet damper potentio.low.....	55B-11
Code No.B1065: air outlet changeover dmpr.motor ..	55B-12
Code No.U1100 engine CAN timeout.....	55B-16
Code No.U1108 meter CAN timeout/not equipped....	55B-19
Code No.U1190 No receive fault detect signal	55B-24
Code No.U1195 coding not completed	55B-24
Introduction.....	55B-3
Symptom procedures	
Inspection procedure 1: communication with the scan tool mb991958 is not possible.....	55B-25
Inspection procedure 2: cool air does not come	55B-25
Inspection procedure 3: the blower does not work	55B-26
Inspection procedure 4: the blower air volume cannot be changed	55B-28
Inspection procedure 5: the inside/outside air changeover is impossible.	55B-30
Inspection procedure 6: A/C pressure sensor system	55B-31

Inspection procedure 7: the A/C compressor does not work	55B-32
Inspection procedure 8: A/C-ECU power supply system.....	55B-34
Trouble symptom chart	55B-24
Automatic air conditioning system	
Engine overhaul.....	90-140
Circuit diagrams.....	90-140

B

Backup light	
Engine overhaul.....	90-97
Circuit diagrams.....	90-97
Basic brake system diagnosis	
Basic brake system diagnostic troubleshooting strategy	35A-3
Introduction to basic brake system diagnosis	35A-3
Symptom chart.....	35A-3
Symptom procedures	
Inspection procedure 1: vehicle pulls to one side when brakes are applied.....	35A-3
Inspection procedure 2: insufficient braking power....	35A-5
Inspection procedure 3: increased pedal stroke (reduced pedal-to-floor board clearance).....	35A-7
Inspection procedure 4: brake drag	35A-8
Inspection procedure 5: scraping or grinding noise when brakes are applied	35A-9
Inspection procedure 6: squealing, groaning or chattering noise when brakes are applied	35A-10
Inspection procedure 7: squealing noise when brakes are not applied	35A-11
Inspection procedure 8: groaning, clicking or rattling noise when brakes are not applied.	35A-12
Battery	
General information	54A-4
On-vehicle service	
Battery charging.....	54A-5
Battery test.....	54A-5
Fluid level and specific gravity check.....	54A-4
Removal and installation.....	54A-7
Blower assembly and resistor	
Inspection	55A-42
Removal and installation.....	55A-42
Brake pedal	
Inspection	
Stoplight switch check.....	35A-26
Removal and installation.....	35A-25
Brake warning light, fuel warning light and oil pressure warning light	
Engine overhaul.....	90-104
Circuit diagrams.....	90-104

C

Camshaft	
Inspection	
Engine overhaul.....	11B-43
Circuit diagrams.....	11B-43
Removal and installation	
Engine mechanical.....	11A-23
Engine overhaul.....	11B-40
Configuration diagrams.....	11A-23

Circuit diagrams.....	11B-40	DTC U0121: ABS/ASC CAN timeout.....	54A-24
Central door locking system		DTC U0131: EPS CAN timeout.....	54A-25
Engine overhaul.....	90-118	DTC U0141: ETACS CAN timeout.....	54A-26
Circuit diagrams.....	90-118	DTC U0151: SRS-abg CAN timeout.....	54A-27
Centralized junction		DTC U0154: OCM CAN timeout.....	54A-28
Engine overhaul.....	90-20	DTC U0168: WCM/f.a.s.t. CAN timeout.....	54A-30
Circuit diagrams.....	90-20	DTC U1000: OSS CAN timeout.....	54A-31
Charging system		DTC U1110: A/C CAN timeout/not equipped.....	54A-32
Engine overhaul.....	90-46	DTC U1190: No receive fault detect signal.....	54A-33
Circuit diagrams.....	90-46	DTC U1195: coding not completed.....	54A-34
Charging system		On-vehicle service	
Charging system diagnosis.....	16-3	Fuel level sensor check.....	54A-54
General information.....	16-2	Service reminder function set.....	54A-55
Generator assembly		Speedometer check.....	54A-53
Removal and installation.....	16-16	Tachometer check.....	54A-54
On-vehicle service		Service data.....	54A-50
Generator output line voltage drop test.....	16-7	Service specifications.....	54A-12
Output current test.....	16-9	Special function table.....	54A-51
Regulated voltage test.....	16-11	Special tools.....	54A-13
Waveform check using an oscilloscope.....	16-13	Symptom procedures	
Service specifications.....	16-3	Inspection procedure 1: power supply circuit check	
Special tools.....	16-5	Inspection procedure 2: the odometer and the trip meter are not displayed.	
Clutch		Inspection procedure 3: No needle meters work.	
Clutch removal and installation.....	21B-3	Inspection procedure 4: if the ignition switch is turned to.....	54A-36
Inspection.....	21B-6	Inspection procedure 10: the multi-information display screen cannot be changed with the operation of the multi-information display switch.....	54A-45
Clutch control		Inspection procedure 11: parking brake reminder tone alarm does not sound.	
Inspection.....	21A-6	Inspection procedure 12: brake warning light does not illuminate.....	54A-46
Removal and installation.....	21A-5	Inspection procedure 13: ambient temperature sensor does not work.....	54A-47
Clutch housing		Inspection procedure 14: seat belt reminder function does not work normally.....	54A-48
Disassembly and reassembly.....	22B-34	Inspection procedure 5: the speedometer does not work (the other meters work).....	54A-38
Column switch		Inspection procedure 6: the tachometer does not work (the other meters work).....	54A-40
Diagnosis		Inspection procedure 7: tone alarm does not sound normally.....	54A-41
Diagnosis function.....	54A-149	Inspection procedure 8: fuel gauge does not work (the other meters work).....	54A-42
Diagnostic trouble code table.....	54A-151	Inspection procedure 9: the combination meter light does not illuminate normally or the multi-information display is not displayed normally.....	54A-44
Standard flow of diagnostic troubleshooting.....	54A-149	Trouble symptom chart.....	54A-35
Diagnostic trouble code procedures		Compressor assembly	
DTC B1763: lighting switch		Disassembly and reassembly.....	55A-46
DTC B1764: wiper switch.....	54A-151	Inspection.....	55A-46
Inspection		Removal and installation.....	55A-44
Column switch inspection.....	54A-154	Condenser assembly	
Removal and installation.....	54A-152	Removal and installation.....	55A-48
Special tools.....	54A-147	Control housing	
Combination meter		Disassembly and reassembly.....	22B-32
Actuator test table.....	54A-51	Control unit.....	70-3
Check at combination meter terminals.....	54A-51	Controller area network (CAN)	
Combination meter		Engine overhaul.....	90-246
Disassembly and assembly.....	54A-62	Circuit diagrams.....	90-246
Removal and installation.....	54A-61	Cooling system	
Diagnosis		Engine overhaul.....	90-58
Diagnosis function.....	54A-15	Circuit diagrams.....	90-58
Standard flow of diagnostic troubleshooting.....	54A-15		
Diagnostic trouble code chart.....	54A-18		
Diagnostic trouble code procedures			
DTC B1200: odometer failure.....	54A-19		
DTC B1201: fuel information problem.....	54A-19		
DTC B1209: B1209 test mode.....	54A-21		
DTC B2463: rheostat switch sticking.....	54A-21		
DTC U0100: engine CAN timeout.....	54A-21		
DTC U0101: T/M CAN timeout.....	54A-22		

Crankshaft and cylinder block		Curtain air bag module(s)	
Inspection		Inspection	52B-250
Engine overhaul.....	11B-69	Removal and installation.....	52B-247
Circuit diagrams.....	11B-69	CVT	
Removal and installation		Engine overhaul.....	90-62
Engine overhaul.....	11B-63	Circuit diagrams.....	90-62
Circuit diagrams.....	11B-63	Cylinder head and valves	
Crankshaft oil seal		Inspection	
Removal and installation		Engine overhaul.....	11B-51
Engine mechanical	11A-39	Circuit diagrams.....	11B-51
Configuration diagrams.....	11A-39	Removal and installation	
Crankshaft pulley		Engine overhaul.....	11B-45
Removal and installation		Circuit diagrams.....	11B-45
Engine mechanical	11A-18	Cylinder head gasket	
Configuration diagrams.....	11A-18	Removal and installation	
Cruise control		Engine mechanical.....	11A-42
Check at the engine control module terminal	17-44	Configuration diagrams.....	11A-42
Check chart for trouble symptoms.....	17-28		
Cruise control switch			
Removal and installation.....	17-48		
Cruise control system diagnosis			
Diagnosis troubleshooting flow	17-14		
Diagnostic function	17-15		
Introduction to cruise control system diagnosis	17-14		
Data list reference table.....	17-43		
Diagnostic trouble code chart	17-18		
Diagnostic trouble code procedures			
DTC 15: cruise control switch system.....	17-18		
DTC 22: stoplight switch system.....	17-24		
DTC 23: ECM and its related component	17-27		
General information	17-8		
On-vehicle service			
Cruise control switch check	17-45		
Cruise control system component check.....	17-47		
Special tools	17-12		
Symptom procedures			
Inspection procedure 1: when the brake pedal is depressed, cruise control is not cancelled.....	17-29		
Inspection procedure 2: when the clutch pedal is depressed, cruise control is not cancelled. <M/T>	17-30		
Inspection procedure 3: when the selector lever is set to "N" position, cruise control is not cancelled. <CVT>	17-32		
Inspection procedure 4: when the cancel switch is pressed, cruise control is not cancelled.....	17-33		
Inspection procedure 5: cruise control cannot be set (No response set – switch and res + switch is pressed).....	17-34		
Inspection procedure 6: hunting (repeated acceleration and deceleration) occurs at the set vehicle speed. <M/T>	17-37		
Inspection procedure 7: hunting (repeated acceleration and deceleration) occurs at the set vehicle speed. <CVT>	17-38		
Inspection procedure 8: when the cruise control on/off switch is turned on, the cruise control indicator lamp does not illuminate (however, the cruise control system is normal).....	17-40		
Inspection procedure 9: when the cruise control switch is operated, the system is not turned on.....	17-41		
Cruise control system			
Engine overhaul.....	90-212		
Circuit diagrams.....	90-212		

D

Damper control motor assembly	
Damper control motor assembly inspection.....	55B-44
Damper control motor assembly removal and installation	55B-43
Defogger	
Diagnosis	
Standard flow of diagnostic troubleshooting	54A-265
Trouble symptom chart	54A-265
Inspection	
Rear window defogger switch continuity check <vehicles with manual air conditioning>	54A-270
On-vehicle service	
Printed heater check	54A-271
Rear window defogger relay check.....	54A-271
Removal and installation.....	54A-270
Special tools.....	54A-263
Symptom procedures	
The rear window defogger does not work. <vehicles with automatic air conditioning>.....	54A-268
The rear window defogger does not work. <vehicles with manual air conditioning>	54A-266
Diagnosis	
Actuator test table	
Active stability control system (ASC)	35C-123
Keyless operation system (KOS)	42B-76
ASC diagnostic troubleshooting strategy.....	35C-3
ASC indicator light, ASC off indicator light, ABS warning light and brake warning light check	35C-5
CAN bus diagnostics	
Diagnostic item 1: communication with no ecus is possible.....	54C-16
Diagnostic item 10: diagnose when the scan tool cannot receive the data sent by steering wheel sensor.	54C-81
Diagnostic item 11: diagnose when the scan tool cannot receive the data sent by occupant classification-ECU.....	54C-82
Diagnostic item 12: diagnose the lines between the joint connectors (CAN1 and CAN2)	54C-83
Diagnostic item 13: diagnose when the scan tool cannot receive the data sent by EPS-ECU.	54C-85
Diagnostic item 14: diagnose when the scan tool cannot receive the data sent by ASC-ECU.....	54C-85

Diagnostic item 15: diagnose when the scan tool cannot receive the data sent by transaxle control module (ECM). <CVT>	54C-86	Code No. C1366 lateral g sns.r.stuck/low gain	35C-45
Diagnostic item 16: diagnose when the scan tool (m.u.t.-III) cannot receive the data sent by engine control module (ECM).	54C-88	Code No. C1371 yaw rate snsr. stuck/low gain	35C-46
Diagnostic item 2: diagnose shorts in the power supply to CAN bus line	54C-18	Code No. C1381 longitudinal g stuck/low gain	35C-47
Diagnostic item 3: diagnose shorts in the ground to CAN bus line	54C-38	Code No. C1385 yaw rate sensor.....	35C-48
Diagnostic item 4: diagnose shorts between CAN_h and l lines	54C-59	Code No. C1387 lateral g sensor/g performance	35C-49
Diagnostic item 5: diagnose when the scan tool cannot receive the data sent by ETACS-ECU.	54C-74	Code No. C1388 yaw rate sensor active check.....	35C-51
Diagnostic item 6: diagnose when the scan tool cannot receive the data sent by combination meter ..	54C-76	Code No. C1390 lateral g sensor active check.....	35C-52
Diagnostic item 7: diagnose when the scan tool cannot receive the data sent by SRS-ECU.....	54C-78	Code No. C1392 incomp.learn (longitudinal g)	35C-53
Diagnostic item 8: diagnose when the scan tool cannot receive the data sent by KOS&OSS-ECU. <vehicles with KOS>.....	54C-79	Code No. C1394 incomp.learn neutral(SAS)	35C-54
Diagnostic item 9: diagnose when the scan tool cannot receive the data sent by auto A/C controller assembly (A/C-ECU). <vehicles with automatic A/C>.....	54C-80	Code No. C1395 incomp. brake fluid filling.....	35C-55
CAN bus diagnostics table	54C-12	Code No. C1396 engine torque input refusal.....	35C-56
CAN-related connector position.....	54C-16	Code No. C1505 steering angle sensor.....	35C-57
Check at ECU terminals	35C-125	Code No. C1555 steering angle sns.out of range.....	35C-59
CVT fluid pressure control learning procedure	23A-5	Code No. C1607 ECU failure.....	35C-61
Data list reference table		Code No. C1608 EEPROM fail.....	35C-61
CVT.....	23A-109	Code No. C1707 implausible coding data.....	35C-64
Active stability control system (ASC)	35C-121	Code No. C1860 power supply high voltage.....	35C-65
Keyless operation system (KOS).....	42B-75	Code No. C1861 power supply low voltage	35C-68
Diagnosis function	54B-4	Code No. C1864: g/yawrate sns.power supply volt.	35C-71
Diagnosis trouble code chart.....	42B-13	Code No. C2206 re-execution of variant coding	35C-73
Diagnostic function		Code No. U0401 engine (CAN message).....	35C-75
CVT.....	23A-7	Code No. U0402 T/M (CAN message)	35C-76
Active stability control system (ASC)	35C-8	Code No. U0428 SAS (CAN message)	35C-77
Active stability control system (ASC)	35C-5	Code No. U1073 bus-off	35C-79
Keyless operation system (KOS).....	42B-5	Code No. U1100 engine CAN timeout	35C-79
Diagnostic trouble code chart		Code No. U1101 T/M CAN timeout/not equipped	35C-81
CVT.....	23A-16	Code No. U1104 SAS CAN timeout/not equipped	35C-83
Active stability control system (ASC)	35C-16	Code No. U1108 meter CAN timeout/not equipped ...	35C-84
Local interconnect network (LIN)	54B-6	Code No. U1109 ETACS CAN timeout/not equipped	35C-86
Diagnostic trouble code procedures		Code No. U1195 coding not completed	35C-88
Code No. C1200 FR wheel speed sensor		Code No. U1200 SAS parity error	35C-89
Code No. C1205 FL wheel speed sensor		code No. U1204 SAS message counter error.....	35C-91
Code No. C1210 RR wheel speed sensor		Code No. U1211 eng parity/toggle bit error	35C-91
Code No. C1215 RL wheel speed sensor	35C-18	DTC B1130: ignition power supply.....	42B-15
Code No. C1201 FR wheel speed sensor signal		DTC B1131: starter setting circuit fail.....	42B-25
Code No. C1206 FL wheel speed sensor signal		DTC B1132: starter circuit fail	42B-27
Code No. C1211 RR wheel speed sensor signal	35C-23	DTC B1133: IG1 setting circuit fail	42B-29
Code No. C1216 RL wheel speed sensor signal.....	35C-30	DTC B1134: ECU power supply.....	42B-31
Code No. C1225 deviation between wheel speed.....		DTC B1135: engine switch.....	42B-33
Code No. C1226 FR inlet valve		DTC B1136: stop light switch	42B-35
Code No. C1231 FR outlet valve		DTC B1137: p range detect sw	42B-38
Code No. C1236 FL inlet valve		DTC B1157: EEPROM fail	
Code No. C1241 FL outlet valve		DTC B1158: ECU internal error	42B-41
Code No. C1246 RR inlet valve		DTC B1160: key code not programmed	
Code No. C1251 RR outlet valve		DTC U1199: VIN not programmed.....	42B-42
Code No. C1256 RL inlet	35C-36	DTC B1161: VIN mismatch	42B-42
Code No. C1266 motor stuck		DTC B1163: coding data mismatch	42B-42
Code No. C1271 motor drive circuit		DTC B1166: special mode	42B-43
Code No. C1273 motor drive circuit stuck off		DTC B1731: PCM authentication timeout	42B-43
Code No. C1274 motor drive circuit stuck on	35C-37	DTC B1A08: f.a.s.t. key1 fail	
Code No. C1276 valve power supply circuit		DTC B1A09: f.a.s.t. key2 fail	
Code No. C1278 valve power circuit stuck off		DTC B1A0A: f.a.s.t. key3 fail	
Code No. C1279 valve power circuit stuck on.....	35C-39	DTC B1A0B: f.a.s.t. key4 fail	42B-44
Code No. C1340 stoplight switch.....	35C-42	DTC B1A10: f.a.s.t. key 1 low battery	
Code No. C1364 M/C pressure snsr.malfunction	35C-44	DTC B1A11: f.a.s.t. key 2 low battery	
		DTC B1A12: f.a.s.t. key 3 low battery	
		DTC B1A13: f.a.s.t. key 4 low battery	42B-45
		DTC B1A24: transponder ID not registered	42B-46
		DTC B1A25: transponder ID unmatched	42B-47
		DTC B1A28: PCM authentication error	42B-51
		DTC B2352: antenna fail.....	42B-51

DTC B2400: f.a.s.t. key registration fail	42B-52	DTC P285A: auxiliary gearbox gear 2 incorrect ratio	23A-95
DTC B2401: f.a.s.t. key ID not registered	42B-54	DTC U0001: malfunction of CAN communication circuit	23A-98
DTC B240A: dr side antenna (outdoor) open	42B-55	DTC U0100: CAN time-out error (engine)	23A-100
DTC B240B: ps side antenna (outdoor) open	42B-56	DTC U0100: engine CAN timeout	42B-60
DTC B240C: tail gate antenna (outdoor) open	42B-57	DTC U0101: T/M CAN timeout	42B-62
DTC B240D: front antenna (indoor) open	42B-58	DTC U0121: CAN time-out error (ASC)	23A-102
DTC B240E: RR antenna (indoor) open	42B-59	DTC U0141: CAN time-out error (ETACS)	23A-103
DTC P0703: malfunction of stoplight switch	23A-17	DTC U0141: ETACS CAN timeout	42B-65
DTC P0705: malfunction of transmission range switch	23A-18	DTC U0155: CAN time-out error (combination meter)	23A-104
DTC P0711: malfunction of transmission fluid temperature sensor	23A-22	DTC U0155: meter CAN timeout	42B-67
DTC P0712: malfunction of the transmission fluid temperature sensor (low voltage)	23A-25	DTC U0164: A/C-ECU CAN timeout	42B-69
DTC P0713: malfunction of the transmission fluid temperature sensor (high voltage)	23A-27	DTC U1190: No receive fault detect signal	42B-71
DTC P0715: malfunction of primary pulley speed sensor	23A-29	DTC U1195: coding not completed	42B-73
DTC P0720: malfunction of output speed sensor	23A-33	DTC U1500: column ECU LIN timeout/not equip	54B-6
DTC P0741: abnormality in lockup function	23A-37	DTC U1507: LIN transmission bit error	54B-8
DTC P0746: abnormality in hydraulic control system function	23A-40	DTC U1530: column ECU LIN checksum error	54B-8
DTC P0791: malfunction of secondary pulley speed sensor	23A-42	DTC U1570: No bus activity error for LIN	54B-8
DTC P0796: abnormality in primary pressure solenoid valve function	23A-46	Forced power supply output procedure	42B-8
DTC P0841: abnormality in secondary pressure sensor function	23A-50	Initialization procedure for CVT learned value	23A-4
DTC P0842: malfunction of the secondary pressure sensor (low voltage)	23A-51	Introduction to ASC diagnosis	35C-3
DTC P0843: malfunction of the secondary pressure sensor (high voltage)	23A-53	Oscilloscope inspection procedures	23A-116
DTC P0876: malfunction of high clutch oil pressure switch	23A-56	Precautions for diagnosis	35C-4
DTC P0962: malfunction of the line pressure solenoid valve (short to ground)	23A-60	Ratio pattern	23A-14
DTC P0963: malfunction of the line pressure solenoid valve (open circuit / short to power supply)	23A-62	Road test	23A-12
DTC P0970: malfunction of the primary pressure solenoid valve (short to ground)	23A-64	Special function table	42B-76
DTC P0971: malfunction of the primary pressure solenoid valve (open circuit / short to power supply)	23A-66	Standard flow of diagnostic troubleshooting	
DTC P0973: malfunction of the low brake solenoid valve (short to ground)	23A-68	CVT	23A-3
DTC P0974: malfunction of the low brake solenoid valve (open circuit / short to power supply)	23A-70	Keyless operation system (KOS)	42B-5
DTC P0976: malfunction of the high clutch and reverse brake solenoid valve (short to ground)	23A-72	Symptom procedures	
DTC P0977: malfunction of the high clutch and reverse brake solenoid valve (open circuit / short to power supply)	23A-74	Inspection procedure 1: cannot communicate with KOS&OSS-ECU using the scan tool	42B-78
DTC P1607: malfunction of the system power supply (low voltage)	23A-76	Inspection procedure 1: scan tool mb991958 communication with ASC system is impossible.	35C-94
DTC P1637: malfunction of memory backup	23A-78	Inspection procedure 10: abnormality in active stability control system operation	35C-108
DTC P170E: ASC-ECU error information	23A-79	Inspection procedure 10: keyless entry hazard answer back function or the dome light answer back function does not work normally.	42B-95
DTC P1797: g sensor/brake pressure sensor malfunction	23A-80	Inspection procedure 11: ASC-ECU power supply circuit system.	35C-109
DTC P2763: malfunction of the lockup solenoid valve (open circuit / short to power supply)	23A-80	Inspection procedure 11: outer buzzer does not sound.	42B-98
DTC P2764: malfunction of the lockup solenoid valve (short to ground)	23A-82	Inspection procedure 12: ABS/stability control/tcl operates too frequently.	35C-112
DTC P2857: auxiliary gearbox gear 1 incorrect ratio run-up	23A-84	Inspection procedure 12: power door locks with selective unlocking does not work.	42B-100
DTC P2858: auxiliary gearbox gear 2 incorrect ratio run-up	23A-87	Inspection procedure 13: HSA (hill start assist) does not work	35C-115
DTC P2859: auxiliary gearbox gear 1 incorrect ratio	23A-90	Inspection procedure 13: vehicle power does not turn "ON". (not possible with both of power supply mode "ACC" and "ON")	42B-102
		Inspection procedure 14: engine does not start (cranking is not performed)	42B-106
		Inspection procedure 14: HSA (hill start assist) works on a flat road	35C-119
		Inspection procedure 15: the initial check sound of hydraulic unit is loud.	35C-120
		Inspection procedure 15: vehicle power cannot be turned "OFF" when the shift position is in "P" (power supply mode "ON" to "ACC" is possible)	42B-110
		Inspection procedure 16: ACC power auto cut function does not work normally	42B-112
		Inspection procedure 17: vehicle power cannot be turned off	42B-116

Inspection procedure 2: brake warning light stays "ON" with the parking brake lever released (ABS warning light is off).....	35C-94	Trouble symptom chart.....	54A-125
Inspection procedure 2: the keyless operation key cannot be registered using the scan tool.....	42B-78	Dome light and luggage compartment light	
Inspection procedure 3: abnormality in KOS&OSS-ECU power supply and ground circuits...	42B-80	Engine overhaul.....	90-86
Inspection procedure 3: when the ignition switch is turned to the "ON" position (engine stopped), the ABS warning light does not illuminate.	35C-97	Circuit diagrams.....	90-86
Inspection procedure 4: brake warning light does not illuminate when the ignition switch is turned to "ON" position (engine stopped).	35C-99	Door	
Inspection procedure 4: keyless operation warning display does not disappear.....	42B-82	Engine mechanical	80A-24
Inspection procedure 5: ABS warning light stays on after the engine is started.	35C-100	Configuration diagrams.....	80A-24
Inspection procedure 5: No door will be locked or unlocked by operating a lock/unlock switch on any door.....	42B-83	Splice locations.....	80B-6
Inspection procedure 6: ASC warning light stays on after the engine is started.	35C-102	Door	
Inspection procedure 6: driver's door lock/unlock switch does not work.....	42B-87	Check at ECU terminal <power window (vehicles with safety system)>	42A-51
Inspection procedure 7: ASC off light stays on after the engine is started.	35C-103	Door assembly	
Inspection procedure 7: liftgate lock/unlock switch does not work	42B-89	Inspection.....	42A-66
Inspection procedure 8: keyless entry function does not work	42B-91	Removal and installation.....	42A-64
Inspection procedure 8: the stability control/tcl system cannot be disabled when ASC off switch is pressed for 3 seconds or more to turn the system off	35C-105	Door diagnosis	
Inspection procedure 9: abnormality in brake operation.....	35C-106	Standard flow of diagnostic troubleshooting	42A-28
Inspection procedure 9: KOS timer lock function does not work	42B-94	Door glass and regulator	
Tcm terminal voltage reference chart for transaxle operation.....	23A-113	Inspection.....	42A-69
Terminal voltage reference chart.....	42B-120	Removal and installation.....	42A-67
Torque converter clutch operation zone	23A-15	Door handle and latch	
Trouble symptom chart		Inspection.....	42A-76
Active stability control system (ASC).....	35C-93	Removal and installation.....	42A-73
Keyless operation system (KOS).....	42B-77	General information	42A-24
Trouble symptom diagnosis chart.....	23A-106	On-vehicle service	
Troubleshooting procedure when vehicle power does not turn on	42B-8	Adjustment of faulty power window.....	42A-55
Warning and warning indicator.....	42B-10	Central door locking system check	42A-57
Diagnostic trouble code diagnosis.....	54C-11	Check the power window relay	42A-56
Diagnostics trouble code reference table	54C-90	Customization function.....	42A-64
Differential		Door adjustment.....	42A-52
Disassembly and reassembly.....	22B-40	Door inside handle check.....	42A-63
Dome light		Door latch assembly inspection	42A-58
Diagnosis		Door outside handle assembly play check.....	42A-62
Standard flow of diagnostic troubleshooting	54A-125	Door window glass adjustment	42A-53
Dome light removal and installation.....	54A-131	Key reminder function inspection.....	42A-58
Luggage compartment light removal and installation	54A-132	Learning procedures of power window fully closed position <vehicles with safety system (driver's side door)>	42A-57
On-vehicle service		Power window check	42A-54
Customization function	54A-129	Power window operating current check	42A-56
Special tools	54A-123	Power window safety mechanism check <vehicles with safety system (driver's side door)>.....	42A-55
Symptom procedures		Power window timer function check.....	42A-55
Inspection procedure 1: the dome light does not illuminate normally.	54A-125	Selector "P" position-linked door unlocking function check <CVT>.....	42A-58
Inspection procedure 2: the luggage compartment light does not illuminate normally.....	54A-127	Special tools.....	42A-26
Inspection procedure 3: the interior light automatic shutoff function does not work normally.	54A-128	Specification(s)	
		Sealant.....	42A-26
		Service specifications	42A-26
		Symptom chart <power window (vehicles without safety system)>	42A-33
		Symptom procedures <central door locking system>	
		Inspection procedure 1: central door locking system does not work at all.....	42A-29
		Inspection procedure 2: door(s) or a liftgate cannot be locked or unlocked by central door locking system.	42A-30
		Inspection procedure 3: selector "P" position-linked door unlock function does not operate <CVT>.	42A-31
		Inspection procedure 4: the ignition key reminder function does not work normally.....	42A-32
		Symptom procedures <power window (vehicles with safety system)>	

Inspection procedure 1: power windows do not work at all.	42A-41	Door sash tape	
Inspection procedure 2: driver's power window does not work by means of the power window main switch.	42A-43	Lubricant.....	51-8
Inspection procedure 3: relevant power window(s) does not work by means of the front and rear passenger's power window sub switches.	42A-44	Removal and installation.....	51-9
Inspection procedure 4: front and/or rear passenger's power window(s) do not work by means of the power window main switch.	42A-47	Special tool	51-8
Inspection procedure 5: power window timer function does not work normally.	42A-48	Driver's air bag module and clock spring	
Inspection procedure 6: power window anti-trap function does not work normally <driver's side door>.	42A-48	Inspection	52B-238
Inspection procedure 7: window glass lowers automatically while it is rising <driver's side door>.	42A-49	Removal and installation.....	52B-232
Inspection procedure 8: power window main switch one-touch function does not work <driver's side door>.	42A-50	Driveshaft assembly	
Symptom procedures <power window (vehicles without safety system)>		Disassembly and assembly	26-27
Inspection procedure 1: power windows do not work at all.	42A-33	Ebj/vuj boot replacement	26-30
Inspection procedure 2: front right power window does not work <vehicles without driver's side auto down mechanism>	42A-35	Inspection	26-30
Inspection procedure 3: front left power window does not work <vehicles without driver's side auto down mechanism>	42A-36	Removal and installation.....	26-20
Inspection procedure 4: driver's power window does not work by means of the power window main switch <vehicles with driver's side auto down mechanism>.....	42A-37	Ducts	
Inspection procedure 5: relevant power window does not work by means of the front passenger's power window sub switch <vehicles with driver's side auto down mechanism>.	42A-38	Removal and installation.....	55A-51
Inspection procedure 6: front passenger's power window does not work by means of the power window main switch <vehicles with driver's side auto down mechanism>.	42A-39		
Inspection procedure 7: power window timer function does not work normally.	42A-40	E	
Trouble symptom chart <central door locking system>	42A-28	Electric power steering control unit (EPS-ECU)	
Trouble symptom chart <power window (vehicles with safety system)>	42A-41	Removal and installation.....	37-75
Window glass runchannel and door opening weatherstrip		Electric power steering system	
Removal and installation.....	42A-77	Engine overhaul	90-196
Door ajar warning tone alarm		Circuit diagrams.....	90-196
Engine overhaul.....	90-234	Emission control	
Circuit diagrams.....	90-234	Catalytic converter	
Door mirror		Removal and installation.....	17-59
Door mirror		Diagnosis	17-49
Inspection	51-73	Evaporative emission control system	
Removal and installation.....	51-68	Canister removal and installation	17-57
Service specification.....	51-61	Component location	17-54
Special tools	51-61	Evaporative emission purge solenoid check.....	17-56
Troubleshooting		General information (evaporative emission system) ..	17-53
Inspection procedure 1: none of the heated door mirrors operate	51-63	Inspection.....	17-58
Inspection procedure 2: either of the door mirror heater elements does not work.....	51-64	Purge control system check (purge flow check)	17-55
Standard flow of diagnostic troubleshooting	51-63	General information	17-49
Trouble symptom chart	51-63	Positive crankcase ventilation system	
Troubleshooting strategy	51-63	Component location	17-52
		Crankcase ventilation system check.....	17-52
		General information (positive crankcase ventilation system)	17-52
		Positive crankcase ventilation (PCV) valve check	17-53
		Service specifications	17-49
		Special tools.....	17-49
		Vacuum hoses	
		Vacuum circuit diagram.....	17-51
		Vacuum hose check	17-51
		Vacuum hose installation	17-51
		Vacuum hose routing	17-50
		Engine and transaxle	
		Engine mechanical	80A-8
		Configuration diagrams.....	80A-8
		Engine assembly	
		Removal and installation	
		Engine mechanical.....	11A-46
		Configuration diagrams	11A-46
		Engine compartment	
		Engine mechanical	80A-4
		Configuration diagrams.....	80A-4
		Splice locations	80B-3
		Engine control	

Accelerator pedal			
Removal and installation.....	17-7		
Engine control system diagnosis			
Introduction.....	17-3		
Troubleshooting strategy.....	17-3		
General information.....	17-3		
Special tool.....	17-6		
Symptom chart.....	17-4		
Symptom procedures			
Inspection procedure 1: throttle valve will not fully open or close.....	17-4		
Inspection procedure 2: accelerator pedal operation not smooth (over acceleration).....	17-5		
Engine control module (ECM)			
Removal and installation.....	13A-656		
Engine cooling diagnosis			
Introduction.....	14-2		
Symptom chart.....	14-2		
Symptom procedures			
Inspection procedure 1: coolant leak.....	14-3		
Inspection procedure 2: engine overheating.....	14-3		
Troubleshooting strategy.....	14-2		
Engine diagnosis			
Engine mechanical.....	11A-2		
Configuration diagrams.....	11A-2		
Engine mounting			
Removal and installation.....	32-2		
Engine oil pressure switch			
Removal and installation.....	12-7		
Engine roll stopper rod			
Removal and installation.....	32-4		
Engine switch			
Inspection.....	42B-142		
Removal and installation.....	42B-142		
ETACS			
Check at ECU terminal.....	54A-253		
Check chart for trouble symptoms.....	54A-237		
Check trouble by using the input signal check.....	54A-239		
Diagnosis			
Diagnosis function.....	54A-215		
Standard flow of diagnostic troubleshooting.....	54A-215		
Diagnostic trouble code chart.....	54A-218		
Diagnostic trouble code procedures			
DTC B1709: ETACS ECU (EEPROM).....	54A-219		
DTC B1760: coding not completed.....	54A-219		
DTC B1761: VIN not programmed.....	54A-220		
DTC B1762: IOD fuse not seated fully			
DTC B1765: ECU fuse.....	54A-221		
DTC B2206: VIN error/mismatch.....	54A-222		
DTC U1000: OSS CAN timeout.....	54A-223		
DTC U1100: engine CAN timeout.....	54A-224		
DTC U1101: T/M CAN timeout/not equipped.....	54A-226		
DTC U1102: ASC/tcl/ABS timeout/not equipped.....	54A-227		
DTC U1108: meter CAN timeout/not equipped.....	54A-228		
DTC U1110: A/C CAN timeout/not equipped.....	54A-229		
DTC U1116: f.a.s.t. CAN timeout/No equipped.....	54A-231		
DTC U1150: fail info. for vehicle speed.....	54A-232		
ETACS-ECU			
Removal and installation.....	54A-260		
Input signal procedures			
Inspection procedure 1: the ignition switch (ACC) signal is not received.	54A-240		
Inspection procedure 10: the stoplight switch signal is not received.	54A-250		
Inspection procedure 11: the rear window defogger switch signal is not received. <vehicles with manual air conditioning>.....	54A-251		
Inspection procedure 12: the rear window defogger switch signal is not received. <vehicles with automatic air conditioning>.....	54A-252		
Inspection procedure 2: the ignition switch (IG1) signal is not received.	54A-241		
Inspection procedure 3: the key reminder switch signal is not received.	54A-242		
Inspection procedure 4: the front door lock actuator (driver's side) signal is not received.	54A-243		
Inspection procedure 5: the front door switch (driver's side) signal is not received.	54A-244		
Inspection procedure 6: the front door switch (passenger's side) signal is not received.	54A-245		
Inspection procedure 7: one of the door switch signals (including the liftgate latch switch) is not received.	54A-246		
Inspection procedure 8: the hazard warning light switch signal is not received.	54A-248		
Inspection procedure 9: the column switch signal is not received.	54A-249		
On-vehicle service			
Customization function.....	54A-256		
Service data inspection procedure.....	54A-233		
Special tools.....	54A-213		
Symptom procedures			
Inspection procedure A-1: check the battery power supply circuit to the ETACS-ECU.....	54A-237		
Inspection procedure B-1: light reminder tone alarm does not work normally.	54A-238		
Exhaust manifold			
Inspection.....	15-9		
Removal and installation			
Engine overhaul.....	11B-17		
Intake and exhaust.....	15-8		
Circuit diagrams.....	11B-17		
Exhaust pipe and main muffler			
Removal and installation.....	15-10		
Explanation about the sCAN tool (m.u.t.-III) CAN bus diagnostics	54C-7		

F

Fastener tightening specifications			
Front suspension.....	33-2		
Rear suspension.....	34-2		
Fender			
Removal and installation.....	42A-9		
Floor			
Engine mechanical.....	80A-20		
Configuration diagrams.....	80A-20		
Splice locations.....	80B-5		
Floor console assembly			
Removal and installation.....	52A-7		
Fog light			
Engine overhaul.....	90-82		
Circuit diagrams.....	90-82		
Front axle crossmember			

Removal and installation	32-5
Front axle diagnosis	
Symptom chart	26-2
Symptom procedures	
Inspection procedure 1: noise during wheel rotation.....	26-3
Inspection procedure 2: noise due to excessive play of wheel in turning direction	26-4
Troubleshooting strategy	26-2
Front axle hub assembly	
Disassembly and assembly	26-14
Inspection	
Front axle	26-19
Front axle	26-13
Removal and installation	26-8
Front bumper assembly and radiator grille	
Adhesive	51-3
Disassembly and assembly	51-4
Removal and installation	51-3
Front disc brake assembly	
Disassembly and reassembly	35A-32
Inspection	35A-35
Removal and installation	35A-30
Front fog light	
Diagnosis	
Standard flow of diagnostic troubleshooting	54A-113
Inspection	
Front fog light relay check.....	54A-120
On-vehicle service	
Front fog light aiming	54A-117
Replace the bulb.....	54A-118
Removal and installation	54A-119
Service specifications	54A-110
Special tools	54A-111
Symptom procedures	
Inspection procedure 1: the front fog lights do not illuminate normally.	54A-113
Inspection procedure 2: one of the front fog lights does not illuminate normally.	54A-115
Inspection procedure 3: the front fog light indicator does not illuminate normally.	54A-116
Trouble symptom chart.....	54A-113
Front impact sensors	
Inspection	52B-228
Removal and installation	52B-226
Front suspension diagnosis	
Front suspension diagnosis troubleshooting strategy.....	33-2
Introduction to front suspension diagnosis	33-2
Symptom chart	33-3
Symptom procedures	
Inspection procedure 1: steering wheel is heavy, vibrates or pulls to one side	33-3
Inspection procedure 2: excessive body rolling	33-3
Inspection procedure 3: poor ride.....	33-4
Inspection procedure 4: unequal ride height.....	33-4
Inspection procedure 5: noise.....	33-4
Fuel and emission parts	
Removal and installation	
Engine overhaul.....	11B-13
Circuit diagrams.....	11B-13

Fuel filler lid	
Removal and installation.....	42A-11
Fuel filler neck	
Removal and installation.....	13B-18
Fuel supply diagnosis	
Introduction	13B-2
Symptom procedures.....	13B-2
Troubleshooting strategy	13B-2
Fuel tank	
Disassembly and assembly	
Fuel supply.....	13B-17
Fuel supply.....	13B-15
Removal and installation.....	13B-12
Fusible link, fuse and IOD or storage connector	70-13

G

Garnishes and moldings	
Removal and installation.....	51-7
Special tool	51-7
General data and specifications	00-20
General description	
Heater, air conditioning and ventilation.....	55A-3
Automatic air conditioning.....	55B-2
General information	
Engine mechanical	11A-2
Engine lubrication	12-2
Multiport fuel injection (MFI)	13A-2
Clutch.....	21A-2
Manual transaxle overhaul.....	22B-2
Continuously variable transaxle overhaul.....	23B-2
Wheel and tire.....	31-2
Electric power steering (EPS).....	37-3
Supplemental restraint system (SRS).....	52B-3
Configuration diagrams.....	11A-2
General specification	23B-2
General specification(s).....	13A-5
General specifications	
Engine overhaul.....	11B-2
Circuit diagrams.....	11B-2
Generator and ignition system	
Removal and installation	
Engine overhaul.....	11B-10
Circuit diagrams.....	11B-10
Glove box	
Removal and installation.....	52A-4
Grounding.....	70-17
Grounding cable	70-16

H

Hands-free interface system <vehicles with hands free-ECU>	
Hands free ECU	
Removal and installation.....	54A-207
Microphone unit	
Removal and installation.....	54A-208
Mmcs diagnosis	
Diagnosis mode	54A-194
Introduction to diagnosis	54A-192

Standard flow of diagnostic troubleshooting	54A-194	Symptom procedures	
Trouble symptom chart	54A-196	Inspection procedure A-1: none of the low-beam headlights illuminate.	54A-75
On-vehicle service		Inspection procedure A-10: daytime running light function does not work normally.	54A-87
Methods for pairing and pairing deletion with bluetooth® device.....	54A-205	Inspection procedure A-2: none of the high-beam headlights illuminate.	54A-76
Special tools	54A-192	Inspection procedure A-3: the high-beam and low-beam headlights do not illuminate when the passing switch is operated.	54A-78
Steering wheel voice control switch		Inspection procedure A-4: one of the headlights does not illuminate.	54A-79
Removal and installation.....	54A-208	Inspection procedure A-5: the high-beam indicator light does not illuminate.	54A-80
Steering wheel voice control switch check.....	54A-209	Inspection procedure A-6: the headlight automatic-shutdown function does not work normally.	54A-81
Symptom procedures		Inspection procedure A-7: the position light does not illuminate.	54A-82
Inspection procedure 1: check the hands free-ECU power supply circuit.	54A-197	Inspection procedure A-8: either of the position lights does not illuminate.	54A-83
Inspection procedure 2: the usb data cannot be replayed.	54A-198	Inspection procedure A-9: when the ignition switch is turned to the on position with the lighting switch at the off or tail position, the headlights will illuminate briefly.	54A-85
Inspection procedure 3: when the speech switch is pressed, the voice guide is output, but the voice recognition is not performed.	54A-200	Inspection procedure B-1: none of the turn-signal lights illuminate.	54A-88
Inspection procedure 4: when the speech switch is pressed, the voice guide is not output.	54A-201	Inspection procedure B-2: the comfort flasher does not work normally.	54A-89
Inspection procedure 5: diagnosis mode cannot be made an entry. mobile phone item is not displayed on the menu screen of audio.	54A-202	Inspection procedure B-3: the turn-signal indicator lights do not illuminate.	54A-90
Inspection procedure 6: voice guide "unable to obtain vehicle speed. please try again or contact your dealer for service" is sent from the speaker	54A-204	Inspection procedure B-4: one of the turn-signal lights does not illuminate.	54A-91
Hands-free interface system <vehicles without mmes>		Trouble symptom chart	54A-74
Engine overhaul.....	90-176	Headlining	
Circuit diagrams.....	90-176	Removal and installation.....	52A-15
Harness connector inspection	00E-2	Heated seat	
Hazard warning light switch		Engine overhaul.....	90-228
Diagnosis		Circuit diagrams.....	90-228
Standard flow of diagnostic troubleshooting	54A-138	Heater	
Inspection		Engine overhaul.....	90-132
Continuity check for hazard warning light switch	54A-140	Circuit diagrams.....	90-132
Removal and installation	54A-140	Heater control unit	
Special tools	54A-136	Disassembly and reassembly	55A-33
Symptom procedures		Inspection	55A-32
Inspection procedure 1: the hazard warning lights do not illuminate.....	54A-138	Removal and installation	
Trouble symptom chart.....	54A-138	Heater, air conditioning and ventilation	55A-29
Headlight		Automatic air conditioning.....	55B-42
Engine overhaul.....	90-70	Heater hose	
Circuit diagrams.....	90-70	Removal and installation.....	55A-40
Headlight		Heater unit and blower assembly	
Diagnosis		Disassembly and reassembly	55A-37
Diagnostic function	54A-65	Inspection	55A-39
Standard flow of diagnostic troubleshooting	54A-65	Removal and installation.....	55A-35
Diagnostic trouble code chart	54A-67	High-mounted stoplight	
Diagnostic trouble code procedures		Removal and installation.....	54A-132
DTC B1706: flasher fuse blown	54A-68	Hood	
DTC B1707: flasher open	54A-69	Hood	
Headlight		Inspection.....	42A-8
Headlight removal and installation.....	54A-98	Removal and installation.....	42A-6
Inspection		Hood diagnosis	
Headlight relay check	54A-99	Hood diagnostic troubleshooting strategy.....	42A-3
On-vehicle service		Introduction to hood diagnosis.....	42A-3
Bulb replacement.....	54A-95	On-vehicle service	
Customization function	54A-97	Adjustment of clearance around hood	42A-4
Headlight aiming	54A-93		
Headlight automatic-shutdown function check	54A-97		
Luminous intensity measurement.....	54A-95		
Service specifications	54A-62		
Special tools	54A-63		

Adjustment of hood height.....	42A-5	Ignition key reminder tone alarm inspection	54A-9
Adjustment of hood level and hood striker engagement.....	42A-4	Removal and installation.....	54A-10
Symptom chart	42A-3	Special tool	54A-8
Symptom procedures		Symptom procedures	
Inspection procedure 1: difficult locking and unlocking.....	42A-3	Malfunction of the ignition switch power supply system.....	54A-9
Inspection procedure 2: uneven body clearance.....	42A-4	Ignition system	
Inspection procedure 3: uneven height.....	42A-4	Engine overhaul.....	90-44
Horn		Circuit diagrams.....	90-44
Engine overhaul.....	90-99	Ignition system	
Circuit diagrams.....	90-99	Camshaft position sensor	
Horn		Removal and installation.....	16-30
Inspection		Crankshaft position sensor	
Horn relay check.....	54A-142	Removal and installation.....	16-31
Removal and installation	54A-141	General information	16-23
How to diagnose		Ignition coil	
Battery handling.....	00E-12	Removal and installation.....	16-29
Cables and wires check.....	00E-12	Knock sensor	
Checking fuses.....	00E-9	Removal and installation.....	16-32
Checking relays.....	00E-11	On-vehicle service	
Checking switches.....	00E-10	Camshaft position sensor check	16-29
General electrical system check.....	00E-12	Crankshaft position sensor check	16-29
How to diagnose.....	00E-6	Ignition coil check.....	16-27
Information for diagnosis	00E-6	Knock sensor check.....	16-29
Inspection	00E-7	Spark plug check and cleaning	16-28
Inspection instruments.....	00E-7	Service specifications	16-24
Troubleshooting steps	00E-6	Special tools.....	16-25
How to read circuit diagrams		Immobilizer system <vehicles without KOS>	
Engine overhaul.....	90-4	Engine overhaul.....	90-198
Circuit diagrams.....	90-4	Circuit diagrams.....	90-198
How to read configuration diagrams		Immobilizer system <vehicles without KOS>	
Engine mechanical	80A-3	Check ETACS-ECU (immobilizer-ECU).....	54A-290
Configuration diagrams	80A-3	Data list reference table.....	54A-290
How to read splice locations.....	80B-2	Diagnosis	
How to use this manual	00-3	Diagnostic function.....	54A-274
How to use troubleshooting/inspection service points		Standard flow of diagnostic troubleshooting	54A-274
Connector inspection service points.....	00-12	Diagnostic trouble code chart	54A-277
Connector measurement service points	00-10	Diagnostic trouble code procedures	
How to cope with intermittent malfunctions	00-13	DTC B1702: transponder read error	54A-277
How to treat past trouble	00-14	DTC B1703: transponder ID unmatched.....	54A-279
How to use the inspection procedures	00-7	DTC B1722: immobilizer-antenna fail	54A-280
Inspection service points for a blown fuse	00-15	DTC B1731: PCM authentication timeout	54A-281
Troubleshooting contents	00-6	DTC B1766: already learned by other vehicle	54A-283
Hydraulic unit		DTC B1A28: PCM authentication error	54A-284
Removal and installation	35C-137	On-vehicle service	
		How to register key ID.....	54A-290
		Removal and installation.....	54A-290
		Special tools.....	54A-272
		Symptom procedures	
		Inspection procedure 1: the ignition key cannot be registered with the scan tool (m.u.t.-III).....	54A-286
		Inspection procedure 2: the engine does not start (cranking occurs but initial combustion does not).....	54A-288
		Trouble symptom chart.....	54A-286
		Index.....	80B-3
		Individual component service	52B-224
		Injector	
		Removal and installation.....	13A-651
		Input shaft	
		Disassembly and reassembly	22B-19
Ignition key reminder tone alarm <vehicles without KOS>			
Engine overhaul.....	90-232		
Circuit diagrams.....	90-232		
Ignition switch			
Diagnosis			
Standard flow of diagnostic trouble shooting	54A-8		
Trouble symptom chart	54A-8		
Inspection			
Ignition switch check.....	54A-12		
Key reminder switch inspection	54A-12		
On-vehicle service			

TSB Revision

Basic brake.....	35A-2	Engine overhaul.....	90-168
Heater, air conditioning and ventilation.....	55A-5	Circuit diagrams.....	90-168
Lubrication and maintenance	00-51	Mmes	
		Check chart for trouble symptoms	54A-168
		Diagnosis	
		Error display.....	54A-167
		Precautions on servicing mmes.....	54A-165
		Standard flow of diagnostic troubleshooting	54A-165
		Main unit terminal voltage	54A-184
		Multivision display removal and installation	54A-186
		On-vehicle service	
		Connection check function.....	54A-179
		How to reset mmes.....	54A-183
		Pairing the bluetooth® device.....	54A-181
		Special tools.....	54A-165
		Symptom procedures	
		Inspection procedure 1: power is not turned on when the power switch is turned on.....	54A-168
		Inspection procedure 2: current location is not displayed correctly.	54A-170
		Inspection procedure 3: No sound is heard.	54A-171
		Inspection procedure 4: the radio broadcasting can not be received.....	54A-174
		Inspection procedure 5: cd/dvd cannot be played.	54A-175
		Inspection procedure 6: an audio file, which is stored in the usb memory/ipod, cannot be played.	54A-176
		Inspection procedure 7: an audio file, which is stored in the sd memory card, cannot be played.....	54A-177
		Inspection procedure 8: the hands-free cellular phone system does not operate normally.	54A-178
		Inspection procedure 9: the screen brightness is not changed in conjunction with the taillights.....	54A-178
		Usb cable removal and installation	54A-187
		Multipoint fuel injection (MFI) diagnosis	
		Actuator test reference table.....	13A-618
		Check at the engine control module (ECM).....	13A-619
		Data list reference table.....	13A-599
		Diagnostic function	13A-10
		Diagnostic trouble code chart	13A-47
		Diagnostic trouble code procedures	
		DTC P0010: engine oil control valve circuit	13A-55
		DTC P0011: variable valve timing system target error	13A-59
		DTC P0016: crankshaft/camshaft position sensor phase problem	13A-62
		DTC P0031: linear air-fuel ratio sensor heater control circuit low	13A-65
		DTC P0032: linear air-fuel ratio sensor heater control circuit high	13A-69
		DTC P0037: heated oxygen sensor (rear) heater control circuit low	13A-72
		DTC P0038: heated oxygen sensor (rear) heater control circuit high	13A-76
		DTC P0053: linear air-fuel ratio sensor heater resistance.....	13A-79
		DTC P0068: mass airflow sensor plausibility.....	13A-82
		DTC P0069: abnormal correlation between manifold absolute pressure sensor and barometric pressure sensor	13A-85
		DTC P0102: mass airflow circuit low input.....	13A-89
		DTC P0103: mass airflow circuit high input	13A-94
		DTC P0106: manifold absolute pressure circuit range/performance problem.....	13A-98
M			
Main sealant and adhesive table.....	00-87		
Maintenance service			
1. fuel system (tank, pipe line and connection, and fuel tank filler tube cap)	00-64		
10. engine oil filter	00-72		
11. transaxle oil <M/T>	00-74		
12. transmission fluid <CVT>	00-75		
13. engine coolant	00-77		
14. coolant hoses (radiator hose, heater hose)	00-78		
15. disk brake pads and rotors	00-78		
16. rear drum brake linings and rear wheel cylinders	00-81		
17. brake hoses	00-82		
18. brake fluid	00-83		
19. ball joint and steering linkage seals.....	00-84		
2. fuel hoses	00-64		
20. drive shaft boots	00-84		
21. suspension system	00-84		
22. tires.....	00-84		
23. clean air filter (air refresher)	00-85		
24. tire repair kit.....	00-86		
3. air cleaner element.....	00-64		
4. evaporative emission control system (except evaporative emission canister).....	00-64		
5. spark plugs (iridium-tipped type)	00-65		
6. intake and exhaust valve clearance	00-65		
7. drive belts (for the generator and power steering oil pump).....	00-68		
8. exhaust system (connection portion of muffler, muffler pipes and converter heat shields).....	00-71		
9. engine oil	00-71		
Manual air conditioning system			
Engine overhaul.....	90-134		
Circuit diagrams.....	90-134		
Manual transaxle diagnosis			
Introduction.....	22A-3		
Symptom chart	22A-3		
Symptom procedures			
Inspection procedure 1: noise, vibration	22A-3		
Inspection procedure 2: oil leaks	22A-5		
Inspection procedure 3: hard shifting.....	22A-5		
Inspection procedure 4: jumps out of gear	22A-6		
Troubleshooting strategy	22A-3		
Mark			
Lubricant.....	51-57		
Removal and installation	51-58		
Master cylinder assembly and brake booster assembly			
Removal and installation	35A-28		
Meter and gauge			
Engine overhaul.....	90-100		
Circuit diagrams.....	90-100		
MFI system			
Engine overhaul.....	90-48		
Circuit diagrams.....	90-48		
Mitsubishi multi entertainment system (mmes)			

DTC P0107: manifold absolute pressure circuit low input	13A-104	DTC P0302: cylinder 2 misfire detected	13A-247
DTC P0108: manifold absolute pressure circuit high input	13A-109	DTC P0303: cylinder 3 misfire detected	13A-251
DTC P0111: intake air temperature circuit range/performance problem	13A-113	DTC P0327: knock sensor circuit low	13A-255
DTC P0112: intake air temperature circuit low input	13A-117	DTC P0328: knock sensor circuit high	13A-258
DTC P0113: intake air temperature circuit high input	13A-120	DTC P0335: crankshaft position sensor circuit	13A-260
DTC P0116: engine coolant temperature circuit range/performance problem	13A-124	DTC P0340: camshaft position sensor circuit	13A-267
DTC P0117: engine coolant temperature circuit low input	13A-128	DTC P0421: warm up catalyst efficiency below threshold	13A-273
DTC P0118: engine coolant temperature circuit high input	13A-131	DTC P0441: evaporative emission control system incorrect purge flow	13A-275
DTC P0121: throttle position sensor (main) plausibility	13A-135	DTC P0442: evaporative emission control system leak detected (small leak)	13A-279
DTC P0122: throttle position sensor (main) circuit low input	13A-139	DTC P0450: evaporative emission control system pressure sensor malfunction	13A-289
DTC P0123: throttle position sensor (main) circuit high input	13A-143	DTC P0451: evaporative emission control system pressure sensor range/performance	13A-293
DTC P0125: insufficient coolant temperature for closed loop fuel control	13A-147	DTC P0452: evaporative emission control system pressure sensor low input	13A-299
DTC P0128: coolant thermostat (coolant temperature below thermostat regulating temperature)	13A-152	DTC P0453: evaporative emission control system pressure sensor high input	13A-305
DTC P0130: linear air-fuel ratio sensor circuit	13A-155	DTC P0455: evaporative emission control system leak detected (gross leak)	13A-310
DTC P0131: linear air-fuel ratio sensor circuit low voltage	13A-158	DTC P0456: evaporative emission control system leak detected (very small leak)	13A-320
DTC P0132: linear air-fuel ratio sensor circuit high voltage	13A-161	DTC P0458: evaporative emission control system purge control valve circuit low input	13A-329
DTC P0133: linear air-fuel ratio sensor circuit slow response	13A-165	DTC P0459: evaporative emission control system purge control valve circuit high input	13A-333
DTC P0134: linear air-fuel ratio sensor circuit No activity detected	13A-169	DTC P0461: fuel level sensor circuit range/performance	13A-336
DTC P0137: heated oxygen sensor (rear) circuit low voltage	13A-172	DTC P0462: fuel level sensor circuit low input	13A-339
DTC P0138: heated oxygen sensor (rear) circuit high voltage	13A-177	DTC P0463: fuel level sensor circuit high input	13A-341
DTC P0139: heated oxygen sensor (rear) circuit slow response	13A-180	DTC P0498: evaporative emission control system ventilation control valve circuit low input	13A-344
DTC P0140: heated oxygen sensor (rear) circuit No activity detected	13A-183	DTC P0499: evaporative emission control system ventilation control valve circuit high input	13A-347
DTC P0171: system too lean	13A-187	DTC P0500: vehicle speed signal malfunction	13A-350
DTC P0172: system too rich	13A-194	DTC P0506: idle control system rpm lower than expected	13A-352
DTC P0181: fuel tank temperature sensor circuit range/performance	13A-199	DTC P0507: idle control system rpm higher than expected	13A-355
DTC P0182: fuel tank temperature sensor circuit low input	13A-203	DTC P0513: immobilizer malfunction <vehicles with KOS>	13A-359
DTC P0183: fuel tank temperature sensor circuit high input	13A-205	DTC P0513: immobilizer malfunction <vehicles without KOS>	13A-358
DTC P0221: throttle position sensor (sub) plausibility	13A-209	DTC P0532: A/C pressure sensor circuit low input	13A-361
DTC P0222: throttle position sensor (sub) circuit low input	13A-213	DTC P0533: A/C pressure sensor circuit high input ..	13A-365
DTC P0223: throttle position sensor (sub) circuit high input	13A-217	DTC P0537: fin thermo sensor circuit low input	13A-367
DTC P0261: injector circuit low input - cylinder 1	13A-221	DTC P0538: fin thermo sensor circuit high input	13A-369
DTC P0262: injector circuit high input - cylinder 1	13A-224	DTC P0557: brake booster pressure sensor circuit low input	13A-372
DTC P0264: injector circuit low input - cylinder 2	13A-227	DTC P0558: brake booster pressure sensor circuit high input	13A-376
DTC P0265: injector circuit high input - cylinder 2	13A-230	DTC P0602: control module programming error	13A-378
DTC P0267: injector circuit low input - cylinder 3	13A-233	DTC P0604: internal control module random access memory (ram) error	13A-380
DTC P0268: injector circuit high input - cylinder 3	13A-236	DTC P0606: engine control module main processor malfunction	13A-381
DTC P0300: random/multiple cylinder misfire detected	13A-239	DTC P060B: internal control module a/d processing performance problem	13A-384
DTC P0301: cylinder 1 misfire detected	13A-244	DTC P060D: internal control module accelerator pedal position performance problem	13A-385
		DTC P061A: internal control module torque performance problem	13A-388
		DTC P061C: internal control module engine rpm performance problem	13A-393

DTC P061F: internal control module throttle actuator controller performance problem.....	13A-396	Fail-safe function reference table	13A-43
DTC P0622: generator FR terminal circuit malfunction	13A-397	General scan tool (gst) mode 01 reference table	13A-612
DTC P062F: internal control module EEPROM error	13A-399	Inspection procedure using an oscilloscope	13A-628
DTC P0630: vehicle identification number (VIN) malfunction	13A-401	Symptom chart.....	13A-52
DTC P0638: throttle actuator control motor circuit range/performance	13A-404	Symptom procedures	
DTC P0642: throttle position sensor power supply....	13A-406	Inspection procedure 1: communication with ECM is not possible.....	13A-515
DTC P0657: throttle actuator control motor relay circuit malfunction.....	13A-407	Inspection procedure 10: when the engine is cold, it stalls at idle (die out)	13A-534
DTC P1231: active stability control plausibility	13A-411	Inspection procedure 11: when the engine is hot, it stalls at idle (die out)	13A-536
DTC P1238: mass airflow sensor plausibility (torque monitor)	13A-413	Inspection procedure 12: the engine stalls when accelerating (pass out).....	13A-539
DTC P1240: ignition angle.....	13A-416	Inspection procedure 13: the engine stalls when decelerating	13A-541
DTC P1242: fail safe control monitor.....	13A-417	Inspection procedure 14: hesitation, sag, stumble, poor acceleration or surge.....	13A-542
DTC P1243: inquiry/response error.....	13A-418	Inspection procedure 15: acceleration shock.....	13A-545
DTC P1247: CVT plausibility <CVT>.....	13A-419	Inspection procedure 16: knocking	13A-547
DTC P1506: idle control system rpm lower than expected at low temperature	13A-420	Inspection procedure 17: dieseling (run-on)	13A-548
DTC P1507: idle control system rpm higher than expected at low temperature	13A-423	Inspection procedure 18: too high co and HC concentration when idling	13A-548
DTC P1590: tcm to ECM communication error in torque reduction request <CVT>	13A-426	Inspection procedure 19: transient, mass emission tailpipe test failure	13A-551
DTC P1603: battery backup circuit malfunction.....	13A-429	Inspection procedure 2: the malfunction indicator lamp (service engine soon or check engine lamp) does not illuminate right after the ignition switch is turned to the "ON" position.....	13A-517
DTC P2096: post catalyst fuel trim system too lean (bank 1).....	13A-432	Inspection procedure 20: purge flow test of the evaporative emission canister failure.....	13A-554
DTC P2097: post catalyst fuel trim system too rich (bank 1).....	13A-435	Inspection procedure 21: pressure test of the evaporative system failure	13A-555
DTC P2100: throttle actuator control motor circuit (open).....	13A-438	Inspection procedure 22: power supply system and ignition switch-ig system	13A-556
DTC P2101: throttle actuator control motor magneto malfunction	13A-441	Inspection procedure 23: fuel pump system	13A-560
DTC P2122: accelerator pedal position sensor (main) circuit low input.....	13A-443	Inspection procedure 24: ignition switch-ST system and starter relay system <M/T>.....	13A-564
DTC P2123: accelerator pedal position sensor (main) circuit high input.....	13A-447	Inspection procedure 25: ignition switch-ST system and starter relay system <CVT>	13A-570
DTC P2127: accelerator pedal position sensor (sub) circuit low input.....	13A-450	Inspection procedure 26: ignition circuit system	13A-577
DTC P2128: accelerator pedal position sensor (sub) circuit high input.....	13A-454	Inspection procedure 27: A/C switch system <manual A/C>	13A-580
DTC P2135: throttle position sensor (main and sub) range/performance problem	13A-457	Inspection procedure 28: A/C compressor relay system.....	13A-582
DTC P2138: accelerator pedal position sensor (main and sub) range/performance problem	13A-464	Inspection procedure 29: fan control relay system	13A-584
DTC P2228: barometric pressure circuit low input	13A-470	Inspection procedure 3: the malfunction indicator lamp (service engine soon or check engine lamp) remains illuminated and never goes out	13A-518
DTC P2229: barometric pressure circuit high input...	13A-472	Inspection procedure 30: blower fan signal system <manual A/C>	13A-590
DTC P2237: linear air-fuel ratio sensor positive current control circuit/open	13A-474	Inspection procedure 31: defogger switch signal system <manual A/C>.....	13A-592
DTC P2243: linear air-fuel ratio sensor reference voltage circuit/open.....	13A-477	Inspection procedure 32: brake monitoring switch system.....	13A-595
DTC P2251: linear air-fuel ratio sensor negative current control circuit/open	13A-480	Inspection procedure 33: engine oil pressure switch system.....	13A-597
DTC P2252: heated oxygen sensor offset circuit low voltage.....	13A-483	Inspection procedure 4: cranks, won't start	13A-519
DTC P2253: heated oxygen sensor offset circuit high voltage	13A-486	Inspection procedure 5: starts up and dies	13A-522
DTC U0101: tcm time-out <CVT>.....	13A-489	Inspection procedure 6: hard starting	13A-525
DTC U0121: ASC-ECU time-out.....	13A-493	Inspection procedure 7: unstable idle (rough idle, hunting)	13A-528
DTC U0131: electric power steering-ECU time-out...	13A-497	Inspection procedure 8: idle speed is high (improper idle speed)	13A-531
DTC U0141: ETACS-ECU time-out	13A-499	Inspection procedure 9: idle speed is low (improper idle speed) <CVT>.....	13A-533
DTC U0155: combination meter time-out	13A-502	Inspection procedure 9: idle speed is low (improper idle speed) <M/T>.....	13A-532
DTC U0164: A/C-ECU time-out.....	13A-506	Troubleshooting strategy	13A-10
DTC U0167: immobilizer communication error.....	13A-508		
DTC U0168: KOS&OSS-ECU time-out	13A-510		
DTC U0415: invalid data received from ASC-ECU....	13A-513		

O

Occupant classification sensor			
Inspection	52B-265		
Removal and installation	52B-264		
Occupant classification-ECU			
Inspection	52B-263		
Removal and installation	52B-262		
Oil feeder control valve			
Removal and installation			
Engine mechanical	11A-29		
Configuration diagrams.....	11A-29		
Oil pan			
Inspection			
Engine mechanical	11A-38		
Configuration diagrams.....	11A-38		
Removal and installation			
Engine mechanical	11A-37		
Configuration diagrams.....	11A-37		
Oil pan and timing chain case			
Removal and installation			
Engine overhaul.....	11B-23		
Circuit diagrams.....	11B-23		
One touch start system			
Engine overhaul.....	90-202		
Circuit diagrams.....	90-202		
On-vehicle service			
Antenna communication test	42B-124		
Ball joint dust cover check	37-58		
Ball joint rotation torque check	37-59		
Bleeding.....	35A-17		
Brake booster operation check.....	35A-15		
Brake disc check	35A-20		
Brake drag force check.....	35A-22		
Brake fluid level sensor check.....	35A-18		
Brake lining and brake drum contact check.....	35A-24		
Brake lining thickness check	35A-23		
Brake pad check.....	35A-19		
Brake pad replacement	35A-19		
Brake pedal check and adjustment	35A-13		
Check of engine switch indicator function	42B-126		
Check of engine switch reminder tone alarm	42B-126		
Check valve operation check.....	35A-17		
Clutch pedal check and adjustment.....	21A-2		
Clutch switch check	21A-3		
Component location.....	13A-634		
Compression pressure check			
Engine mechanical	11A-16		
Configuration diagrams.....	11A-16		
Cooling fan control relay continuity check	14-8		
Cooling fan motor check.....	14-9		
Customization function	42B-130		
CVT control component check			
Solenoid valve check.....	23A-126		
Transmission fluid temperature sensor check	23A-127		
Transmission range switch check.....	23A-126		
CVT control component layout	23A-125		
Diagnosis by refrigerant pressure.....	55A-24		
Disposal of the flat tire temporary repair agent.....	31-41		
Draining of the flat tire temporary repair agent	31-41		
Drive belt inspection	55A-18		
Drive belt tension check and adjustment			
Engine mechanical.....	11A-8		
Configuration diagrams.....	11A-8		
Engine coolant concentration check.....	14-7		
Engine coolant leak check	14-5		
Engine coolant replacement	14-6		
Engine coolant temperature sensor check	13A-646		
Engine oil change	12-4		
Engine oil check.....	12-4		
Engine oil control valve check	13A-649		
Engine oil pressure check.....	12-7		
Essential service			
Transmission fluid check.....	23A-120		
Transmission fluid replacement	23A-121		
Transmission range switch and control cable adjustment	23A-123		
Transmission range switch continuity check.....	23A-123		
Evaporative emission purge solenoid check.....	13A-650		
Evaporative emission ventilation solenoid check.....	13A-650		
Front wheel alignment check and adjustment	33-6		
Fuel level sensor check	13B-7		
Fuel pressure test.....	13A-639		
Fuel pump module replacement	13B-7		
Fuel pump operation check	13B-7		
Fuel pump relay continuity check	13A-644		
Fuel tank differential pressure sensor check	13B-9		
Fuel tank pump operation check.....	13A-642		
Fuel tank temperature sensor check	13B-10		
G and yaw rate sensor calibration	35C-134		
Heated oxygen sensor check	13A-647		
Hub bolt replacement.....	26-7		
Hydraulic pressure test	23A-130		
Hydraulic unit (hu) check	35C-131		
ID codes registration procedures.....	42B-123		
Idle mixture check			
Engine mechanical.....	11A-12		
Configuration diagrams.....	11A-12		
Idle speed check			
Engine mechanical.....	11A-12		
Configuration diagrams.....	11A-12		
Idle-up inspection.....	55A-23		
Ignition timing check			
Engine mechanical.....	11A-11		
Configuration diagrams.....	11A-11		
Injector check.....	13A-648		
Inspection of keyless entry timer lock function	42B-125		
Intake air temperature sensor check	13A-645		
Keyless entry function check	42B-125		
Leveling valve check.....	13B-11		
Linear air-fuel ratio sensor check.....	13A-646		
Lower arm ball joint dust cover check.....	33-8		
Lower arm ball joint play check.....	33-7		
Manifold vacuum check			
Engine mechanical.....	11A-17		
Configuration diagrams.....	11A-17		
Measures for discharged battery	35C-134		
Multiport fuel injection (MFI) relay continuity check	13A-644		

TSB Revision

Code No. U1108: meter CAN timeout/ not equipped.	37-38
Code No.C1511: torque sensor main code No.C1512: torque sensor sub	37-9
Code No.C1513: torque sensor main/sub voltage.....	37-12
Code No.C1514: torque sensor power supply code No.C1516: torque sensor power voltage low....	37-15
Code No.C1531: motor terminal voltage	37-17
Code No.C1532: motor current too large.....	37-19
Code No.C1533: motor over current code No.C1534: motor current too small	37-21
Code No.C1550: ECU failure.....	37-23
Code No.C1564: vehicle speed data invalid	37-25
Code No.C1565: engine revolution data invalid	37-27
Code No.C1657: implausible coding data	37-28
Code No.C1860: power supply high voltage	37-29
Code No.C1861: power supply low voltage.....	37-31
Code No.U0141: ETACS CAN timeout.....	37-36
Code No.U1190: No receive fault detect signal.....	37-39
Code No.U1195: coding not completed code No.U1197: coding data unavailable	37-41
Symptom procedures	
Inspection procedure 1: scan tool mb991958 cannot communicate with electric power steering system <ECU power supply circuit system check>.....	37-43
Inspection procedure 2: electric power steering system warning display illuminates but diagnostic trouble code is not stored.	37-45
Inspection procedure 3: the steering has become heavy, but electric power steering warning display does not illuminate. (power supply voltage assist fall)	37-46
Trouble symptom chart.....	37-42
Power steering gear box and linkage	
Disassembly and reassembly.....	37-72
Inspection	37-72
Removal and installation	37-69
Power windows <vehicles with safety system>	
Engine overhaul.....	90-112
Circuit diagrams.....	90-112
Power windows <vehicles without safety system>	
Engine overhaul.....	90-108
Circuit diagrams.....	90-108
Precautions before service	
Application of anti-corrosion agents and undercoats.....	00-46
Bolts and nuts with stabilizer for coefficient of friction	00-46
Coding list.....	00-33
Engine idling learning procedure	00-41
Engine oils.....	00-43
Form-in-place gasket (figg)	00-44
How to perform VIN writing for engine control module, KOS&OSS-ECU and ETACS-ECU	00-26
How to shift lock forced release <CVT>	00-25
Initialization procedure for learning value in MFI engine.....	00-41
Pre-inspection condition	00-43
Scan tool [multi use tester (m.u.t.-III) sub assembly]	00-23
Servicing electrical system	00-24
Supplemental restraint system (SRS)	00-22
Timing chain learned value reset.....	00-42
Vehicle washing.....	00-46
Precautions on how to repair the CAN bus lines.....	54C-6
Ptc heater	
Engine overhaul.....	90-128
Circuit diagrams.....	90-128
Ptc heater control unit	
Removal and installation.....	55A-41
R	
Radiator	
Removal and installation.....	14-16
Radio and cd player	
Diagnosis	
Audio error codes.....	54A-155
Standard flow of diagnostic troubleshooting	54A-155
Radio and cd player removal and installation	54A-163
Special tools.....	54A-154
Symptom procedures	
Inspection procedure 1: power is not turned on when the power switch is turned on.	54A-156
Inspection procedure 2: No sound is heard.	54A-158
Inspection procedure 3: the radio broadcasting can not be received.....	54A-160
Inspection procedure 4: audio illuminations does not work normally.	54A-161
Inspection procedure 5: an audio file, which is stored in the usb memory/ipod, cannot be played.	54A-162
Inspection procedure 6: an audio file, which is connected through the external input (aux) terminal, cannot be played.....	54A-162
Trouble symptom chart.....	54A-156
Usb cable removal and installation	54A-163
Rear axle diagnosis	
Introduction to rear axle diagnosis.....	27-2
Rear axle diagnostic troubleshooting strategy.....	27-2
Symptom chart.....	27-2
Symptom procedures	
Inspection procedure 1: abnormal noise.....	27-2
Rear axle hub assembly	
Disassembly and reassembly	27-7
Removal and installation.....	27-5
Rear bumper assembly	
Removal and installation.....	51-6
Rear combination light	
Diagnosis	
Standard flow of diagnostic troubleshooting	54A-102
On-vehicle service	
Replace the bulb	54A-108
Rear combination light removal and installation	54A-109
Special tools.....	54A-100
Symptom procedures	
Inspection procedure 1: none of the taillights illuminate.	54A-102
Inspection procedure 2: one of taillights does not illuminate.....	54A-103
Inspection procedure 3: the back-up light do not illuminate normally.	54A-104
Inspection procedure 4: the stoplight do not illuminate or go out normally.	54A-107
Trouble symptom chart.....	54A-102
Rear drum brake	
Rear drum brake removal and installation	35A-36
Wheel cylinder assembly disassembly and reassembly	35A-40

TSB Revision

Rear axle	27-2	Electric power steering (EPS).....	37-55
Wheel and tire	31-5	Keyless operation system (KOS).....	42B-3
Front suspension	33-2	Supplemental restraint system (SRS).....	52B-8
Rear suspension.....	34-2	Local interconnect network (LIN)	54B-2
Basic brake.....	35A-2	Controller area network (CAN)	54C-2
Active stability control system (ASC).....	35C-3	Heater, air conditioning and ventilation.....	55A-17
Electric power steering (EPS).....	37-4	Automatic air conditioning.....	55B-39
Heater, air conditioning and ventilation.....	55A-4	Configuration diagrams.....	11A-4
Configuration diagrams	11A-3	Circuit diagrams.....	11B-8
Circuit diagrams.....	11B-2	Specification(s)	
Shift lock mechanism <CVT>		General specifications	21B-2
Engine overhaul.....	90-60	Lubricants	21B-2
Circuit diagrams.....	90-60	Service specifications	21B-2
Shock absorber and coil spring		Torque specifications	21B-2
Removal and installation	34-6	Specifications	
Side air dam		General specifications	22B-2
Adhesive.....	51-12	Lubricants	22B-6
Lubricant.....	51-12	Sealants and adhesives.....	22B-5
Removal and installation	51-13	Service specifications	22B-3
Special tool	51-12	Snap ring, spacer and thrust plate for adjustment.....	22B-4
Side impact sensor		Torque specifications	22B-2
Inspection	52B-257	Splash shield	
Removal and installation	52B-255	Removal and installation.....	42A-10
Side turn-signal light		SRS air bag diagnosis	
Removal and installation	54A-121	Actuator test reference table <SRS-ECU>	52B-218
Side-airbag module(s)		Check chart for diagnostic trouble codes.....	52B-14
Inspection	52B-246	Check chart for trouble symptoms.....	52B-213
Removal and installation	52B-243	Data list reference table.....	52B-218
Solenoid and solenoid valve.....	70-11	Diagnosis function	52B-11
Spare connector		Diagnostic trouble code chart <occupant classification-ECU>	52B-197
Engine overhaul.....	90-244	Diagnostic trouble code procedures <occupant classification-ECU>	
Circuit diagrams.....	90-244	DTC B1690: electromagnetic interference.....	52B-197
Speaker		DTC B1691: occupant sensing antenna	
On-vehicle service		DTC B1693: occupant sensing antenna open	
Speaker test <vehicles with radio and cd player>	54A-209	DTC B1694: occupant sensing ant.sht to gnd	
Removal and installation	54A-211	DTC B1695: occupant sensing ant.sht to bat	52B-199
Special tool		DTC b1cb2: occupant classification-ECU parameter table incompatible	52B-201
Engine cooling	14-4	DTC B210D: battery voltage low	
Intake and exhaust	15-4	DTC B210E: battery voltage high	52B-202
CVT	23A-118	DTC B2212 OCM internal error	52B-204
Active stability control system (ASC).....	35C-128	DTC U1109: ETACS CAN timeout	52B-204
Interior	52A-2	DTC U1190: No receive fault detect signal	52B-206
Special tools		DTC U15A2 vehicle speed information lost	52B-207
Engine mechanical	11A-4	DTC U15A3 odometer information lost.....	52B-209
Engine overhaul.....	11B-8	DTC U15A4 VIN information lost	52B-211
Engine lubrication	12-4	Diagnostic trouble code procedures <SRS-ECU>	
Multipoint fuel injection (MFI)	13A-7	DTC B1400: driver's air bag module (1st squib) system (short circuit between squib circuit terminals)	
Fuel supply	13B-5	DTC B1480: driver's air bag module (2nd squib) system (short circuit between squib circuit terminals).....	52B-19
Clutch overhaul.....	21B-2	DTC B1401: driver's air bag module (1st squib) system (open circuit of squib circuit)	
Manual transaxle	22A-2	DTC B1481: driver's air bag module (2nd squib) system (open circuit of squib circuit)	52B-25
Manual transaxle overhaul	22B-6	DTC B1402: driver's air bag module (1st squib) system (shorted to squib circuit ground)	
Continuously variable transaxle overhaul.....	23B-3	DTC B1482: driver's air bag module (2nd squib) system (shorted to squib circuit ground)	52B-30
Front axle.....	26-4	DTC B1403: driver's air bag module (1st squib) system (shorted to squib circuit power supply)	
Rear axle	27-3		
Wheel and tire	31-6		
Front suspension	33-5		
Rear suspension.....	34-4		
Basic brake.....	35A-13		

DTC B1483: driver's air bag module (2nd squib) system (shorted to squib circuit power supply)	52B-35	DTC B1441: curtain air bag module (RH) (squib) system (open circuit of squib circuit)	52B-105
DTC B1404: driver's air bag module (1st squib) activating circuit short-circuited		DTC B1442: curtain air bag module (RH) (squib) system (shorted to squib circuit ground)	52B-108
DTC B1405: driver's air bag module (1st squib) activating circuit open-circuited		DTC B1443: curtain air bag module (RH) (squib) system (shorted to squib circuit power supply)	52B-112
DTC B1414: passenger's (front) air bag module (1st squib)	52B-40	DTC B1450: curtain air bag module (LH) (squib) system (short circuit between squib circuit terminals)	52B-115
DTC B1406: malfunction of front impact sensor (RH)	52B-42	DTC B1451: curtain air bag module (LH) (squib) system (open circuit of squib circuit)	52B-119
DTC B1407: front impact sensor (RH) voltage error..	52B-43	DTC B1452: curtain air bag module (LH) (squib) system (shorted to squib circuit ground)	52B-122
DTC B1408: front impact sensor (RH) communication error		DTC B1453: curtain air bag module (LH) (squib) system (shorted to squib circuit power supply)	52B-126
DTC B1409: front impact sensor (RH) communication impossible	52B-45	DTC B1476: IG1 power supply open circuit (fuse No. 15 circuit)	
DTC B1410: passenger's (front) air bag module (1st squib) system (short circuit between squib circuit terminals)		DTC B1477: IG1 power supply open circuit (fuse No. 21 circuit)	52B-129
DTC B1490: passenger's (front) air bag module (2nd squib) system (short circuit between squib circuit terminals)	52B-47	DTC B1488: passenger's air bag off indicator light (short circuited)	52B-132
DTC B1411: passenger's (front) air bag module (1st squib) system (open circuit of squib circuit)		DTC B1489: passenger's air bag off indicator light (open circuit)	52B-134
DTC B1491: passenger's (front) air bag module (2nd squib) system (squib circuit open)	52B-52	DTC B1499: air bag deployment determined by SRS-ECU	52B-137
DTC B1412: passenger's (front) air bag module (1st squib) system (shorted to squib circuit ground)		DTC B1509: incorrect installation of SRS-ECU	52B-137
DTC B1492: passenger's (front) air bag module (2nd squib) system (shorted to squib circuit ground)	52B-55	DTC B1530: seat belt switch (passenger's side) malfunction	
DTC B1413: passenger's (front) air bag module (1st squib) system (shorted to squib circuit power supply)		DTC B1537: seat belt switch (passenger's side) circuit open	
DTC B1493: passenger's (front) air bag module (2nd squib) system (shorted to squib circuit power supply)	52B-59	DTC B1538: seat belt switch (passenger's side) circuit (ground side) shorted	52B-137
DTC B1416: malfunction of front impact sensor (LH)	52B-62	DTC B1558: OCM (occupant classification-ECU) DTC present	52B-141
DTC B1417: front impact sensor (LH) voltage error ..	52B-63	DTC B1603: seat belt pre-tensioner (driver's side) (squib) system (short circuit between squib circuit terminals)	52B-142
DTC B1418: front impact sensor (LH) communication error		DTC B1604: seat belt pre-tensioner (driver's side) (squib) system (open circuit of squib circuit)	52B-146
DTC B1419: front impact sensor (LH) communication impossible	52B-65	DTC B1605: seat belt pre-tensioner (driver's side) (squib) system (shorted to squib circuit ground)	52B-149
DTC B1420: side-airbag module (RH) (squib) system (short circuit between squib terminals)	52B-67	DTC B1606: seat belt pre-tensioner (driver's side) (squib) system (shorted to squib circuit power supply)	52B-152
DTC B1421: side-airbag module (RH) (squib) system (open circuit of squib circuit)	52B-71	DTC B1609: seat belt pre-tensioner (passenger's side) (squib) system (short circuit between squib circuit terminals)	52B-155
DTC B1422: side-airbag module (RH) (squib) system (shorted to squib circuit ground)	52B-74	DTC B1610: seat belt pre-tensioner (passenger's side) (squib) system (open circuit of squib circuit)	52B-159
DTC B1423: side-airbag module (RH) (squib) system (shorted to squib circuit power supply)	52B-77	DTC B1611: seat belt pre-tensioner (passenger's side) (squib) system (shorted to squib circuit ground)	52B-162
DTC B1426: malfunction of side impact sensor (RH)		DTC B1612: seat belt pre-tensioner (passenger's side) (squib) system (shorted to squib circuit power supply)	52B-166
DTC B1436: malfunction of side impact sensor (LH).	52B-80	DTC B1631: driver's knee air bag module (squib) system (short circuit between squib circuit terminals)	52B-169
DTC B1427: side impact sensor (RH) voltage error ..	52B-81	DTC B1632: driver's knee air bag module (squib) system (open circuit of squib circuit)	52B-173
DTC B1428: side impact sensor (RH) communication error		DTC B1633: driver's knee air bag module (squib) system (shorted to squib circuit ground)	52B-176
DTC B1429: side impact sensor (RH) communication impossible	52B-83	DTC B1634: driver's knee air bag module (squib) system (shorted to squib circuit power supply)	52B-180
DTC B1430: side-airbag module (LH) (squib) system (short circuit between squib terminals)	52B-85	DTC B1646: coding data mismatch	52B-183
DTC B1431: side-airbag module (LH) (squib) system (open circuit of squib circuit)	52B-89	DTC B1699: SRS-ECU collective deployment	52B-183
DTC B1432: side-airbag module (LH) (squib) system (shorted to squib circuit earth)	52B-92	DTC U0154: occupant classification-ECU CAN timeout	52B-183
DTC B1433: side-airbag module (LH) (squib) system (shorted to squib circuit power supply)	52B-95	DTC U1100: engine CAN timeout	52B-185
DTC B1437: side impact sensor (LH) voltage error...	52B-98		
DTC B1438: side impact sensor (LH) communication error			
DTC B1439: side impact sensor (LH) communication impossible	52B-100		
DTC B1440: curtain air bag module (RH) (squib) system (short circuit between squib circuit terminals)	52B-101		

DTC U1102: ASC/tcl/ABS timeout/not equipped.....	52B-187	Symptom procedures	
DTC U1104: SAS CAN timeout/not equipped.....	52B-189	Inspection procedure 1: steering wheel remote control switch (audio remote control switch) does not function.	54A-188
DTC U1108: combination meter CAN timeout.....	52B-190	Inspection procedure 2: steering wheel remote control switch illumination does not come on.....	54A-189
DTC U1109: ETACS CAN timeout.....	52B-192	Steering wheel sensor	
DTC U1190: No receive fault detect signal.....	52B-193	Removal and installation.....	35C-141
DTC U1195: coding not completed.....	52B-194	Stoplight	
DTC U1199: VIN code not programmed.....	52B-195	Engine overhaul.....	90-98
DTC U119A: VIN code mismatch	52B-196	Circuit diagrams.....	90-98
Fail-safe function reference table	52B-218	Strut assembly	
Introduction to diagnosis.....	52B-11	Disassembly and reassembly	33-9
Passenger's air bag off indicator light check	52B-14	Inspection	
SRS warning light check.....	52B-14	Front suspension	33-12
Symptom procedures		Front suspension	33-9
Inspection procedure 1: communication between scan tool and SRS-ECU cannot be established.	52B-213	Removal and installation.....	33-8
Inspection procedure 2: power supply circuit system	52B-213	Supplemental restraint system (SRS)	
Inspection procedure 3: SRS warning light does not illuminate.....	52B-215	Engine overhaul.....	90-188
Inspection procedure 4: the SRS warning light does not go out.	52B-216	Circuit diagrams.....	90-188
Troubleshooting strategy	52B-11		
SRS control unit (SRS-ECU)			
Inspection	52B-231		
Removal and installation	52B-229		
Stabilizer bar			
Inspection	33-21		
Removal and installation	33-17		
Starting system			
General information	16-17		
On-vehicle service			
Starter relay continuity check.....	16-20		
Service specification.....	16-18		
Starter motor assembly			
Inspection	16-22		
Removal and installation.....	16-21		
Starting system diagnosis.....	16-18		
Starting system <CVT>			
Engine overhaul.....	90-42		
Circuit diagrams.....	90-42		
Starting system <M/T>			
Engine overhaul.....	90-40		
Circuit diagrams.....	90-40		
Steering column shaft assembly			
Disassembly and reassembly.....	37-67		
Inspection	37-67		
Removal and installation	37-64		
Steering lock <vehicles without KOS (CVT)>			
Engine overhaul.....	90-200		
Circuit diagrams.....	90-200		
Steering wheel			
Removal and installation	37-62		
Steering wheel audio remote control switch			
Diagnosis			
Standard flow of diagnostic troubleshooting	54A-187		
Trouble symptom chart	54A-187		
Special tools	54A-187		
Steering wheel audio remote control switch			
Removal and installation.....	54A-191		
Steering wheel audio remote control switch check....	54A-191		

TSB Revision

Installation service point	31-45	Removal and installation.....	51-34
Wheel and tire diagnosis			
Diagnosis.....	31-8		
Wheel balance accuracy	31-9		
Wheel speed sensor			
Inspection	35C-140		
Removal and installation	35C-139		
Window glass			
General information	42A-12		
Liftgate window glass			
Removal and installation.....	42A-21		
Special tool	42A-14		
Specification(s)			
Adhesive	42A-12		
Lubricant.....	42A-12		
Symptom procedures			
Inspection procedure 1: water leak through windshield glass/water leak through quarter window glass/water leak through liftgate window glass/water leak through roof glass	42A-14		
Window glass diagnosis			
Introduction to window glass diagnosis	42A-14		
Window glass diagnostic troubleshooting strategy	42A-14		
Window glass diagnostic trouble symptom chart.....	42A-14		
Windshield			
Removal and installation.....	42A-15		
Windshield wiper and washer			
Engine overhaul.....	90-146		
Circuit diagrams.....	90-146		
Windshield wiper and washer			
Lubricant.....	51-16		
On-vehicle service			
Customization function	51-33		
Windshield intermittent wiper inspection.....	51-33		
Service specification.....	51-16		
Special tools	51-17		
Troubleshooting			
Inspection procedure 1: windshield wipers do not work at all.....	51-19		
Inspection procedure 2: the windshield wipers do not work when the wiper switch is at the "INT", "washer" or "mist" position. however, the wipers work at low speed when the switch is at the "lo" and "hi" position.	51-22		
Inspection procedure 3: the windshield wipers do not stop at the specified position.	51-23		
Inspection procedure 4: the windshield wipers do not work normally.....	51-24		
Inspection procedure 5: the windshield intermittent wiper interval cannot be adjusted by operating the windshield intermittent wiper volume control.	51-28		
Inspection procedure 6: the intermittent wiper interval is not changed according to the vehicle speed.....	51-29		
Inspection procedure 7: the windshield washer does not work normally.	51-31		
Standard flow of diagnostic troubleshooting	51-19		
Trouble symptom chart.....	51-19		
Windshield washer			
Inspection	51-40		
Removal and installation.....	51-39		
Windshield wiper			
Inspection	51-38		