


 At the end of the replacement, in the engine management control unit section, the "Engine Oil Change" function must be updated using the EXAMINER diagnosis instrument.

 Engine oil is dangerous for the skin: keep contact with skin to a minimum and if there is contact wash with soap and water.

- Place the vehicle on a lift.
- Remove the filler cap with the engine hot.
- Release the engine oil dipstick.

[Op. 7055B54 PROTECTION/GUARD UNDER ENGINE -R.R.](#)

1. Unscrew the drain plug in the engine oil sump and drain the oil completely into a suitable container.

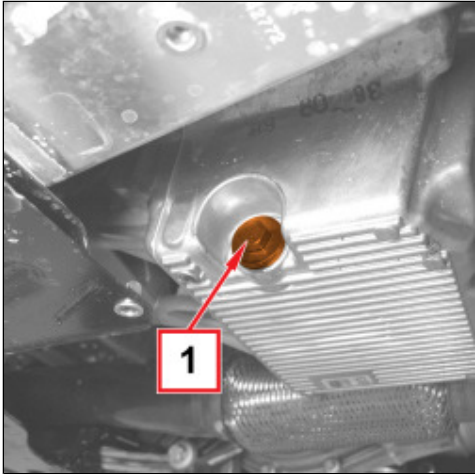


 Be very careful when removing the drain plug, oil could be very hot.

 Do not dispose of oil into the environment as indiscriminate dispersion of this product causes pollution

- Replace the engine oil filter; refer to

[Op. 1084B30 ENGINE OIL FILTER - R.R](#)

1. Clean the drain plug and tighten the gasket to the prescribed torque.

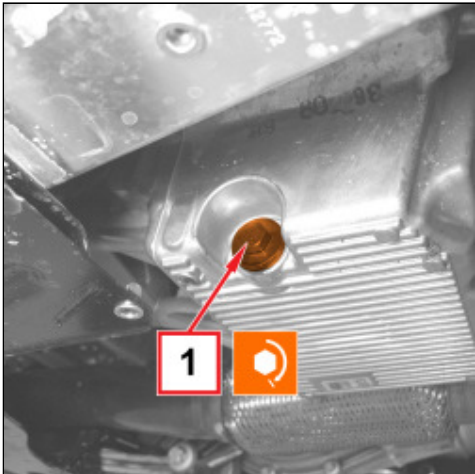

Component	Fastening	Ø	Value (daNm)	Validity
Engine oil drain plug	Plug	M18	1.8 ÷ 2.2	1750 Turbo Petrol

- Refill the engine lubrication circuit with the prescribed oil.

Component	Type	Description	Classification	Qty.	Validity
ENGINE COOLING CIRCUIT	Oil [l]	SELENIA K P.E. Contractual Technical Reference N. F603.C07	SAE 5W-40 ACEA C3 FIAT 9.55535-S2	5.12	1750 Turbo Petrol

 The table shows the quantity for periodic replacement.

- Check that the engine oil level is correct using the dipstick.

 The oil level is checked with the vehicle on a flat surface.

- Fit the filler cap, let the engine idle for about 2 minutes, switch off the engine and then wait for several minutes.
- With engine cold, check the oil level and make sure there are no leaks.
[Op. 7055B54 PROTECTION/GUARD UNDER ENGINE -R.R.](#)
- Remove the vehicle from the lift.