


 Engine oil replacement is not a programmed maintenance operation and should be carried out only for certain removal/refitting operations.

- Place the vehicle on a lift.


[Op. 7055B54 PROTECTION/GUARD UNDER ENGINE -R.R.](#)

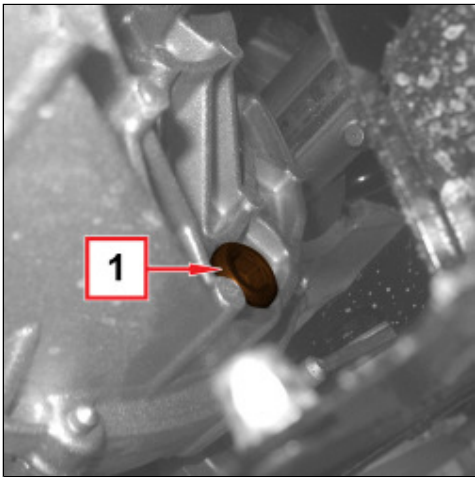

1. Unscrew the transmission fluid exhaust plug and recover in an appropriate container.


 Do not let the fluid disperse into the environment as uncontrolled dispersion of this product causes pollution.

1. Clean the drain plug and tighten it to the recommended torque.

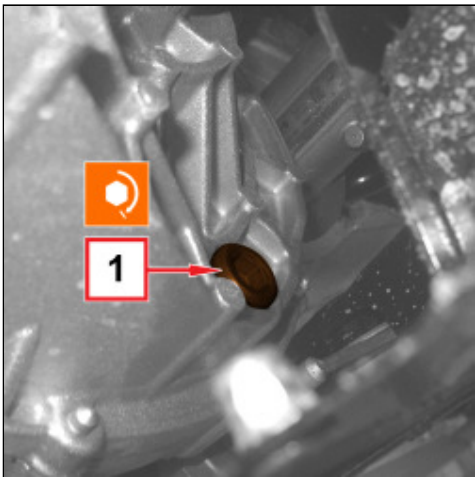

Component	Fastening	Ø	Value (daNm)	Validity
Engine oil drain plug	Plug	M18	1.8 ÷ 2.2	1750 Turbo Petrol

1. Unscrew the gearbox oil filler plug.

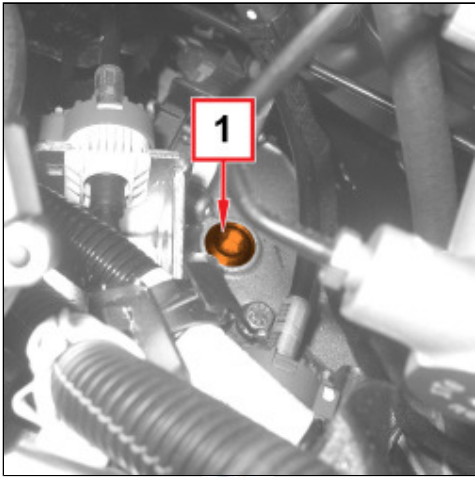


- Refill the gearbox with the specified fluid through the filler opening.

Component	Type	Description	Classification	Qty.	Validity
MANUAL GEARBOX/DIFFERENTIAL	Oil [l]	TUTELA GEARTECH Contractual Technical Reference	SAE 75W-85 - API GL-4 PLUS - FIAT 9.55550- MZ3	1.87	1750 Turbo Petrol

 The table shows the total quantity of oil present in the gearbox.

1. Clean the gearbox oil filler plug and tighten it to the prescribed torque.

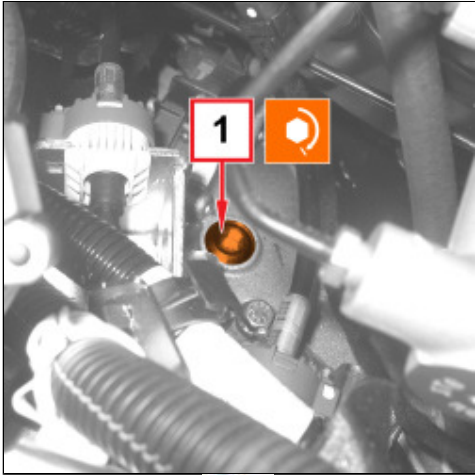

Component	Fastening	Ø	Value (daNm)	Validity
Gearbox oil filler plug	Plug	M18	1.8 ÷ 2.2	1750 Turbo Petrol

[Op. 7055B54 PROTECTION/GUARD UNDER ENGINE -R.R.](#)
- Remove the vehicle from the lift.