

 Removing ([Refitting](#) )

- Place the vehicle on a lift.
- Disconnect the negative battery terminal.

	Description	Connector
-	Battery	See A001 BATTERY

- [Op. 7055B54 PROTECTION/GUARD UNDER ENGINE -R.R.](#)
- [Op. 0010T40 CHANGE MANUAL GEARBOX OIL](#)
- [Op. 0010T20 ENGINE COOLANT - CHANGE](#)
- [Op. 0010T84 AIR CONDITIONING SYSTEM REFRIGERANT - DEHYDRATING AND REPRESSURIZING](#)
- [Op. 1016A10 SOUND-PROOFING COVER - R.R](#)
- [Op. 7210E10 R.R. FRONT BUMPER](#)
- [Op. 5540B07 LEFT FRONT HEADLAMP - R.R.](#)
- [Op. 5540B08 RIGHT FRONT HEADLAMP - R.R.](#)
- [Op. 1088B10 ENGINE COOLANT RESERVOIR - R.R.](#)
- [Op. 1048A50 AIR INLET PIPE TO TURBOCHARGER - R + R](#)
- [Op. 7025A34 BONNET LID LOCK \(ONE\) - R+R OR REPAIR](#)
- [Op. 5530B10 BATTERY - R+R](#)
- [Op. 5530B52 BATTERY SUPPORT/DRIP TRAY - R.R](#)
- [Op. 1048B27 RIGID PIPE FOR AIR INLET TO THROTTLE BODY - R R](#)
- [Op. 7210A02 FRONT END ASSEMBLY - R.R.](#)
- [Op. 7210A51 LEFT THIRD LOAD LINE - R.R.](#)
- [Op. 7210A52 RIGHT THIRD LOAD LINE - R.R.](#)
- [Op. 4450B12 FRONT WHEELS \(TWO\) - R.R.](#)
- [Op. 7055B66 ENGINE COMPARTMENT DUST COVER IN RIGHT FRONT WHEEL ARCH - R.R.](#)
- [Op. 7055B65 ENGINE COMPARTMENT DUST COVER IN LEFT FRONT WHEEL ARCH - R.R.](#)
- [Op. 2710A14 RIGHT DRIVESHAFT WITH JOINTS AND INTERMEDIATE DRIVESHAFT - R+R](#)
- [Op. 1076B72 INTERMEDIATE EXHAUST PIPE WITH HOSE SECTION - R+R](#)
- [Op. 1008C32 GEARBOX LOWER REACTION ROD -R.R.](#)
- [Op. 1004B10 POWER UNIT WITH MANUAL GEARBOX - R.R.](#)
- [Op. 1004D10 POWER UNIT \(MANUAL GEARBOX\), REMOVED, DISMANTLE AND REASSEMBLE](#)

 Refitting ([Removing](#) )

- [Op. 1004D10 POWER UNIT \(MANUAL GEARBOX\), REMOVED, DISMANTLE AND REASSEMBLE](#)
- [Op. 1004B10 POWER UNIT WITH MANUAL GEARBOX - R.R.](#)
- [Op. 1008C32 GEARBOX LOWER REACTION ROD -R.R.](#)
- [Op. 1076B72 INTERMEDIATE EXHAUST PIPE WITH HOSE SECTION - R+R](#)
- [Op. 2710A14 RIGHT DRIVESHAFT WITH JOINTS AND INTERMEDIATE DRIVESHAFT - R+R](#)
- [Op. 7055B65 ENGINE COMPARTMENT DUST COVER IN LEFT FRONT WHEEL ARCH - R.R.](#)
- [Op. 7055B66 ENGINE COMPARTMENT DUST COVER IN RIGHT FRONT WHEEL ARCH - R.R.](#)

- [_Op. 4450B12 FRONT WHEELS \(TWO\) - R.R.](#)
- [_Op. 7210A52 RIGHT THIRD LOAD LINE - R.R.](#)
- [_Op. 7210A51 LEFT THIRD LOAD LINE - R.R.](#)
- [_Op. 7210A02 FRONT END ASSEMBLY - R.R.](#)
- [_Op. 1048B27 RIGID PIPE FOR AIR INLET TO THROTTLE BODY - R R](#)
- [_Op. 5530B52 BATTERY SUPPORT/DRIP TRAY - R.R](#)
- [_Op. 5530B10 BATTERY - R+R](#)
- [_Op. 7025A34 BONNET LID LOCK \(ONE\) - R+R OR REPAIR](#)
- [_Op. 1048A50 AIR INLET PIPE TO TURBOCHARGER - R + R](#)
- [_Op. 1088B10 ENGINE COOLANT RESERVOIR - R.R.](#)
- [_Op. 5540B08 RIGHT FRONT HEADLAMP - R.R.](#)
- [_Op. 5540B07 LEFT FRONT HEADLAMP - R.R.](#)
- [_Op. 7210E10 R.R. FRONT BUMPER](#)
- [_Op. 1016A10 SOUND-PROOFING COVER - R.R](#)
- [_Op. 0010T84 AIR CONDITIONING SYSTEM REFRIGERANT - DEHYDRATING AND REPRESSURIZING](#)
- [_Op. 0010T20 ENGINE COOLANT - CHANGE](#)
- [_Op. 0010T40 CHANGE MANUAL GEARBOX OIL](#)
- [_Op. 7055B54 PROTECTION/GUARD UNDER ENGINE -R.R.](#)

- Connect the negative battery terminal.

	Description	Connector
-	Battery	_See A001 BATTERY

- Remove the vehicle from the lift.