

2013 ACCESSORIES & EQUIPMENT

Interior Trim and Paneling - Malibu

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Rear Window Inside Sunshade Fastener	10	89 lb in
Roof Rail Front Assist Handle Fastener	6	53 lb in
Roof Rail Rear Assist Handle Fastener	6	53 lb in

REPAIR INSTRUCTIONS

FRONT SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT (DRIVERS SIDE DOOR)

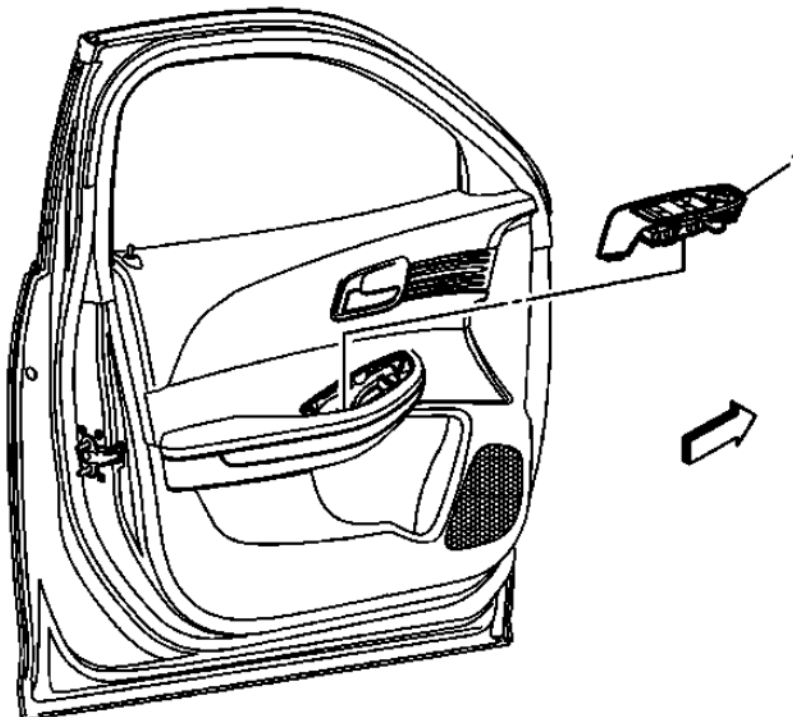


Fig. 1: Front Side Door Accessory Switch Mount Plate (Drivers Side Door)

Courtesy of GENERAL MOTORS COMPANY

Front Side Door Accessory Switch Mount Plate Replacement (Drivers Side Door)

Callout	Component Name
1	Front Side Door Accessory Switch Mount Plate Assembly Procedure 1. Use the appropriate plastic trim tool to release the front side door accessory switch mount plate spring clips from the door trim panel. 2. Disconnect the electrical connector from the switch assembly. 3. Transfer parts as necessary.

FRONT SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT (PASSENGER SIDE DOOR)

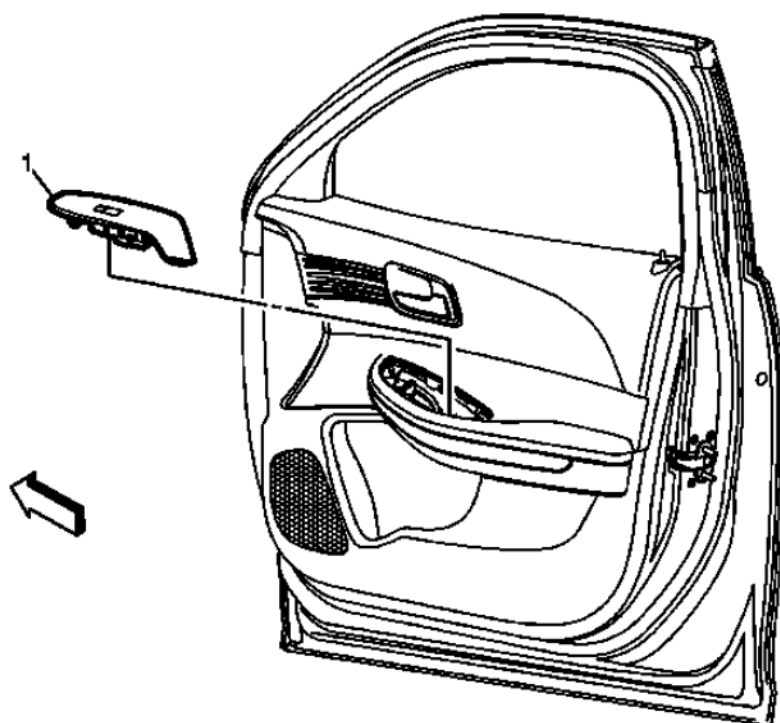


Fig. 2: Front Side Door Accessory Switch Mount Plate (Passenger Side Door)
 Courtesy of GENERAL MOTORS COMPANY

Front Side Door Accessory Switch Mount Plate Replacement (Passenger Side Door)

Callout	Component Name
1	Front Side Door Accessory Switch Mount Plate Assembly Procedure 1. Use the appropriate plastic trim tool to release the front side door accessory switch mount plate spring clips from the door trim

panel.

2. Disconnect the electrical connector from the switch assembly.
3. Transfer parts as necessary.

REAR SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT

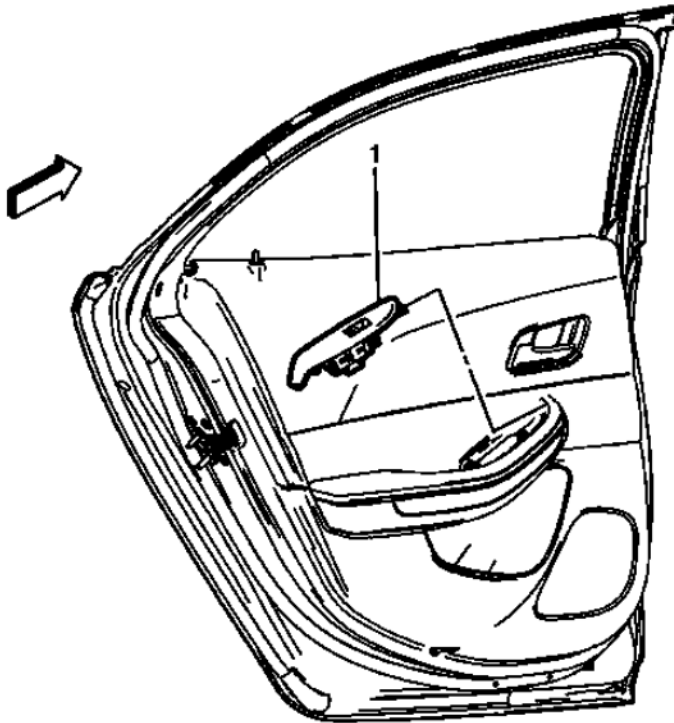


Fig. 3: Rear Side Door Accessory Switch Mount Plate
Courtesy of GENERAL MOTORS COMPANY

Rear Side Door Accessory Switch Mount Plate Replacement

Callout	Component Name
1	Rear Side Door Accessory Switch Mount Plate Assembly Procedure 1. Use the appropriate plastic trim tool to release the rear side door accessory switch mount plate from the door trim panel. 2. Disconnect the electrical connector from the switch assembly. 3. Transfer parts as necessary.

FRONT SIDE DOOR INSIDE HANDLE BEZEL REPLACEMENT

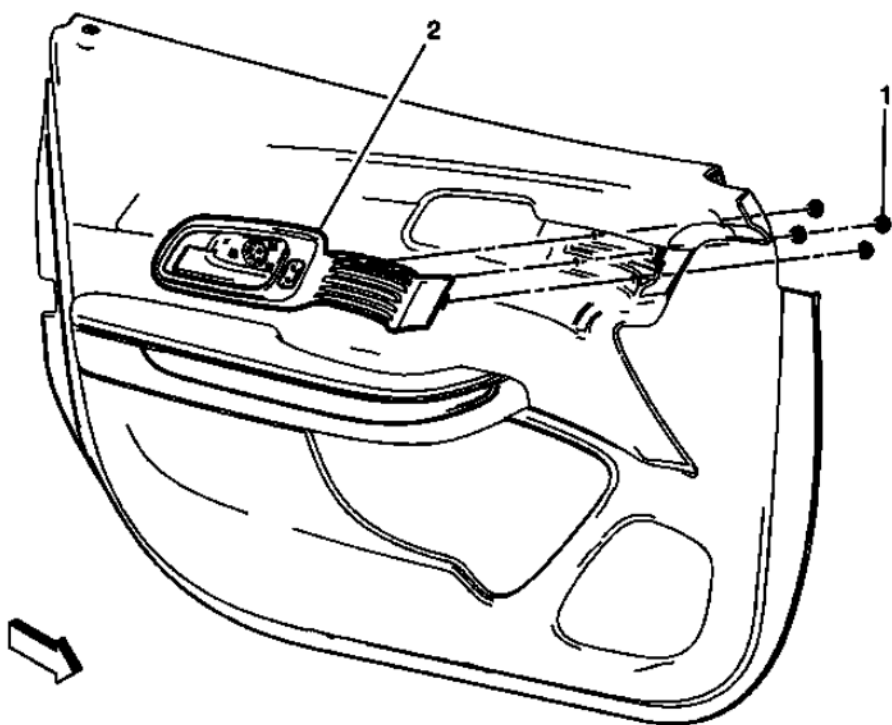


Fig. 4: Front Side Door Inside Handle Bezel
 Courtesy of GENERAL MOTORS COMPANY

Front Side Door Inside Handle Bezel Replacement

Callout	Component Name
Preliminary Procedure Remove the front side door trim. Refer to Front Side Door Trim Replacement .	
1	Front Side Door Inside Handle Bezel Fastener (Qty: 4) CAUTION: Refer to <u>Fastener Caution</u> .
2	Front Side Door Inside Handle Bezel Assembly Procedure 1. Use the appropriate plastic trim tool to aid in the removal of the door inside handle bezel. 2. Disconnect the electrical connector. 3. When replacing the front side door inside handle bezel, transfer all necessary components.

FRONT SIDE DOOR PULL HANDLE COVER REPLACEMENT

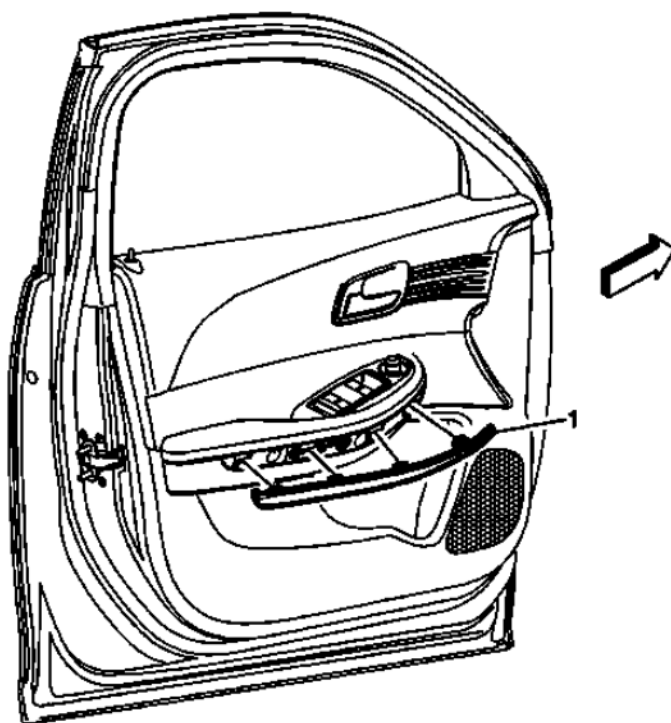


Fig. 5: Front Side Door Pull Handle Cover
 Courtesy of GENERAL MOTORS COMPANY

Front Side Door Pull Handle Cover Replacement

Callout	Component Name
1	Front Side Door Pull Handle Cover Assembly Procedure Use the appropriate plastic trim tool to aid in the removal.

REAR SIDE DOOR PULL HANDLE COVER REPLACEMENT

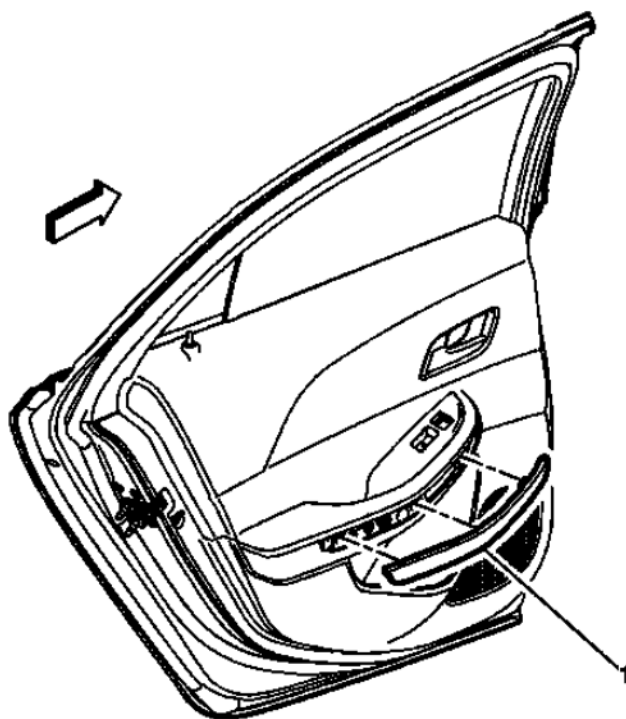


Fig. 6: Rear Side Door Pull Handle Cover
 Courtesy of GENERAL MOTORS COMPANY

Rear Side Door Pull Handle Cover Replacement

Callout	Component Name
1	Rear Side Door Pull Handle Cover Assembly
	Procedure 1. Use the appropriate plastic trim tool to aid in the removal. 2. Unclip from rear to front.

FRONT SIDE DOOR TRIM REPLACEMENT

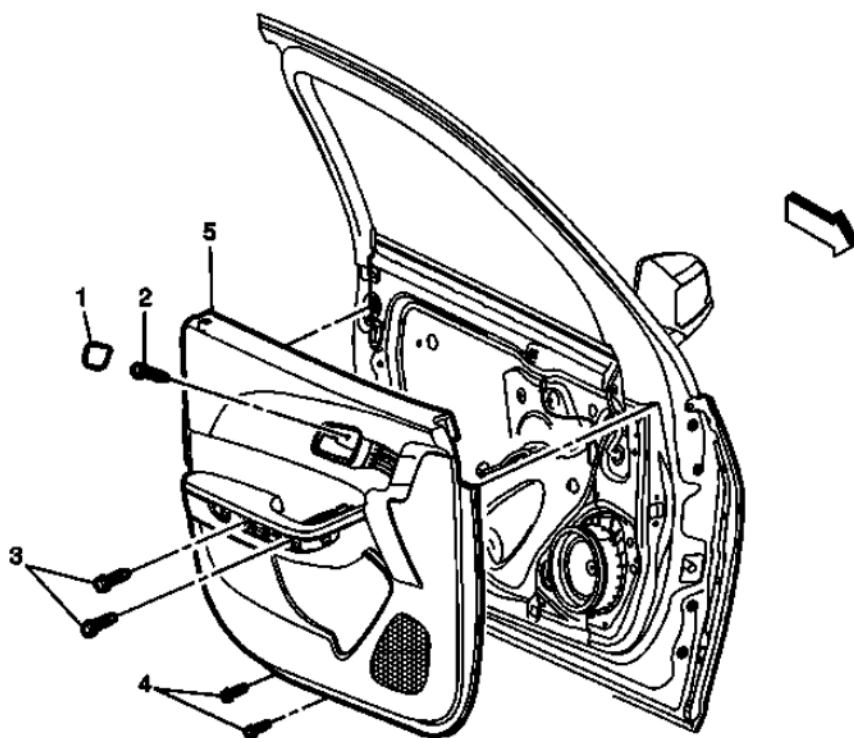


Fig. 7: Front Side Door Trim
Courtesy of GENERAL MOTORS COMPANY

Front Side Door Trim Replacement

Callout	Component Name
Preliminary Procedure Remove the front side door pull handle cover. Refer to <u>Front Side Door Pull Handle Cover Replacement</u> .	
1	Front Side Door Inside Handle Bolt Finish Cap
2	Front Side Door Inside Handle Fastener CAUTION: Refer to Fastener Caution .
3	Front Side Door Armrest Pull Cup Fastener (Qty: 2)
4	Front Side Door Trim Panel Fastener (Qty: 2)
5	Front Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

REAR SIDE DOOR WINDOW GARNISH MOLDING REPLACEMENT

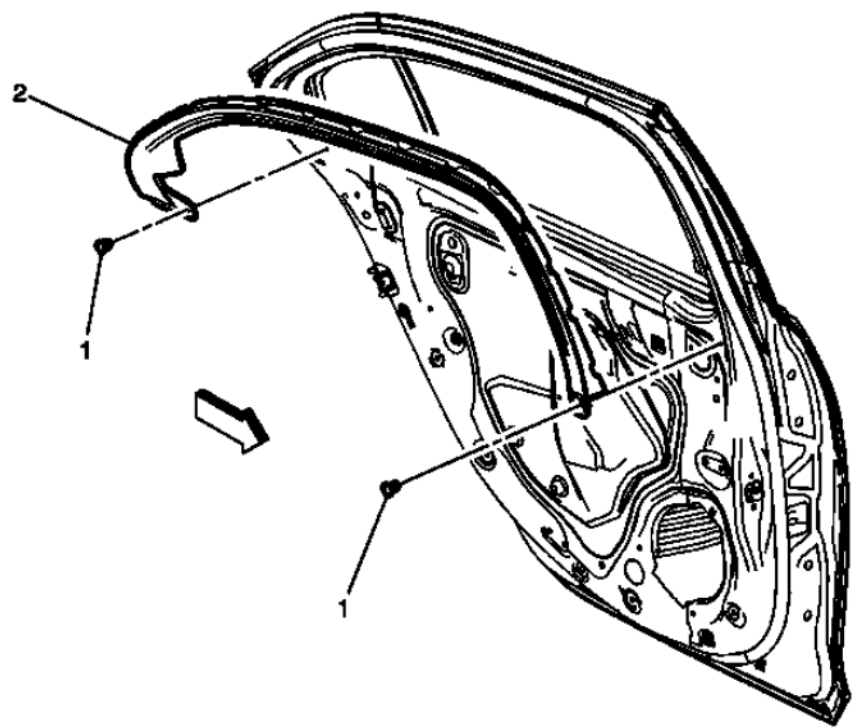


Fig. 8: Rear Side Door Window Garnish Molding
 Courtesy of GENERAL MOTORS COMPANY

Rear Side Door Window Garnish Molding Replacement

Callout	Component Name
Preliminary Procedure Remove the rear side door trim. Refer to Rear Side Door Trim Replacement .	
1	Rear Side Door Window Garnish Molding Retainer (Qty: 2) Procedure Use a door trim panel removal tool or equivalent to aid in the removal of the retainers.
2	Rear Side Door Window Garnish Molding Assembly Procedure Pull outward starting at the front and moving slowly rearward to remove the molding.

FRONT SIDE DOOR WINDOW GARNISH MOLDING REPLACEMENT

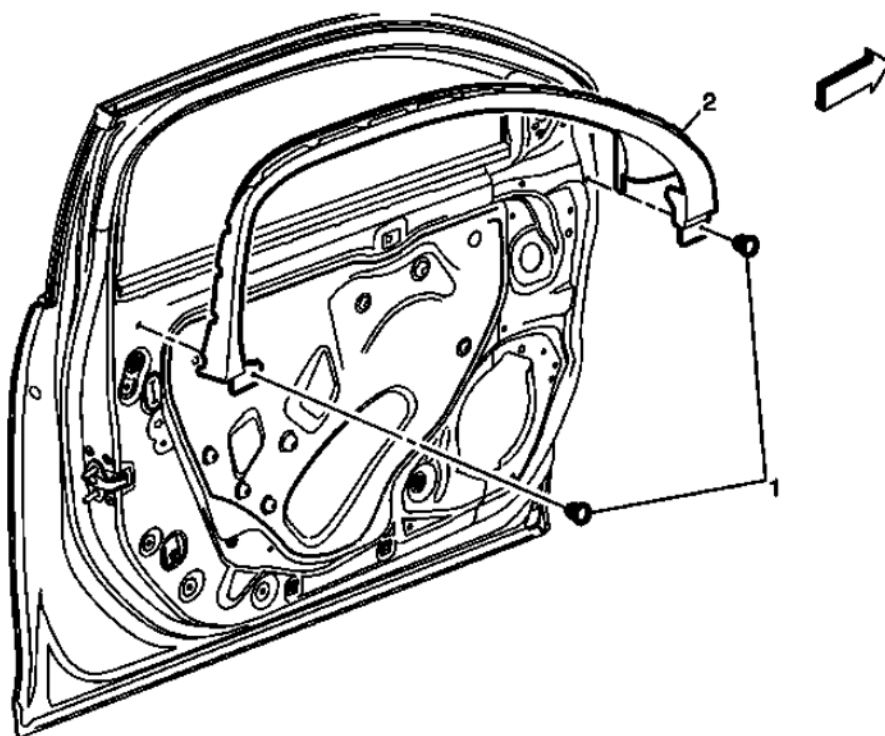


Fig. 9: Front Side Door Window Garnish Molding
 Courtesy of GENERAL MOTORS COMPANY

Front Side Door Window Garnish Molding Replacement

Callout	Component Name
Preliminary Procedure Remove the front side door trim. Refer to Front Side Door Trim Replacement .	
1	Front Side Door Window Garnish Molding Retainer (Qty: 2) Procedure Use a door trim panel removal tool or equivalent to aid in the removal of the retainers.
2	Front Side Door Window Garnish Molding Assembly Procedure Pull outward starting at the front and moving slowly rearward to remove the molding.

FRONT SIDE DOOR SILL TRIM PLATE REPLACEMENT

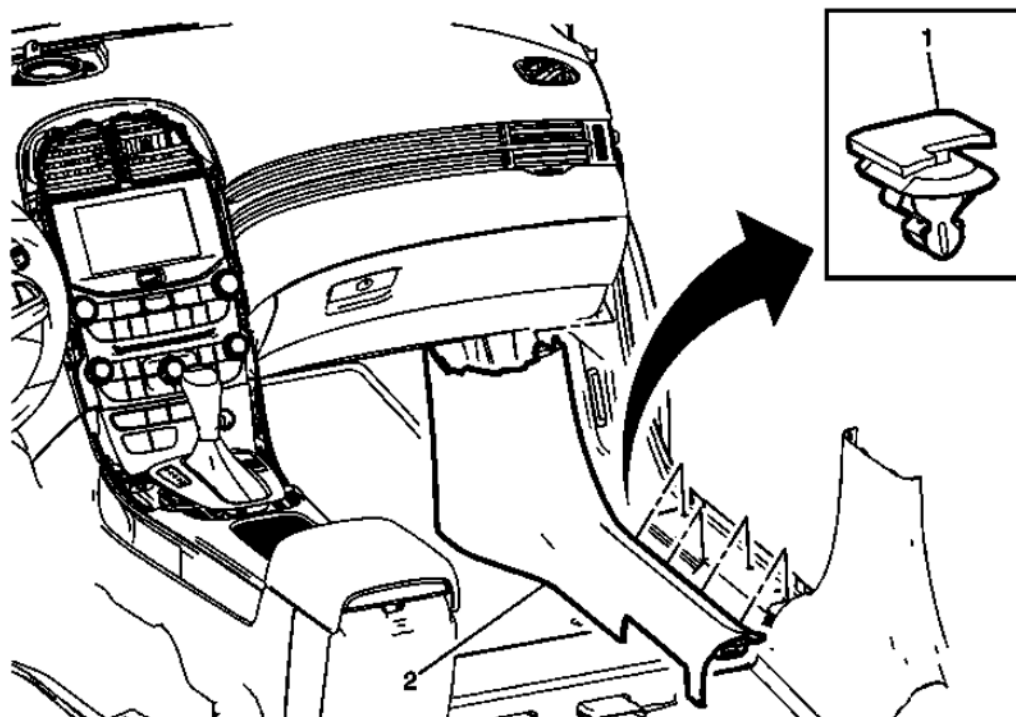


Fig. 10: Front Side Door Sill Trim Plate
 Courtesy of GENERAL MOTORS COMPANY

Front Side Door Sill Trim Plate Replacement

Callout	Component Name
Preliminary Procedure Remove the Instrument Panel Outer Trim Cover. Refer to <u>Instrument Panel Outer Trim Cover Replacement</u> .	
1	Front Side Door Sill Trim Plate Retainers (Qty: 5)
2	Front Side Door Sill Trim Plate Assembly

REAR SIDE DOOR SILL TRIM PLATE REPLACEMENT

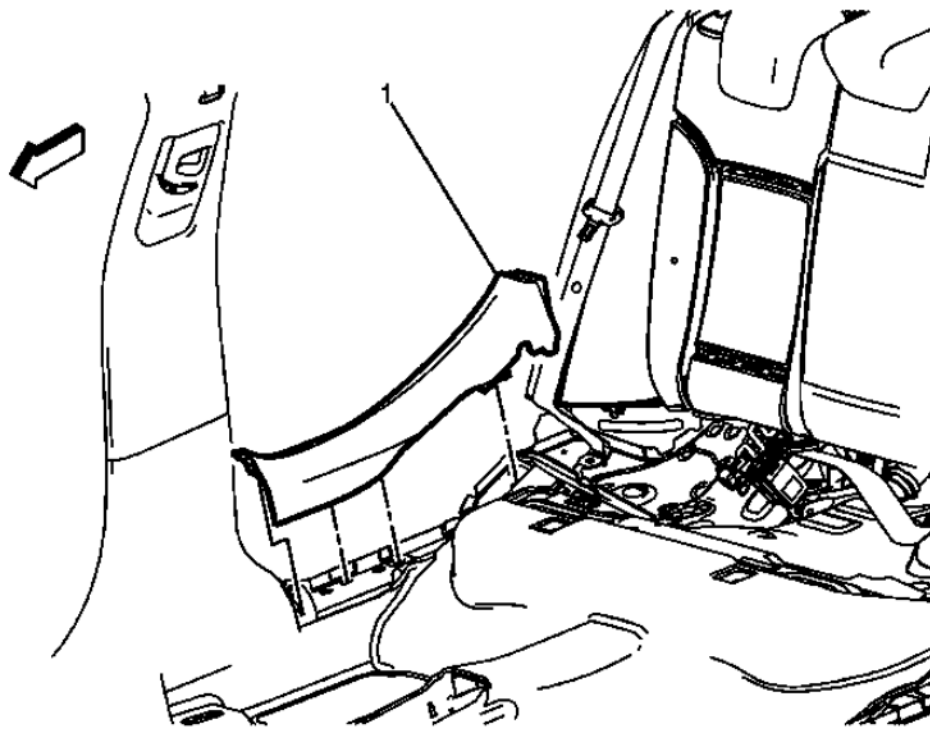


Fig. 11: Rear Side Door Sill Trim Plate
 Courtesy of GENERAL MOTORS COMPANY

Rear Side Door Sill Trim Plate Replacement

Callout	Component Name
1	Rear Side Door Sill Trim Plate Assembly

REAR COMPARTMENT SIDE TRIM PANEL REPLACEMENT (HP6, LEFT SIDE)

Cardiagn.com

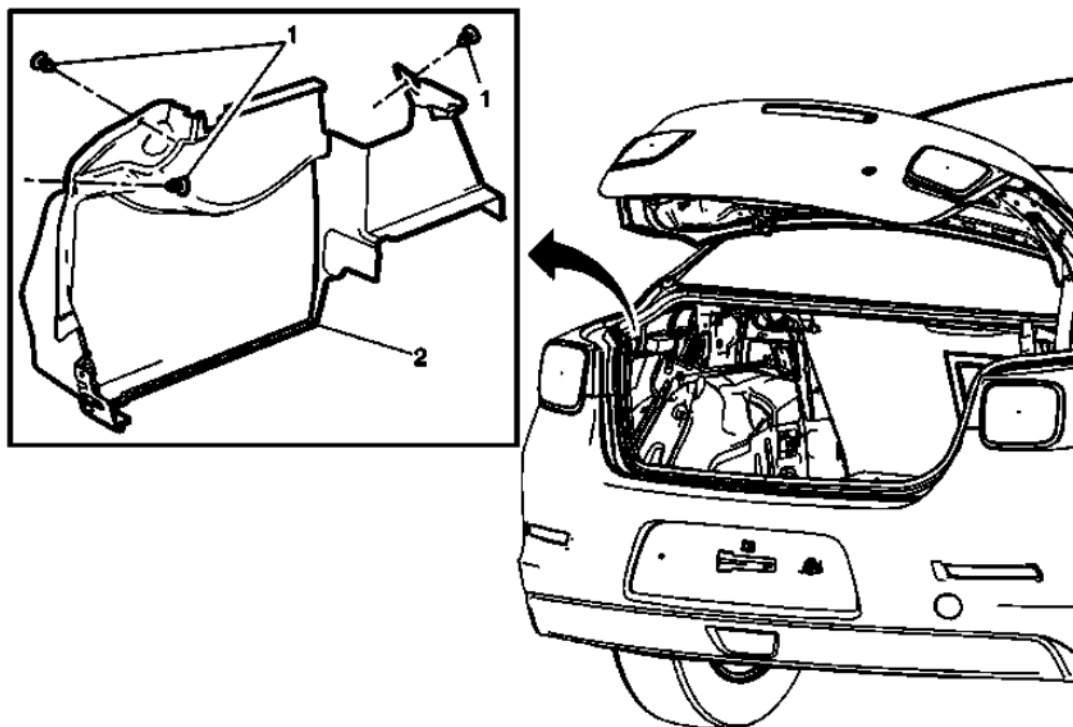


Fig. 12: Rear Compartment Side Trim Panel (HP6, Left Side)

Courtesy of GENERAL MOTORS COMPANY

Rear Compartment Side Trim Panel Replacement (HP6, Left Side)

Callout	Component Name
Preliminary Procedures	
1. Remove the rear compartment floor panel trim (with battery cover, HP6). Refer to <u>Rear Compartment Floor Panel Trim Replacement (With Battery Cover, HP6)</u>, <u>Rear Compartment Floor Panel Trim Replacement (With Blower Cover, HP6)</u>. 2. Remove the rear end trim finish panel. Refer to <u>Rear End Trim Finish Panel Replacement</u>. 3. Fold down rear seat to access retainer.	
1	Rear Compartment Side Trim Panel Retainer (Qty: 3)
2	Rear Compartment Side Trim Panel Assembly

REAR COMPARTMENT SIDE TRIM PANEL REPLACEMENT (HP6, RIGHT SIDE)

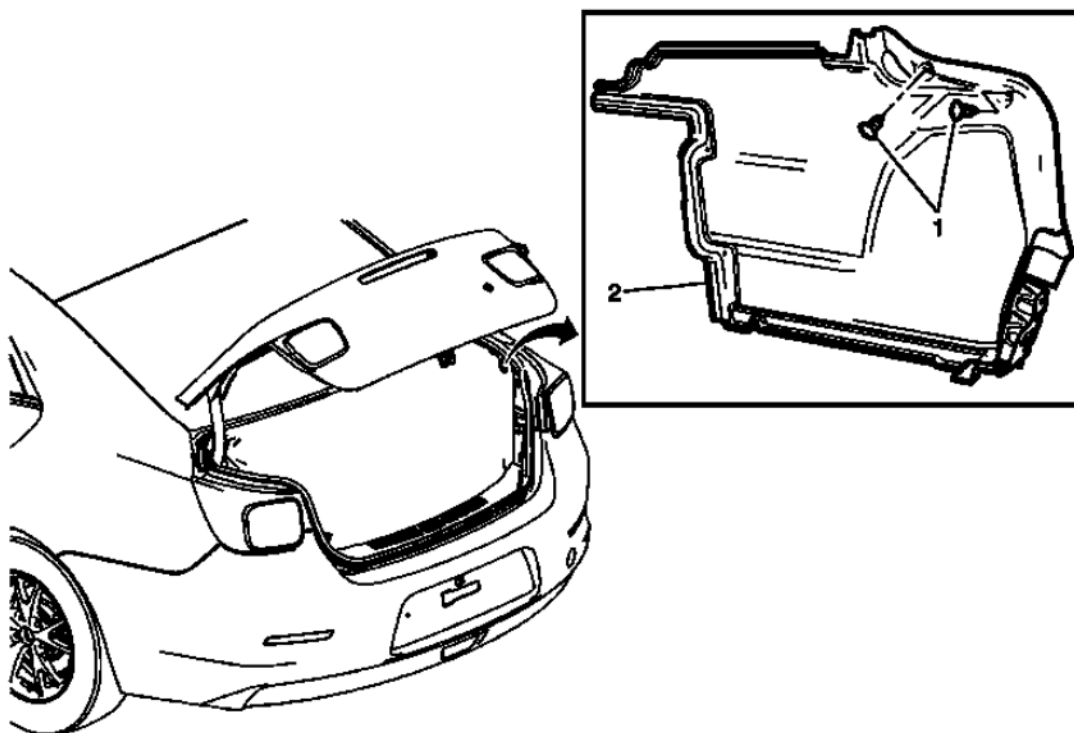


Fig. 13: Rear Compartment Side Trim Panel (HP6, Right Side)

Courtesy of GENERAL MOTORS COMPANY

Rear Compartment Side Trim Panel Replacement (HP6, Right Side)

Callout	Component Name
Preliminary Procedures	
1. Remove the rear compartment floor panel trim (with blower cover, HP6). Refer to <u>Rear Compartment Floor Panel Trim Replacement (With Battery Cover, HP6)</u> , <u>Rear Compartment Floor Panel Trim Replacement (With Blower Cover, HP6)</u> .	
2. Remove the rear end trim finish panel. Refer to <u>Rear End Trim Finish Panel Replacement</u> .	
1	Rear Compartment Side Trim Panel Retainer (Qty: 2)
2	Rear Compartment Side Trim Panel Assembly

REAR COMPARTMENT SIDE TRIM PANEL REPLACEMENT (WITHOUT HP6)

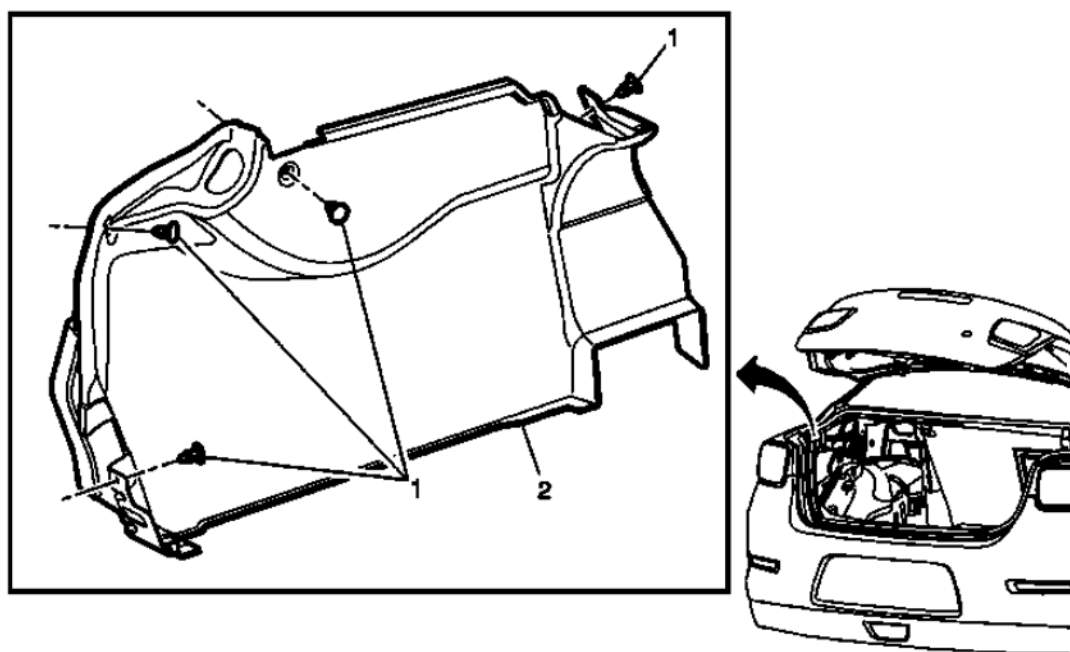


Fig. 14: Rear Compartment Side Trim Panel (without HP6)

Courtesy of GENERAL MOTORS COMPANY

Rear Compartment Side Trim Panel Replacement (without HP6)

Callout	Component Name
Preliminary Procedures	
Remove the rear end trim finish panel. Refer to <u>Rear End Trim Finish Panel Replacement</u> .	
1	Rear Compartment Side Trim Panel Retainer (Qty: 4)
2	Rear Compartment Side Trim Panel Assembly

ROOF RAIL FRONT ASSIST HANDLE REPLACEMENT

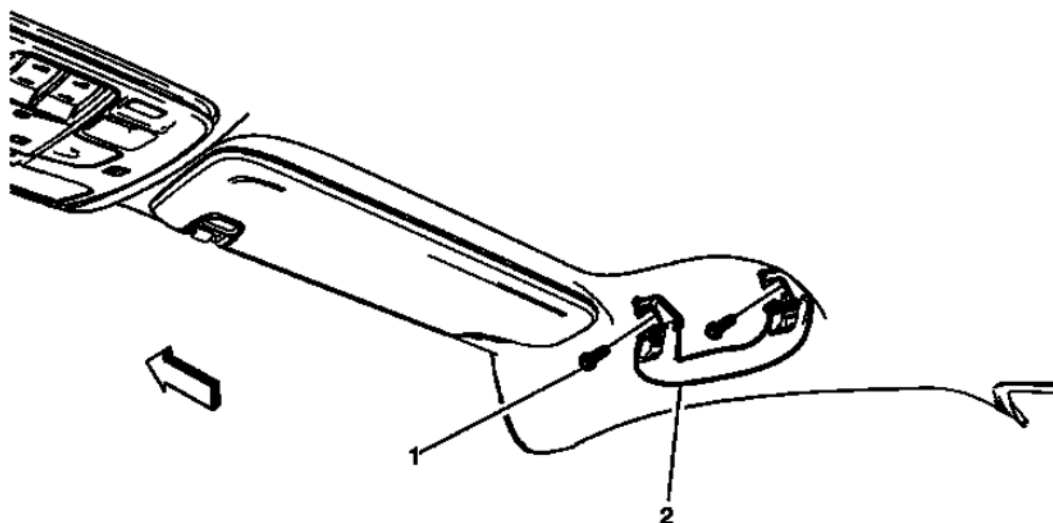


Fig. 15: Roof Rail Front Assist Handle
 Courtesy of GENERAL MOTORS COMPANY

Roof Rail Front Assist Handle Replacement

Callout	Component Name
1	Roof Rail Front Assist Handle Fastener (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N.m (53 lb in)
2	Roof Rail Front Assist Handle Assembly

ROOF RAIL REAR ASSIST HANDLE REPLACEMENT

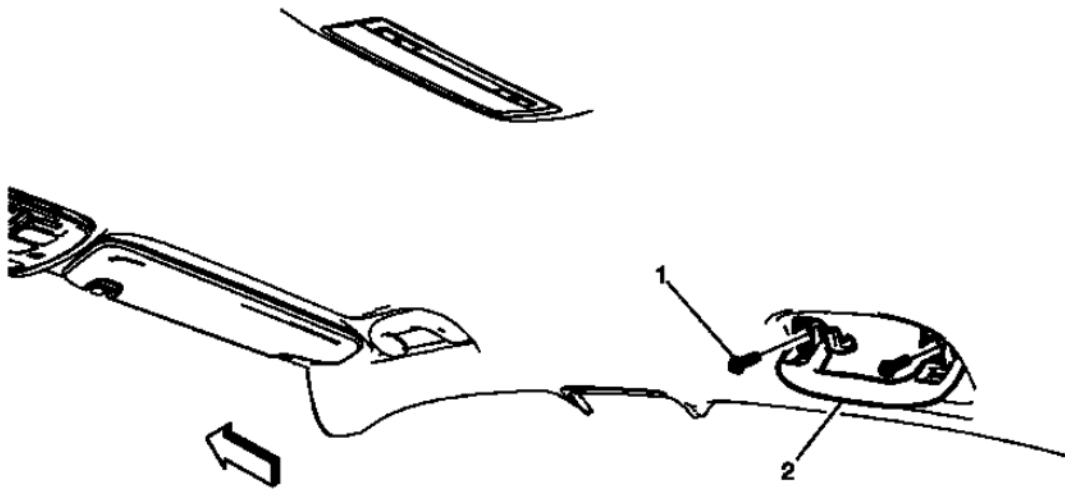


Fig. 16: Roof Rail Rear Assist Handle
 Courtesy of GENERAL MOTORS COMPANY

Roof Rail Rear Assist Handle Replacement

Callout	Component Name
1	Roof Rail Rear Assist Handle Fastener (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N.m (53 lb in)
2	Roof Rail Rear Assist Handle Assembly

SUNSHADE REPLACEMENT

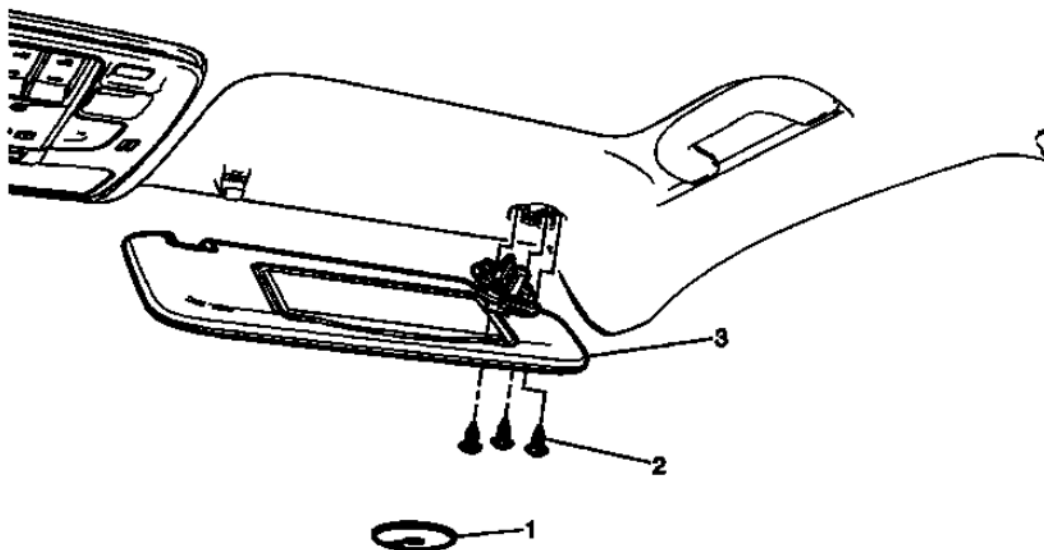


Fig. 17: Sunshade Assembly

Courtesy of GENERAL MOTORS COMPANY

Sunshade Replacement

Callout	Component Name
Preliminary Procedure Lower the front of the headliner to access the sunshade electrical connector, if necessary. Refer to Headlining Trim Panel Replacement (Without Sunroof) , Headlining Trim Panel Replacement (With Sunroof) .	
1	Sunshade Cover
2	Sunshade Fastener (Qty: 3) CAUTION: Refer to <u>Fastener Caution</u> .
3	Sunshade Assembly Procedure 1. Squeeze the tabs at the base of the sunshade assembly to remove from the headliner. 2. Disconnect the electrical connector.

SUNSHADE SUPPORT REPLACEMENT

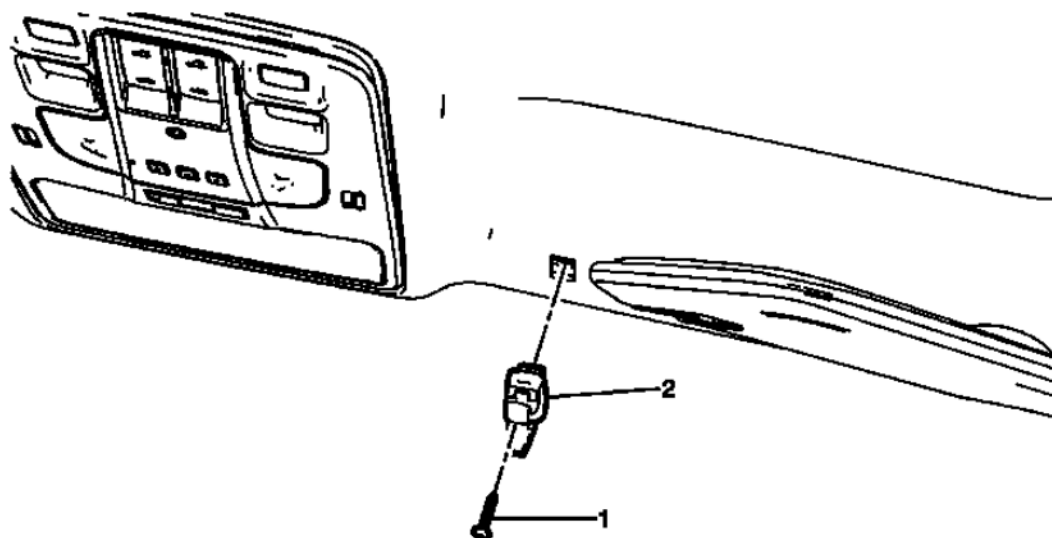


Fig. 18: Sunshade Support
 Courtesy of GENERAL MOTORS COMPANY

Sunshade Support Replacement

Callout	Component Name
1	Sunshade Support Fastener CAUTION: Refer to <u>Fastener Caution</u> . NOTE: Pull the cover downward to access the fastener.
2	Sunshade Support Assembly Procedure Unclip the sunshade from the support and reposition.

WINDSHIELD SIDE GARNISH MOLDING REPLACEMENT

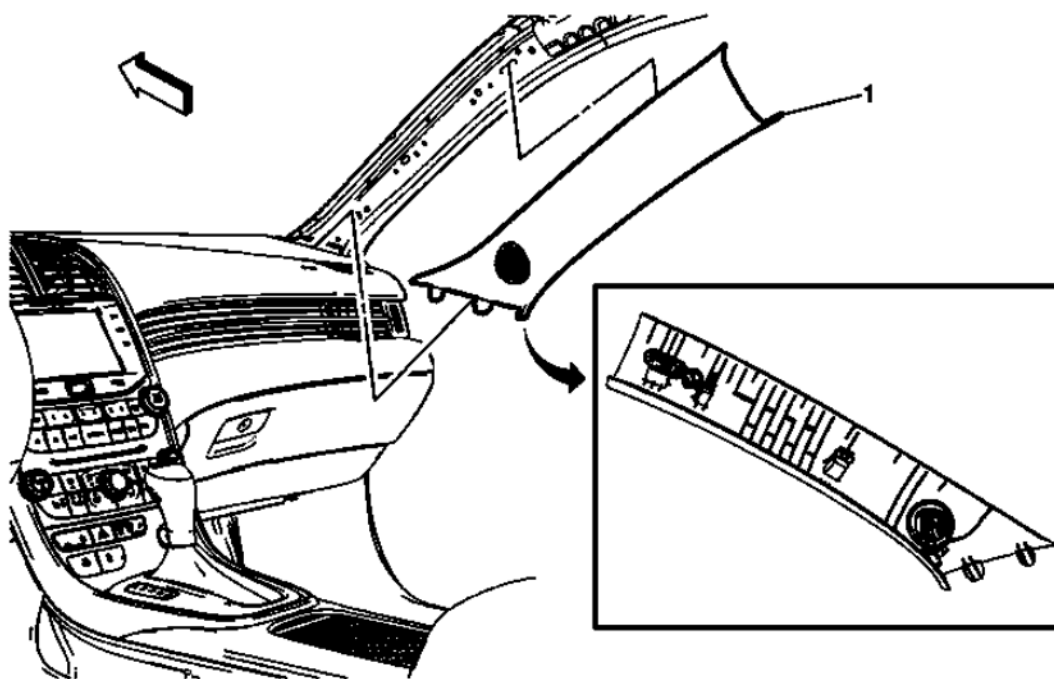


Fig. 19: Windshield Side Garnish Molding
 Courtesy of GENERAL MOTORS COMPANY

Windshield Side Garnish Molding Replacement

Callout	Component Name
Preliminary Procedures Disable the SIR system, if equipped. Refer to <u>SIR Disabling and Enabling</u> .	
1	Windshield Side Garnish Molding Assembly Procedure 1. Tabs must be installed prior to retainers. 2. Tabs to be fully seated in the instrument panel (I/P) trim panel retainer and valance panel. 3. Disconnect the electrical connectors. 4. Ensure the tether is reattached when installed.

CENTER PILLAR UPPER TRIM PANEL REPLACEMENT

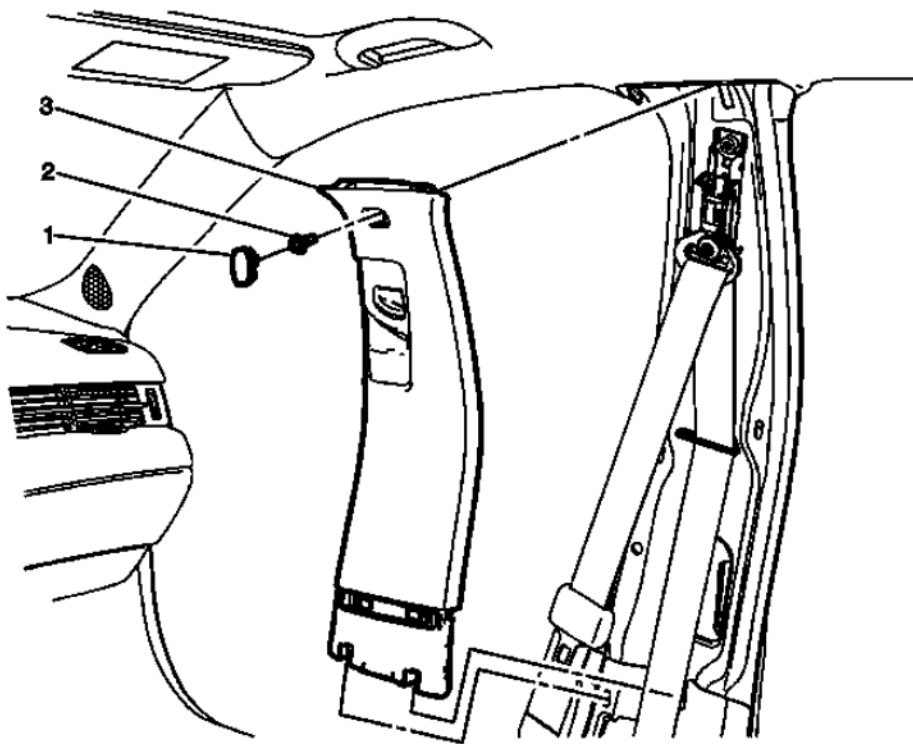


Fig. 20: Center Pillar Upper Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Center Pillar Upper Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the center pillar lower trim panel. Refer to <u>Center Pillar Lower Trim Panel Replacement</u> . 2. Remove the driver or passenger seat belt fastener. Refer to <u>Driver or Passenger Seat Retractor Side Belt Replacement</u> . 3. Move the seat to the full forward position.	
1	Center Pillar Upper Trim Panel Fastener Cap
2	Center Pillar Upper Trim Panel Fastener CAUTION: Refer to <u>Fastener Caution</u> .
3	Center Pillar Upper Trim Panel Assembly Procedure When replacing the center pillar upper trim panel, feed the seat belt through the panel.

CENTER PILLAR LOWER TRIM PANEL REPLACEMENT

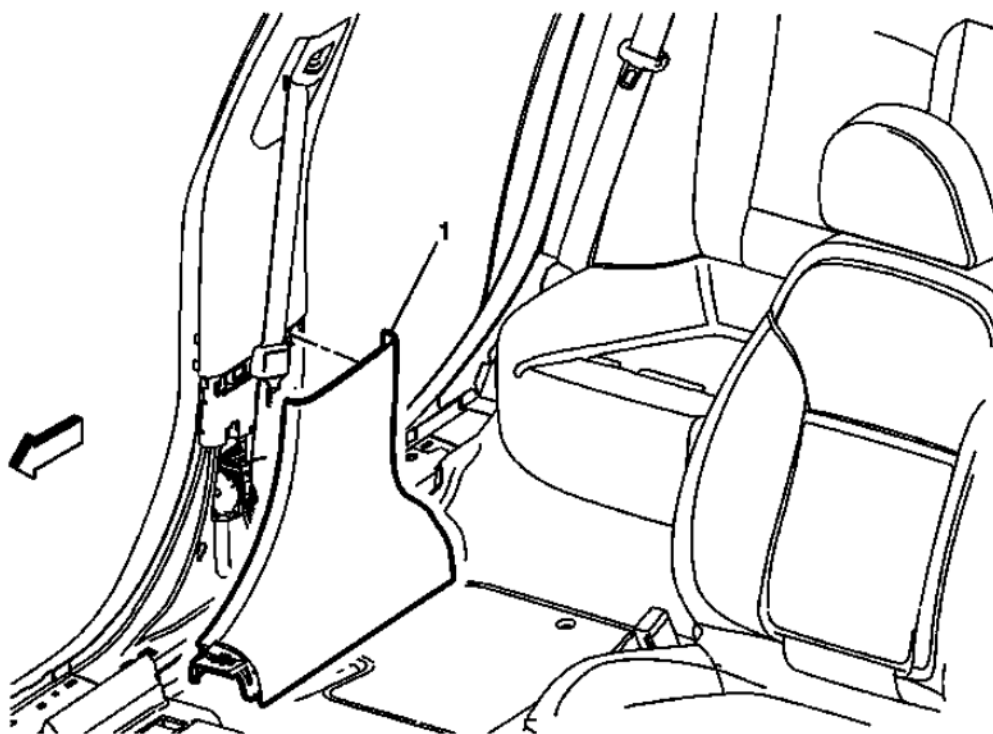


Fig. 21: Center Pillar Lower Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Center Pillar Lower Trim Panel Replacement

Callout	Component Name
Preliminary Procedure	
1. Remove the front side door sill trim plate. Refer to <u>Front Side Door Sill Trim Plate Replacement</u> . 2. Remove the rear side door sill trim plate. Refer to <u>Rear Side Door Sill Trim Plate Replacement</u> . 3. Move seat to full forward position.	
1	Center Pillar Lower Trim Panel Assembly Procedure Ensure the seat belt webbing does not become trapped during installation.

QUARTER TRIM PANEL REPLACEMENT

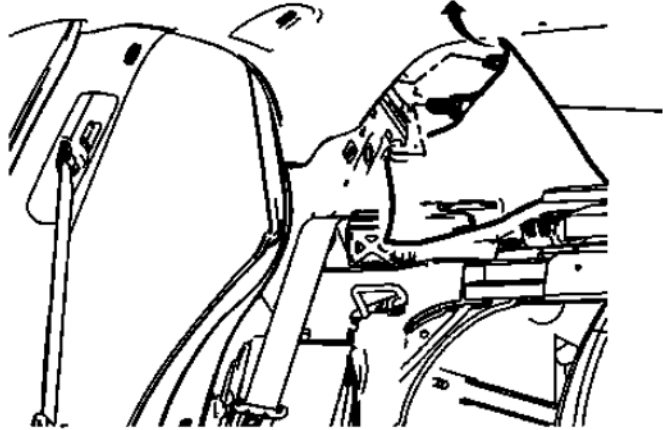
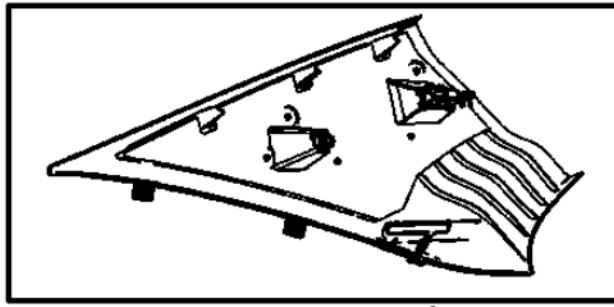


Fig. 22: Quarter Trim Panel
Courtesy of GENERAL MOTORS COMPANY

Quarter Trim Panel Replacement

Callout	Component Name
Preliminary Procedures	
1. Disable the SIR system. Refer to <u>SIR Disabling and Enabling</u>. 2. Remove the rear seat back cushion bolster. Refer to <u>Rear Seat Back Bolster Replacement</u>	
1	Quarter Trim Panel Assembly Procedure 1. Fold down the rear seat back cushion. 2. Route the rear seat retractor side belt through the opening in the quarter trim panel. 3. Pull outward from the top front to release the upper portion of the quarter trim panel, then move upward to release the tabs.

REAR WINDOW PANEL STOWAGE COMPARTMENT COVER REPLACEMENT (WITH HP6)

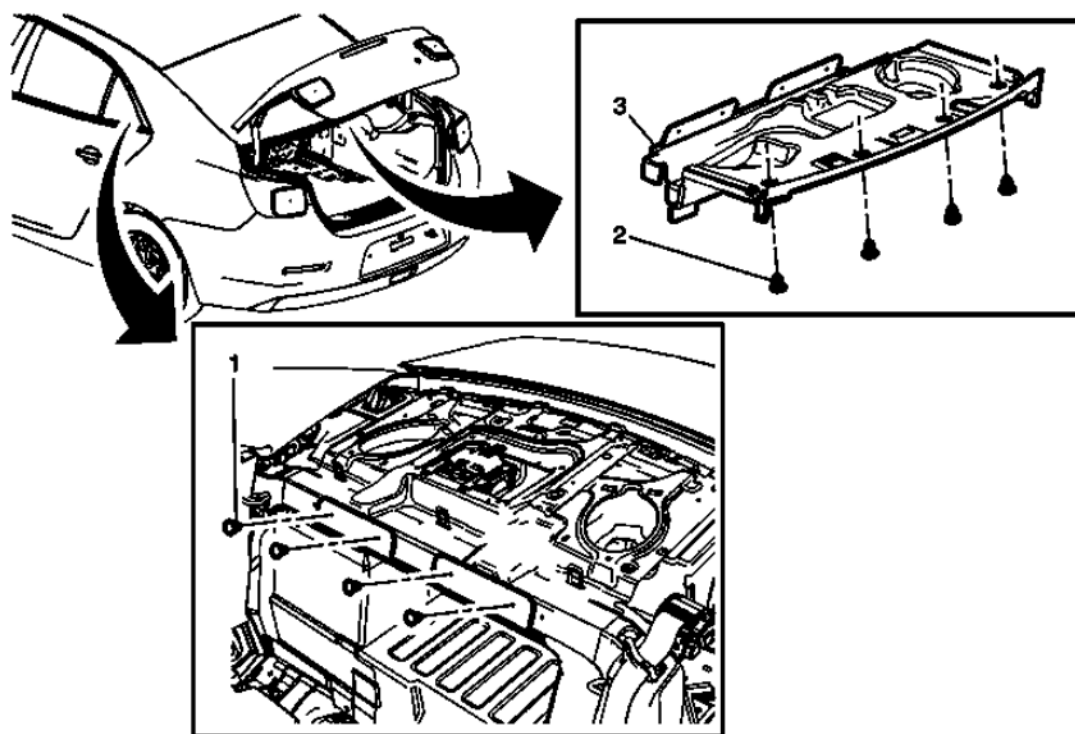


Fig. 23: Rear Window Panel Stowage Compartment Cover (with HP6)

Courtesy of GENERAL MOTORS COMPANY

Rear Window Panel Stowage Compartment Cover Replacement (with HP6)

Callout	Component Name
Preliminary Procedures	
1. Remove the rear window panel trim. Refer to <u>Rear Window Panel Trim Replacement (Without HP6)</u>, <u>Rear Window Panel Trim Replacement (With HP6)</u>. 2. Remove the right and left rear compartment side trim panels HP6. Refer to <u>Rear Compartment Side Trim Panel Replacement (without HP6)</u>, <u>Rear Compartment Side Trim Panel Replacement (HP6, Left Side)</u>, <u>Rear Compartment Side Trim Panel Replacement (HP6, Right Side)</u>.	
1	Rear Window Panel Stowage Compartment Cover Retainers (Qty: 4) Procedure Use a trim removal tool to aid in the removal of the retainers.
2	Rear Window Panel Stowage Compartment Cover Retainers (Qty: 4) Procedures 1. Open rear compartment lid to access retainers. 2. Use a trim removal tool to aid in the removal of the retainers.
3	Rear Window Panel Stowage Compartment Cover Assembly Procedure Disconnect electrical connector, if equipped.

REAR WINDOW PANEL TRIM REPLACEMENT (WITH HP6)

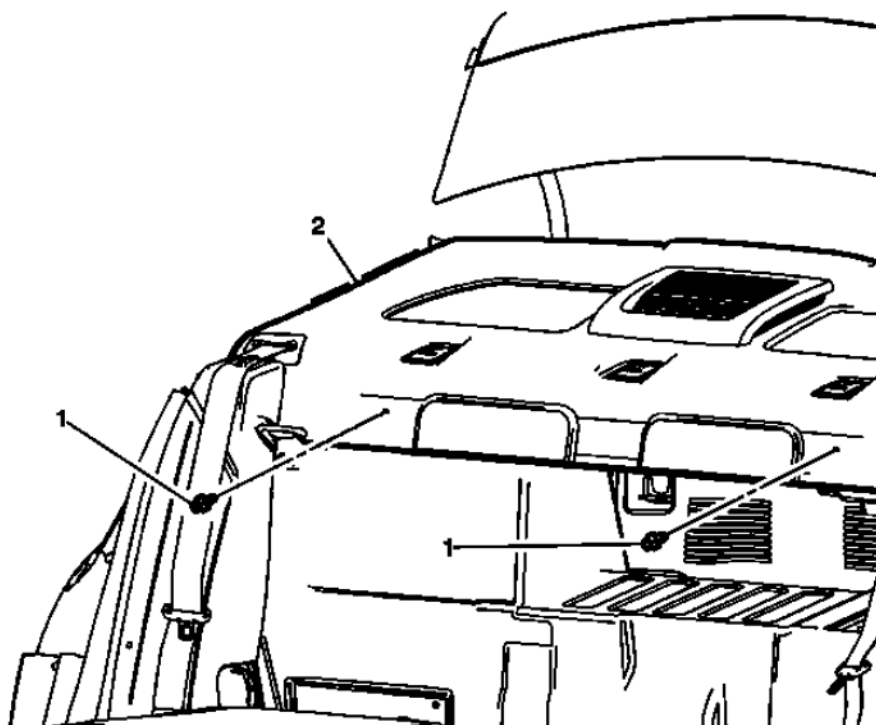


Fig. 24: Rear Window Panel Trim Replacement (With HP6)
Courtesy of GENERAL MOTORS COMPANY

Rear Window Panel Trim Replacement (With HP6)

Callout	Component Name
Preliminary Procedure	
1. Fold down the rear seat back cushions.	
2. Remove the quarter trim panel. Refer to <u>Quarter Trim Panel Replacement</u> .	
1	Rear Window Panel Trim Retainer (Qty: 2)
2	Rear Window Panel Trim Assembly
	Procedure 1. Remove the seat belt guides and slide the belt through the slots in the panel. 2. Disconnect the electrical connector. 3. When replacing the rear window panel trim assembly, transfer all necessary components.

REAR WINDOW PANEL TRIM REPLACEMENT (WITHOUT HP6)

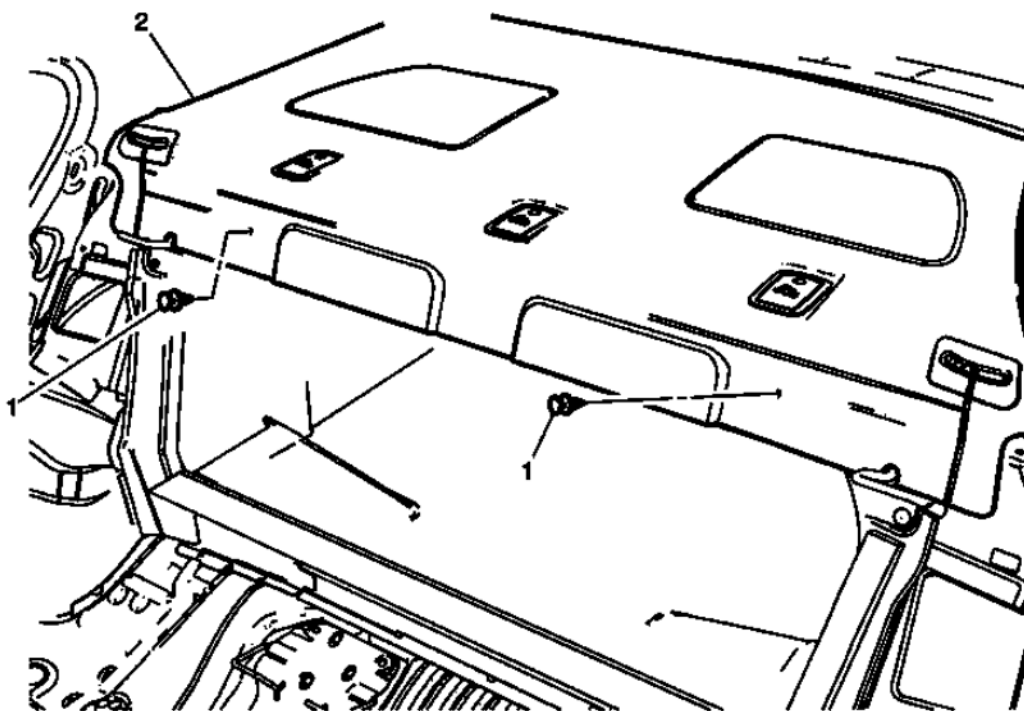


Fig. 25: Rear Window Panel Trim (Without HP6)

Courtesy of GENERAL MOTORS COMPANY

Rear Window Panel Trim Replacement (Without HP6)

Callout	Component Name
Preliminary Procedures	
1. Fold down the rear seats. 2. Remove the quarter trim panel. Refer to <u>Quarter Trim Panel Replacement</u> .	
1	Rear Window Panel Trim Retainer (Qty: 2)
2	Rear Window Panel Trim Assembly
	Procedure 1. Remove the seat belt guides and slide the belt through the slots in the panel. 2. Disconnect the electrical connector.

REAR END TRIM FINISH PANEL REPLACEMENT

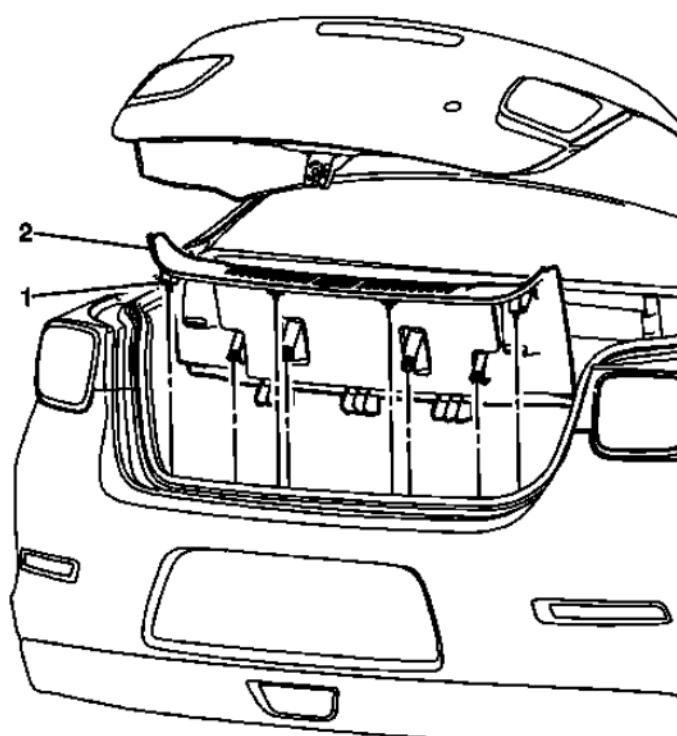


Fig. 26: Rear End Trim Finish Panel
 Courtesy of GENERAL MOTORS COMPANY

Rear End Trim Finish Panel Replacement

Callout	Component Name
1	Rear End Trim Finish Panel Retainer (Qty: 8)
2	Rear End Trim Finish Panel

REAR COMPARTMENT FLOOR PANEL TRIM REPLACEMENT (WITH BATTERY COVER, HP6)

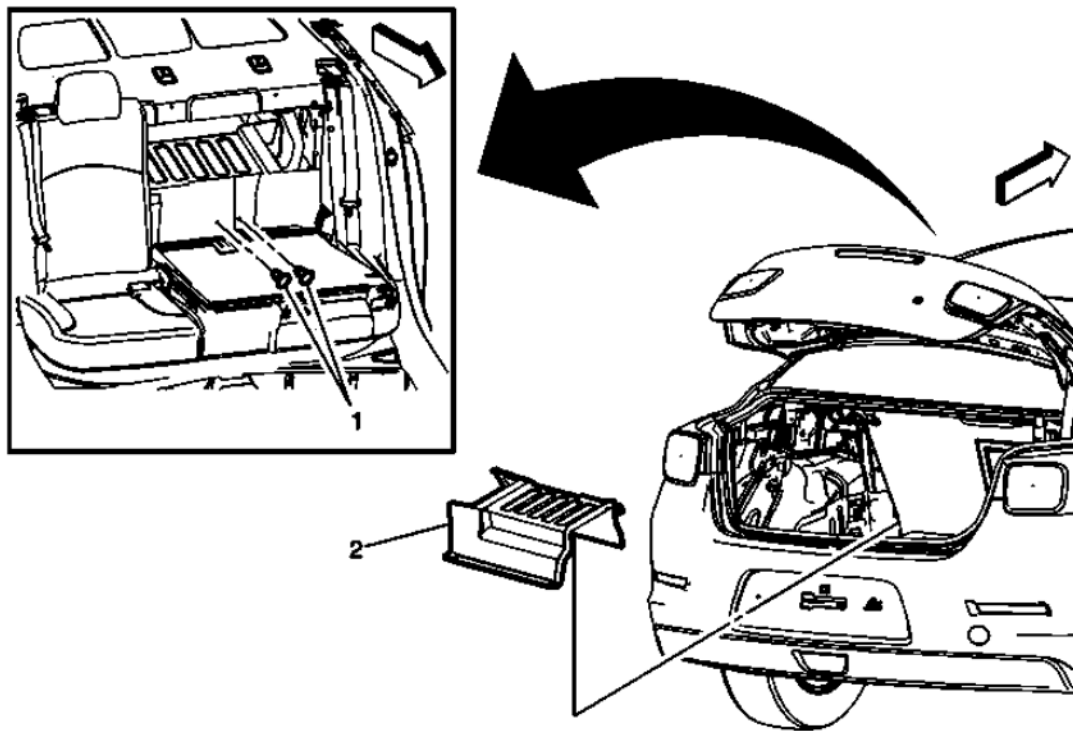


Fig. 27: Rear Compartment Floor Panel Trim (With Battery Cover, HP6)

Courtesy of GENERAL MOTORS COMPANY

Rear Compartment Floor Panel Trim Replacement (With Battery Cover, HP6)

Callout	Component Name
Preliminary Procedure Remove the rear compartment floor panel trim (with blower cover, HP6). Refer to <u>Rear Compartment Floor Panel Trim Replacement (With Battery Cover, HP6)</u> , <u>Rear Compartment Floor Panel Trim Replacement (With Blower Cover, HP6)</u> .	
1	Rear Compartment Side Trim Panel (Push-In) Retainer (Qty: 2) Procedure Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward to access the rear compartment side trim panel (Push-In) retainer.
2	Rear Compartment Floor Panel Trim Assembly (with Battery Cover, HP6)

REAR COMPARTMENT FLOOR PANEL TRIM REPLACEMENT (WITH BLOWER COVER, HP6)

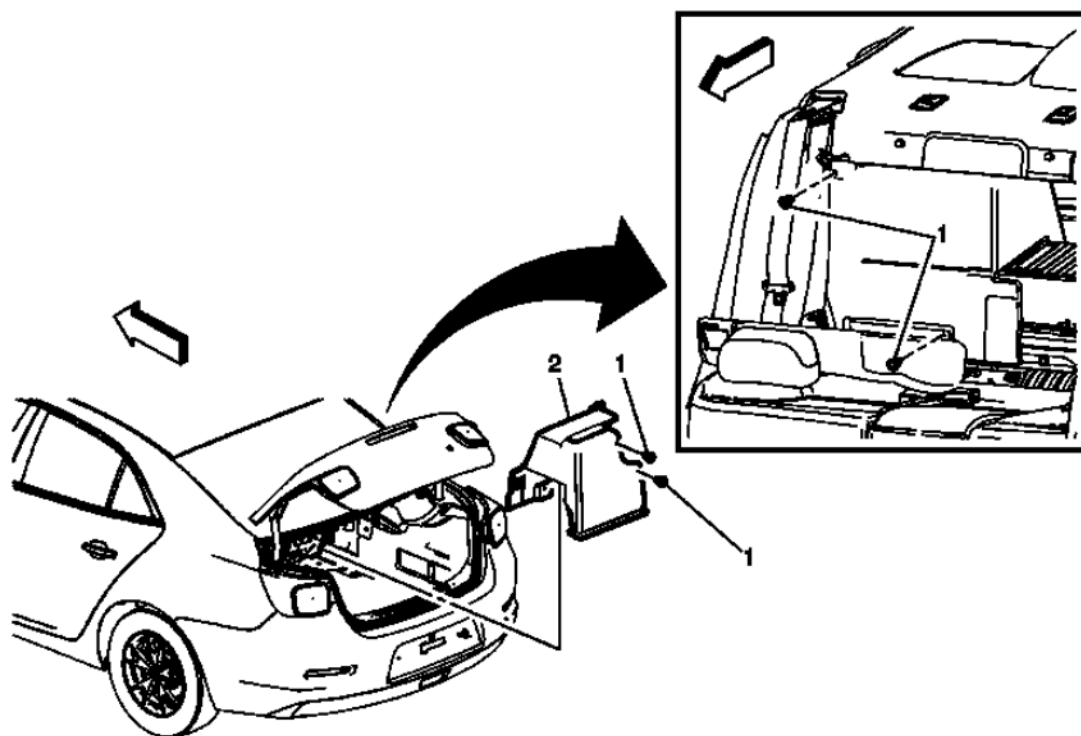


Fig. 28: Rear Compartment Floor Panel Trim (With Blower Cover, HP6)

Courtesy of GENERAL MOTORS COMPANY

Rear Compartment Floor Panel Trim Replacement (With Blower Cover, HP6)

Callout	Component Name
1	Rear Compartment Side Trim Panel (Push-In) Retainer (Qty: 4) Procedure Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward to access two of the (Push-in) retainers. The other two can be accessed through the rear compartment. NOTE: When reinstalling lower interior push-in retainer, lift seat 40-45 degrees above flat to gain sufficient hand room to get retainer seated.
2	Rear Compartment Floor Panel Trim Assembly (with Blower Cover, HP6)

REAR SIDE DOOR TRIM REPLACEMENT

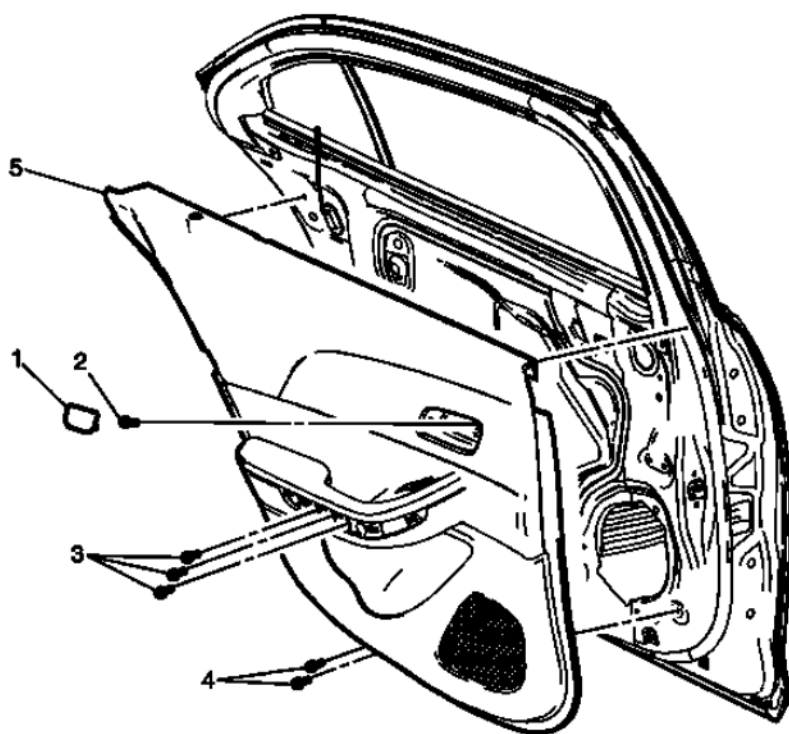


Fig. 29: Rear Side Door Trim
 Courtesy of GENERAL MOTORS COMPANY

Rear Side Door Trim Replacement

Callout	Component Name
Preliminary Procedure Remove the rear side door pull handle cover. Refer to <u>Rear Side Door Pull Handle Cover Replacement</u> .	
1	Rear Side Door Inside Handle Bolt Finish Cap
2	Rear Side Door Inside Handle Fastener CAUTION: Refer to Fastener Caution .
3	Rear Side Door Armrest Pull Cup Fastener (Qty: 3)
4	Rear Side Door Trim Panel Fastener (Qty: 2)
5	Rear Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

REAR COMPARTMENT LID INNER PANEL TRIM REPLACEMENT

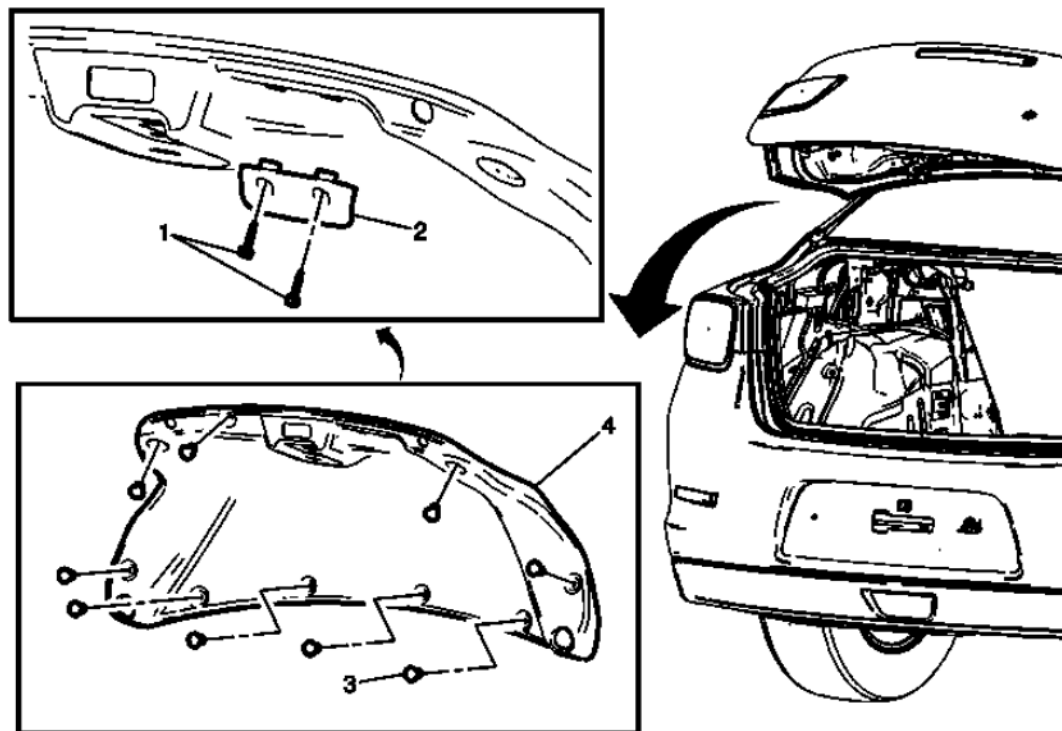


Fig. 30: Rear Compartment Lid Inner Panel Trim
Courtesy of GENERAL MOTORS COMPANY

Rear Compartment Lid Inner Panel Trim Replacement

Callout	Component Name
Preliminary Procedure Remove rear compartment lid latch cover. Refer to <u>Rear Compartment Lid Latch Cover Replacement</u> .	
1	Rear Compartment Lid Inside Handle Fastener (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u> . Procedure Use a small flat-bladed tool to pull and release the rear compartment lid outer bumpers.
2	Rear Compartment Lid Inside Handle
3	Rear Compartment Lid Inner Panel Trim Retainer (Qty: 9)
4	Rear Compartment Lid Inner Panel Trim

REAR COMPARTMENT LID LATCH COVER REPLACEMENT

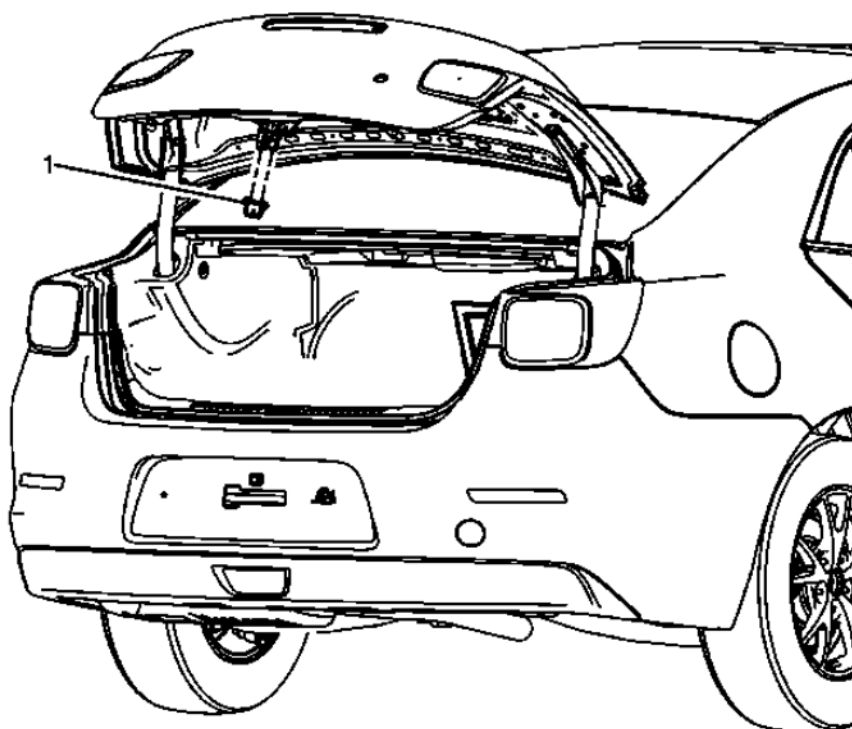


Fig. 31: Rear Compartment Lid Latch Cover
 Courtesy of GENERAL MOTORS COMPANY

Rear Compartment Lid Latch Cover Replacement

Callout	Component Name
1	Rear Compartment Lid Latch Cover NOTE: Use a small flat-bladed tool to pull and release the rear compartment lid latch cover.