


Interior lights , (QQ0),(QQ1),(QQ2)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

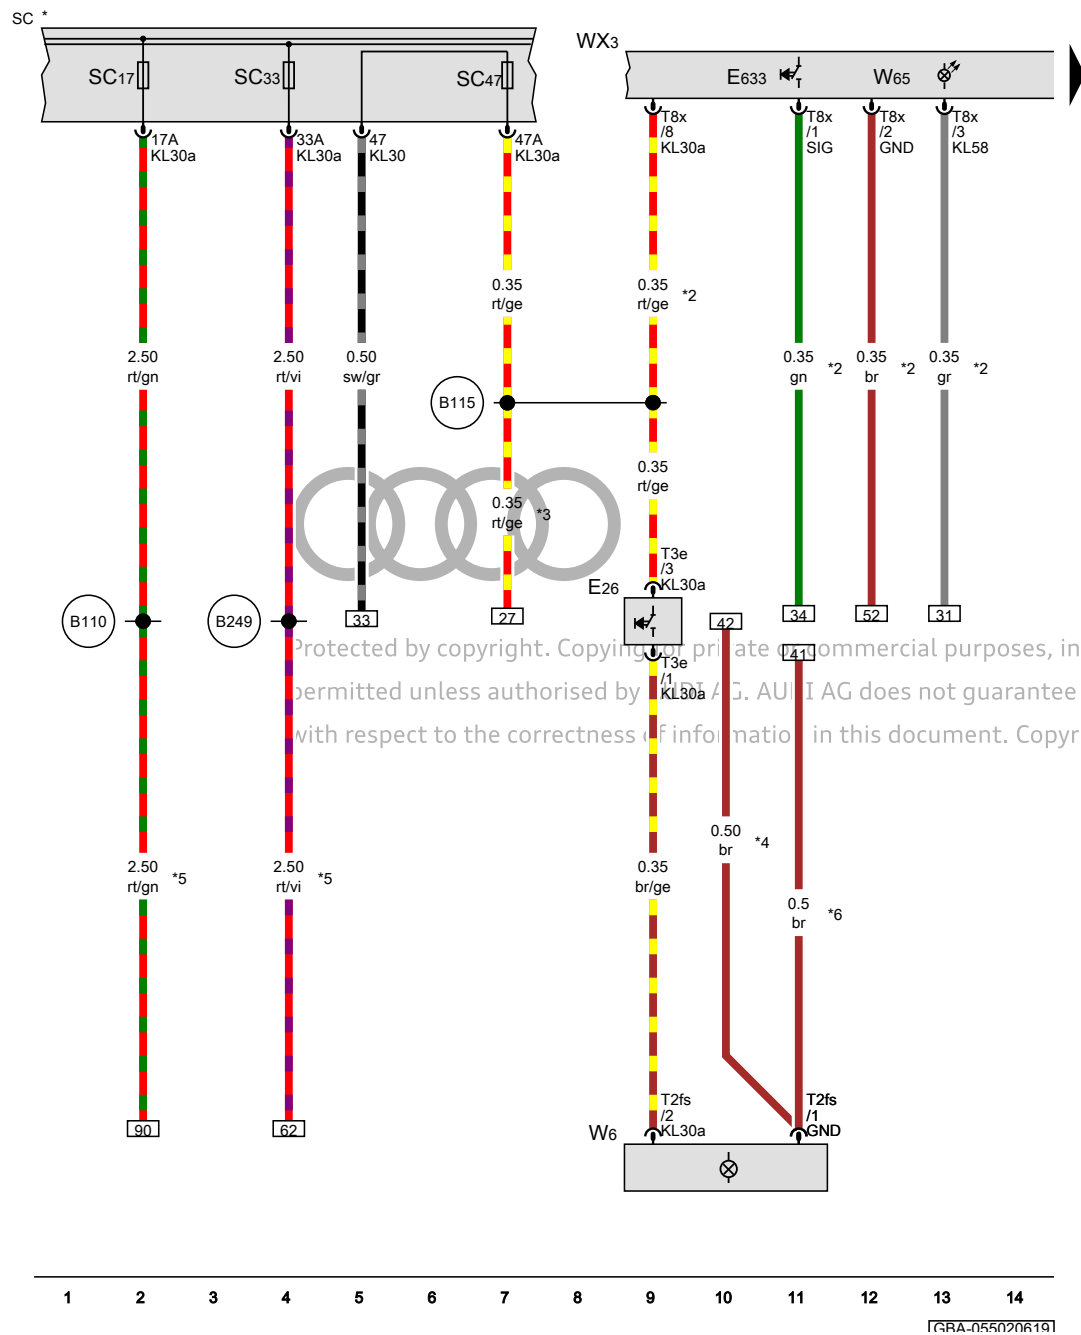


Glove compartment light switch, Fuse holder C, Front roof module, Glove compartment light

- E26 Glove compartment light switch
- E633 Front left reading light button
- SC Fuse holder C
- SC17 Fuse 17 on fuse holder C
- SC33 Fuse 33 on fuse holder C
- SC47 Fuse 47 on fuse holder C
- T2fs 2-pin connector, black
- T3e 3-pin connector, black
- T8x 8-pin connector, black
- WX3 Front roof module
- W6 Glove compartment light
- W65 Front left reading light

- B110 Connection (30, window regulators), in interior wiring harness
- B115 Positive connection, (30, central electrics), in interior wiring harness
- B249 Connection 2 (30, window regulator), in interior wiring harness

- * see applicable current flow diagram for fuses in interior
- *2 For models with no background lighting
- *3 For models with background lighting
- *4 For left-hand drive models
- *5 see applicable current flow diagram
- *6 For right-hand drive models


Rear interior light, Front roof module

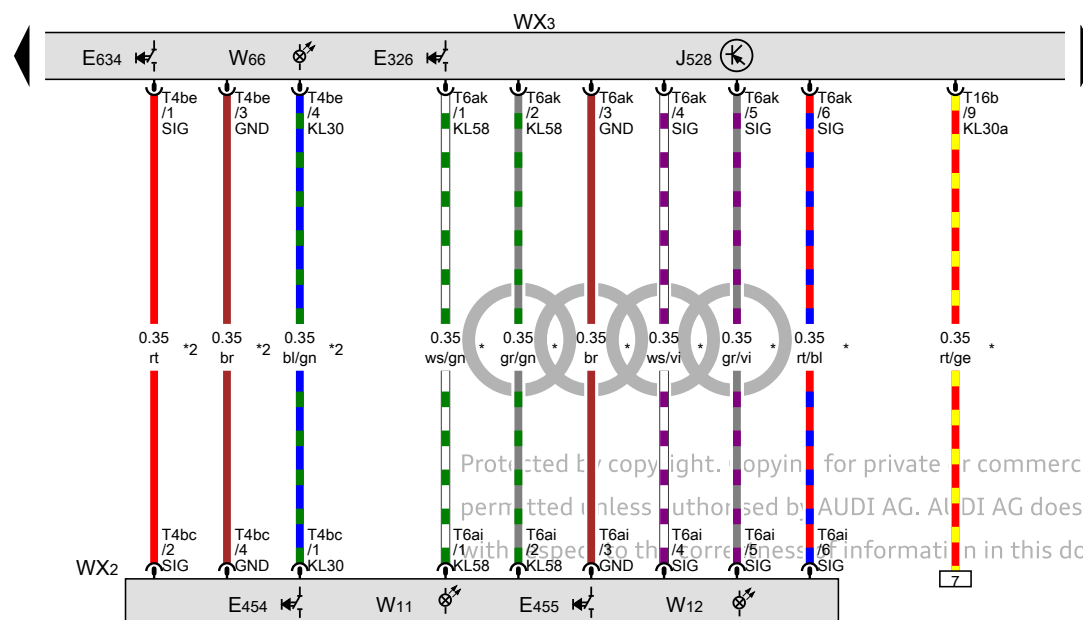

- E326 Front interior light button
- E454 Rear left reading light button
- E455 Rear right reading light button
- E634 Front right reading light button
- J528 Roof electronics control unit
- T4bc 4-pin connector, red
- T4be 4-pin connector, black
- T6ai 6-pin connector, black
- T6ak 6-pin connector, black
- T16b 16-pin connector, brown
- WX2 Rear interior light
- WX3 Front roof module
- W11 Rear left reading light
- W12 Rear right reading light
- W66 Front right reading light
- * For models with background lighting
- *2 For models with no background lighting

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

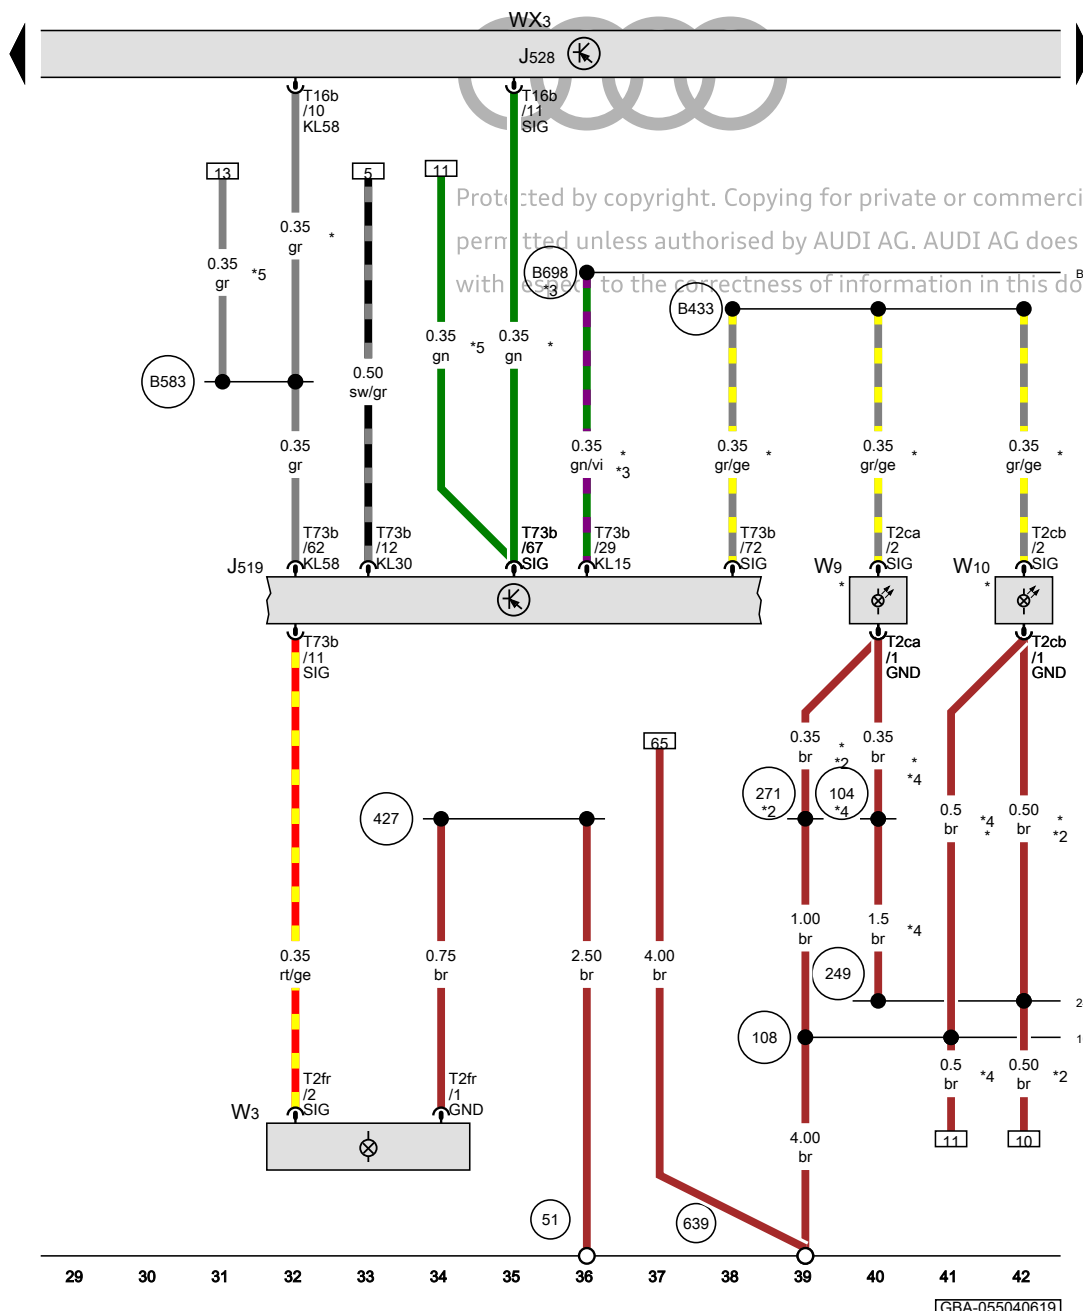


Onboard supply control unit, Luggage compartment light, Front roof module, Left footwell light, Right footwell light

- J519 Onboard supply control unit
- J528 Roof electronics control unit
- T2ca 2-pin connector, black
- T2cb 2-pin connector, black
- T2fr 2-pin connector, black
- T16b 16-pin connector, brown
- T73b 73-pin connector, black
- W3 Luggage compartment light
- WX3 Front roof module
- W9 Left footwell light
- W10 Right footwell light

- 51 Earth point, on right in luggage compartment
- 104 Earth connection in front right wiring harness - sensor earth -
- 108 Earth connection 2, in front left wiring harness
- 249 Earth connection 2, in interior wiring harness
- 271 Earth connection 3, in front wiring harness
- 427 Earth connection 3, in right rear end wiring harness
- 639 Earth point, left A-pillar
- B433 Connection (footwell light), in main wiring harness
- B583 Positive connection (58), in interior wiring harness
- B698 Connection 3 (LIN bus) in main wiring harness

- * For models with background lighting
- *2 For left-hand drive models
- *3 For models with background lighting, version 2
- *4 For right-hand drive models
- *5 For models with no background lighting

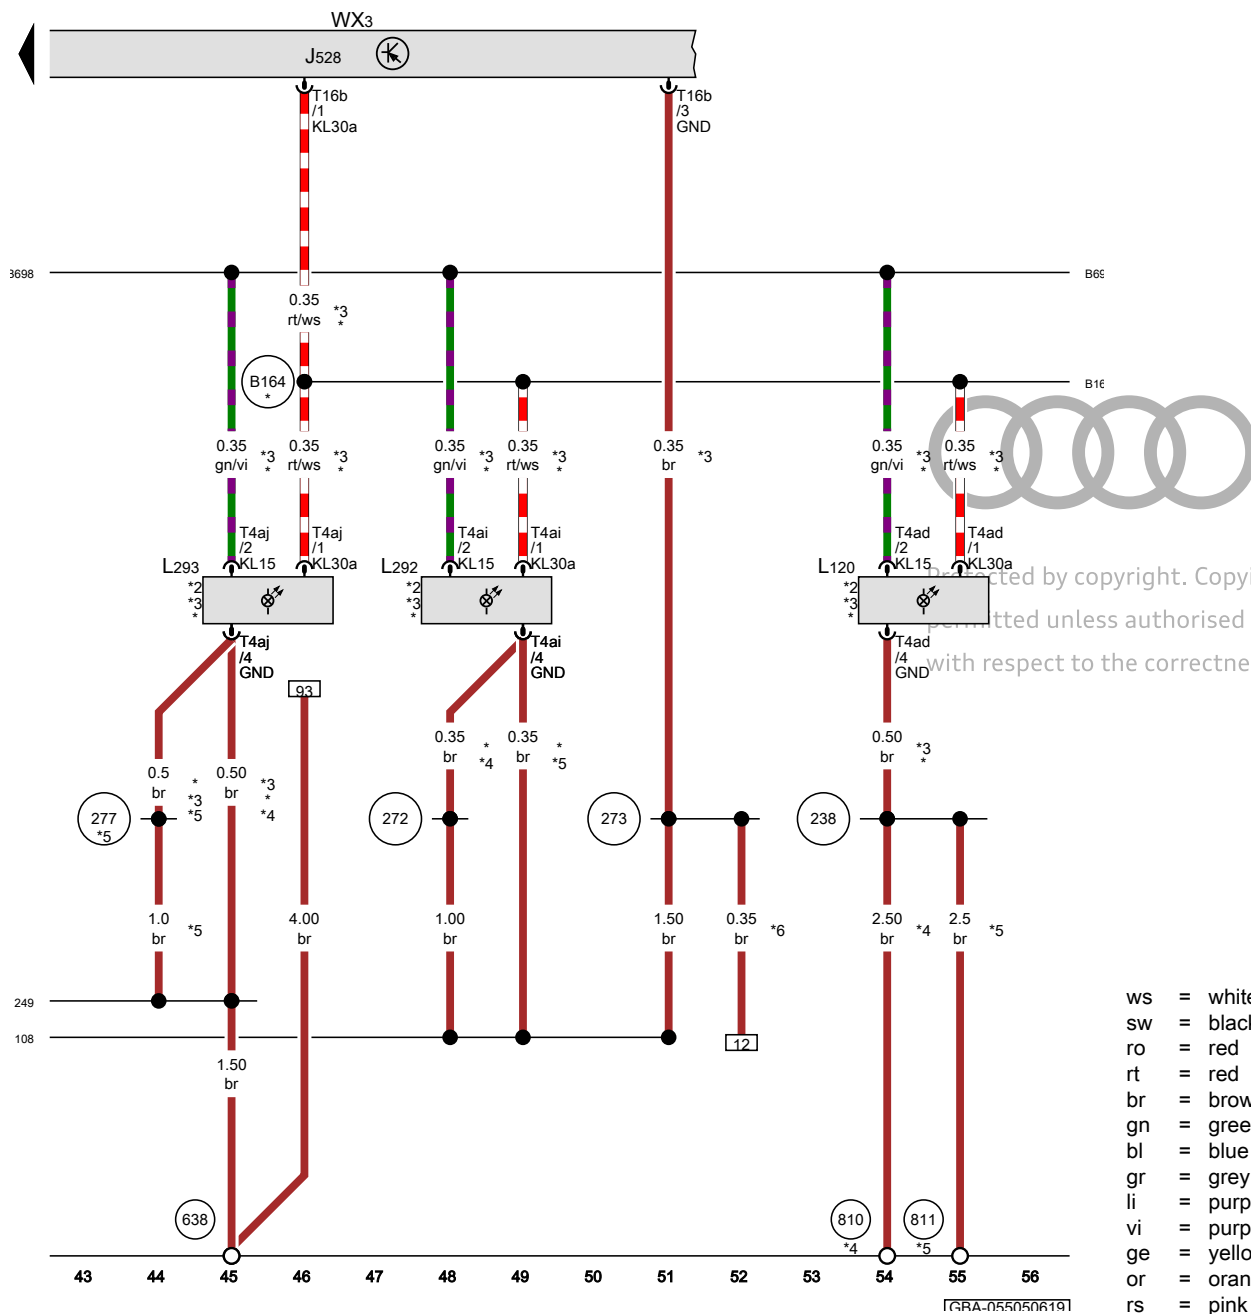


Storage compartment illumination bulb, Light 1 for dashboard background lighting, Light 2 for dashboard background lighting, Front roof module

- J528 Roof electronics control unit
- L120 Storage compartment illumination bulb
- L292 Light 1 for dashboard background lighting
- L293 Light 2 for dashboard background lighting
- T4ad 4-pin connector, black
- T4ai 4-pin connector, black
- T4aj 4-pin connector, brown
- T16b 16-pin connector, brown
- WX3 Front roof module

- 108 Earth connection 2, in front left wiring harness
- 238 Earth connection 1, in interior wiring harness
- 249 Earth connection 2, in interior wiring harness
- 272 Earth connection 4, in front wiring harness
- 273 Earth connection 5, in front wiring harness
- 277 Earth connection 3, in interior wiring harness
- 638 Earth point, on right A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B164 Connection (30, door warning light), in interior warning harness
- B698 Connection 3 (LIN bus) in main wiring harness
- * For models with background lighting, version 2
- *2 Pre-wired component
- *3 For models with background lighting
- *4 For left-hand drive models
- *5 For right-hand drive models
- *6 For models with no background lighting

Driver door control unit, Light for driver side interior door handle illumination

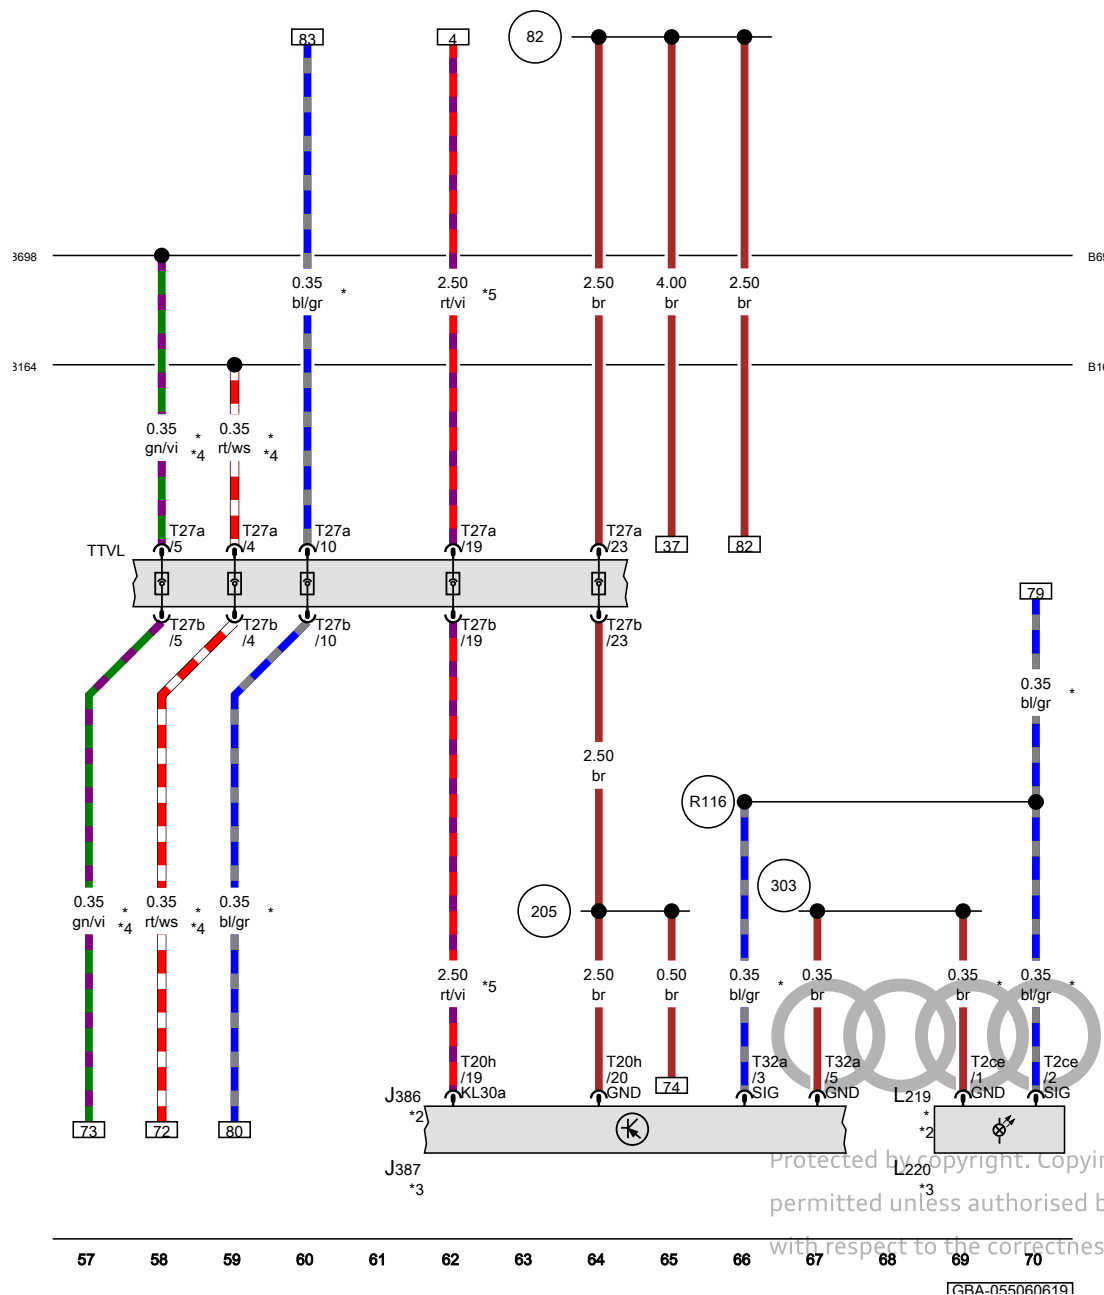

- J386 Driver door control unit
- J387 Front passenger door control unit
- L219 Light for driver side interior door handle illumination
- L220 Light for passenger side interior door handle illumination
- T2ce 2-pin connector, black
- T20h 20-pin connector, white
- T27a 27-pin connector, black
- T27b 27-pin connector, black
- T32a 32-pin connector, blue
- TTVL Coupling point for front left door

- 82 Earth connection 1, in front left wiring harness
- 205 Earth connection, in driver door wiring harness
- 303 Earth connection 3, in drive side door wiring harness
- B164 Connection (30, door warning light), in interior warning harness
- B698 Connection 3 (LIN bus) in main wiring harness
- R116 Positive connection (lighting), in front left door wiring harness

- * For models with background lighting
- *2 For left-hand drive models
- *3 For right-hand drive models
- *4 For models with background lighting, version 2
- *5 see applicable current flow diagram

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Light 1 for rear left door background lighting, Light for driver door background lighting, Light 2 for driver door background lighting

- | | |
|-------|--|
| L201 | Light 1 for rear left door background lighting |
| T2cc | 2-pin connector, black |
| T4ae | 4-pin connector, black |
| T4ag | 4-pin connector, black |
| T4h | 4-pin connector, black |
| T4i | 4-pin connector, black |
| T19a | 19-pin connector, black |
| T19b | 19-pin connector, black |
| TTHL | Coupling point for rear left door |
| TTIVL | Coupling point in front left door |
| W86 | Light for driver door background lighting |
| W87 | Light for passenger door background lighting |
| W97 | Light 2 for driver door background lighting |
| W98 | Light 2 for passenger door background lighting |


- 207 Earth connection, in rear left door wiring harness
- 267 Earth connection 2, in drive side door wiring harness
- B164 Connection (30, door warning light), in interior warning harness
- B698 Connection 3 (LIN bus) in main wiring harness
- R95 Connection 2 in driver side door wiring harness
- R96 Connection 3 in driver side door wiring harness

- *1 For models with background lighting
- *2 For models with background lighting, version 2
- *3 For left-hand drive models
- *4 For right-hand drive models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

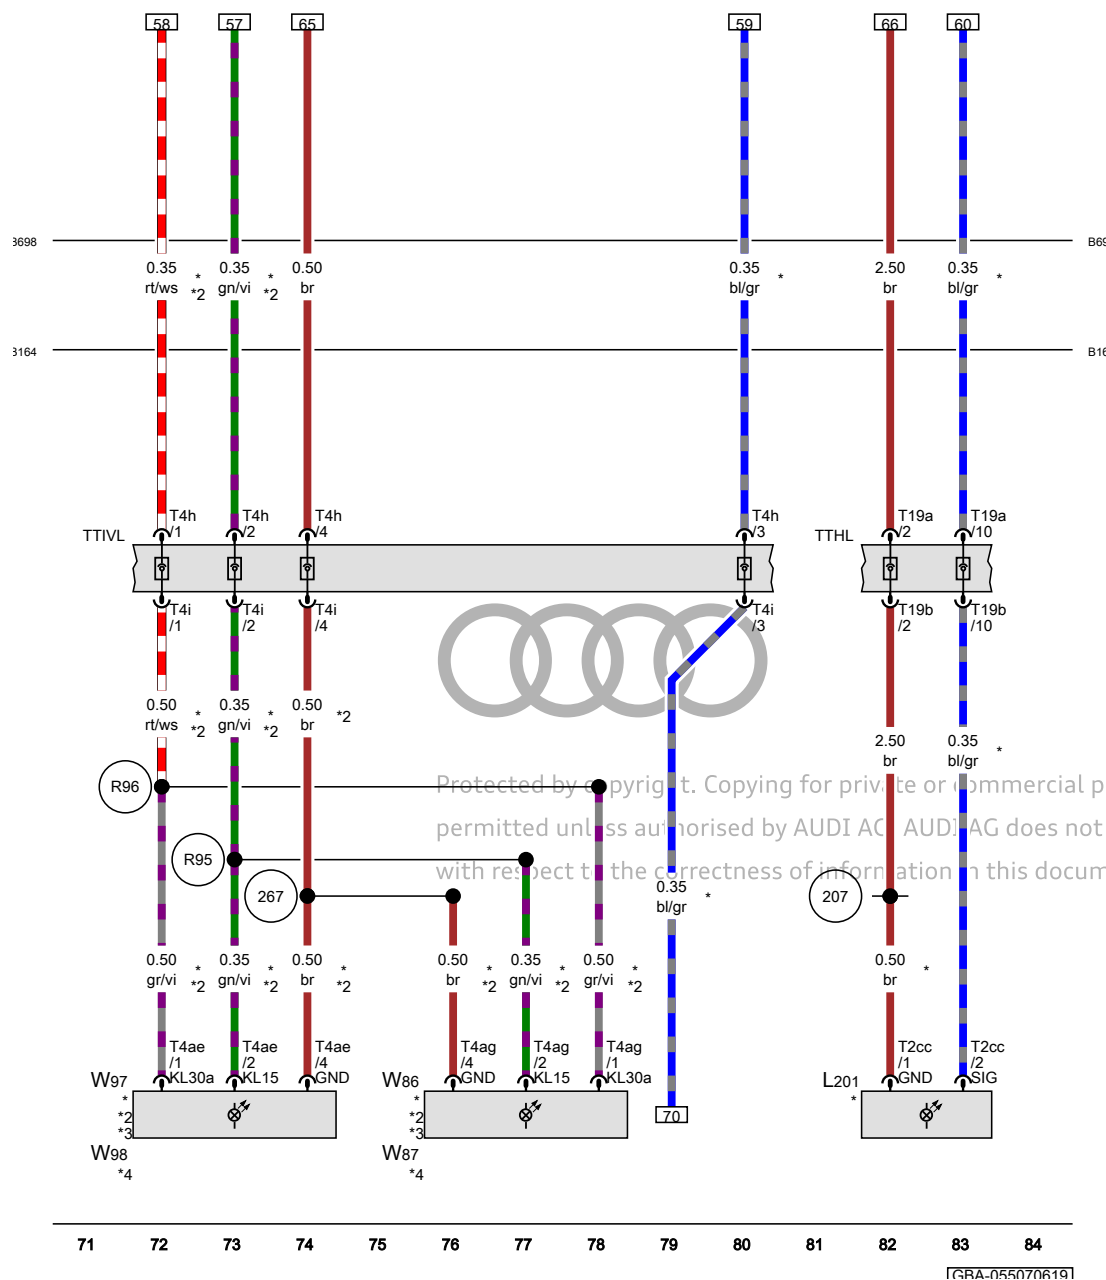

Front passenger door control unit, Light for passenger side interior door handle illumination

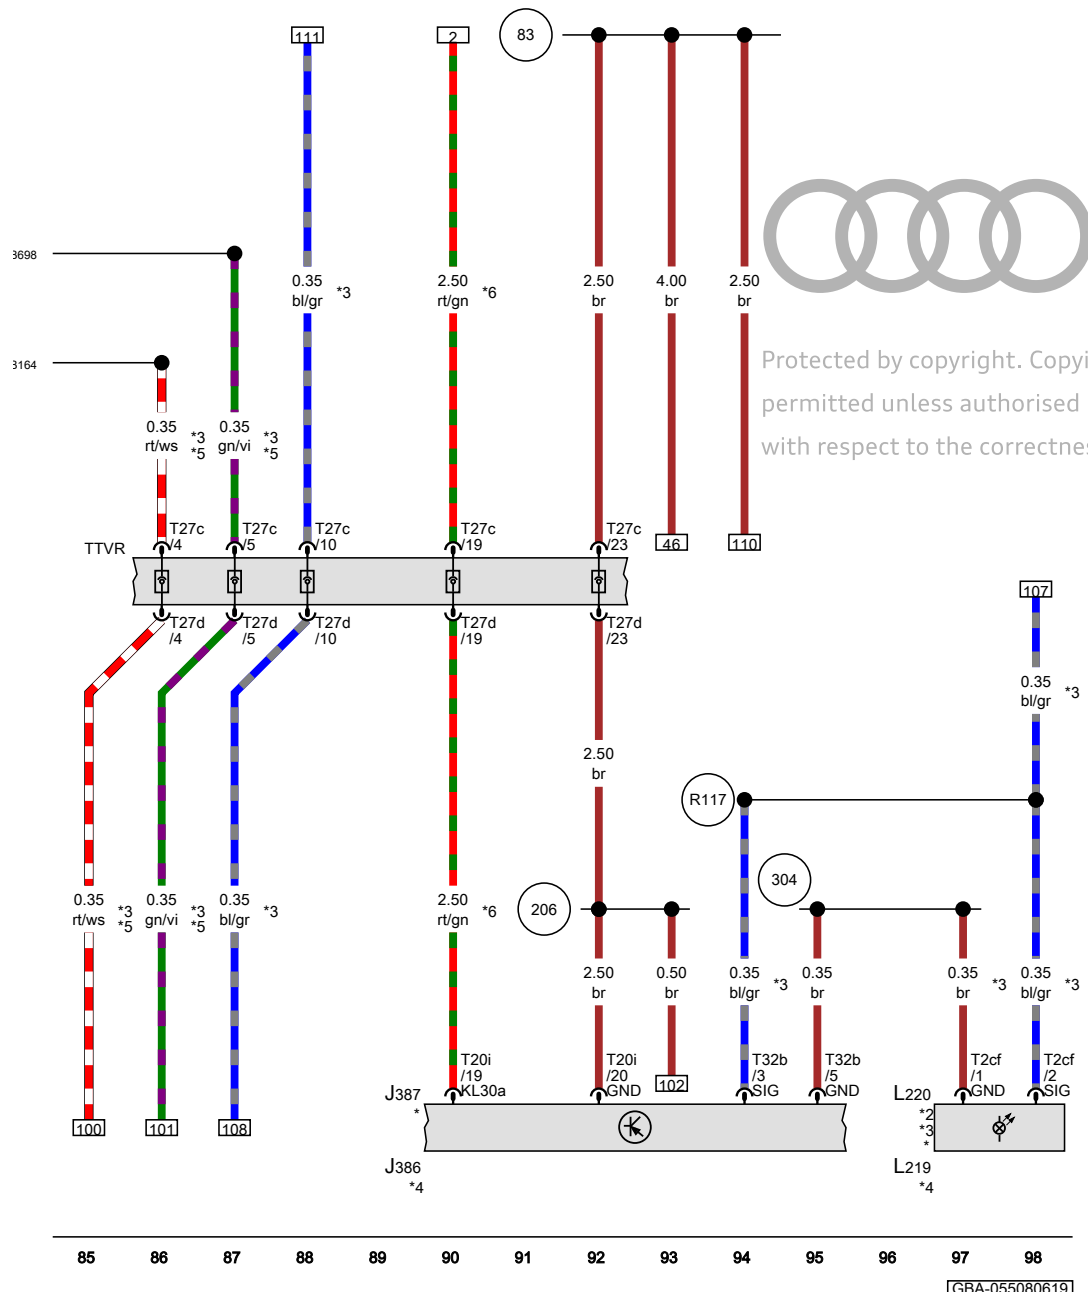

- J386 Driver door control unit
- J387 Front passenger door control unit
- L219 Light for driver side interior door handle illumination
- L220 Light for passenger side interior door handle illumination
- T2cf 2-pin connector, black
- T20i 20-pin connector, white
- T27c 27-pin connector, black
- T27d 27-pin connector, black
- T32b 32-pin connector, blue
- TTVR Coupling point for front right door

- 83 Earth connection 1, in front right wiring harness
- 206 Earth connection, in front passenger door wiring harness
- 304 Earth connection 3, in front passenger side door wiring harness
- B164 Connection (30, door warning light), in interior warning harness
- B698 Connection 3 (LIN bus) in main wiring harness
- R117 Positive connection (lighting), in front right door wiring harness

- * For left-hand drive models
- *2 Pre-wired component
- *3 For models with background lighting
- *4 For right-hand drive models
- *5 For models with background lighting, version 2
- *6 see applicable current flow diagram


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Light 1 for rear right door background lighting, Light for passenger door background lighting, Light 2 for passenger door background lighting

- L202 Light 1 for rear right door background lighting
- T2cd 2-pin connector, black
- T4af 4-pin connector, black
- T4ah 4-pin connector, black
- T4j 4-pin connector, black
- T4k 4-pin connector, black
- T19c 19-pin connector, black
- T19d 19-pin connector, black
- TTHR Coupling point for rear right door
- TTIVR Coupling point in front right door
- W86 Light for driver door background lighting
- W87 Light for passenger door background lighting
- W97 Light 2 for driver door background lighting
- W98 Light 2 for passenger door background lighting

- 208 Earth connection, in rear right door wiring harness
- 268 Earth connection 2, in front passenger side door wiring harness
- R98 Connection 1 in front passenger side door wiring harness
- R99 Connection 2 in front passenger side door wiring harness
- * Pre-wired component
- *2 For models with background lighting
- *3 For models with background lighting, version 2
- *4 For left-hand drive models
- *5 For right-hand drive models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

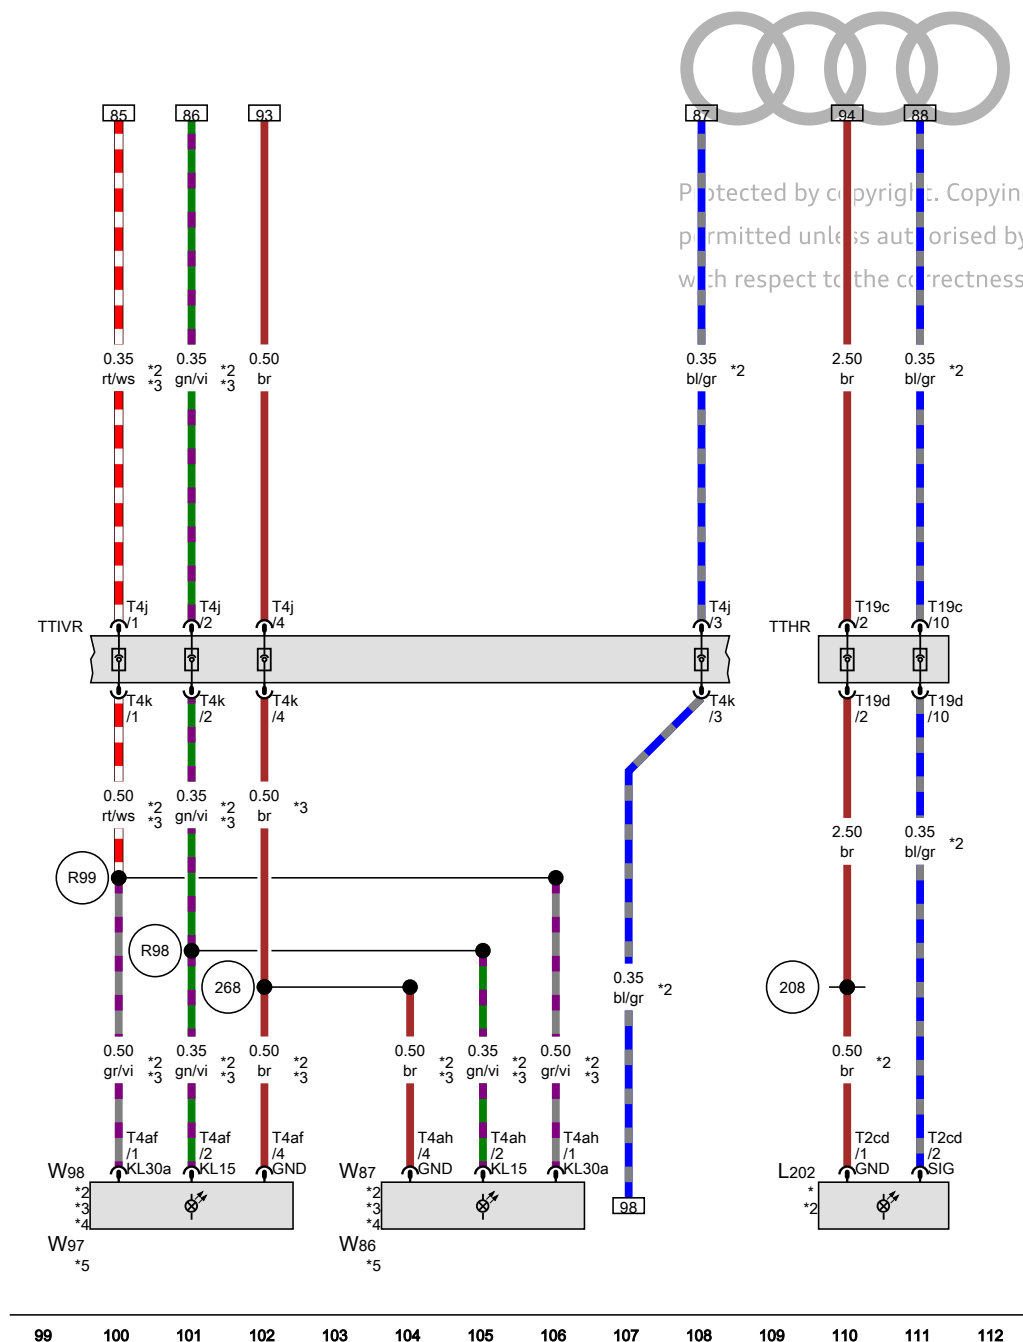

16BA-0550906101