

1 Current flow diagram - general information

- ◆ ⇒ [“1.1 Signal names”, page 1](#)
- ◆ ⇒ [“1.2 Wires”, page 10](#)
- ◆ ⇒ [“1.3 Fuse colours”, page 12](#)

1.1 Signal names

- ◆ ⇒ [“1.1.1 Signal names, from 2017”, page 1](#)
- ◆ ⇒ [“1.1.2 Signal names - DIN standard 72552”, page 5](#)
- ◆ ⇒ [“1.1.3 Signal names - supplement”, page 9](#)

1.1.1 Signal names, from 2017



Note



 
Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

These signal names will be used from 2017. You will find the old terminal designations in the chapters
 ⇒ [“1.1.2 Signal names - DIN standard 72552”, page 5](#) and ⇒ [“1.1.3 Signal names - supplement”, page 9](#)

Signal names	Explanation
(S)	Shield for aerial or video wires
A~	Alternating current phase A
AIR	Air wire
ANT	Aerial wire
ANT-	Aerial wire, negative
ANT+	Aerial wire, positive
B~	Alternating current phase B
C~	Alternating current phase C
CAN-H	CAN bus, high
CAN-L	CAN bus, low
CRASH	Crash signal
CTRL	Activation for actuators
CTRL-	Activation, negative (for actuators)
CTRL+	Activation, positive (for actuators)
CTRL1-	Engine/motor activation 1, negative


Signal names	Explanation
CTRL1+	Engine/motor activation 1, positive
CTRL2-	Engine/motor activation 2, negative
CTRL2+	Engine/motor activation 2, positive
DATA	Data wire
DATA-	Data wire, negative
DATA+	Data wire, positive
DIAG	Diagnosis wire
ETH-	Ethernet data wire, negative
ETH+	Ethernet data wire, positive
FxR-H	FlexRay bus, high
FxR-L	FlexRay bus, low
GETH-	Ethernet data wire, negative (gigabit)
GETH+	Ethernet data wire, positive (gigabit)
GND	Earth or negative (also virtual earth)
H2O	Water
HV-	High voltage, negative
HV+	High voltage, positive
HV-U~	High voltage, U-phase
HV-V~	High voltage, V-phase
HV-W~	High voltage, W-phase
K-Diag	Bidirectional K-wire (diagnosis)
KL1	Terminal 1 - Ignition coil, ignition contact breaker or starter unit
KL15	Terminal 15 - Output terminal of ignition switch or ignition/glow enable
KL15a	Terminal 15a - Ignition, protected
KL30	Terminal 30 - Terminal directly from battery
KL30a	Terminal 30a - Battery positive, protected
KL32	Terminal 32 - Electric motors, terminal for return wire
KL33	Terminal 33 - Electric motors, terminal for main connection
KL33L	Terminal 33L - Electric motors, anticlockwise rotation
KL33R	Terminal 33R - Electric motors, clockwise rotation
KL4	Terminal 4 - Terminal on ignition coil and on ignition distributor (high voltage)
KL40	Terminal 40 - Input terminal directly from 48V battery
KL49	Terminal 49 - Input terminal indicator relay (pulse generators)

Signal names	Explanation
KL49a	Terminal 49a - Output terminal on indicator relay, input terminal on turn signal switch for flashing pulses
KL50	Terminal 50 - Starter control
KL50a	Terminal 50a - Battery switch-over relay, output for starter control
KL50b	Terminal 50b - Starter control for parallel operation
KL50e	Terminal 50e - Starter inhibitor relay, input
KL50f	Terminal 50f - Start inhibitor relay, output
KL53	Terminal 53 - Wiper motor, input
KL53a	Terminal 53a - Wipers, end position
KL53b	Terminal 53b - Wipers, shunt winding
KL53c	Terminal 53c - Windscreen washer pump
KL53e	Terminal 53e - Wipers, brake winding
KL54	Terminal 54 - Brake lights on trailer connection equipment
KL55	Terminal 55 - Front fog lights
KL56	Terminal 56 - Headlights
KL56a	Terminal 56a - Main beam and main beam control
KL56b	Terminal 56b - Dipped beam
KL58	Terminal 58 - Side lights, tail lights, number plate lights and instrument lighting
KL58d	Terminal 58d - Terminal for variable instrument lighting
KL58L	Terminal 58L - Side lights, tail lights, number plate lights and instrument lighting, left
KL58R	Terminal 58R - Side lights, tail lights, number plate lights and instrument lighting, right
KL59	Terminal 59 - Terminal for alternating voltage (alternator, light switch or rectifier)
KL71	Terminal 71 - Input for multi-tone horn switching device (horn)
KL71a	Terminal 71a - Output (bass)
KL71b	Terminal 71b - Output (treble)
KL75	Terminal 75 - Radio, cigarette lighter
KL76	Terminal 76 - Loudspeakers
KL77	Terminal 77 - Terminal for door valve control
KL85	Terminal 85 - Switching relay, drive (output; winding end)
KL86	Terminal 86 - Switching relay, drive (output; winding start)
KL87	Terminal 87 - Switching relay, input terminal for break contact/changeover contact
KL87a	Terminal 87a - Switching relay, first output terminal or terminal 87, protected
KL87b	Terminal 87b - Switching relay, second output terminal

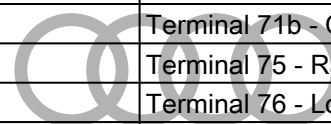

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Audi AG.

Signal names	Explanation
L1~	Mains phase L1
L2~	Mains phase L2
L3~	Mains phase L3
L-Diag	Unidirectional L-wire (diagnosis)
LIN	LIN bus
LIN1...x	LIN bus numbered 1, 2, 3....etc.
MOST	MOST bus (fibre optic cable)
N	Neutral wire N
PE	Protective earth
PILOT	Pilot line
SIG	Signal
SIG-	Negative signal
SIG+	Positive signal
SIG+C	Positive signal, cosine
SIG+S	Positive signal, sine
SIG15	Signal terminal 15 (status signal)
SIG50	Signal terminal 50 (status signal)
SIG54	Signal terminal 54 (status signal)
SIG-C	Negative signal, cosine
SIG-H	Signal, high
SIG-L	Signal, low
SIG-n	Rotational speed signal
SIG-Rx	Receiver wire
SIG-S	Positive signal, sine
SIG-Tx	Transceiver wire (transmitter/receiver)
SIG-v	Speed signal
U~	Three-phase alternating current, phase U
V~	Three-phase alternating current, phase V
VS	Supply voltage, general (without special voltage level)
VS3V	3-volt supply voltage
VS5V	5-volt supply voltage
W~	Three-phase alternating current, phase W

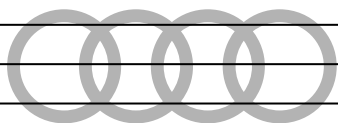 

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.1.2 Signal names - DIN standard 72552

- ◆ Terminal 1 - Ignition coil, ignition distributor – low voltage
- ◆ Terminal 1a - To ignition contact breaker I (ignition distributor with two separate circuits)
- ◆ Terminal 1b - To ignition contact breaker II (ignition distributor with two separate circuits)
- ◆ Terminal 4 - Ignition coil, ignition distributor – high voltage
- ◆ Terminal 4a - From ignition coil I (ignition distributor with two separate circuits)
- ◆ Terminal 4b - From ignition coil II (ignition distributor with two separate circuits)
- ◆ Terminal 15 - Switched positive to battery (output of ignition/driving switch)
- ◆ Terminal 15a - Output on ballast resistor to ignition coil and starter
- ◆ Terminal 17 - Glow plug and starter switch – start
- ◆ Terminal 19 - Glow plug and starter switch – preglow
- ◆ Terminal 30 - Input from positive terminal (+) on battery, series/parallel switch-over relay 12/24 V, direct
- ◆ Terminal 30a - Input from positive terminal (+) on battery II
- ◆ Terminal 31 - Negative battery terminal or earth, direct
- ◆ Terminal 31a - Return wire to negative terminal on battery II (series/parallel switch-over relay 12/24 V)
- ◆ Terminal 31b - Return wire to negative terminal on battery or earth via switch or relay (switched negative)
- ◆ Terminal 31c - Return wire to negative terminal on battery I (series/parallel switch-over relay 12/24 V)
- ◆ Terminal 50 - Starter control (direct)

Electric motors

- ◆ Terminal 32 - Return wire
- ◆ Terminal 33 - Main connection
- ◆ Terminal 33a - Limit switch-off
- ◆ Terminal 33b - Shunt field
- ◆ Terminal 33f - For second, lower speed range

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Terminal 33g - For third, lower speed range
- ◆ Terminal 33h - For fourth, lower speed range
- ◆ Terminal 33L - Anticlockwise rotation
- ◆ Terminal 33R - Clockwise rotation

Starter

- ◆ Terminal 45 - Separate starting relay, output; starter, input (primary current); two starters – parallel operation C – starting relay for engagement current
- ◆ Terminal 45a - Output, starter I, input, starter I and II
- ◆ Terminal 45b - Output, starter II
- ◆ Terminal 48 - Terminal on starter and start repeating relay for monitoring starting procedure

Turn signal (indicator relay)

- ◆ Terminal 49 - Input
- ◆ Terminal 49a - Output
- ◆ Terminal 49b - Output, second circuit
- ◆ Terminal 49c - Output, third circuit



Starter control

- ◆ Terminal 50 - Starter control (direct)
- ◆ Terminal 50a - Switch-over relay – output for starter control
- ◆ Terminal 50b - Starting relay for sequential control of the engagement current during parallel operation of two starters
- ◆ Terminal 50c - Input on starting relay for starter I
- ◆ Terminal 50d - Input on starting relay for starter II
- ◆ Terminal 50e - Input starter inhibitor relay
- ◆ Terminal 50f - Output starter inhibitor relay
- ◆ Terminal 50g - Input start repeating relay
- ◆ Terminal 50h - Output start repeating relay

Wiper motors

- ◆ Terminal 53 - Wiper motor, input (+)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the express written permission of Audi AG. Audi AG assumes no liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Terminal 53a - Wipers (+), limit switch-off
- ◆ Terminal 53b - Wipers (shunt winding)
- ◆ Terminal 53c - Electric pump for windscreen washer
- ◆ Terminal 53e - Wipers (brake winding)
- ◆ Terminal 53l - Wiper motor with permanent magnet and third brush (high speed)

Lighting

- ◆ Terminal 55 - Fog lights
- ◆ Terminal 56 - Headlights
- ◆ Terminal 56a - Main beam and main beam warning lamp
- ◆ Terminal 56b - Dipped beam
- ◆ Terminal 56d - Headlight flasher
- ◆ Terminal 57a - Parking light
- ◆ Terminal 57L - Left parking light
- ◆ Terminal 57R - Right parking light
- ◆ Terminal 58 - Side lights, number plate lights, instrument lighting, tail lights
- ◆ Terminal 58b - Brightness control
- ◆ Terminal 58d - Brightness control
- ◆ Terminal 58L - Left number plate light
- ◆ Terminal 58R - Right number plate light

Alternators and voltage regulators

- ◆ Terminal 61 - Alternator charging light
- ◆ Terminal B+ - Battery positive
- ◆ Terminal B- - Battery negative
- ◆ Terminal D+ - Dynamo positive
- ◆ Terminal D- - Dynamo negative
- ◆ Terminal DF - Dynamo field winding, terminal DF1 dynamo field winding 1



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Terminal DF2 - Dynamo field winding 2
- ◆ Terminal U, terminal V, terminal W - Three-phase terminals
- ◆ Terminal 75 - Radio, cigarette lighter
- ◆ Terminal 76 - Loudspeakers



Switches

Break contacts (NC) and changeover contacts

- ◆ Terminal 81 - Input
- ◆ Terminal 81a - Output 1, break contact side
- ◆ Terminal 81b - Output 2, break contact side

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Multiple position switch

- ◆ Terminal 83 - Input
- ◆ Terminal 83a - Output, position 1
- ◆ Terminal 83b - Output, position 2
- ◆ Terminal 83L - Output, position left
- ◆ Terminal 83R - Output, position right

Relays/current relays

- ◆ Terminal 84 - Input, drive and relay contact
- ◆ Terminal 84a - Output, drive
- ◆ Terminal 84b - Output, relay contact

Alternators and voltage regulators

- ◆ Terminal 85 - Output, drive (end of winding, negative or earth)
- ◆ Terminal 86 - Input, drive (start of winding)
- ◆ Terminal 86a - Start of winding or first winding
- ◆ Terminal 86b - Winding tap or second winding

Relay contact for break contact (NC) and changeover contact

- ◆ Terminal 87 - Input Also used for engine/motor current supply
- ◆ Terminal 87a - Output 1 (break contact side)

- ◆ Terminal 87b - Output 2, 87c Output 3
- ◆ Terminal 87z - Input 1
- ◆ Terminal 87y - Input 2
- ◆ Terminal 87x - Input 3

Relay contact for make contact and changeover contact

- ◆ Terminal 88 - Input
- ◆ Terminal 88a - Output 1
- ◆ Terminal 88b - Output 2
- ◆ Terminal 88c - Output 3
- ◆ Terminal 88z - Input 1
- ◆ Terminal 88y - Input 2
- ◆ Terminal 88x - Input 3

Turn signal (indicator relay)

- ◆ Terminal C - Indicator lamp 1
- ◆ Terminal C2 - Indicator lamp 2
- ◆ Terminal C0 - Main connection for check circuits made by turn signal switch and broken by turn signal
- ◆ Terminal C3 - Indicator lamp 3 (e.g. for second trailer)
- ◆ Terminal L - Left turn signals
- ◆ Terminal R - Right turn signals

Back to overview ⇒ [page 1](#)

1.1.3 Signal names - supplement

If no suitable DIN standard code is available, terminal designations will be written in English, for example:

- ◆ CAN_H/CAN_L - Wires for CAN bus High and Low
- ◆ FlexRay +/FlexRay - - FlexRay data bus
- ◆ +V - Output supply voltage from electronic control unit
- ◆ 0V - Reference voltage from electronic control unit (not connected to body earth, terminal 31)

with respect to the correctness of information in this document. Copyright by AUDI AG.

- ◆ Signal - data wire

Back to overview ⇒ [page 1](#)

1.2 Wires

- ◆ ⇒ [“1.2.1 Wire cross-section”, page 10](#)

- ◆ ⇒ [“1.2.2 Wire colour”, page 11](#)

- ◆ ⇒ [“1.2.3 Coaxial cable”, page 11](#)

1.2.1 Wire cross-section



Note

Only for markets where AWG (American Wire Gauge) measurements are used.

Wire cross-section in mm ²	AWG
0.35	22
0.50	20
0.75	18
1.0	17
1.5	15
2.5	13
4.0	11
6.0	9
16.0	5
25.0	3
35.0	2

[Back to overview](#) ⇒ [page 1](#)

1.2.2 Wire colour



Note



For current flow diagrams where the English colour code is used.

German abbreviation	English abbreviation	Explanation
bl	U	blue
br	N	brown
ge	Y	yellow
gn	G	green
ro	R	red
sw	B	black
li	P	purple
ws	W	white
gr	S	grey
or	O	orange
rs	K	pink

[Back to overview](#) ⇒ [page 1](#)

 
1.2.3 Coaxial cable

A - Inner conductor (solid wire or stranded type)

B - Dielectric/insulation layer

C - Shield (braided or foil type)

D - Jacket

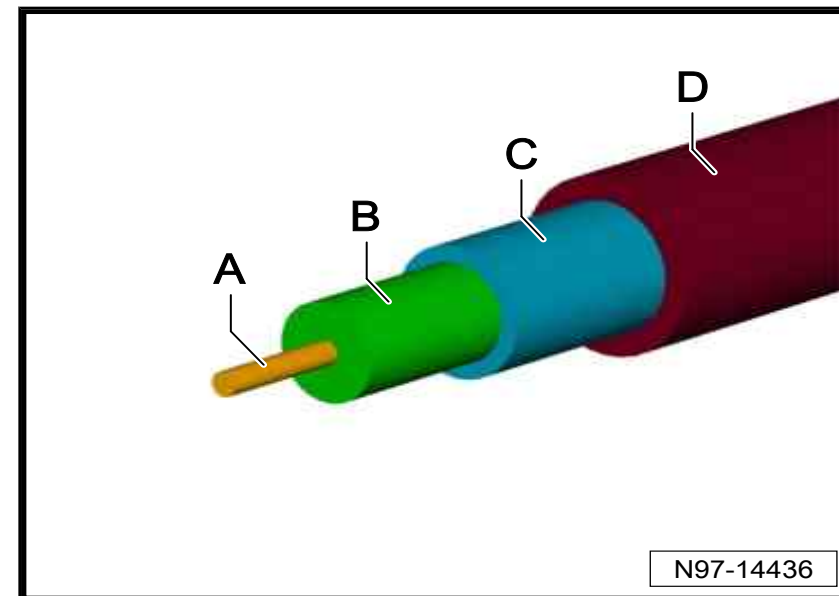

Back to overview ⇒ [page 1](#)

1.3 Fuse colours

◆ ⇒ ["1.3.1 Fuse colours for mini type", page 13](#)

◆ ⇒ ["1.3.2 Fuse colours for ATO type", page 13](#)

◆ ⇒ ["1.3.3 Fuse colours for MAXI type", page 14](#)

 
◆ ⇒ ["1.3.4 Fuse colours for JCase type", page 15](#)

◆ ⇒ ["1.3.5 Fuse colours for LP JCase type", page 15](#)

For technical reasons, the application of this information for commercial purposes, in part or in whole, is not permitted. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.3.1 Fuse colours for mini type

Mini type fuse

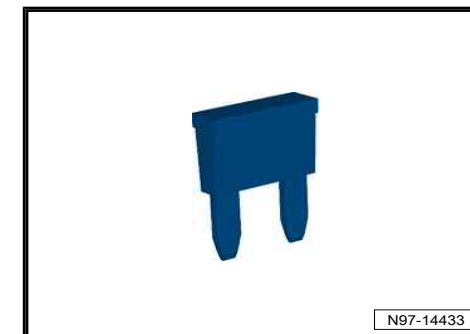


Nominal value	Fuse colour
1 A	black
2 A	grey
3 A	violet
4 A	pink
5 A	light brown
7.5 A	brown
10 A	red
15 A	light blue
20 A	yellow

Back to overview [⇒ page 1](#)

1.3.2 Fuse colours for ATO type

ATO type fuse

 Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

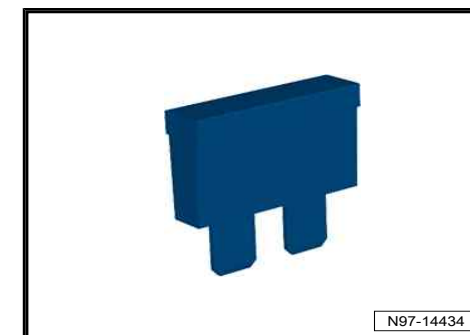

Nominal value	Fuse colour
1 A	black


Nominal value	Fuse colour
2 A	grey
3 A	violet
4 A	pink
5 A	light brown
7.5 A	brown
10 A	red
15 A	light blue
20 A	yellow
25 A	white
30 A	light green
35 A	blue-green
40 A	orange

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview](#) ⇒ [page 1](#)

1.3.3 Fuse colours for MAXI type

 Maxi type fuse

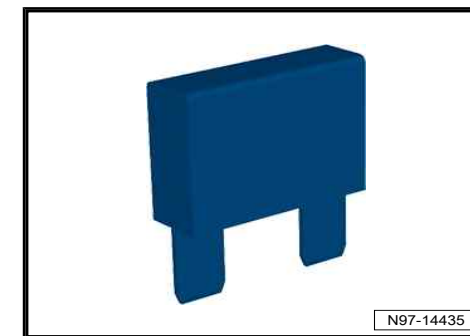


Nominal value	Fuse colour
20 A	yellow
30 A	light green
40 A	orange
50 A	red
60 A	light blue
80 A	white

[Back to overview ⇒ page 1](#)

1.3.4 Fuse colours for JCase type

JCase type fuse

 Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

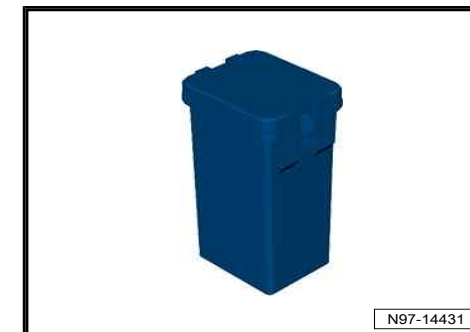


Nominal value	Fuse colour
20 A	blue
25 A	white
30 A	pink
40 A	green
50 A	red
60 A	yellow

[Back to overview ⇒ page 1](#)

1.3.5 Fuse colours for LP JCase type

 LP JCase type fuse

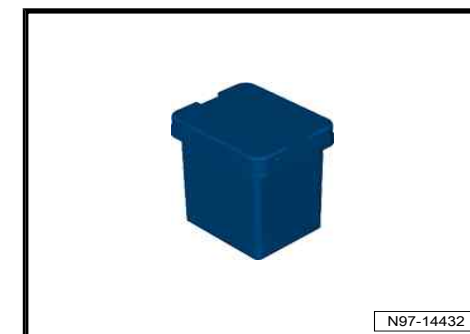

Nominal value	Fuse colour
20 A	blue
25 A	white
30 A	pink

Nominal value	Fuse colour
40 A	green
50 A	red
60 A	yellow

Back to overview ⇒ [page 1](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.