

ABBREVIATIONS

The following abbreviations are used in this manual.

Abbreviation	Term
A	Ampere
ABS	Anti-lock Brake System
A/C	Air Conditioning
ACC	Accessory
ACT	Actuator
AVM	Around View Monitoring
BAT	Battery
BCM	Body Control Module
CAN	Controller Area Network
CVT	Continuously Variable Transmission
CYL	Cylinder
DC	Direct Current
DR	Door
DCT	Dual Clutch Transmission
ECM	Engine Control Module
EPS	Electronic Power Steering
ESP	Electronic Stability Program
FL	Front Left
FR	Front Right
FRT	Front
GND	Ground
GPS	Global Position System
HVAC	Heating Ventilation and Air Conditioning
ICM	Instrument Cluster Control Module
IGN	Ignition
ILLUM	Illumination
INT	Intermittent
IP	Instrument Panel
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LH	Left-Hand
MIR	Mirror
MT	Manual Transmission
PEPS	Passive Entry & Passive Start
RH	Right-Hand

Abbreviation	Term
RL	Rear Left
RLY	Relay
RR	Rear Right/Rear
SRS	Supplemental Restraint System
ST	Start
SW	Switch
TCU	Transmission Control Unit
USB	Universal Serial Bus
V	Volt
W/, w/	With
WIN	Window
W/O, w/o	Without

