

## AUTOMATIC STOP/START DISABLE

### General Motors

## AUTO STOP/START DISABLE

**NOTE:** General Motors calls this function, Auto Stop or Engine Stop-Start System.

### DISABLE CONDITIONS

On General Motors vehicles equipped with the auto stop/start feature, there may or may not be an auto stop/start off button. For vehicles without the button, any or some of the following conditions may prevent the engine from automatically stopping while parked:

- Transmission is in P position
- Engine compartment hood is open
- Driver's seat belt is unlatched
- Driver's door is open
- Windshield defroster is on
- A/C is set to Manual and is running at Max.

### DISABLE BUTTON

Vehicles with the auto stop/start off button, press the button to switch the system off. The button may illuminate. Deactivation using the button lasts only one key cycle. Press the button again to restore auto stop/start function.



**Fig. 1: Typical Auto Stop/Start Off Button**  
Courtesy of GM

