

HIACE

ELECTRICAL WIRING DIAGRAM

SYSTEM CIRCUITS

	Page
ABS	218
Audio System	248
Automatic Light Control	156
Back-Up Light	140
Charging (2TR-FE, 2KD-FTV)	86
Charging (5L-E)	88
Cigarette Lighter	236
Clock	250
Combination Meter	250
Cooling Fan (2TR-FE, 2KD-FTV)	256
Cooling Fan (5L-E)	262
DLC3	122
Door Closer	188
Door Lock Control (LHD)	176
Door Lock Control (RHD)	182
ECT and A/T Indicator (2KD-FTV)	210
ECT and A/T Indicator (2TR-FE)	204
Engine Control (2KD-FTV)	104
Engine Control (2TR-FE)	92
Engine Control (5L-E)	114
Front Air Conditioner (2TR-FE, 2KD-FTV)	268
Front Air Conditioner (5L-E)	278
Front Fog Light	128
Front Wiper and Washer	162
Headlight	124
Headlight Beam Level Control	160
Horn	238
Ignition	90
Illumination	146
Interior Light	150
Key Reminder	230
Light Reminder	230
Multiplex Communication System (CAN)	288
Power Source	78
Power Window (LHD)	168
Power Window (RHD)	172
PTC Heater (2KD-FTV)	282
Rear Air Conditioner	290
Rear Fog Light	130
Rear Window Defogger	240
Rear Wiper and Washer	166
Remote Control Mirror	234
Seat Belt Warning	232
Shift Lock	228
SRS	223
Starting	82
Stop Light	138

	Page
Taillight	142
TOYOTA Parking Assist (Clearance Sonar)	242
Turn Signal and Hazard Warning Light	134
Wireless Door Lock Control (LHD)	192
Wireless Door Lock Control (RHD)	198