



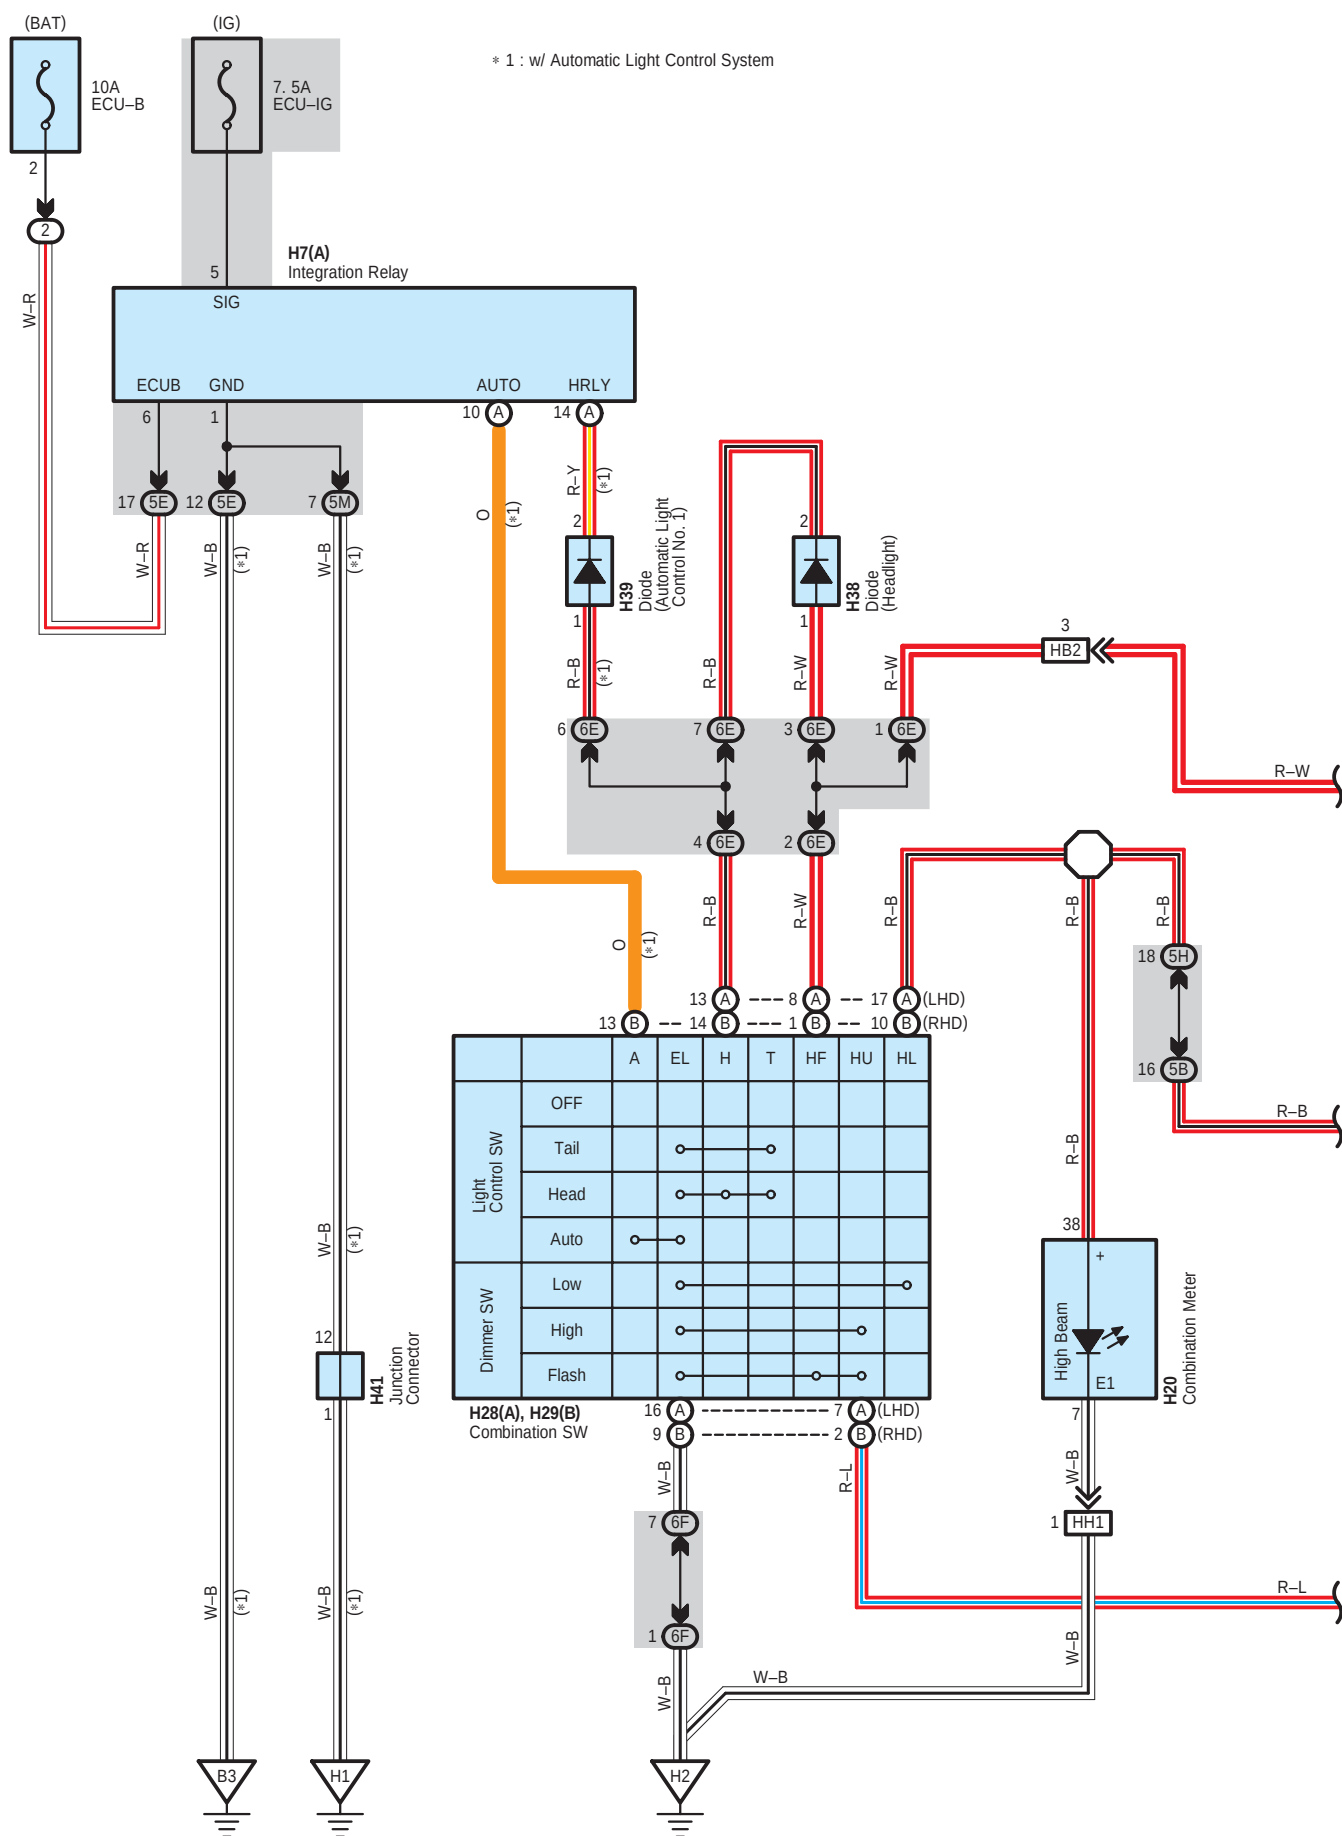

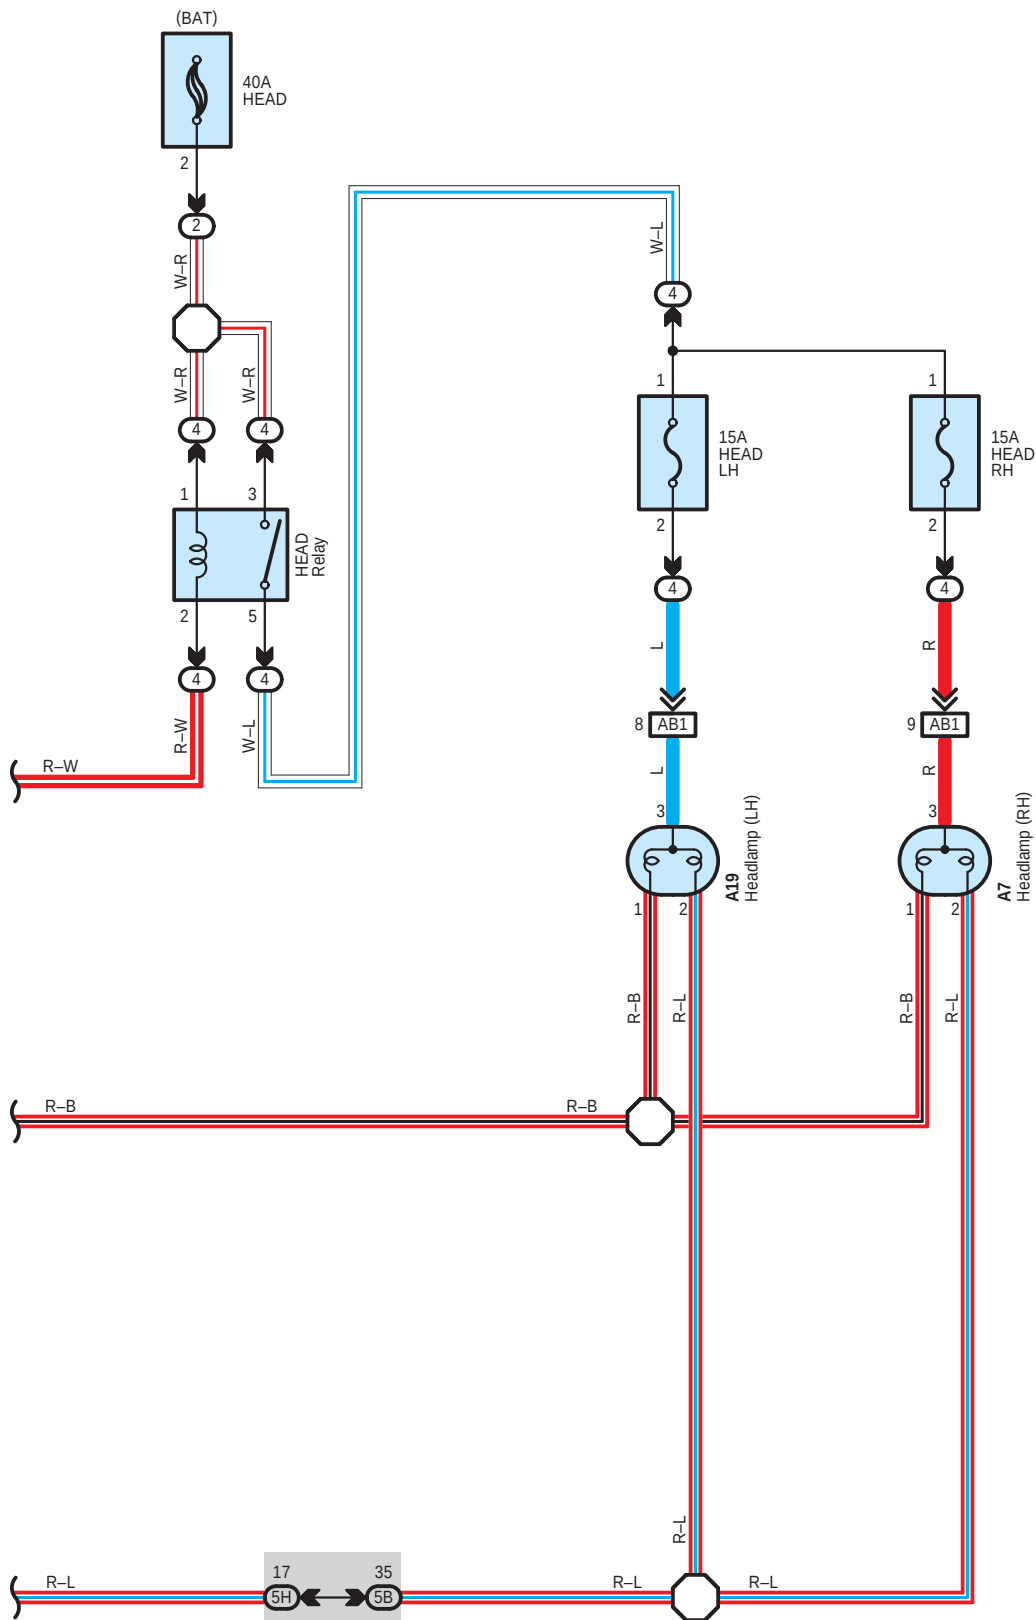

Headlight

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A7	48 (LHD)	H7	A	57 (RHD)	H38
	56 (RHD)	H20		49 (LHD)	
A19	48 (LHD)			57 (RHD)	H39
	56 (RHD)	H28	A	49 (LHD)	H41
H7	A	H29	B	57 (RHD)	

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)
4	29	Instrument Panel R/B (Under the Glove Box)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5B	30	Cowl to Head Lamp Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
6E	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6F	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AB1	64 (LHD)	Cowl to Head Lamp Wire and Engine Room Main Wire (Left Side of the Instrument Panel J/B)
	72 (RHD)	
HB2	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HH1	64 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Near the Steering Column)
	72 (RHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)

: Ground Points

Code	See Page	Ground Points Location
B3	68 (*4)	Front Floor Panel Left
H1	72 (RHD)	Instrument Panel Reinforcement
H2	64 (LHD)	
	72 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E

