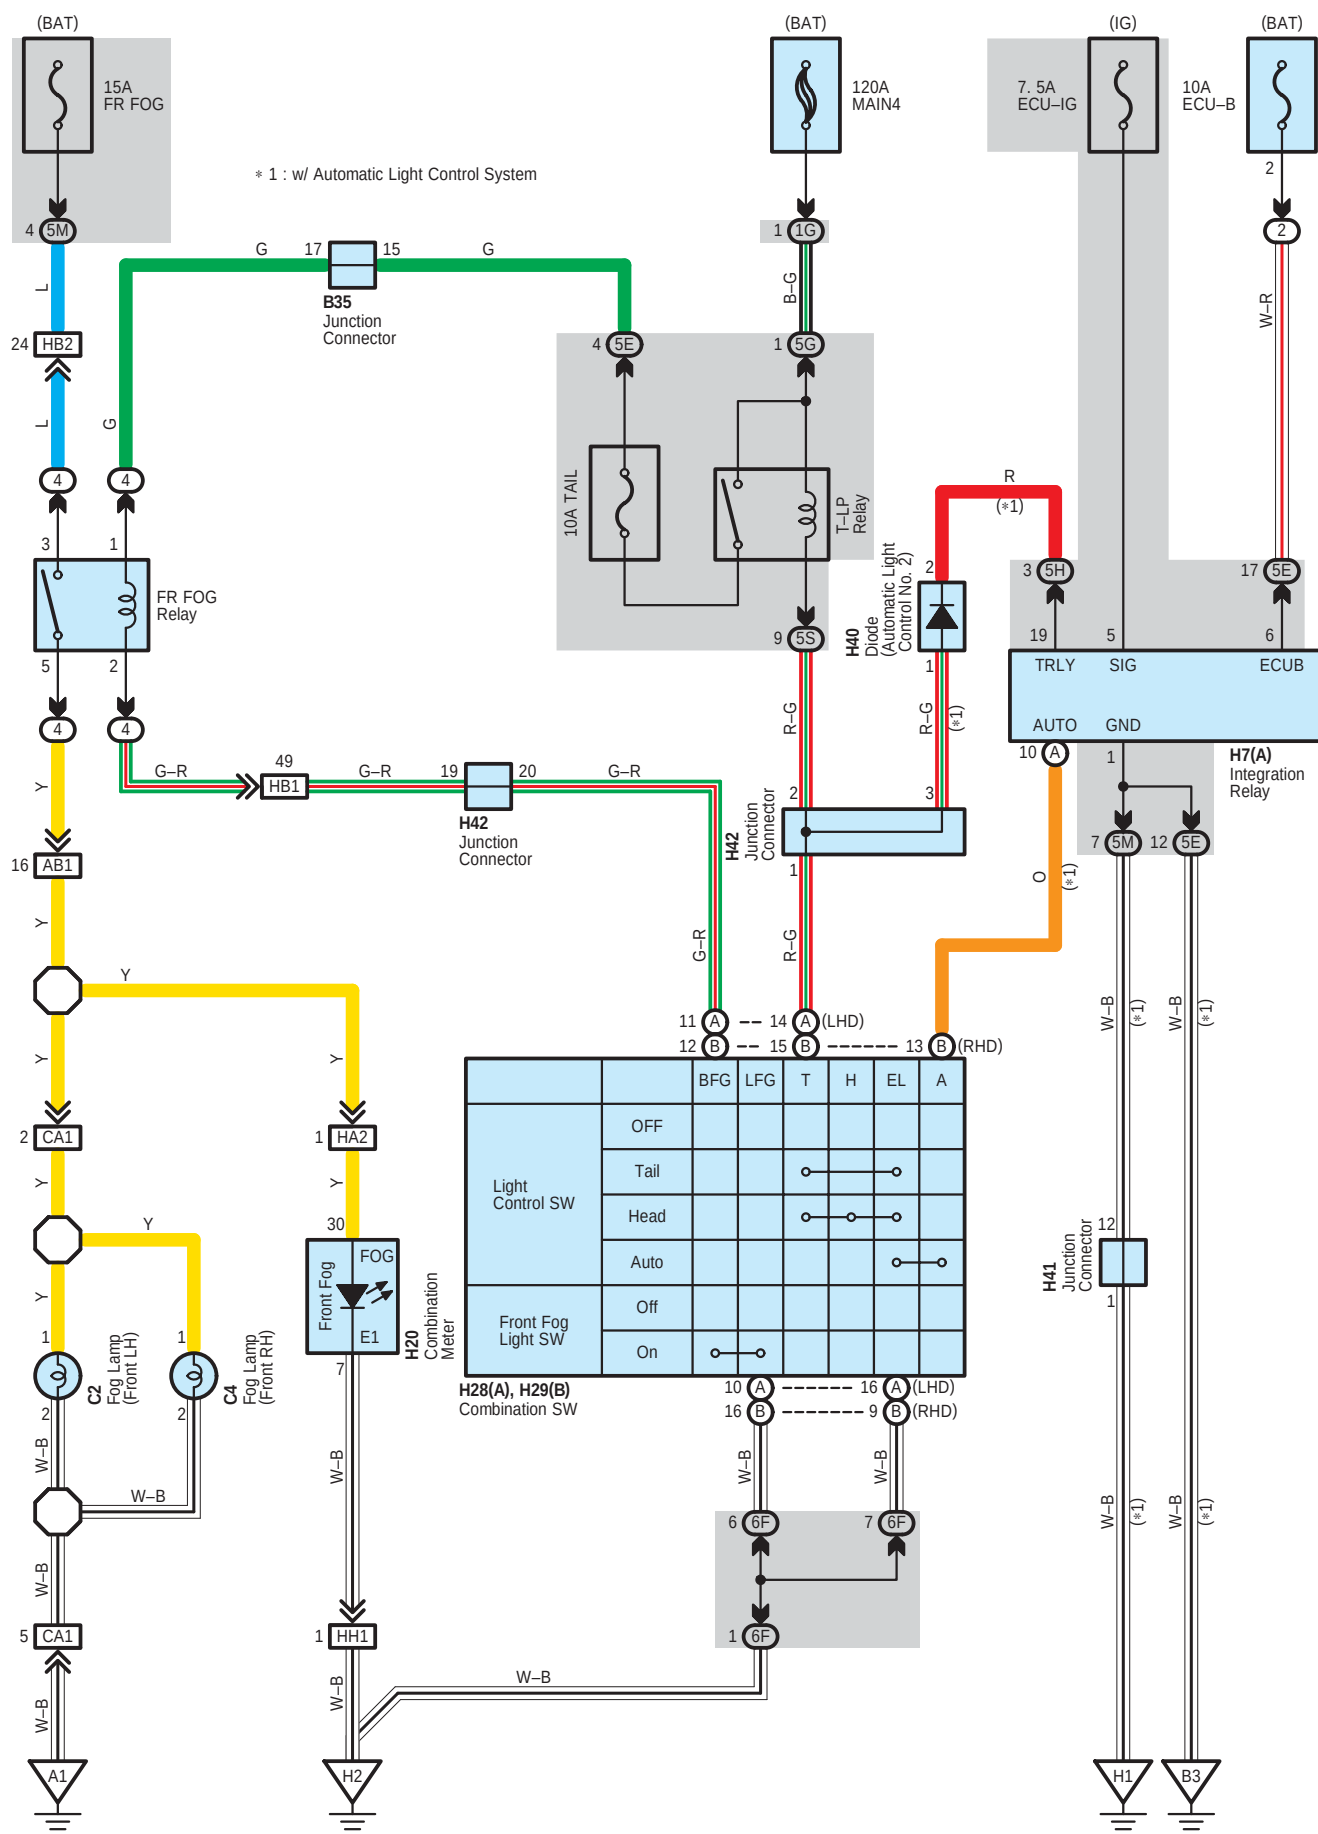



 : Parts Location

Code	See Page	Code	See Page	Code	See Page
B35	44 (*1)	C4	48 (LHD)	H29 B	57 (RHD)
	45 (*2)		56 (RHD)	H40	57 (RHD)
	52 (*4)	H7 A	57 (RHD)	H41	57 (RHD)
	53 (*5)	H20	49 (LHD)	H42	49 (LHD)
C2	48 (LHD)		57 (RHD)		57 (RHD)
	56 (RHD)	H28 A	49 (LHD)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)
4	29	Instrument Panel R/B (Under the Glove Box)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5G		
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
5S		
6F	38 (LHD)	
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AB1	64 (LHD)	Cowl to Head Lamp Wire and Engine Room Main Wire (Left Side of the Instrument Panel J/B)
	72 (RHD)	
CA1	64 (LHD)	Engine Room No.4 Wire and Cowl to Head Lamp Wire (Dash Panel Left)
	72 (RHD)	
HA2	64 (LHD)	Instrument Panel Wire and Cowl to Head Lamp Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB2	64 (LHD)	
	72 (RHD)	
HH1	64 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Near the Steering Column)
	72 (RHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)

 : Ground Points

Code	See Page	Ground Points Location
A1	64 (LHD)	Dash Panel Right
	72 (RHD)	
B3	68 (*4)	Front Floor Panel Left
H1	72 (RHD)	Instrument Panel Reinforcement
H2	64 (LHD)	
	72 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
* 8 : 2KD-FTV, 5L-E