



Rear Fog Light

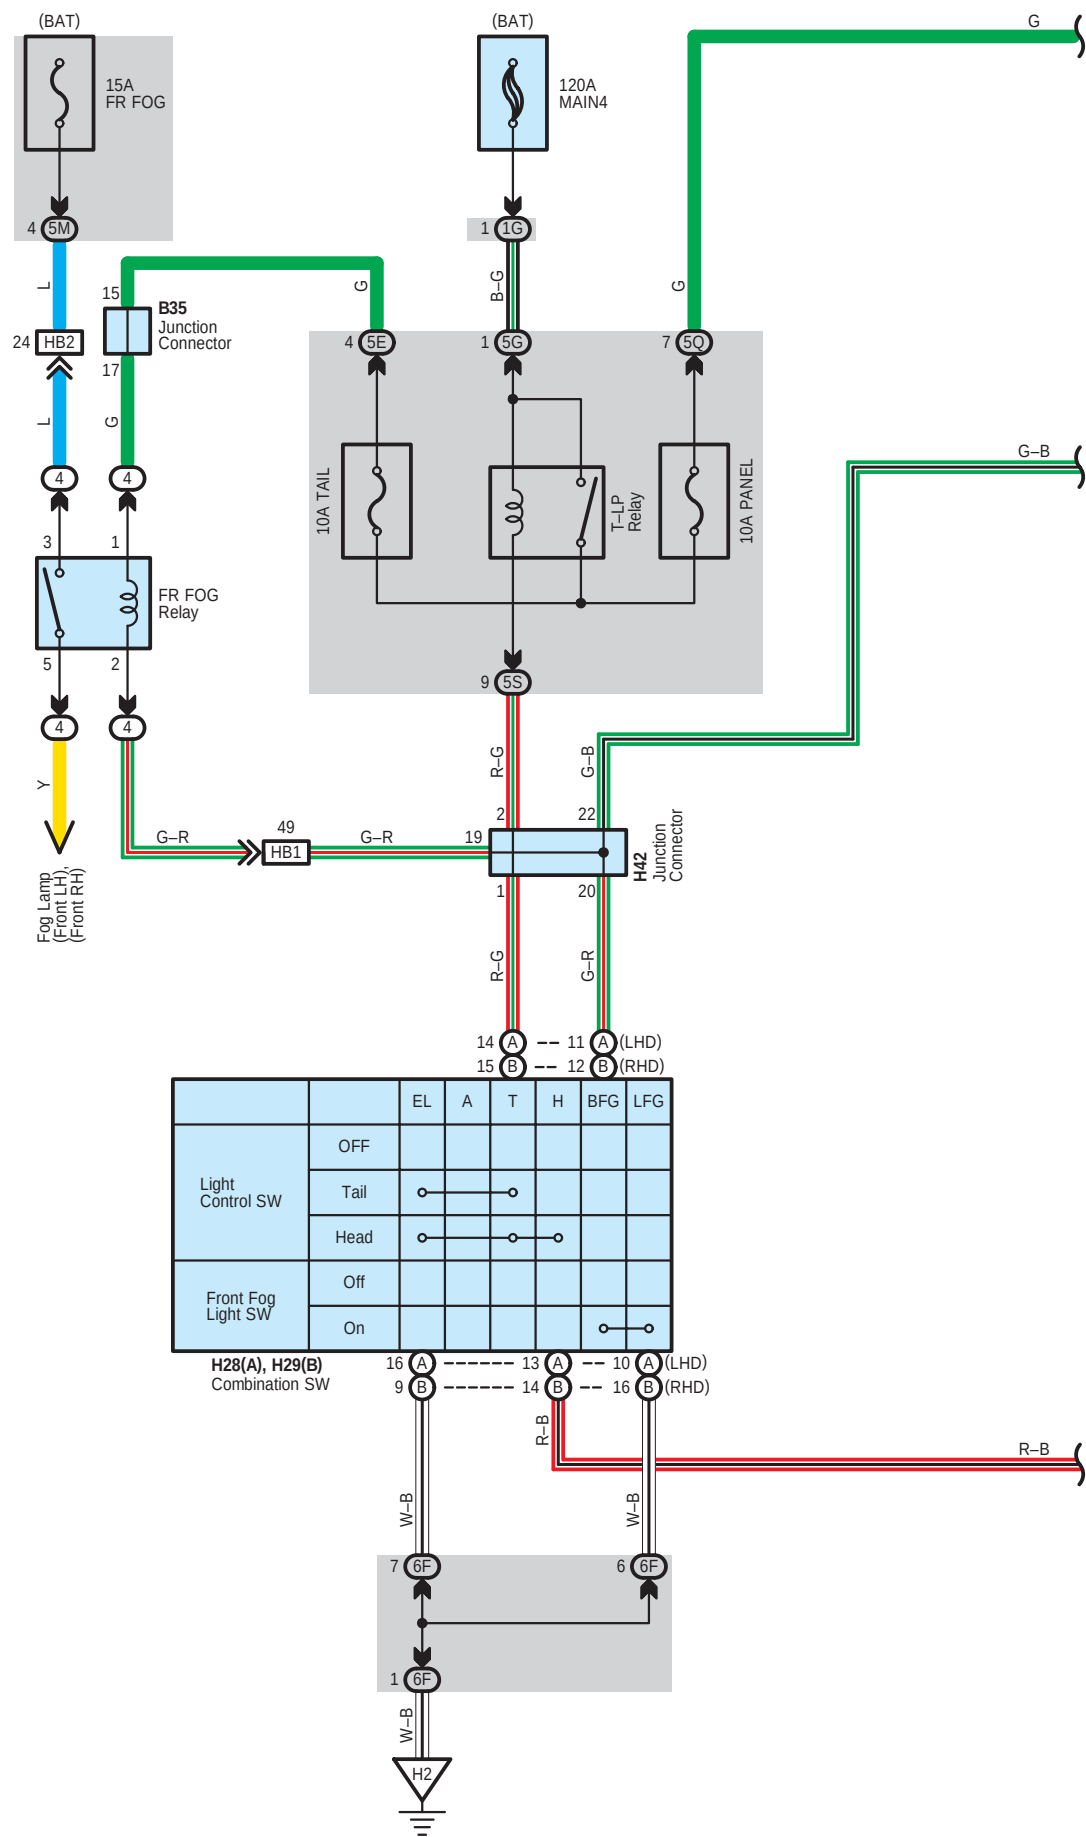

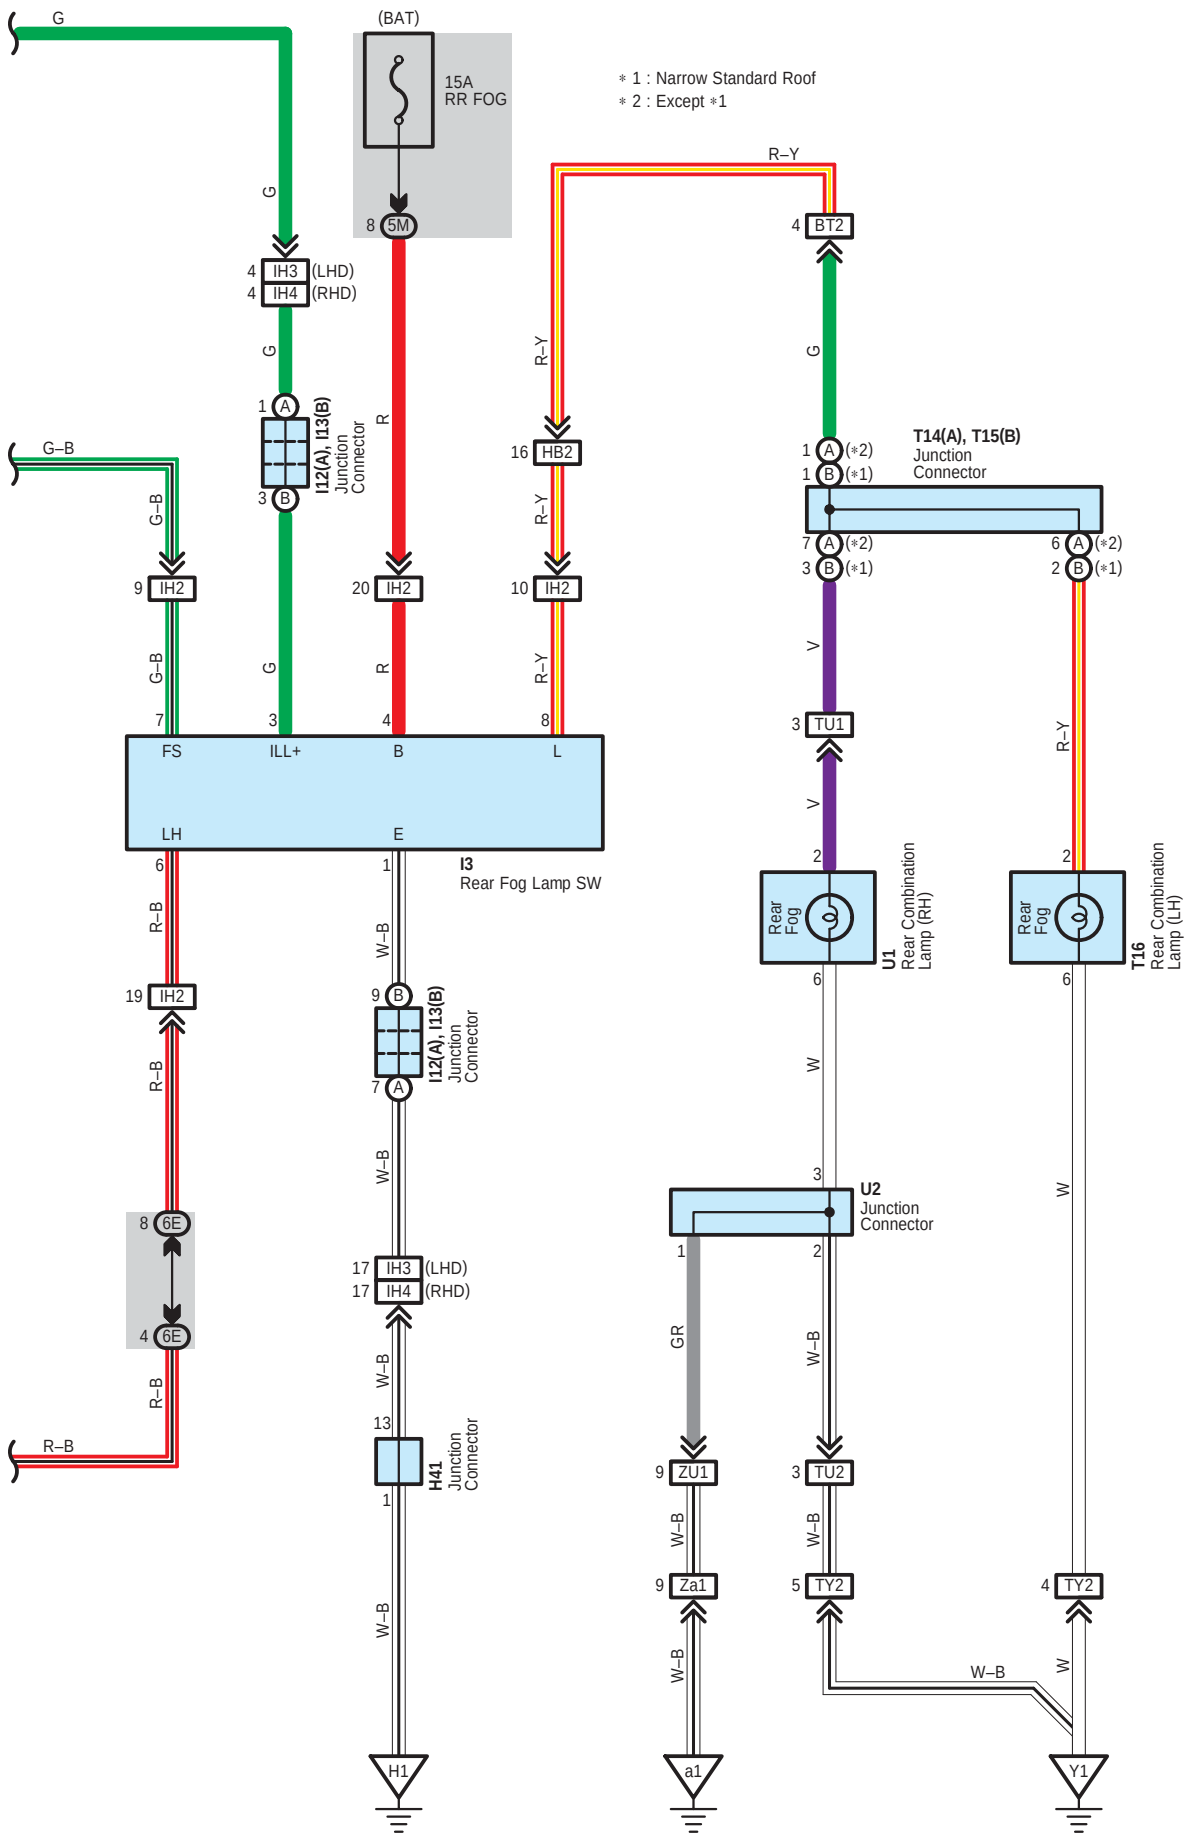

Rear Fog Light

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
B35		44 (*1)		H42		49 (LHD)		T15	B	50 (LHD)	
		45 (*2)				57 (RHD)				58 (RHD)	
		46 (*3)		I3		48 (LHD)		T16		50 (LHD)	
		52 (*4)				56 (RHD)				58 (RHD)	
		53 (*5)		I12	A	48 (LHD)		U1		51 (LHD)	
		54 (*6)				56 (RHD)				59 (RHD)	
H28	A	49 (LHD)		I13	B	48 (LHD)		U2		51 (LHD)	
H29	B	57 (RHD)				56 (RHD)				59 (RHD)	
H41		49 (LHD)		T14	A	50 (LHD)					
		57 (RHD)				58 (RHD)					

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
4	29	Instrument Panel R/B (Under the Glove Box)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5G		
5M	31	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5Q		
5S		
6E	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6F	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BT2	64 (LHD)	Engine Room Main Wire and Roof Wire (Cowl Side Panel LH)
	72 (RHD)	
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB2	64 (LHD)	
	72 (RHD)	
IH2	64 (LHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
	72 (RHD)	
IH3	64 (LHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IH4	72 (RHD)	
TU1	66 (LHD)	Roof Wire and Roof No.2 Wire (Rear of the Left Side of the Roof Panel)
	74 (RHD)	
TU2	66 (LHD)	
	74 (RHD)	
TY2	66 (LHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
	74 (RHD)	
ZU1	66 (LHD)	Back Door No.1 Wire and Roof No.2 Wire (Rear of the Right Side of the Roof Panel)
	74 (RHD)	
Za1	66 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Right Side of Back Door)
	74 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E



: Ground Points

Code	See Page	Ground Points Location
H1	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	
H2	64 (LHD)	
	72 (RHD)	
Y1	66 (LHD)	Left Quarter Panel
	74 (RHD)	
a1	66 (LHD)	Back Door Right
	74 (RHD)	