


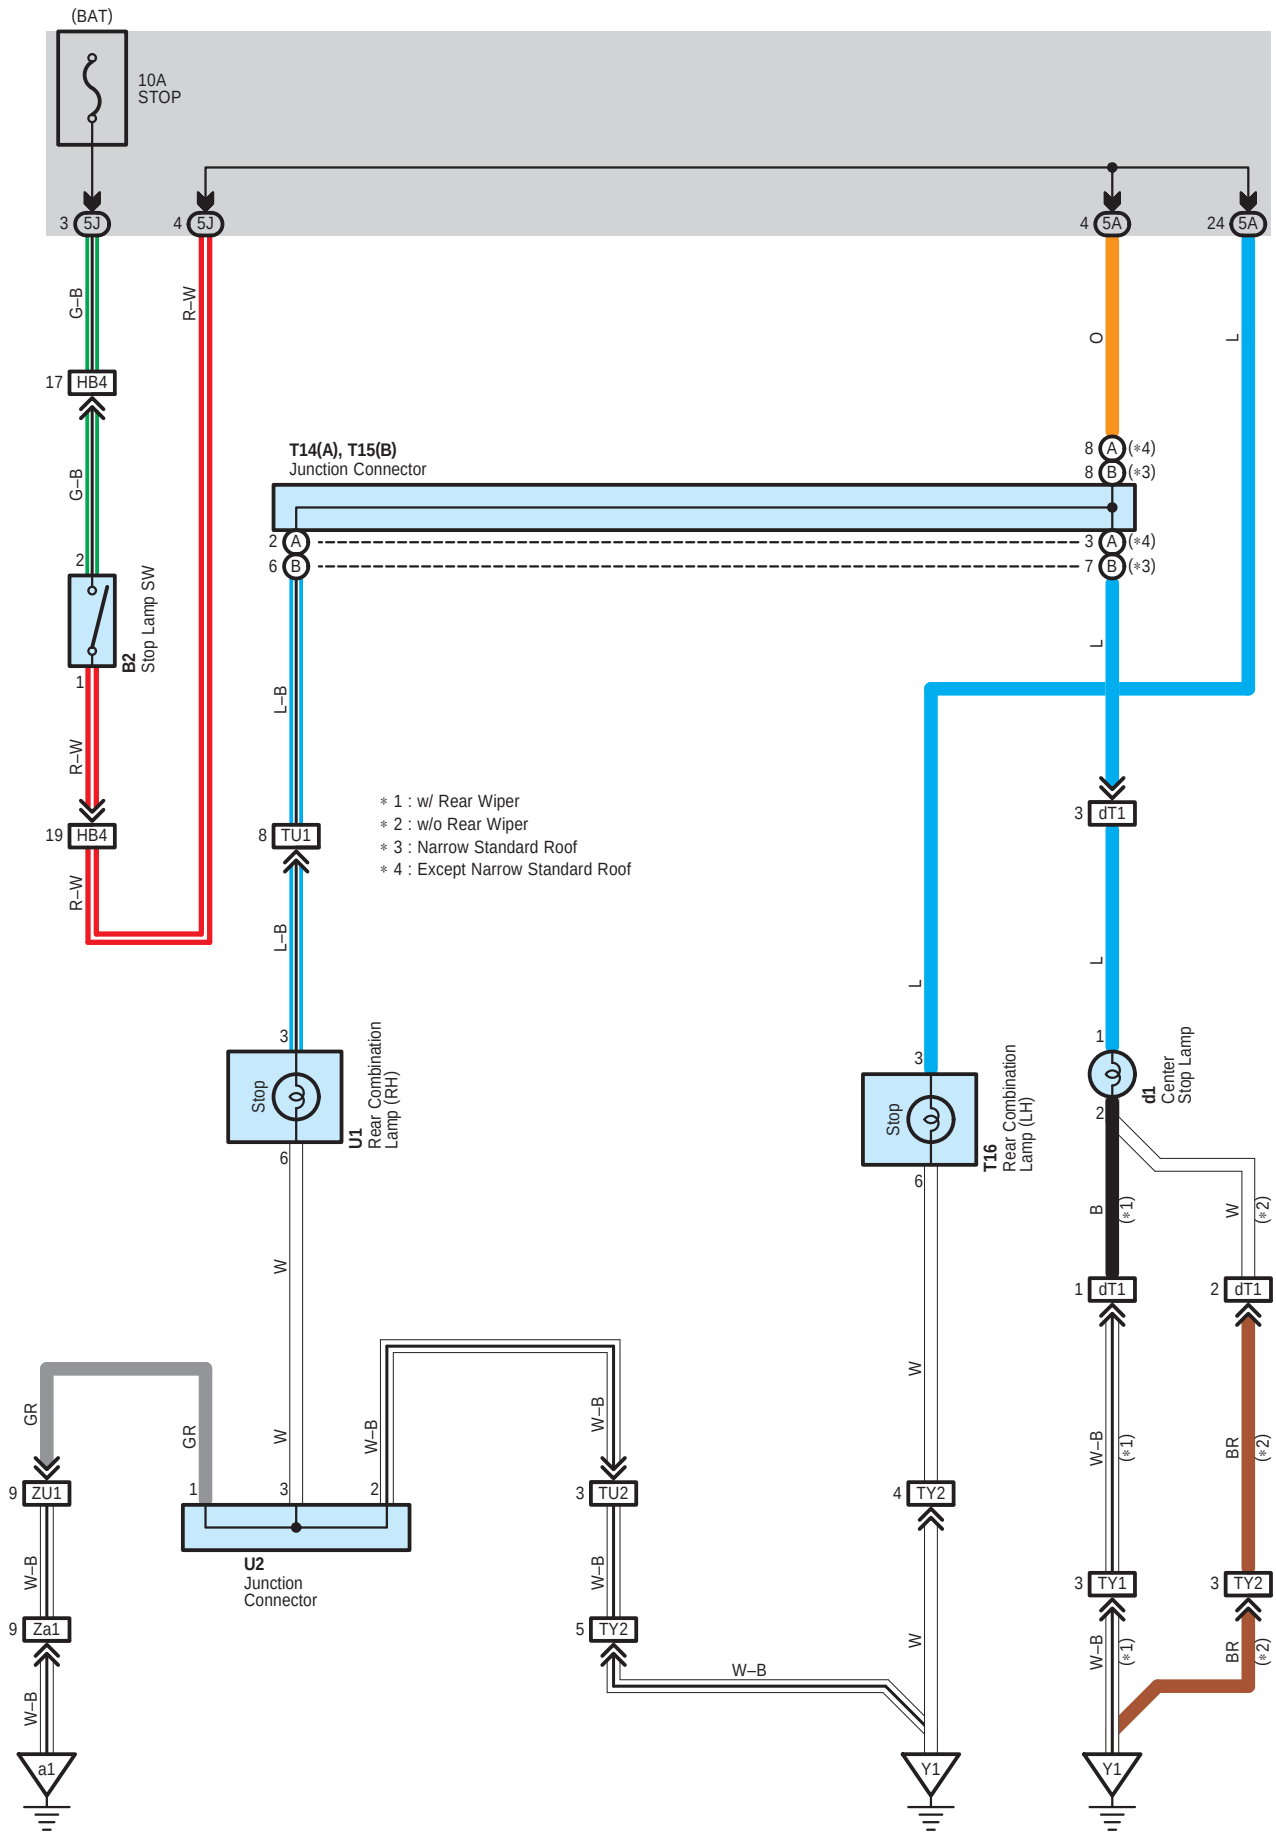

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
B2	48 (LHD)	T15	B	58 (RHD)	U2
	56 (RHD)	T16		50 (LHD)	51 (LHD)
T14	50 (LHD)			58 (RHD)	59 (RHD)
	58 (RHD)	U1		51 (LHD)	51 (LHD)
T15	50 (LHD)			59 (RHD)	59 (RHD)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5A	30	Roof Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5J	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HB4	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
TU1	66 (LHD)	Roof Wire and Roof No.2 Wire (Rear of the Left Side of the Roof Panel)
	74 (RHD)	
TU2	66 (LHD)	
	74 (RHD)	
TY1	66 (LHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
	74 (RHD)	
TY2	66 (LHD)	
	74 (RHD)	
ZU1	66 (LHD)	Back Door No.1 Wire and Roof No.2 Wire (Rear of the Right Side of the Roof Panel)
	74 (RHD)	
Za1	66 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Right Side of Back Door)
	74 (RHD)	
dT1	66 (LHD)	Back Door No.3 Wire and Roof Wire (Rear of the Left Side of the Roof Panel)
	74 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
Y1	66 (LHD)	Left Quarter Panel
	74 (RHD)	
a1	66 (LHD)	Back Door Right
	74 (RHD)	