



 : Parts Location

Code		See Page		Code		See Page		Code		See Page	
D36	B	44 (*1)		D37	A	45 (*2)		T16	50 (LHD)		
		45 (*2)				52 (*4)			58 (RHD)		
		46 (*3)				53 (*5)		U1	51 (LHD)		
		52 (*4)		T14	A	50 (LHD)			59 (RHD)		
		53 (*5)				58 (RHD)		U2	51 (LHD)		
		54 (*6)		50 (LHD)		59 (RHD)					
D37	A	44 (*1)		T15	B	58 (RHD)					

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5A	30	Roof Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
DB4	60 (*1)	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B No.1)
	61 (*2)	
	62 (*3)	
	68 (*4)	
	69 (*5)	
	70 (*6)	
TU1	66 (LHD)	Roof Wire and Roof No.2 Wire (Rear of the Left Side of the Roof Panel)
	74 (RHD)	
TU2	66 (LHD)	
	74 (RHD)	
TY2	66 (LHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
	74 (RHD)	
ZU1	66 (LHD)	Back Door No.1 Wire and Roof No.2 Wire (Rear of the Right Side of the Roof Panel)
	74 (RHD)	
Za1	66 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Right Side of Back Door)
	74 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
Y1	66 (LHD)	Left Quarter Panel
	74 (RHD)	
a1	66 (LHD)	Back Door Right
	74 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
* 8 : 2KD-FTV, 5L-E