



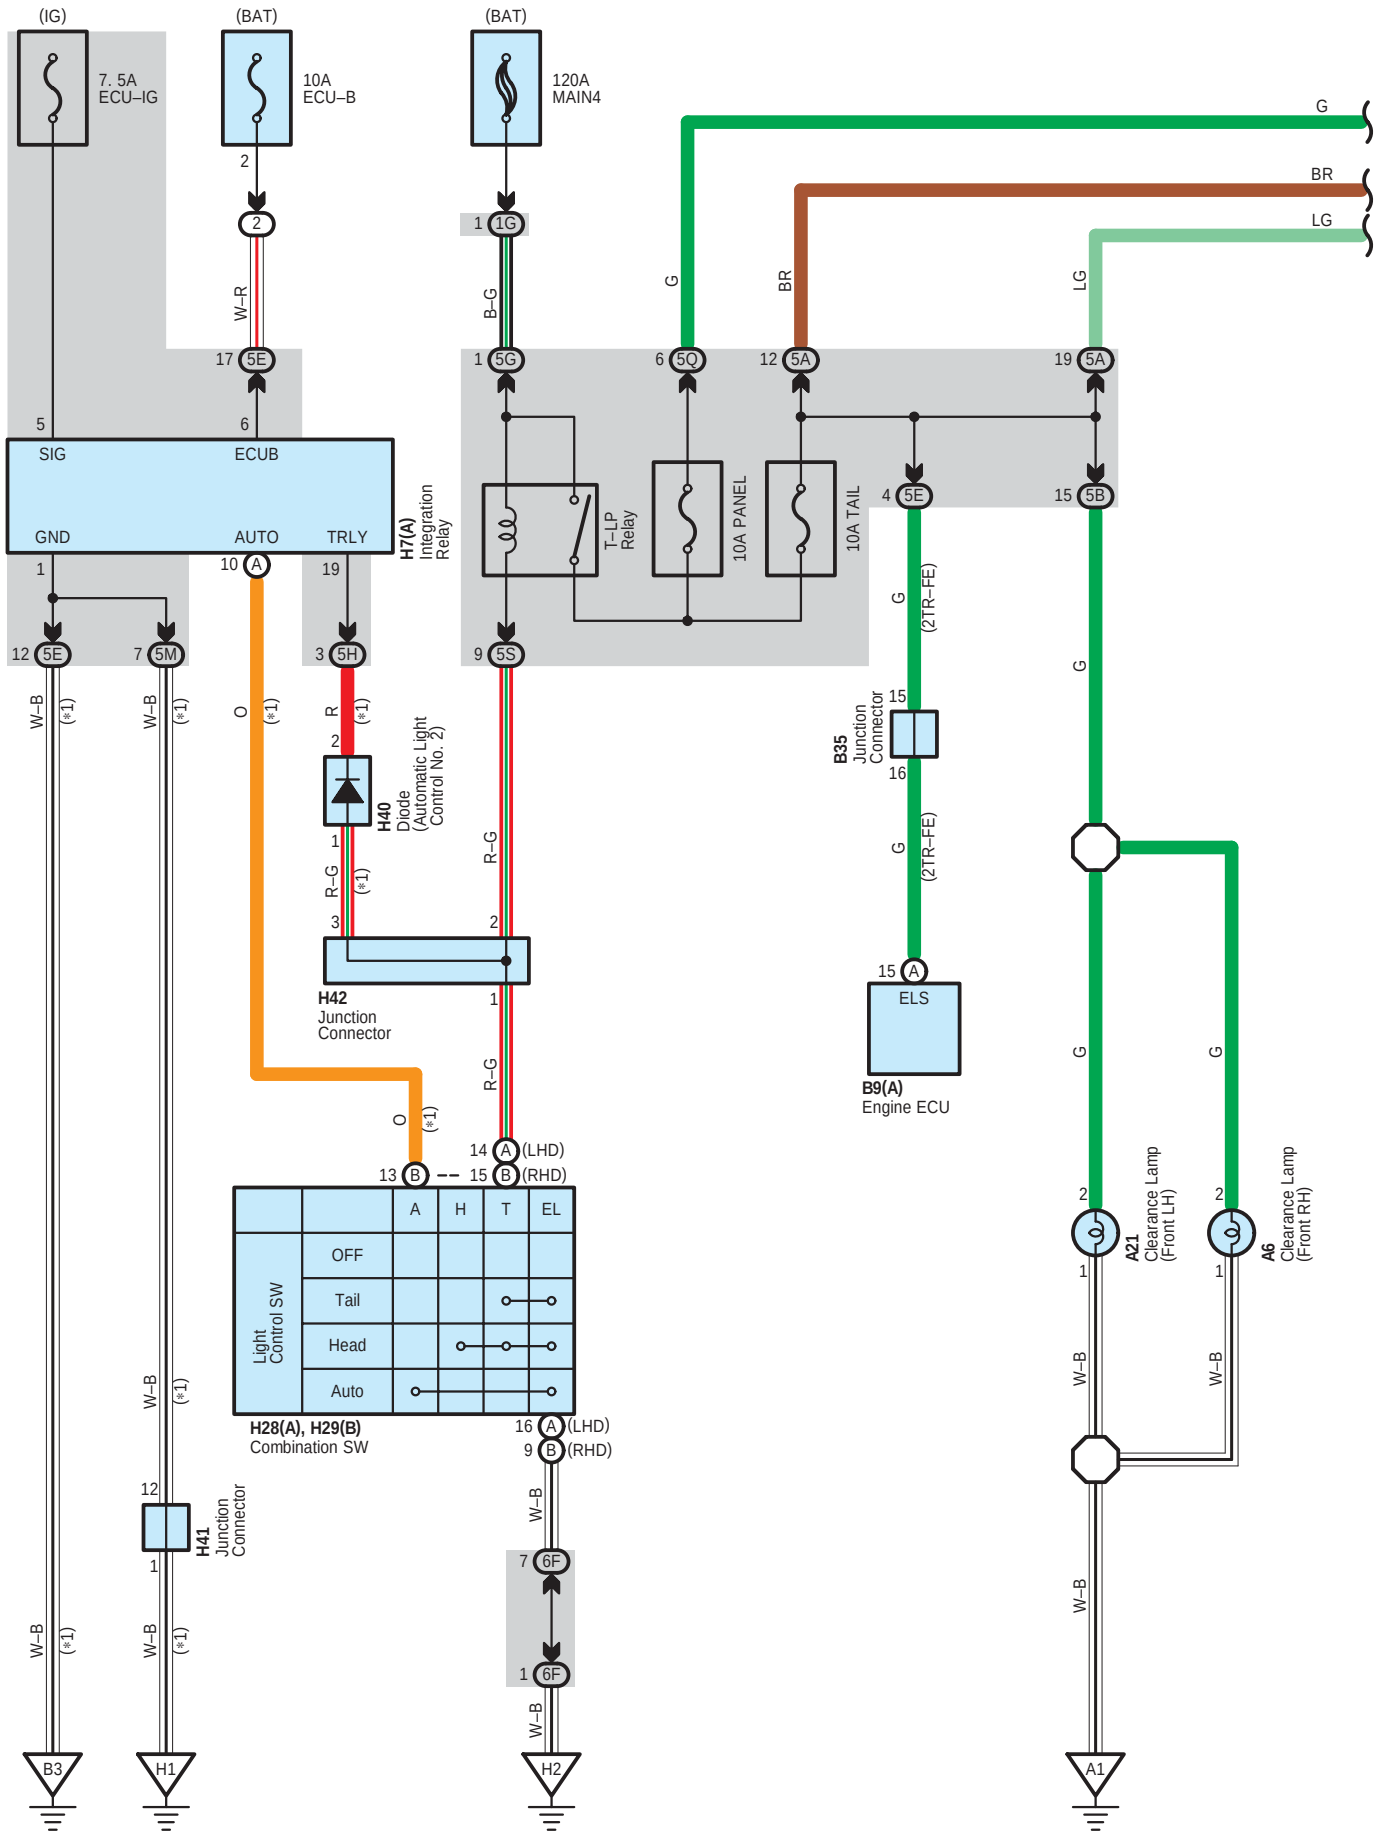

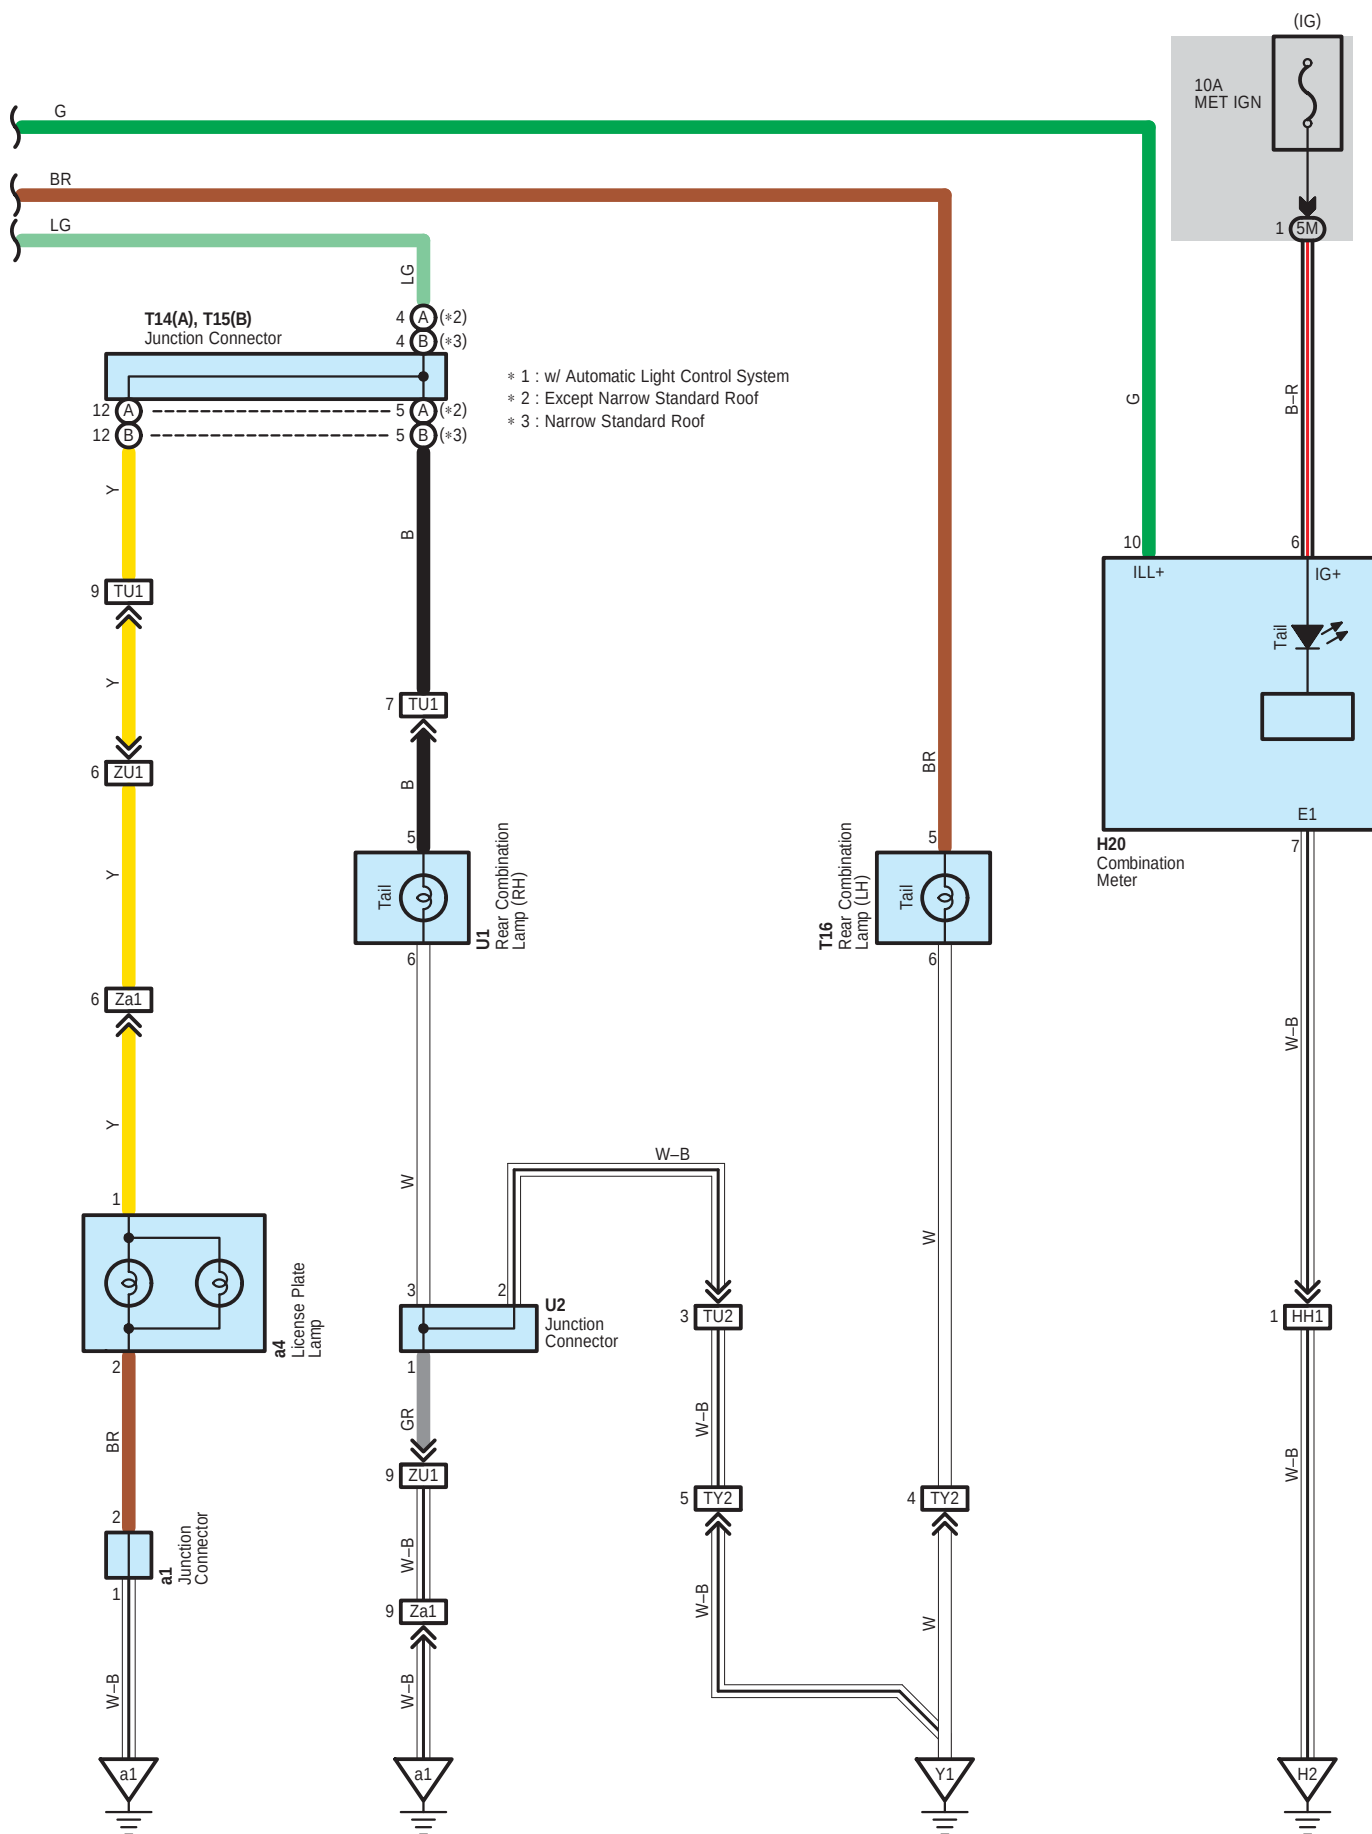

Taillight

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A6	48 (LHD)	H28	A	49 (LHD)	T16
	56 (RHD)	H29	B	57 (RHD)	U1
A21	48 (LHD)	H40		57 (RHD)	U1
	56 (RHD)	H41		57 (RHD)	U2
B9	44 (*1)	H42		49 (LHD)	51 (LHD)
	52 (*4)			57 (RHD)	59 (RHD)
B35	44 (*1)	T14	A	50 (LHD)	a1
	52 (*4)			58 (RHD)	59 (RHD)
H7	57 (RHD)	T15	B	50 (LHD)	a4
H20	49 (LHD)			58 (RHD)	51 (LHD)
	57 (RHD)	T16		50 (LHD)	59 (RHD)

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
5A	30	Roof Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5B	30	Cowl to Head Lamp Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5G		
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
5Q		
5S		
6F	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HH1	64 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Near the Steering Column)
	72 (RHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
TU1	66 (LHD)	Roof Wire and Roof No.2 Wire (Rear of the Left Side of the Roof Panel)
	74 (RHD)	
TU2	66 (LHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
	74 (RHD)	
TY2	66 (LHD)	Back Door No.1 Wire and Roof No.2 Wire (Rear of the Right Side of the Roof Panel)
	74 (RHD)	
ZU1	66 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Right Side of Back Door)
	74 (RHD)	
Za1	66 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Right Side of Back Door)
	74 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E



: Ground Points

Code	See Page	Ground Points Location
A1	64 (LHD)	Dash Panel Right
	72 (RHD)	
B3	68 (*4)	Front Floor Panel Left
H1	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	
H2	64 (LHD)	
	72 (RHD)	
Y1	66 (LHD)	Left Quarter Panel
	74 (RHD)	
a1	66 (LHD)	Back Door Right
	74 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
* 8 : 2KD-FTV, 5L-E