



Illumination

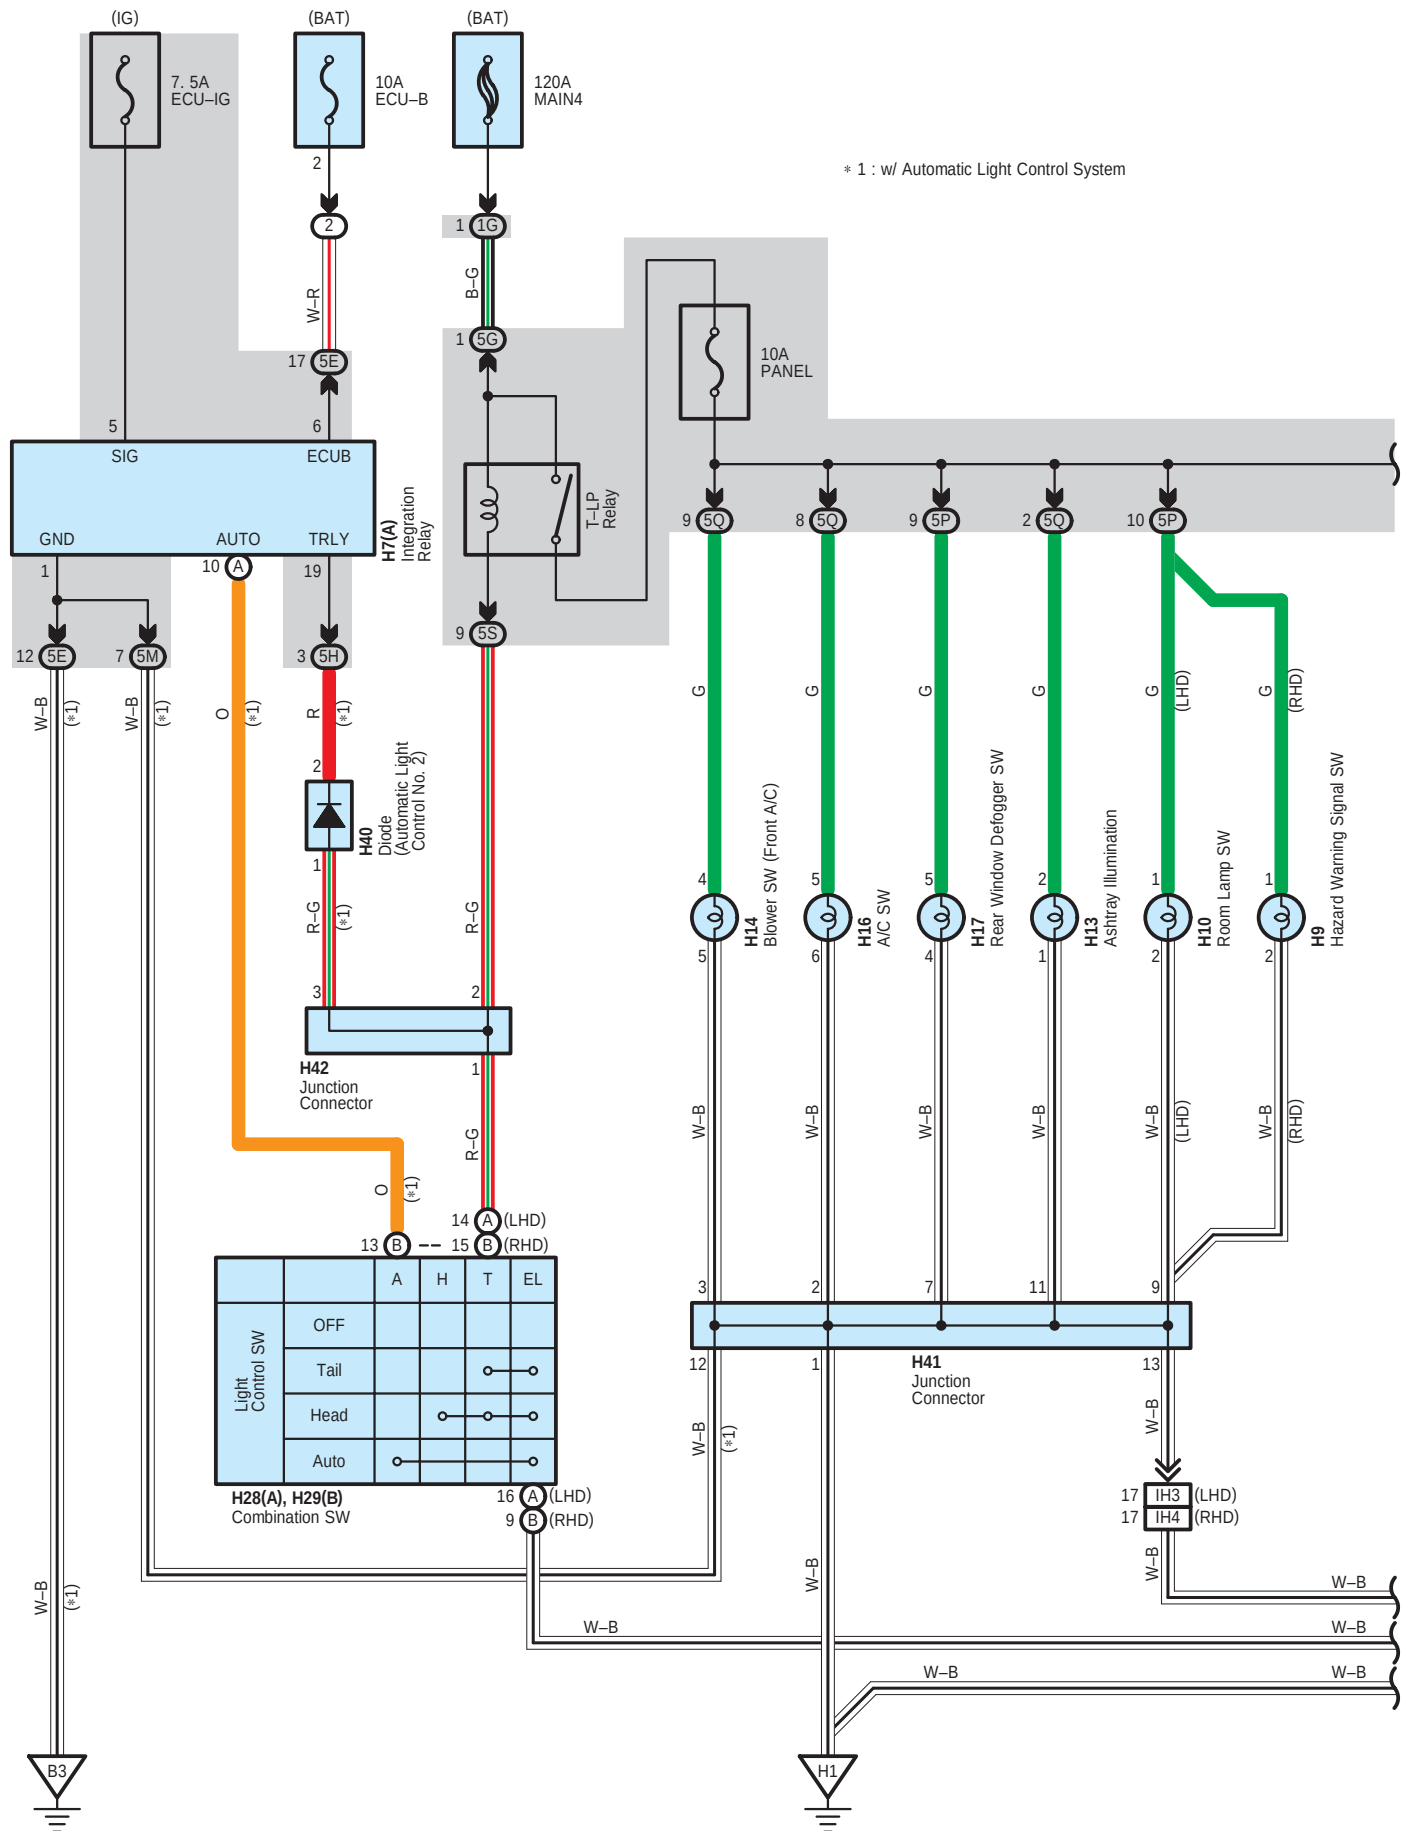

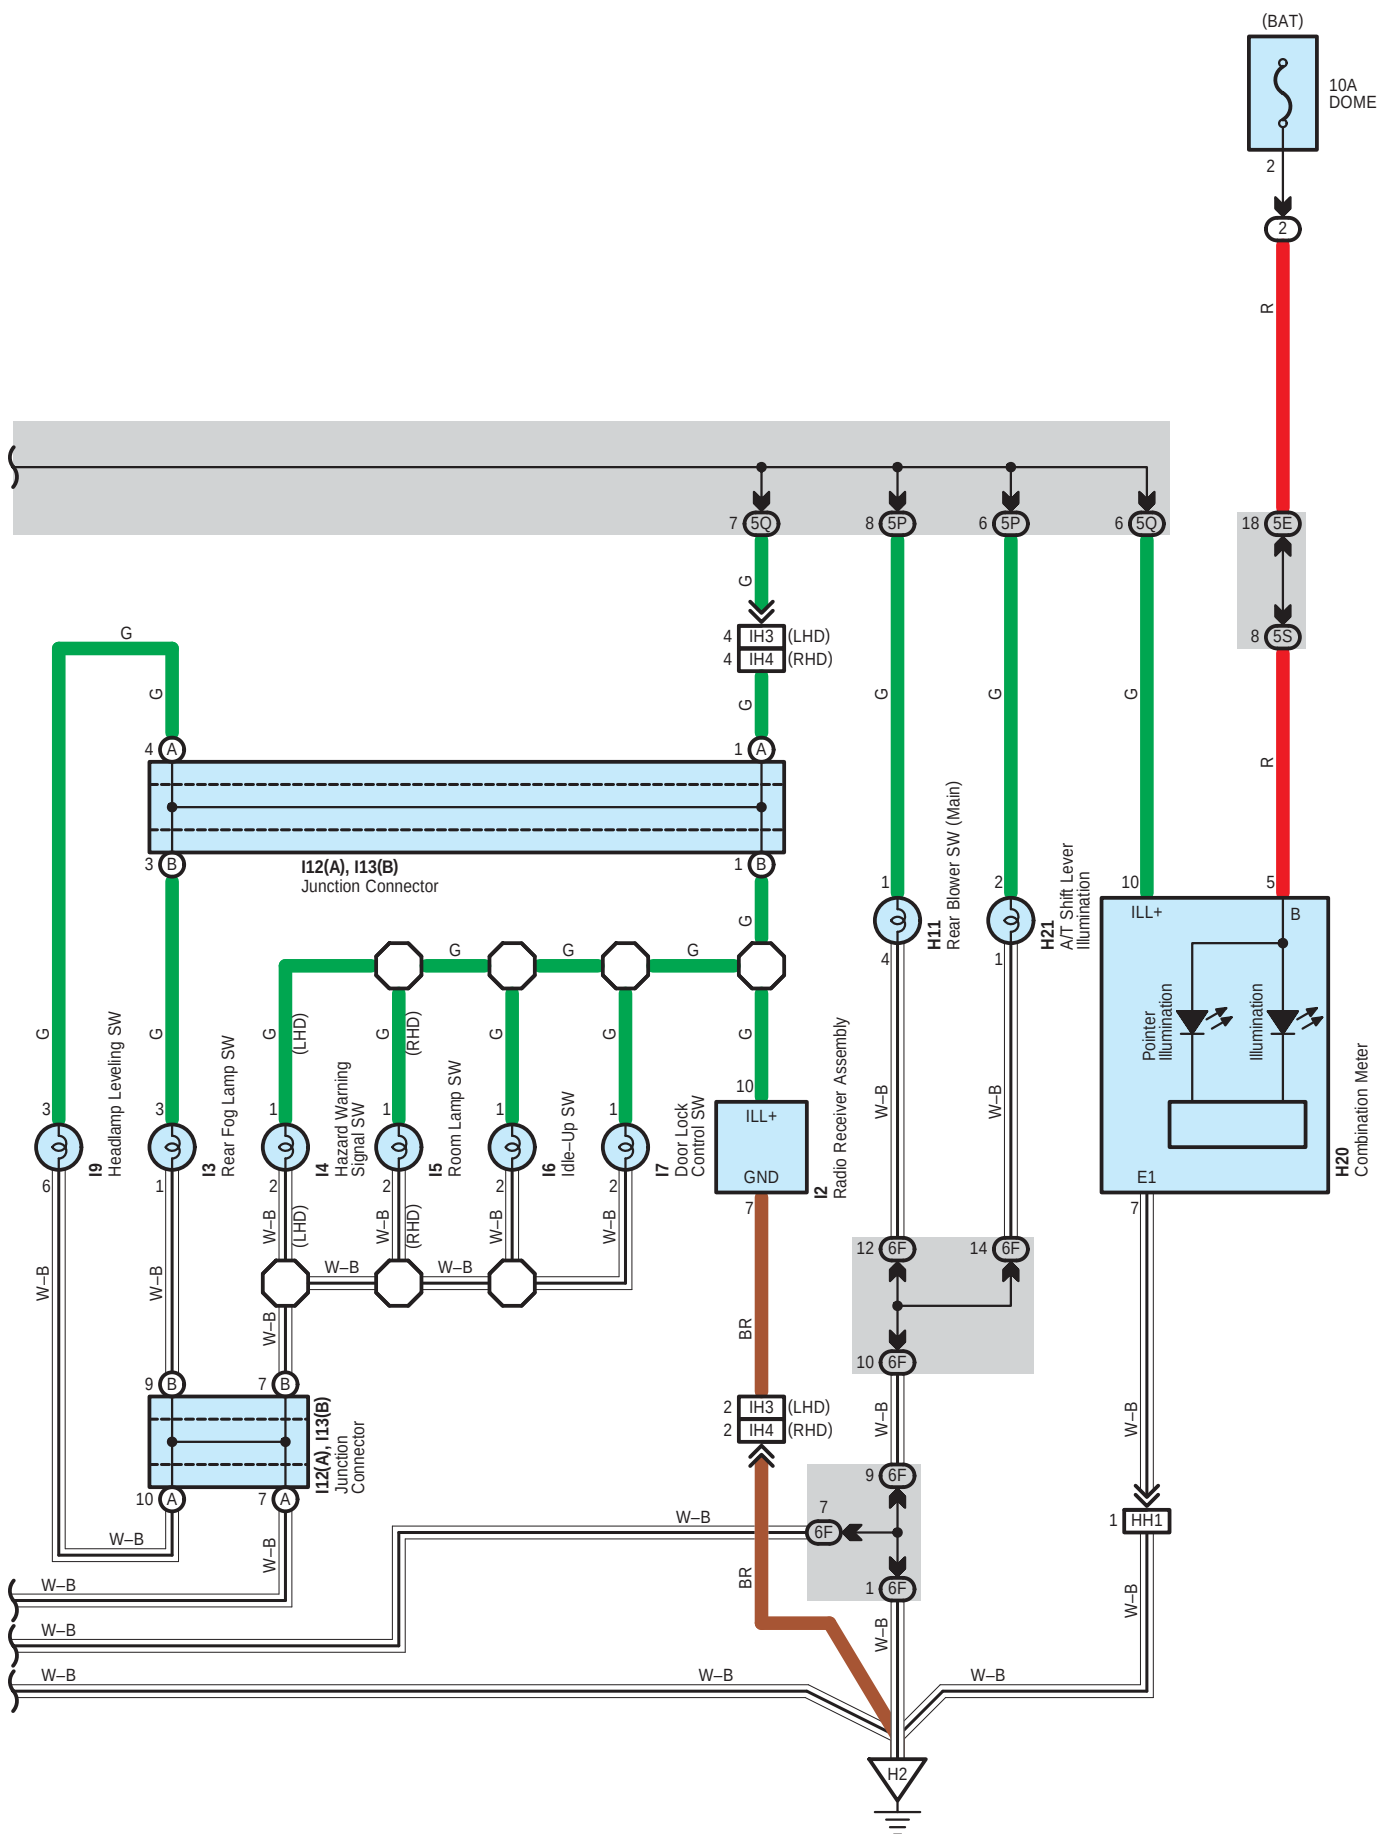

Illumination

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
H7	A	49 (LHD)	H20	I3	56 (RHD)
				I4	48 (LHD)
H9	57 (RHD)	H21	49 (LHD)	I5	56 (RHD)
H10	49 (LHD)		57 (RHD)	I6	48 (LHD)
H11	49 (LHD)	H28	A		56 (RHD)
	57 (RHD)	H29	B	I7	48 (LHD)
H13	49 (LHD)	H40	57 (RHD)		56 (RHD)
	57 (RHD)		49 (LHD)	I9	48 (LHD)
H14	49 (LHD)	H41	57 (RHD)	I12	A
	57 (RHD)		49 (LHD)		
H16	49 (LHD)	H42	57 (RHD)	I13	B
	57 (RHD)		48 (LHD)		
H17	49 (LHD)	I2	56 (RHD)		
	57 (RHD)		48 (LHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5G		
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
5P		
5Q		
5S		
6F	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HH1	64 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Near the Steering Column)
	72 (RHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IH3	64 (LHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IH4	72 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
B3	68 (*4)	Front Floor Panel Left
H1	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	
H2	64 (LHD)	
	72 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E

