




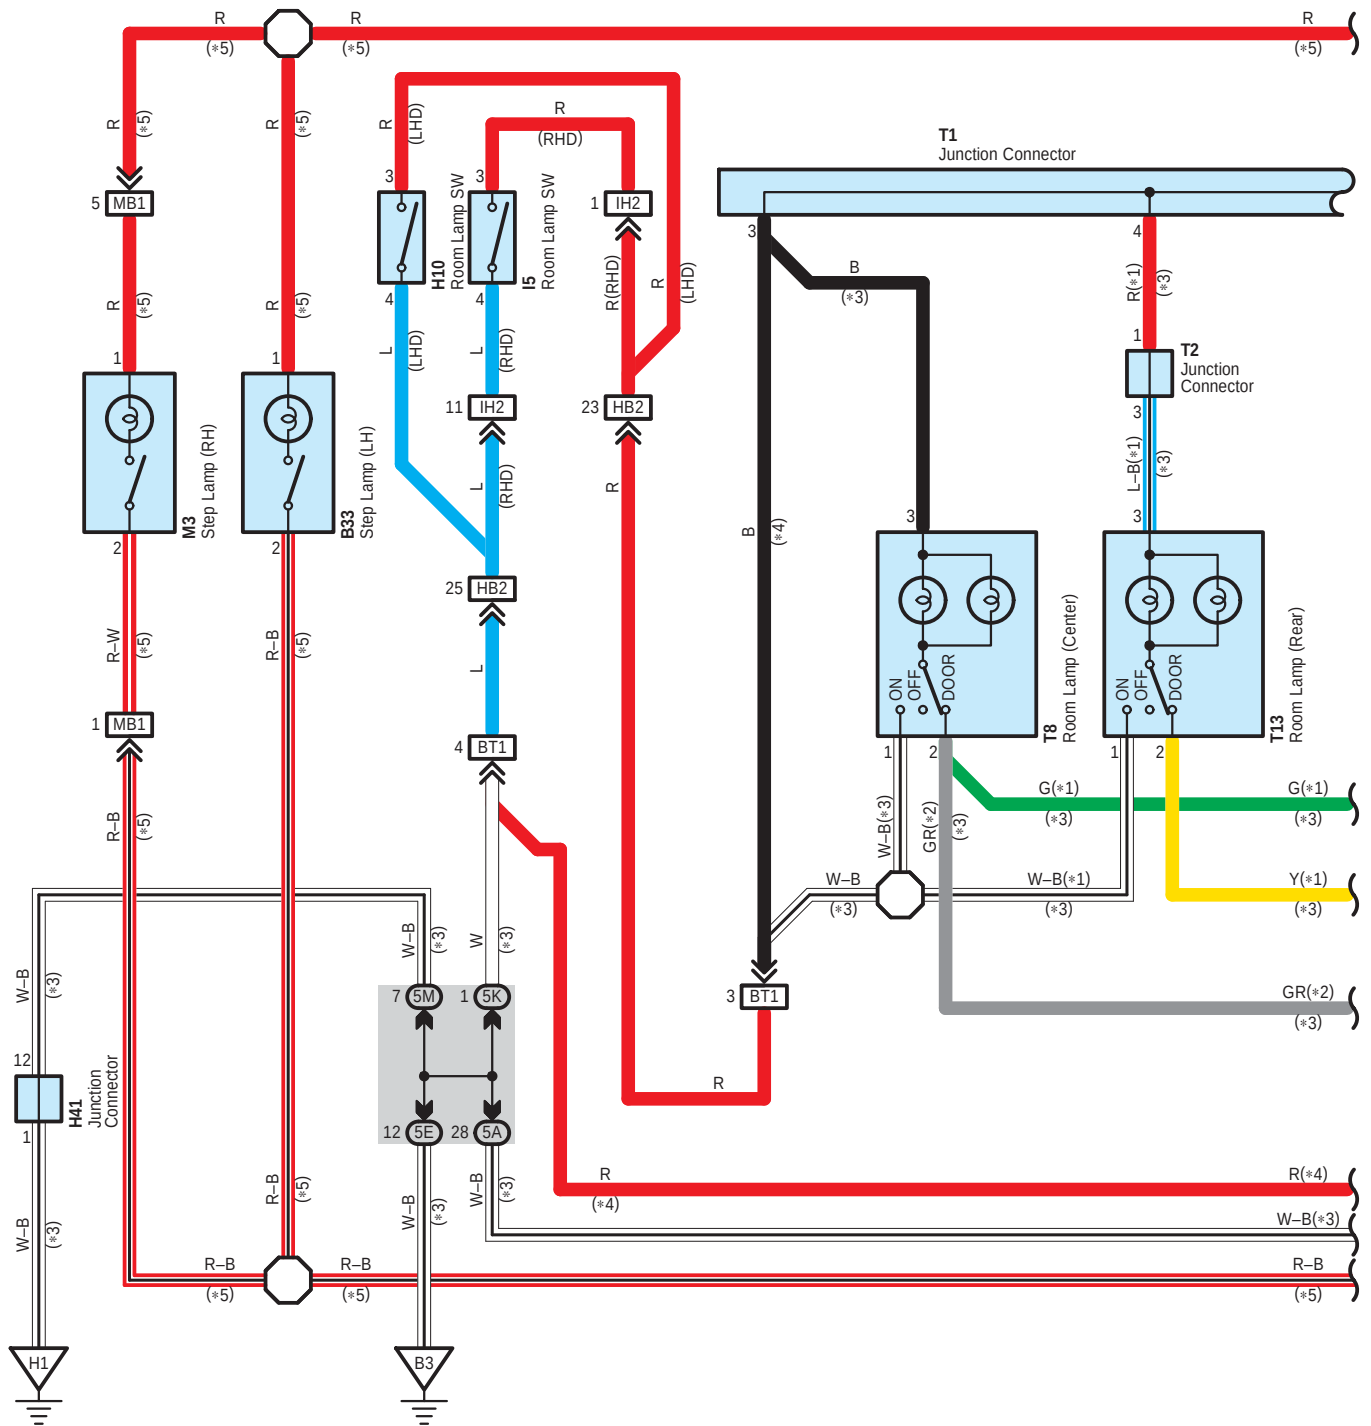

Interior Light

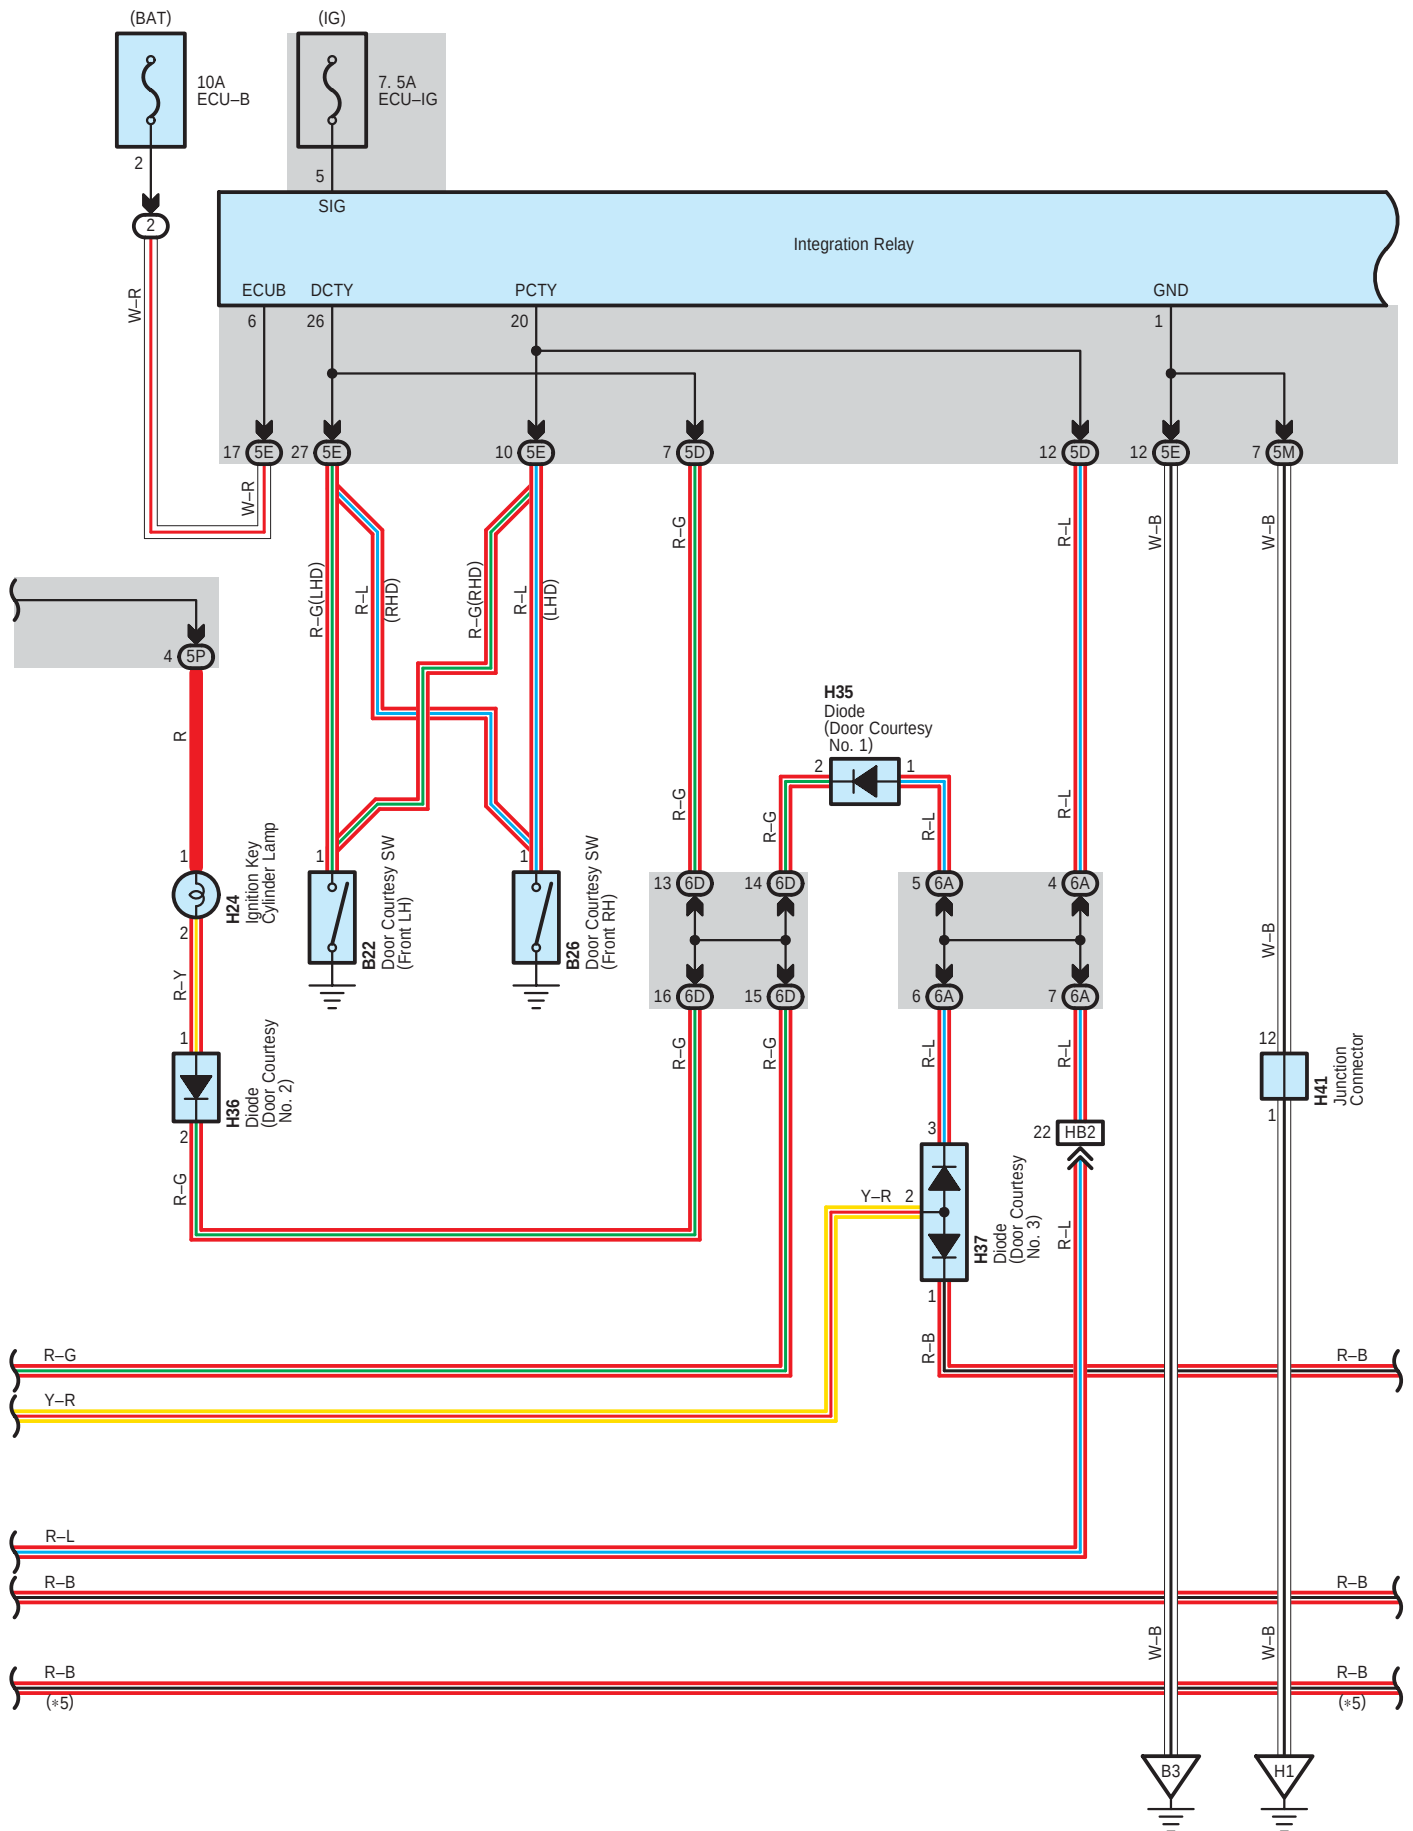

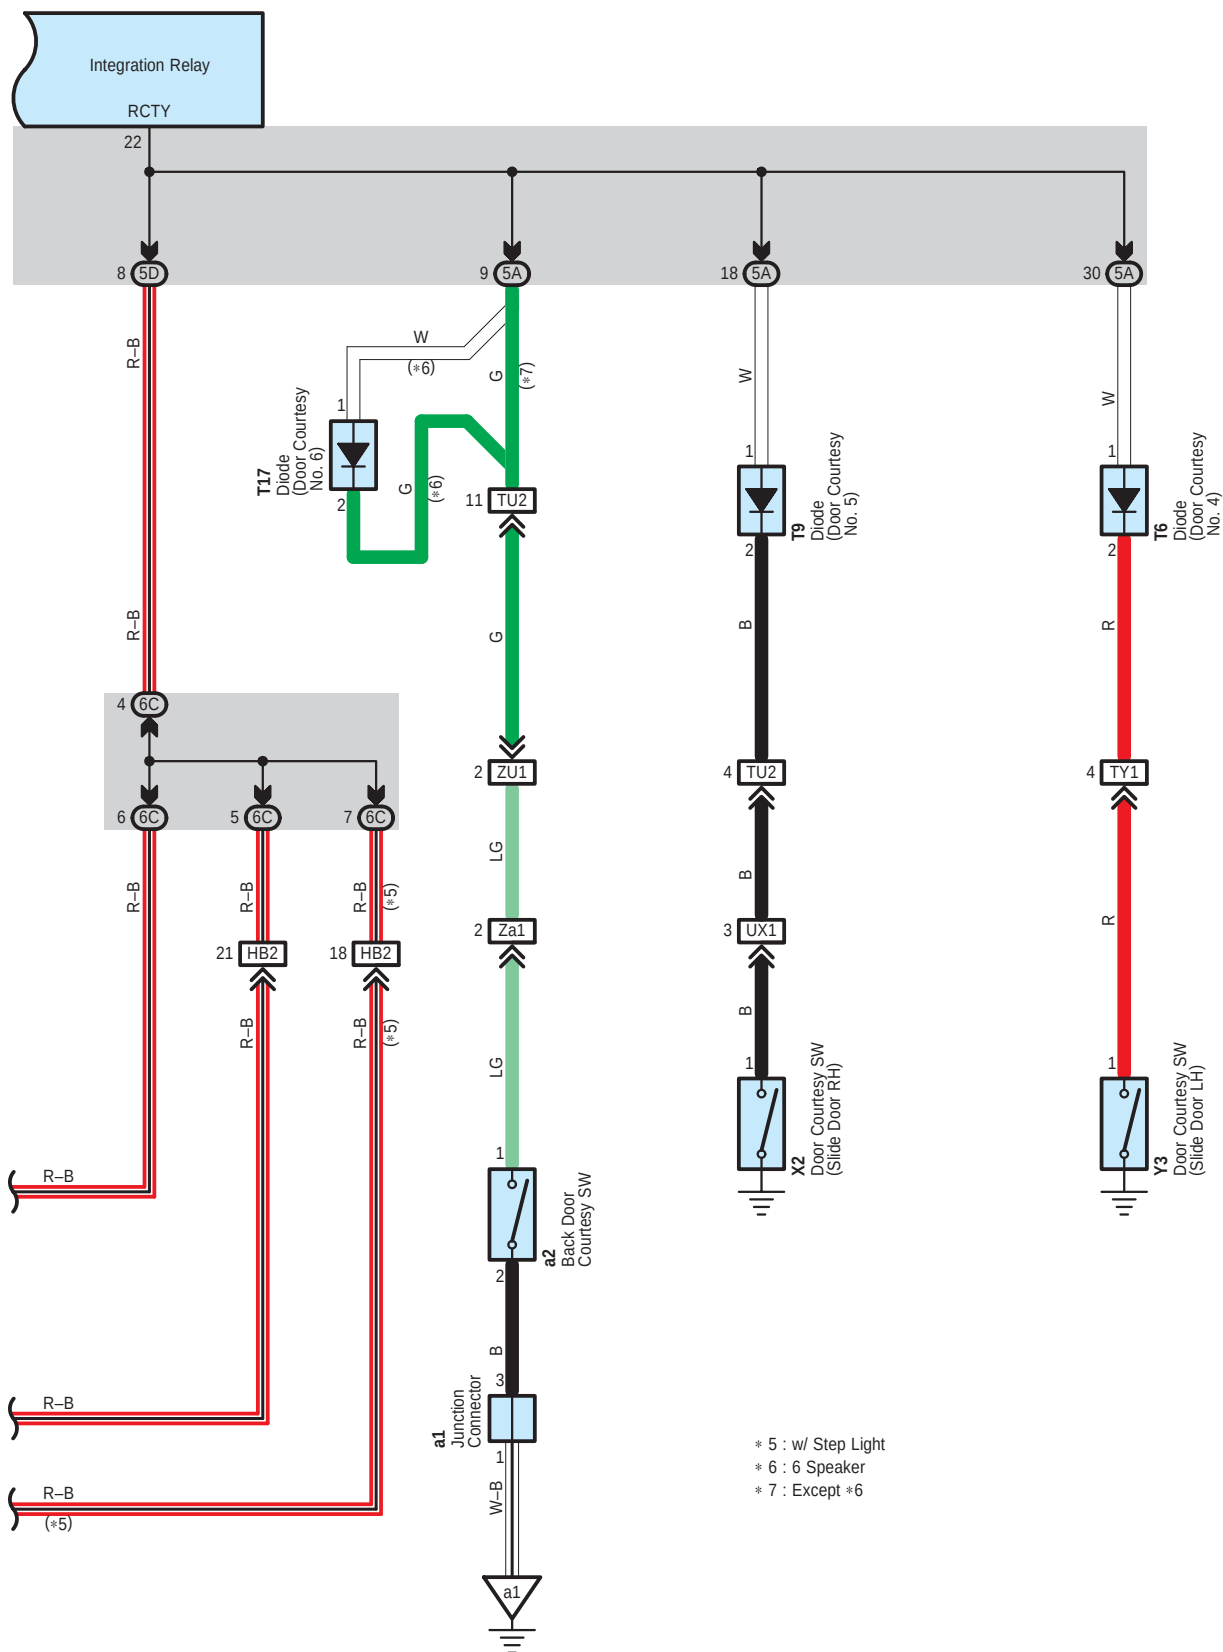

Interior Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B22	50 (LHD)	I5	56 (RHD)	T8	58 (RHD)
	58 (RHD)	M3	50 (LHD)	T9	50 (LHD)
B26	50 (LHD)		58 (RHD)	T12	50 (LHD)
	58 (RHD)	T1	48 (LHD)		58 (RHD)
B33	58 (RHD)		56 (RHD)	T13	50 (LHD)
H10	49 (LHD)	T2	48 (LHD)		58 (RHD)
H20	49 (LHD)		56 (RHD)	T17	50 (LHD)
	57 (RHD)	T3	48 (LHD)	T18	48 (LHD)
H24	49 (LHD)		56 (RHD)		56 (RHD)
	57 (RHD)	T4	50 (LHD)	X2	51 (LHD)
H35	49 (LHD)		58 (RHD)		59 (RHD)
	57 (RHD)	T5	50 (LHD)	Y3	51 (LHD)
H36	49 (LHD)		58 (RHD)		59 (RHD)
	57 (RHD)	T6	50 (LHD)	a1	51 (LHD)
H37	49 (LHD)		58 (RHD)		59 (RHD)
	57 (RHD)	T7	50 (LHD)	a2	51 (LHD)
H41	49 (LHD)		58 (RHD)		59 (RHD)
	57 (RHD)	T8	50 (LHD)		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5A	30	Roof Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5D	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5K	30	Roof Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5P		
5S		
6A	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6C	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6D	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BT1	64 (LHD)	Engine Room Main Wire and Roof Wire (Cowl Side Panel LH)
	72 (RHD)	
HB2	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
IH2	72 (RHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
MB1	60 (*1)	Pillar No.1 Wire and Engine Room Main Wire (RH Side Battery Room)
	61 (*2)	
	62 (*3)	
	68 (*4)	
	69 (*5)	
	70 (*6)	
TU2	66 (LHD)	Roof Wire and Roof No.2 Wire (Rear of the Left Side of the Roof Panel)
	74 (RHD)	
TY1	66 (LHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
	74 (RHD)	
UX1	66 (LHD)	Roof No.2 Wire and Luggage Room No.2 Wire (Right Quarter Panel)
	74 (RHD)	
ZU1	66 (LHD)	Back Door No.1 Wire and Roof No.2 Wire (Rear of the Right Side of the Roof Panel)
	74 (RHD)	
Za1	66 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Right Side of Back Door)
	74 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
B3	60 (*1)	Front Floor Panel Left
	61 (*2)	
	62 (*3)	
	68 (*4)	
	69 (*5)	
	70 (*6)	
H1	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	
a1	66 (LHD)	Back Door Right
	74 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
* 8 : 2KD-FTV, 5L-E