



Automatic Light Control

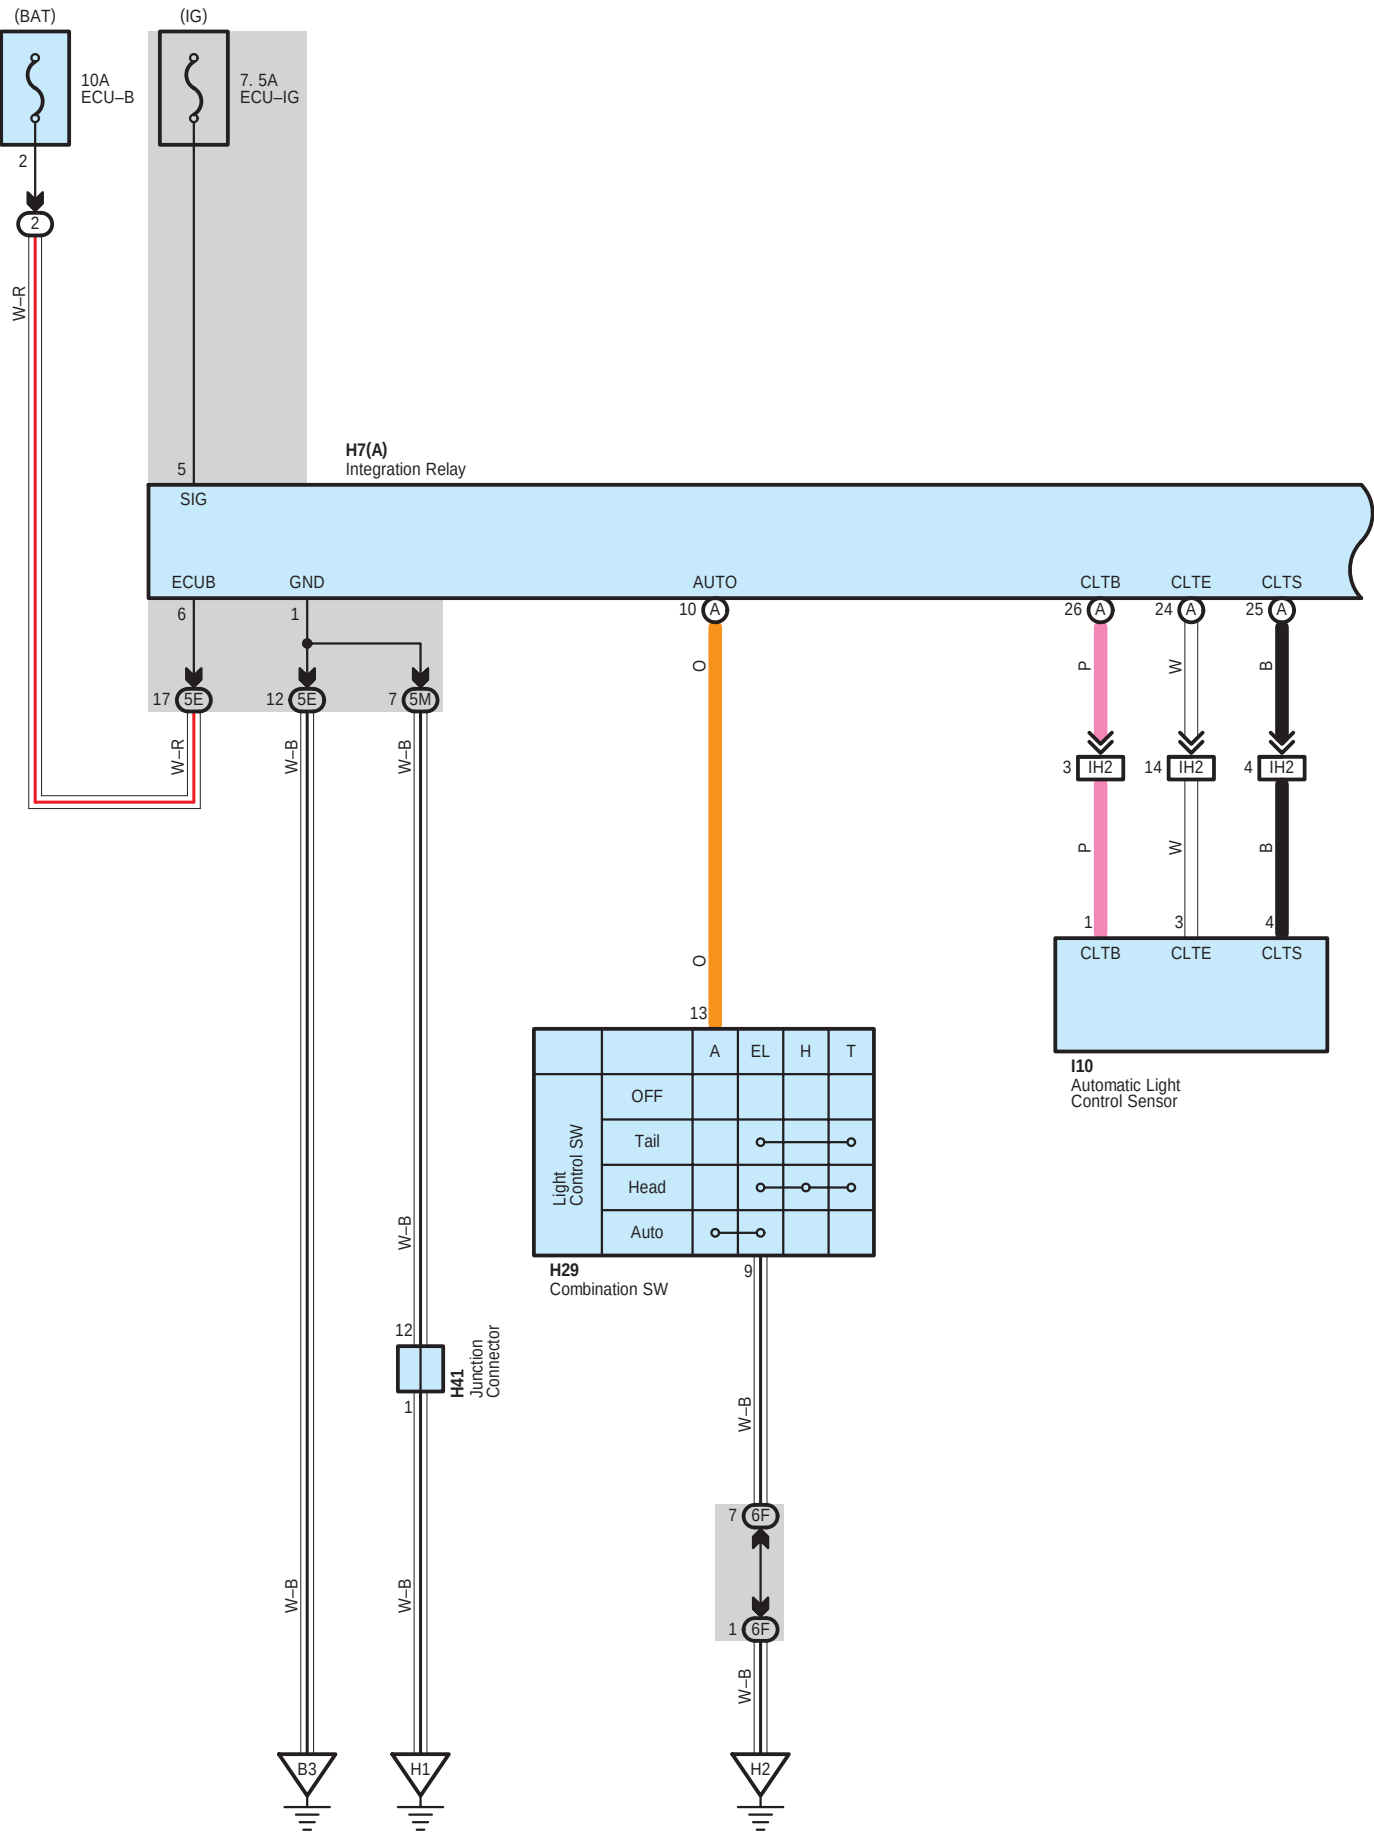

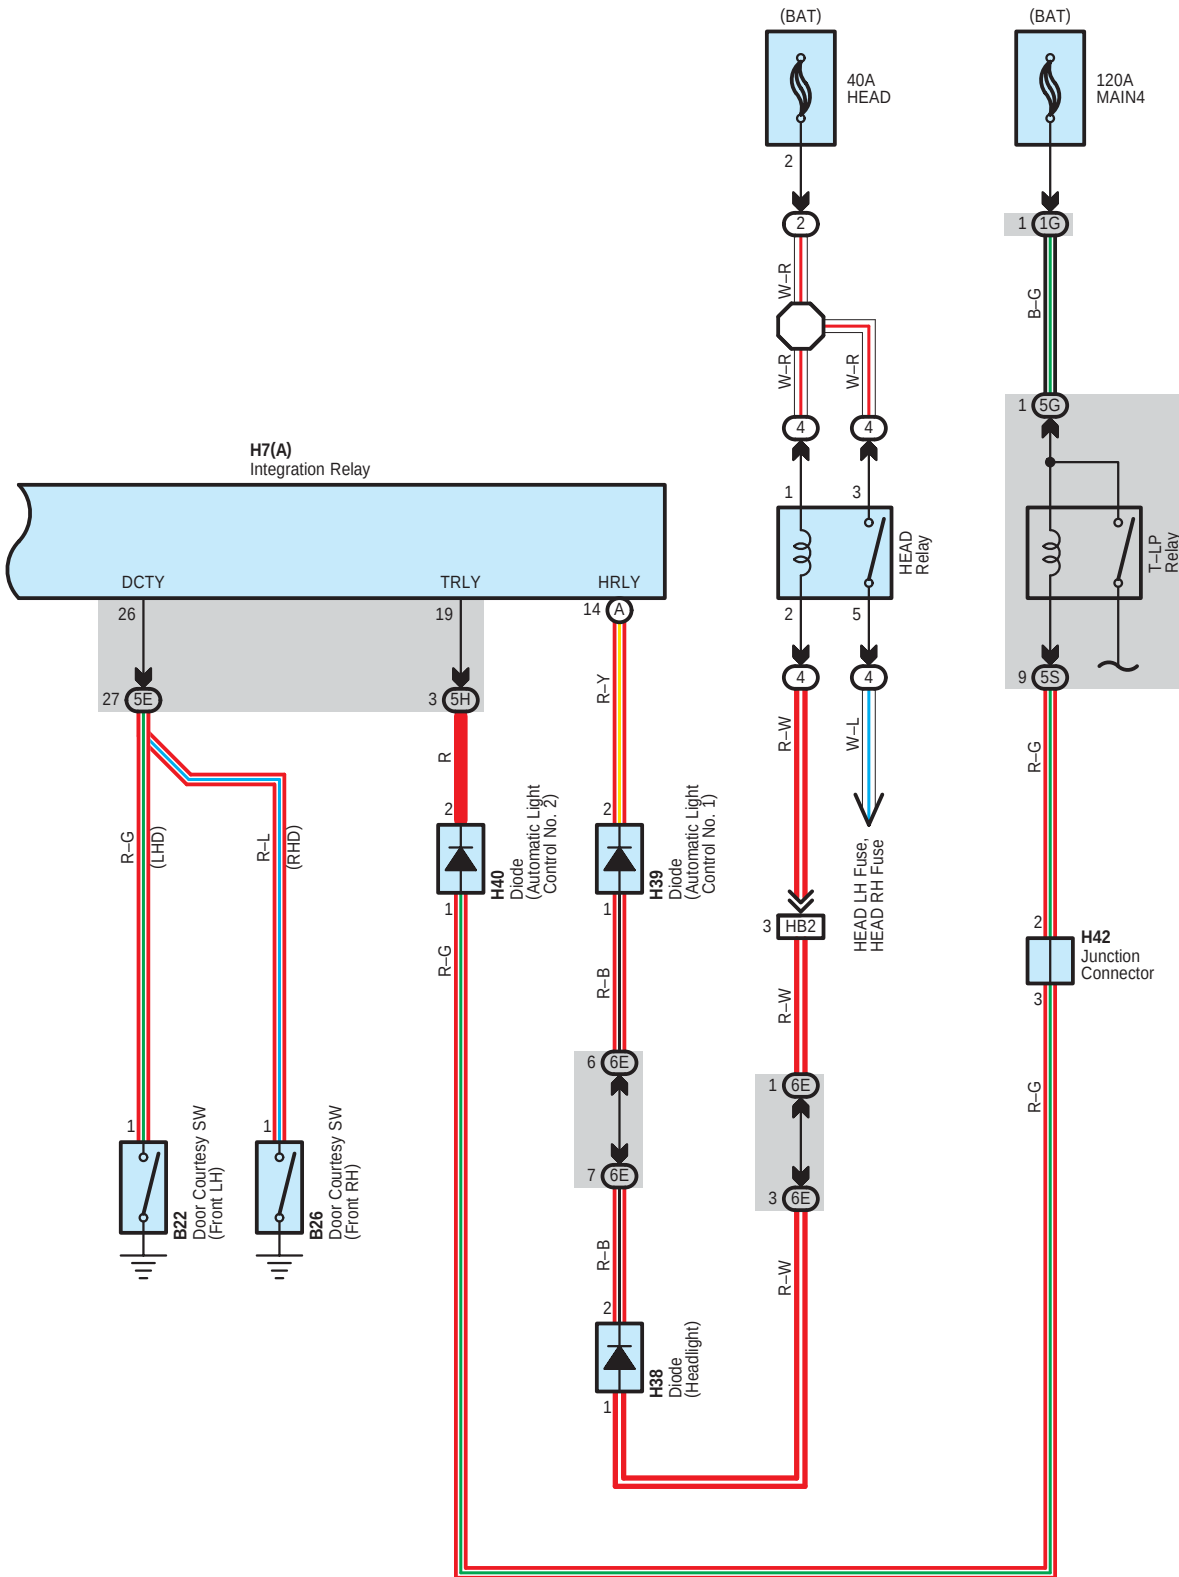

Automatic Light Control

System Outline

- * Automatic light control, with a light control SW in AUTO position and an ignition SW in ON position, detects whether the area surrounding an automatic light control sensor is light or dark, and automatically turns on/off a tail lamp and a headlamp.
- * When the driver's door is opened after an ignition SW is turned from ON to OFF, with a light control SW in AUTO position, automatic light control automatically turns off a tail lamp and a headlamp.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B22	58 (RHD)	H38	57 (RHD)	H42	57 (RHD)
B26	58 (RHD)	H39	57 (RHD)	I10	56 (RHD)
H7	A	H40	57 (RHD)		
H29	57 (RHD)	H41	57 (RHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)
4	29	Instrument Panel R/B (Under the Glove Box)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5G		
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
5S		
6E	38 (RHD)	
6F		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HB2	72 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
IH2	72 (RHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)

▽ : Ground Points

Code	See Page	Ground Points Location
B3	68 (*4)	Front Floor Panel Left
H1	72 (RHD)	Instrument Panel Reinforcement
H2		

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E

