


Headlight Beam Level Control

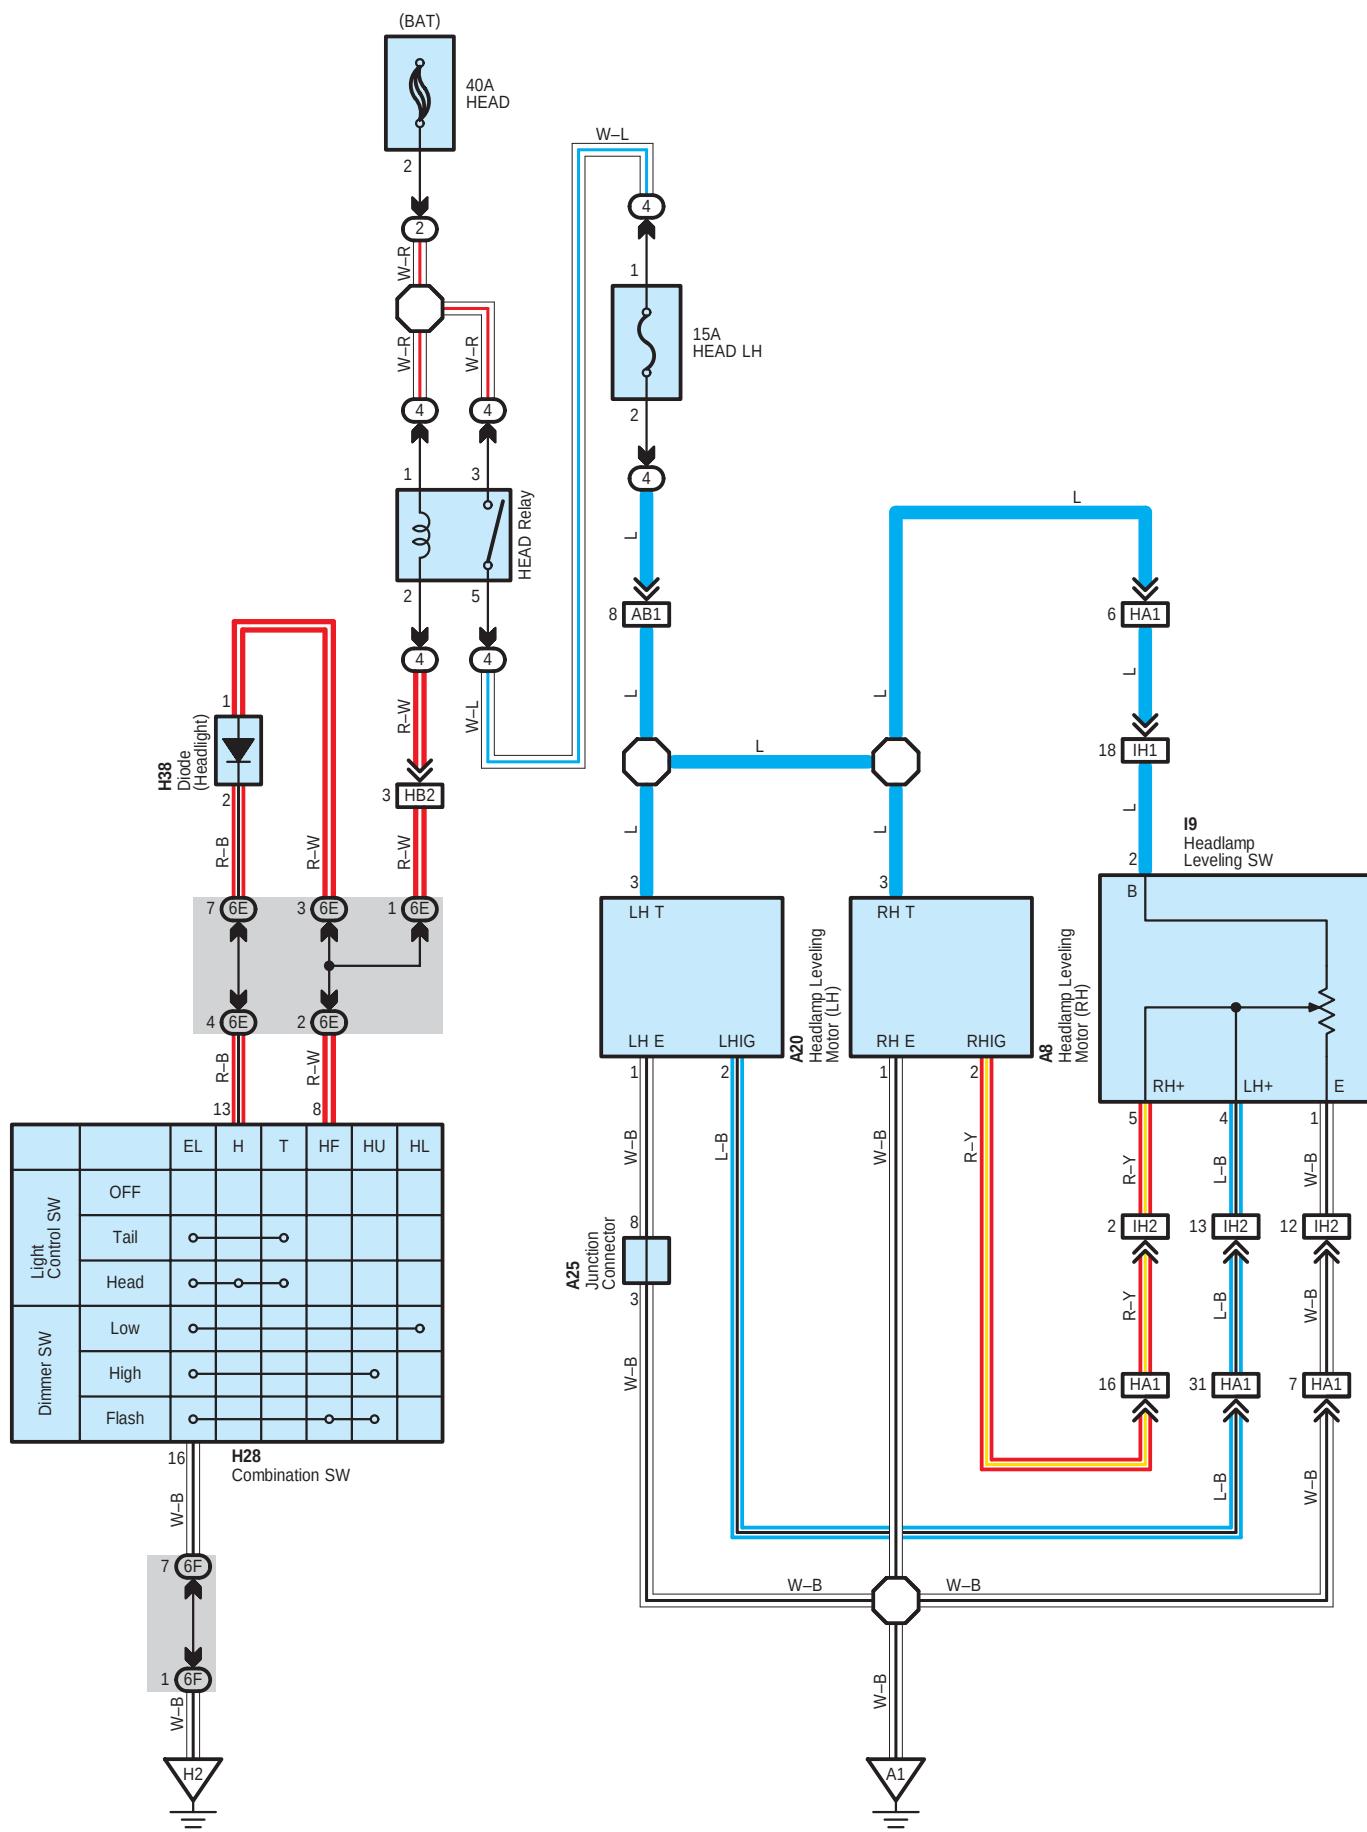

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	48 (LHD)	A25	48 (LHD)	H38	49 (LHD)
A20	48 (LHD)	H28	49 (LHD)	I9	48 (LHD)

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)
4	29	Instrument Panel R/B (Under the Glove Box)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
6E	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
6F		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AB1	64 (LHD)	Cowl to Head Lamp Wire and Engine Room Main Wire (Left Side of the Instrument Panel J/B)
HA1	64 (LHD)	Instrument Panel Wire and Cowl to Head Lamp Wire (Under the Instrument Panel J/B)
HB2	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
IH1	64 (LHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IH2		

 : Ground Points

Code	See Page	Ground Points Location
A1	64 (LHD)	Dash Panel Right
H2	64 (LHD)	Instrument Panel Reinforcement