


Rear Wiper and Washer

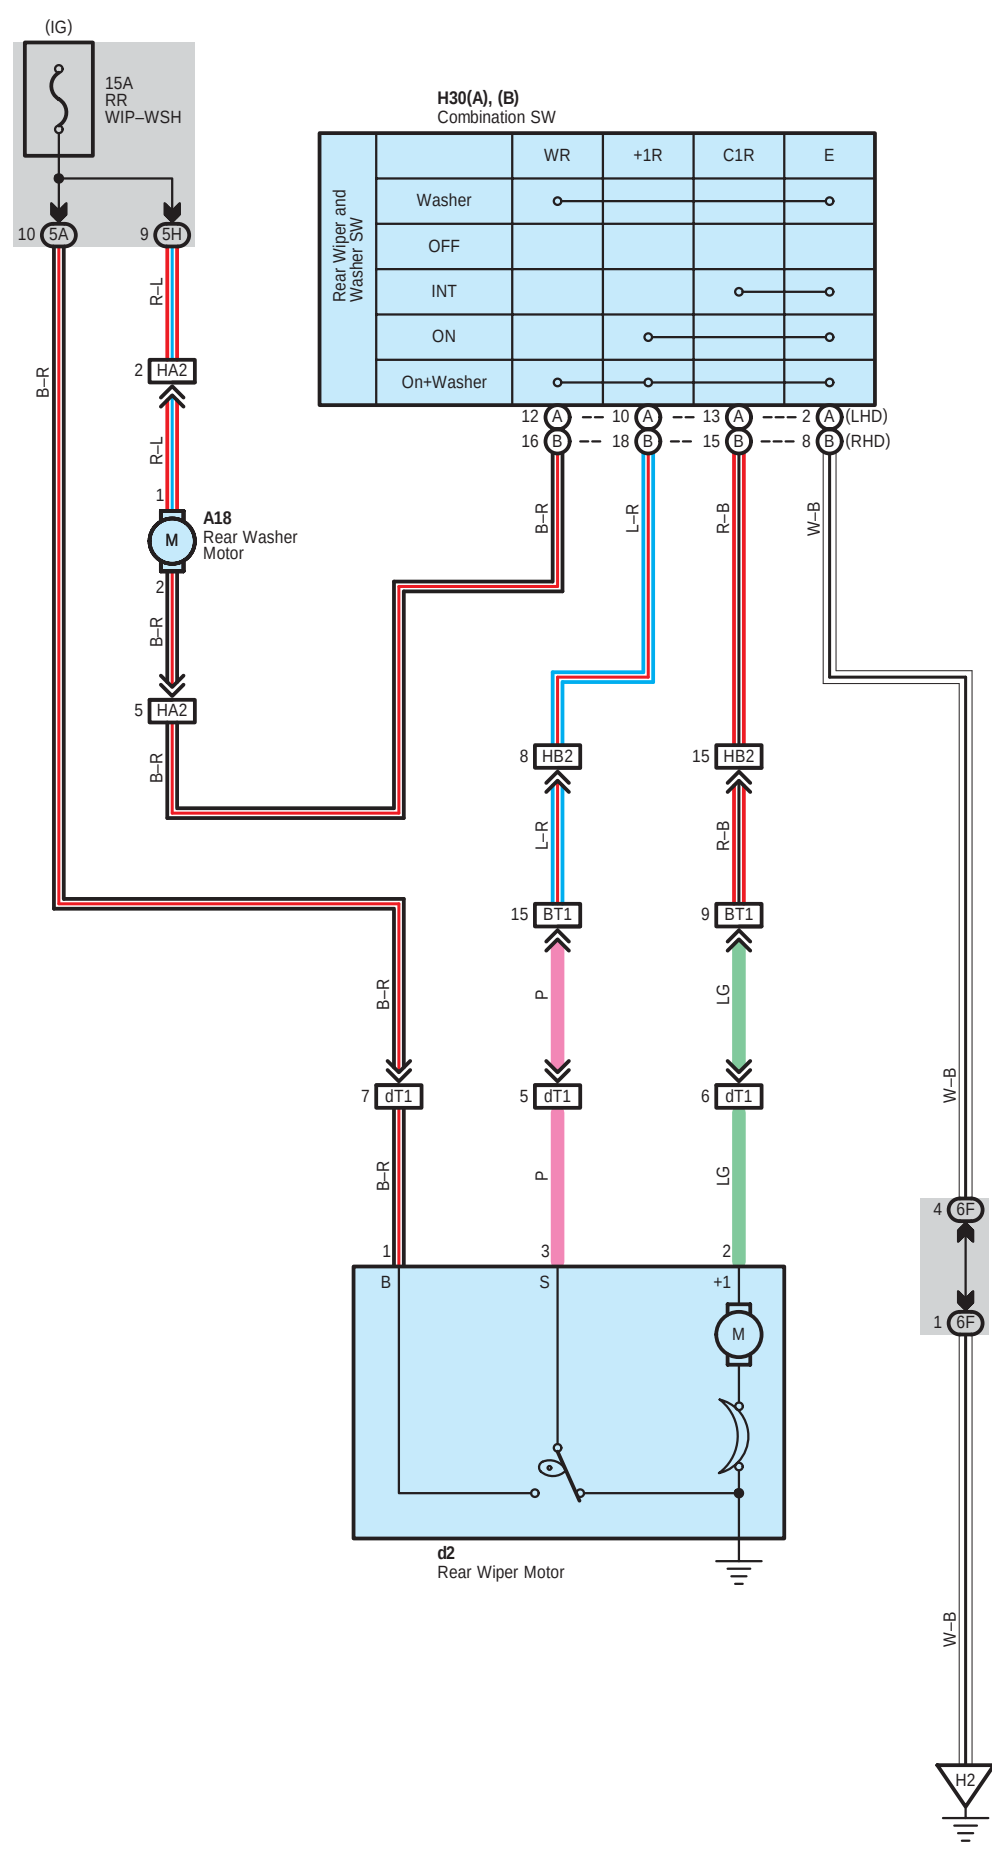

System Outline

When the ignition SW is turned on, current flows to TERMINAL 1 of the rear washer motor, TERMINAL 1 of the rear wiper motor through the RR WIP-WSH fuse.

1. Rear Wiper Normal Operation

With the ignition SW turned on and rear wiper and washer SW turned to ON position, current flows to TERMINAL 1 of the rear wiper motor to TERMINAL 10 (LHD), 18 (RHD) of the rear wiper and washer SW to TERMINAL 2 (LHD), 8 (RHD) to GROUND. Causing the rear wiper motor operated.

2. Washer Operation

With the ignition SW turned on and the rear wiper and washer SW turned to ON position, when the wiper SW is turned further (ON+ washer position), current flows to TERMINAL 1 of the rear washer motor to TERMINAL 2 to TERMINAL 12 (LHD), 16 (RHD) of the rear wiper and washer SW to TERMINAL 2 (LHD), 8 (RHD) to GROUND so that the rear washer motor rotates and the window washer emits a water, only while the switch is fully turned.

When the wiper SW is off and then turned to washer position (Wiper off side), only the washer operates.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A18	48 (LHD)	H30	A 49 (LHD)	d2	51 (LHD)
	56 (RHD)		B 57 (RHD)		59 (RHD)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5A	30	Roof Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
6F	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BT1	64 (LHD)	Engine Room Main Wire and Roof Wire (Cowl Side Panel LH)
	72 (RHD)	
HA2	64 (LHD)	Instrument Panel Wire and Cowl to Head Lamp Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB2	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
dT1	66 (LHD)	Back Door No.3 Wire and Roof Wire (Rear of the Left Side of the Roof Panel)
	74 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
H2	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	