



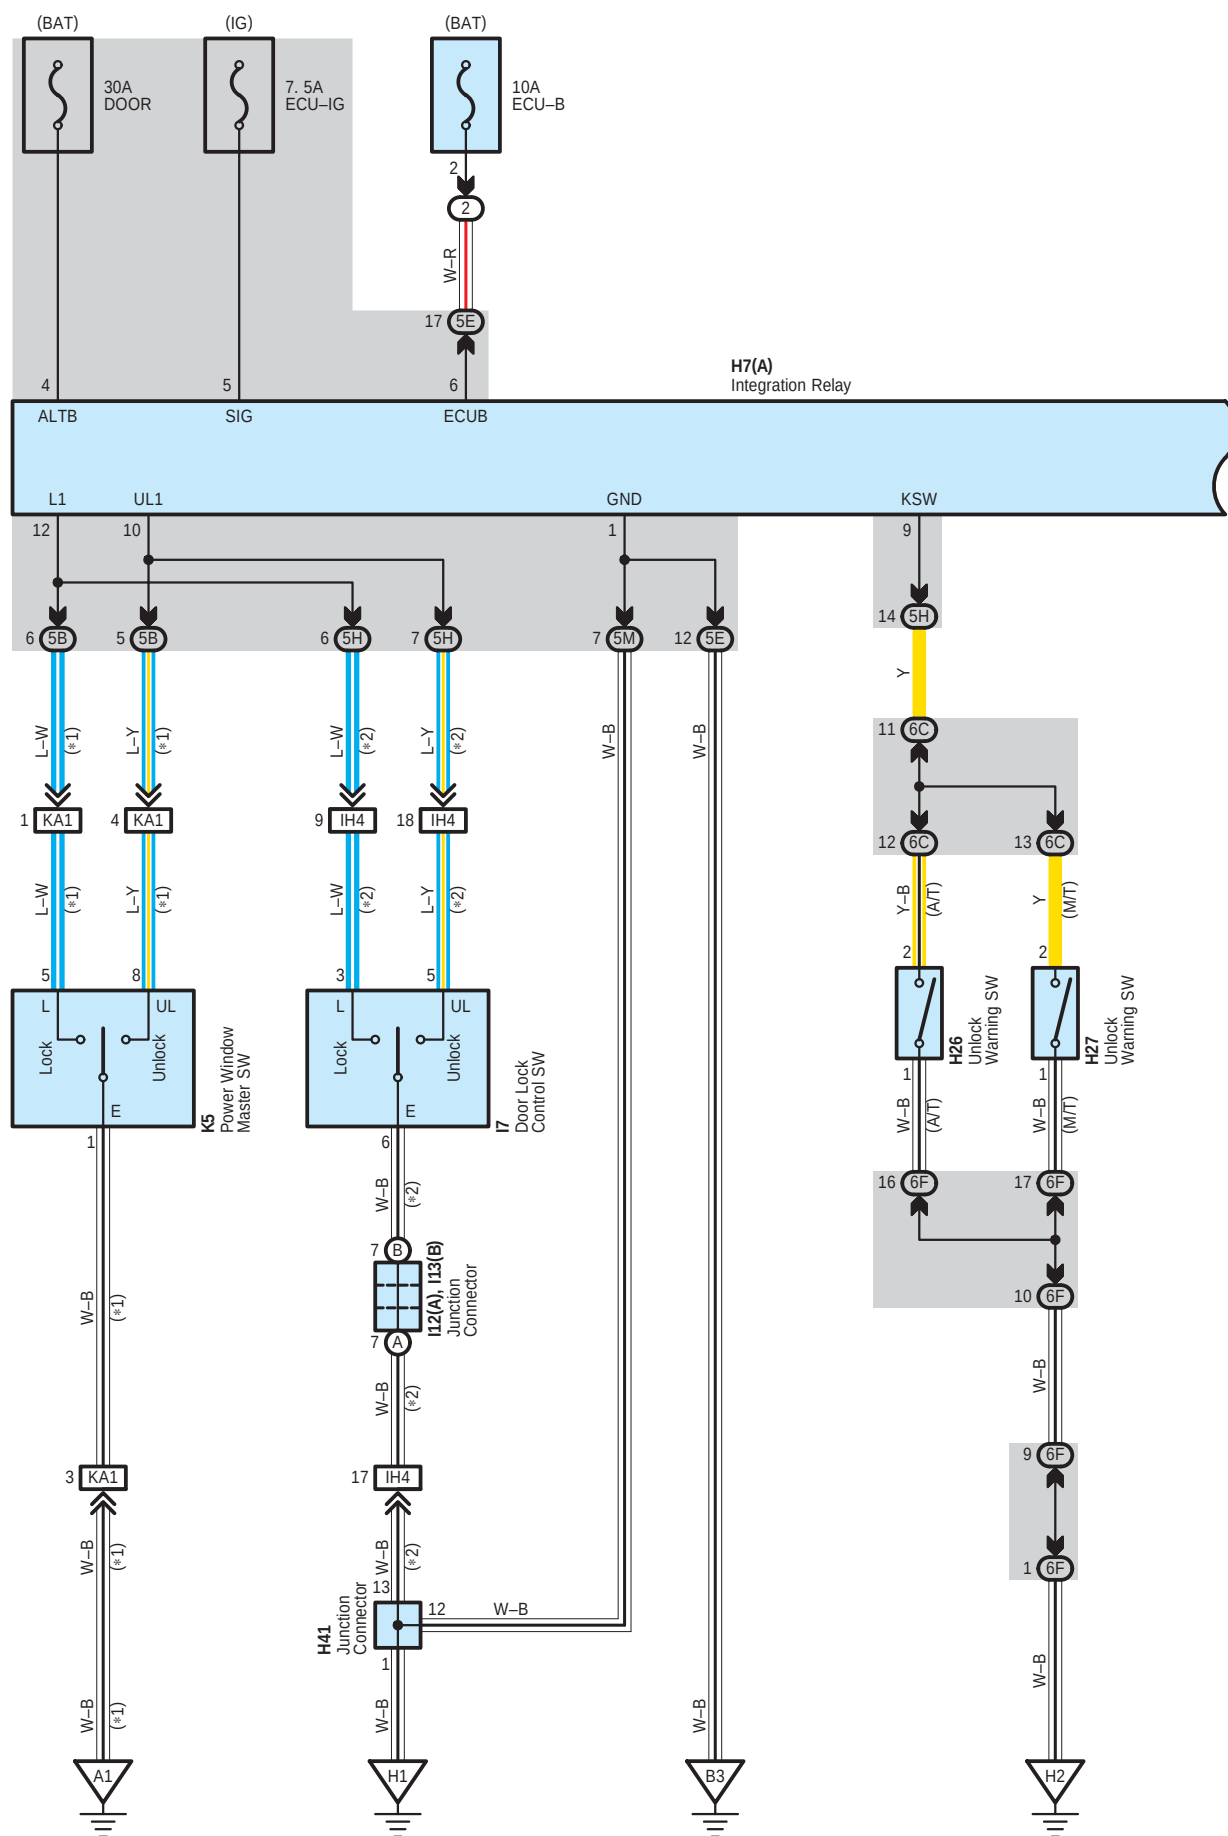


- * 1 : w/ Power Window
- * 2 : w/o Power Window
- * 3 : w/ Wireless Door Lock Control
- * 4 : 2TR-FE w/o Wireless Door Lock Control, 2KD-FTV w/o Wireless Door Lock Control


H7(A) Integration Relay

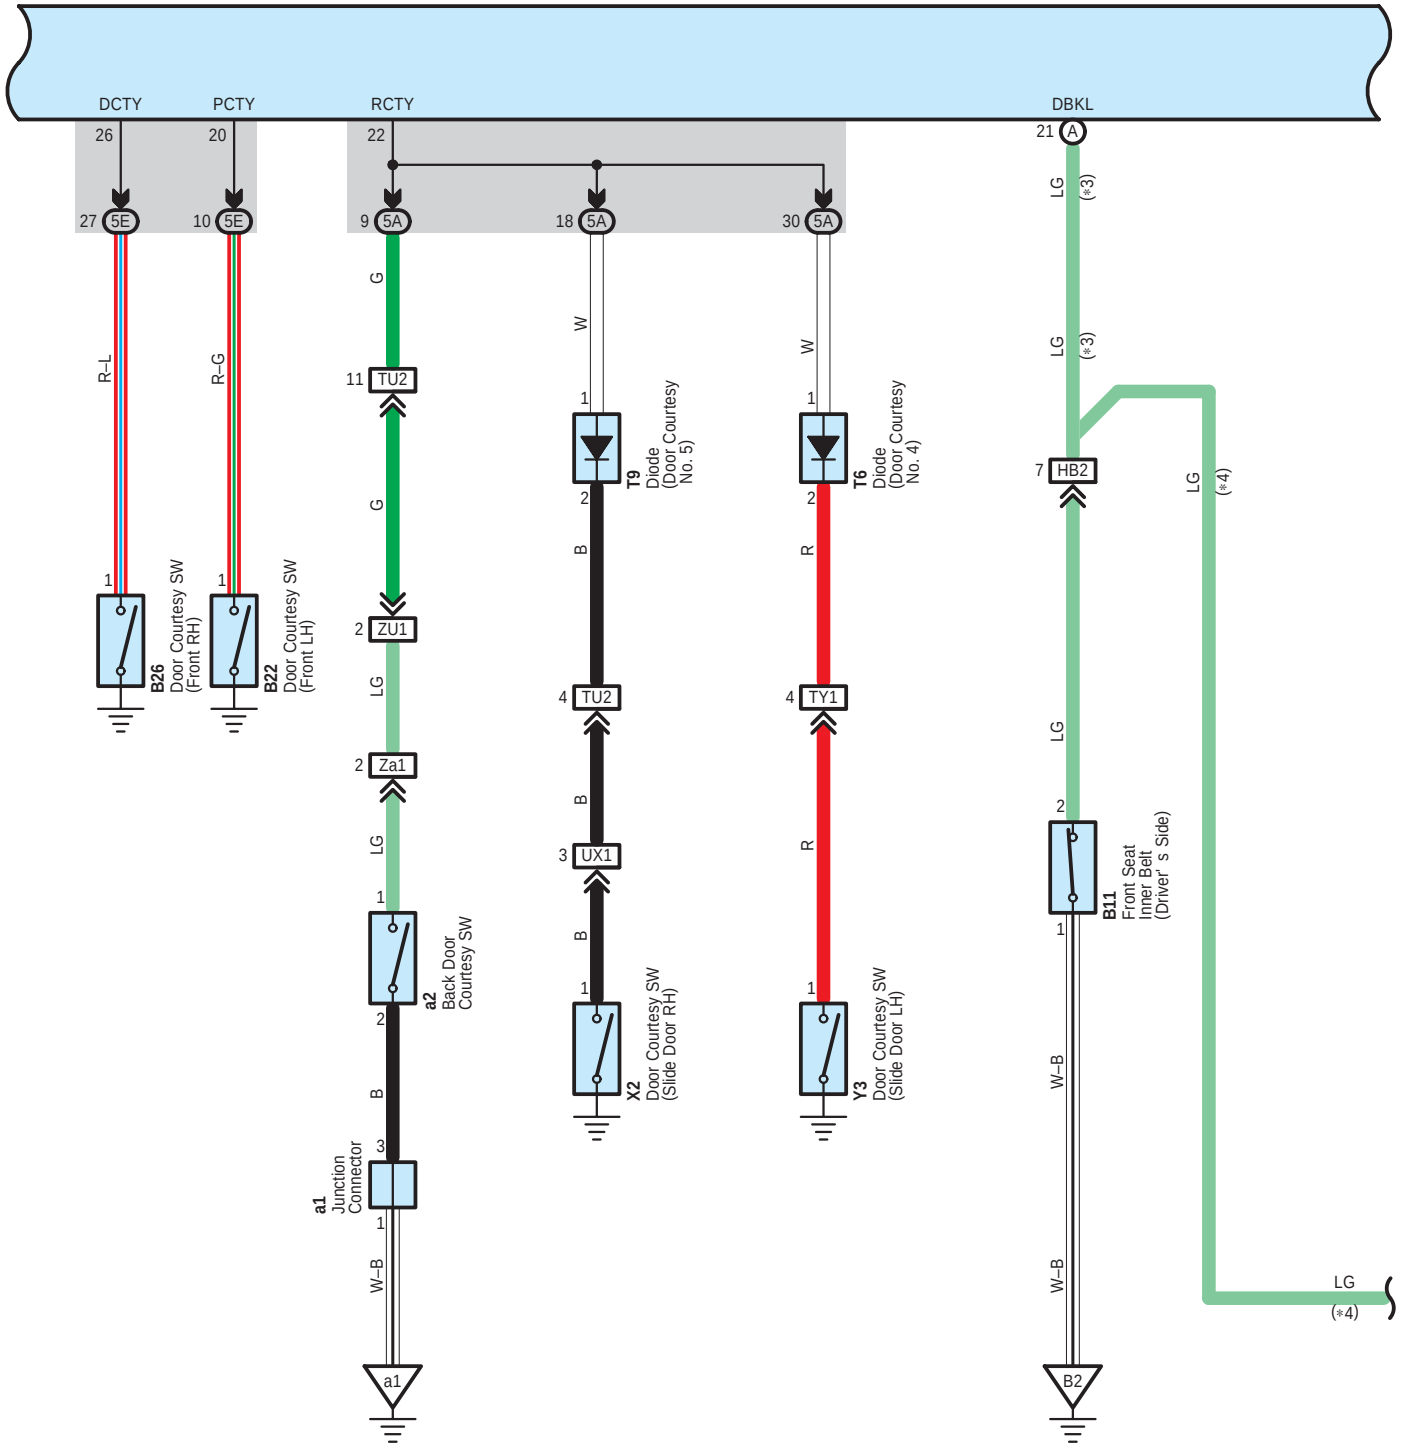

Door Lock Control (RHD)

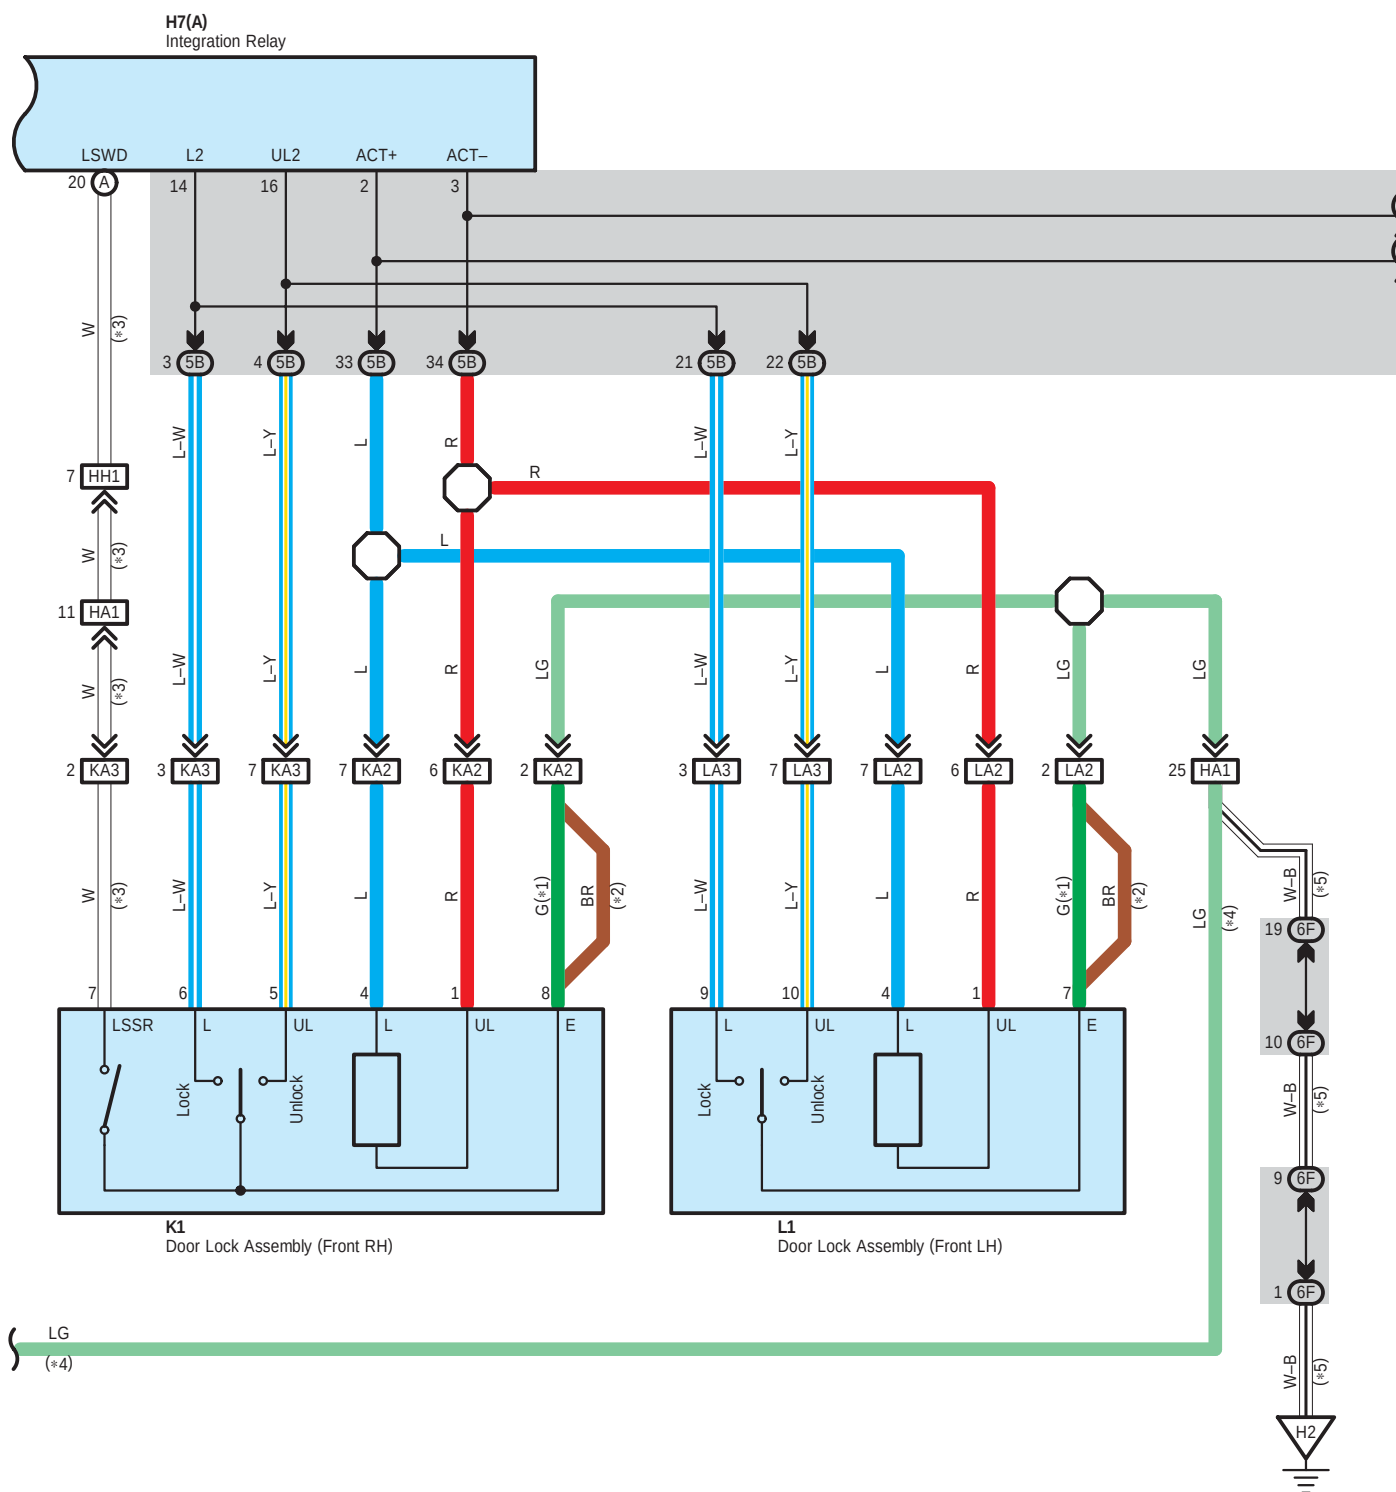

- * 1 : w/ Power Window
- * 2 : w/o Power Window
- * 3 : w/ Wireless Door Lock Control
- * 4 : 2TR-FE w/o Wireless Door Lock Control, 2KD-FTV w/o Wireless Door Lock Control
- * 5 : 5L-E, 2TR-FE *3, 2KD-FTV *3

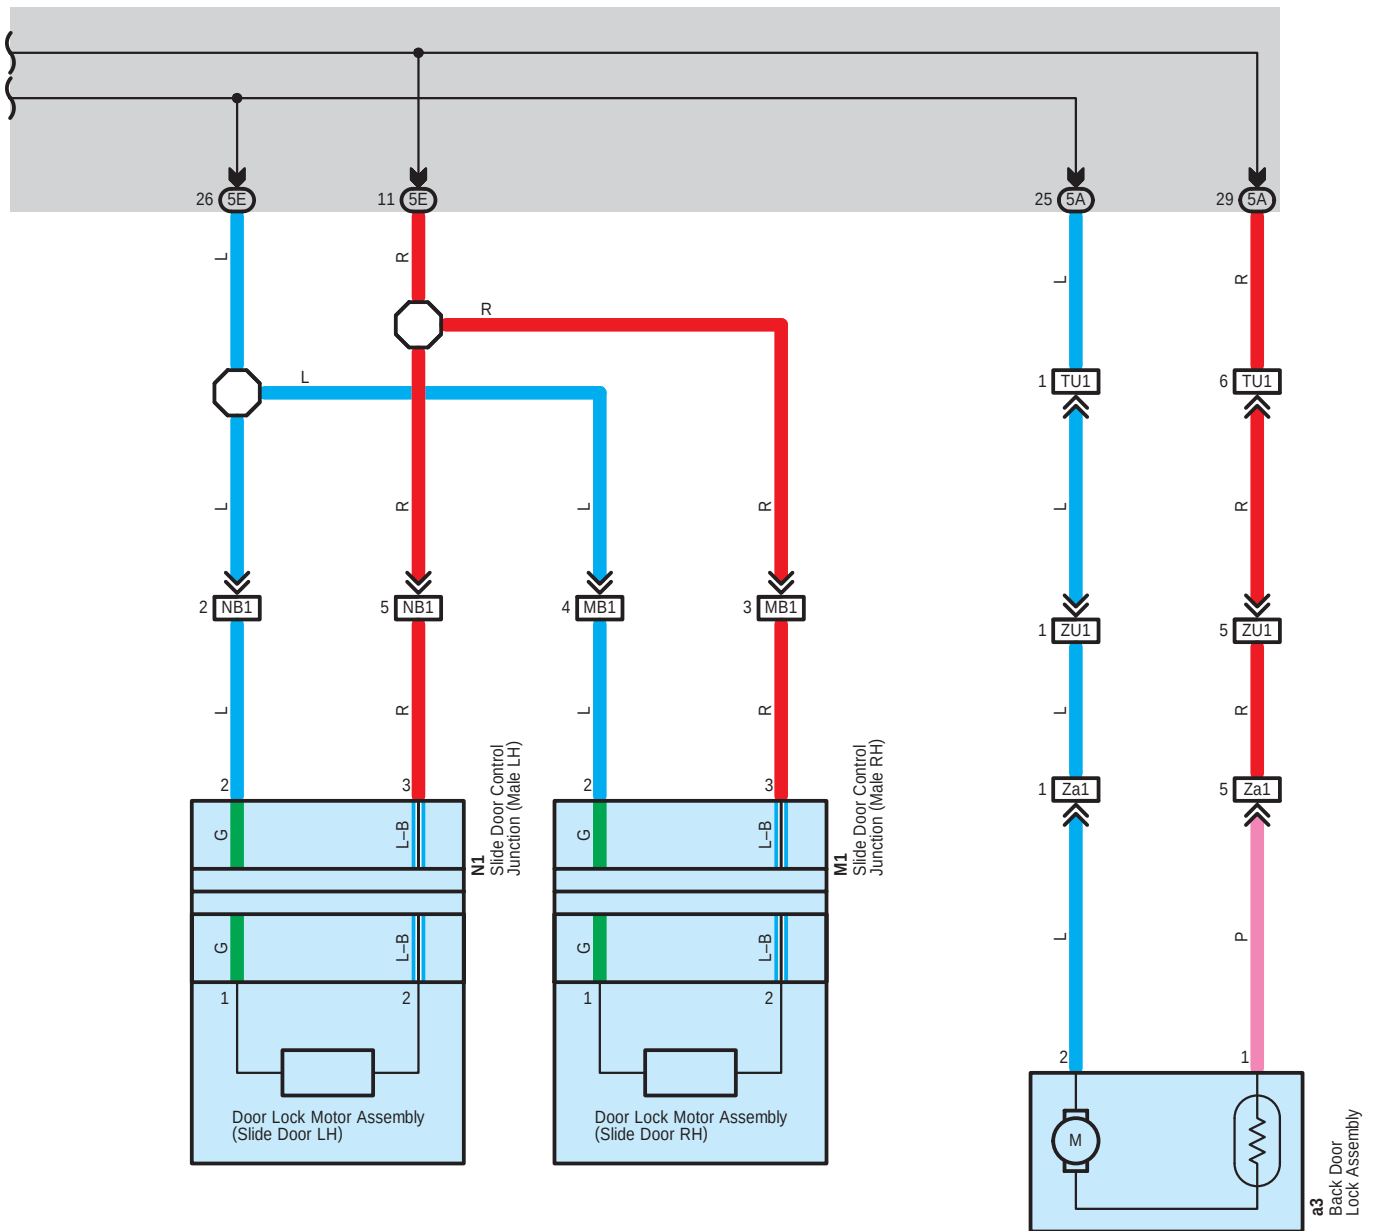

Door Lock Control (RHD)

System Outline

1. Manual Lock Operation

When the door lock control SW or driver's side door key lock and unlock SW are operated to LOCK position, a lock signal is input to TERMINAL 14 of the integration relay and causes the integration relay to function. The current flows from TERMINAL 4 of the integration relay to TERMINAL 2 to the door lock motors to TERMINAL 3 of the integration relay to TERMINAL 1 to GROUND and the door lock motors locks the door.

2. Manual Unlock Operation

When the door lock control SW or driver's side door key lock and unlock SW are operated to UNLOCK position, an unlock signal is input to TERMINAL 16 of the integration relay and causes the integration relay to function. The current flows from TERMINAL 4 of the integration relay to TERMINAL 3 to the door lock motors to TERMINAL 2 of the integration relay to TERMINAL 1 to GROUND and the door lock motors unlocks the door.

3. Ignition Key Reminder Operation

The doors can not be locked unless the key is removed from the ignition key cylinder.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B11	52 (*4)	I7	56 (RHD)	T6	58 (RHD)
	53 (*5)	I12	A 56 (RHD)	T9	58 (RHD)
B22	58 (RHD)	I13	B 56 (RHD)	X2	59 (RHD)
B26	58 (RHD)	K1	58 (RHD)	Y3	59 (RHD)
H7	A 57 (RHD)	K5	58 (RHD)	a1	59 (RHD)
H26	57 (RHD)	L1	58 (RHD)	a2	59 (RHD)
H27	57 (RHD)	M1	58 (RHD)	a3	59 (RHD)
H41	57 (RHD)	N1	58 (RHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5A	30	Roof Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5B	30	Cowl to Head Lamp Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
6C	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6F		

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HA1	72 (RHD)	Instrument Panel Wire and Cowl to Head Lamp Wire (Under the Instrument Panel J/B)
HB2	72 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
HH1	72 (RHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IH4	72 (RHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
KA1	73 (RHD)	Front Door RH Wire and Cowl to Head Lamp Wire (Right Kick Panel)
KA2		
KA3		
LA2	73 (RHD)	Front Door LH Wire and Cowl to Head Lamp Wire (Left Kick Panel)
LA3		
MB1	68 (*4)	Pillar No.1 Wire and Engine Room Main Wire (RH Side Battery Room)
	69 (*5)	
	70 (*6)	
NB1	68 (*4)	Pillar No.2 Wire and Engine Room Main Wire (LH Side Battery Room)
	69 (*5)	
	70 (*6)	
TU1	74 (RHD)	Roof Wire and Roof No.2 Wire (Rear of the Left Side of the Roof Panel)
TU2		
TY1	74 (RHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
UX1	74 (RHD)	Roof No.2 Wire and Luggage Room No.2 Wire (Right Quarter Panel)
ZU1	74 (RHD)	Back Door No.1 Wire and Roof No.2 Wire (Rear of the Right Side of the Roof Panel)
Za1	74 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Right Side of Back Door)

 : Ground Points

Code	See Page	Ground Points Location
A1	72 (RHD)	Dash Panel Right
B2	68 (*4)	Front Floor Panel Right
	69 (*5)	
	70 (*6)	
B3	68 (*4)	Front Floor Panel Left
	69 (*5)	
	70 (*6)	
H1	72 (RHD)	Instrument Panel Reinforcement
H2		
a1	74 (RHD)	Back Door Right

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
* 8 : 2KD-FTV, 5L-E