


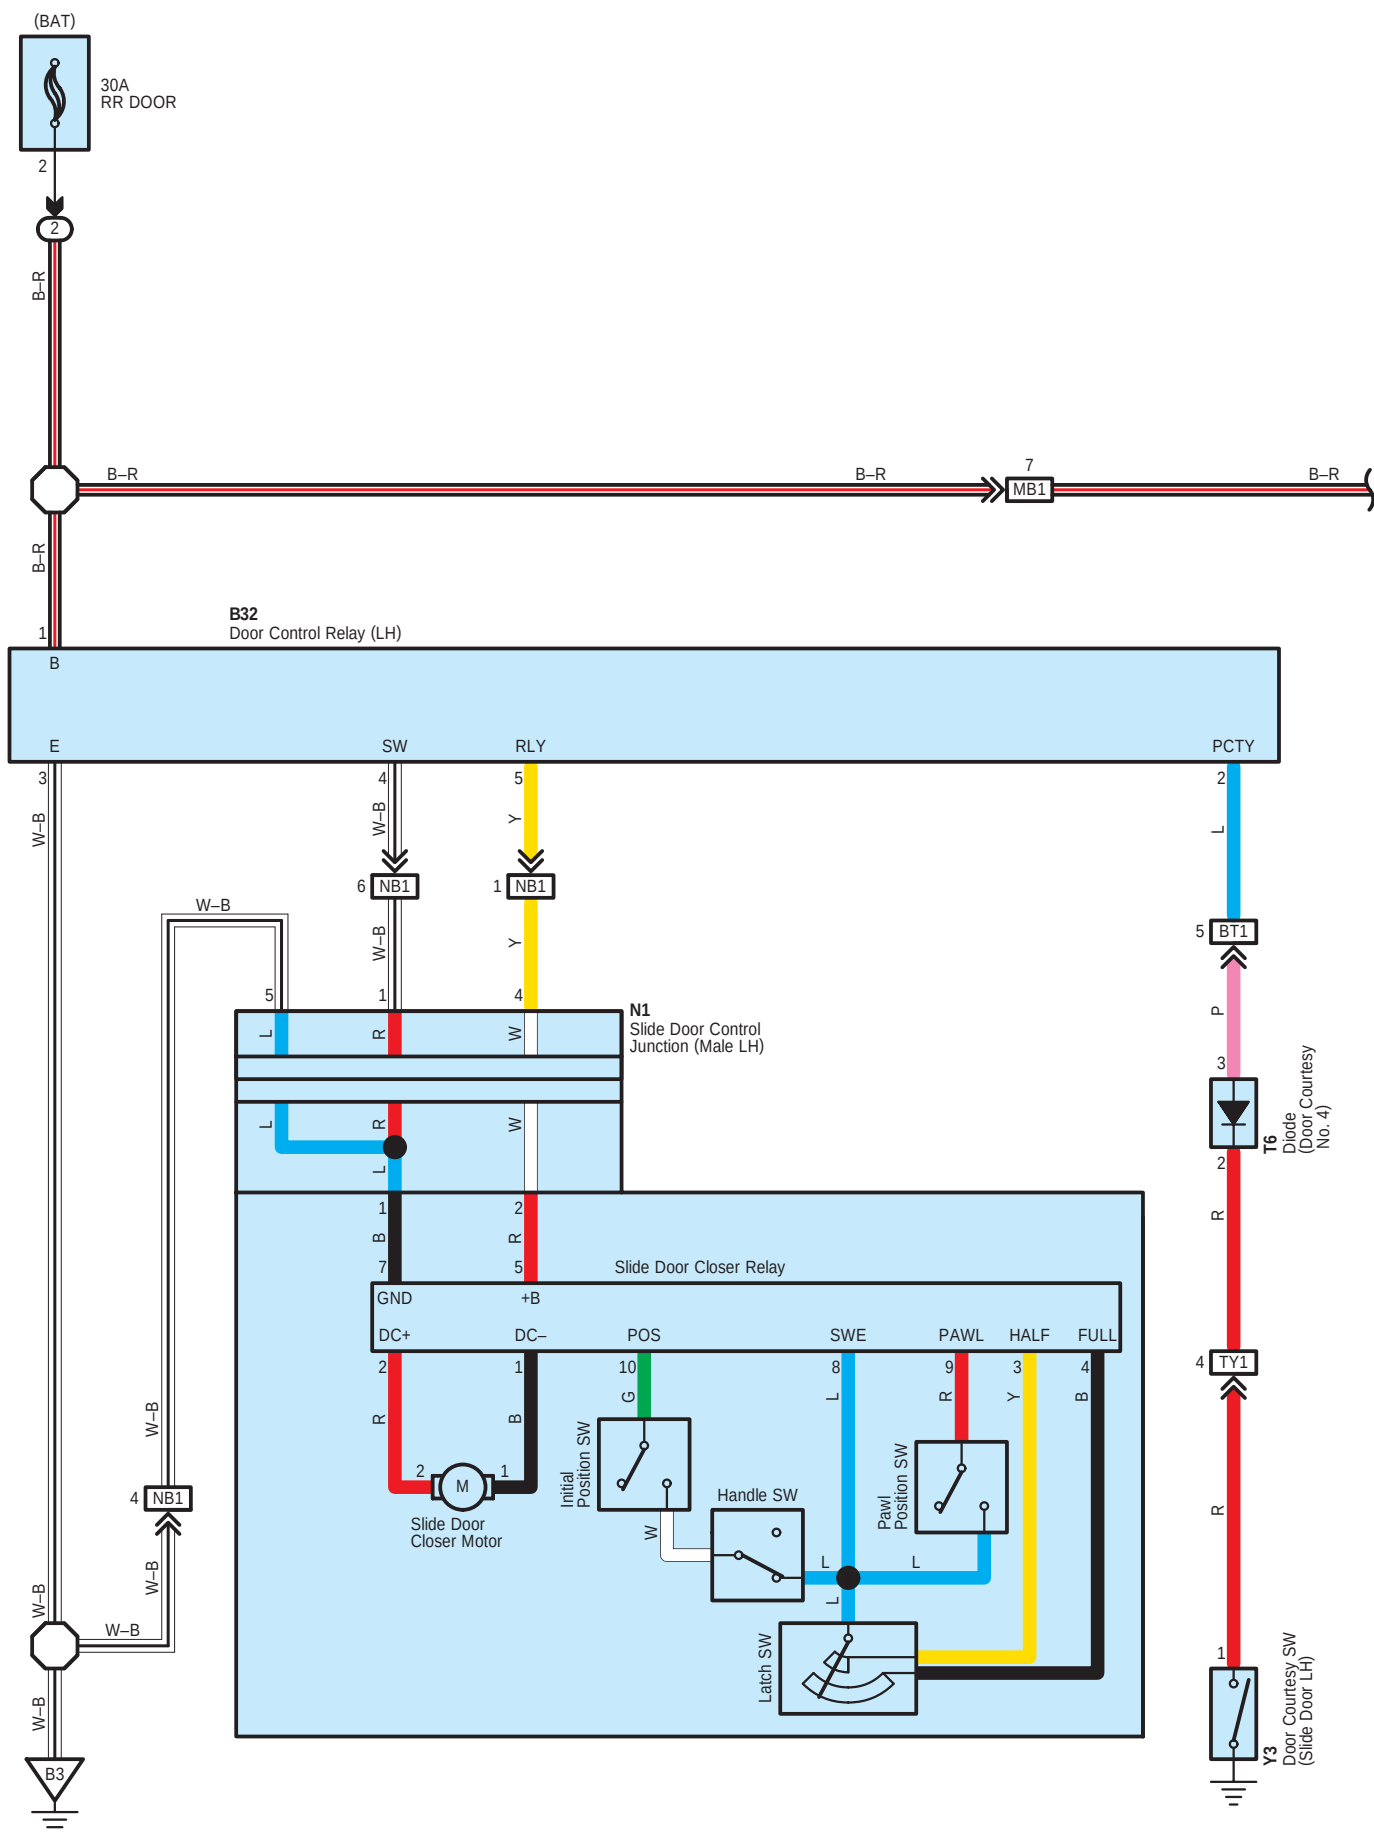

Door Closer

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B32	58 (RHD)	N1	58 (RHD)	X2	59 (RHD)
M1	58 (RHD)	T6	58 (RHD)	Y3	59 (RHD)
M2	58 (RHD)	T9	58 (RHD)		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BT1	72 (RHD)	Engine Room Main Wire and Roof Wire (Cowl Side Panel LH)
MB1	68 (*4)	Pillar No.1 Wire and Engine Room Main Wire (RH Side Battery Room)
NB1	68 (*4)	Pillar No.2 Wire and Engine Room Main Wire (LH Side Battery Room)
TU2	74 (RHD)	Roof Wire and Roof No.2 Wire (Rear of the Left Side of the Roof Panel)
TY1	74 (RHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
UX1	74 (RHD)	Roof No.2 Wire and Luggage Room No.2 Wire (Right Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
B2	68 (*4)	Front Floor Panel Right
B3	68 (*4)	Front Floor Panel Left

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E

