




Wireless Door Lock Control (LHD)

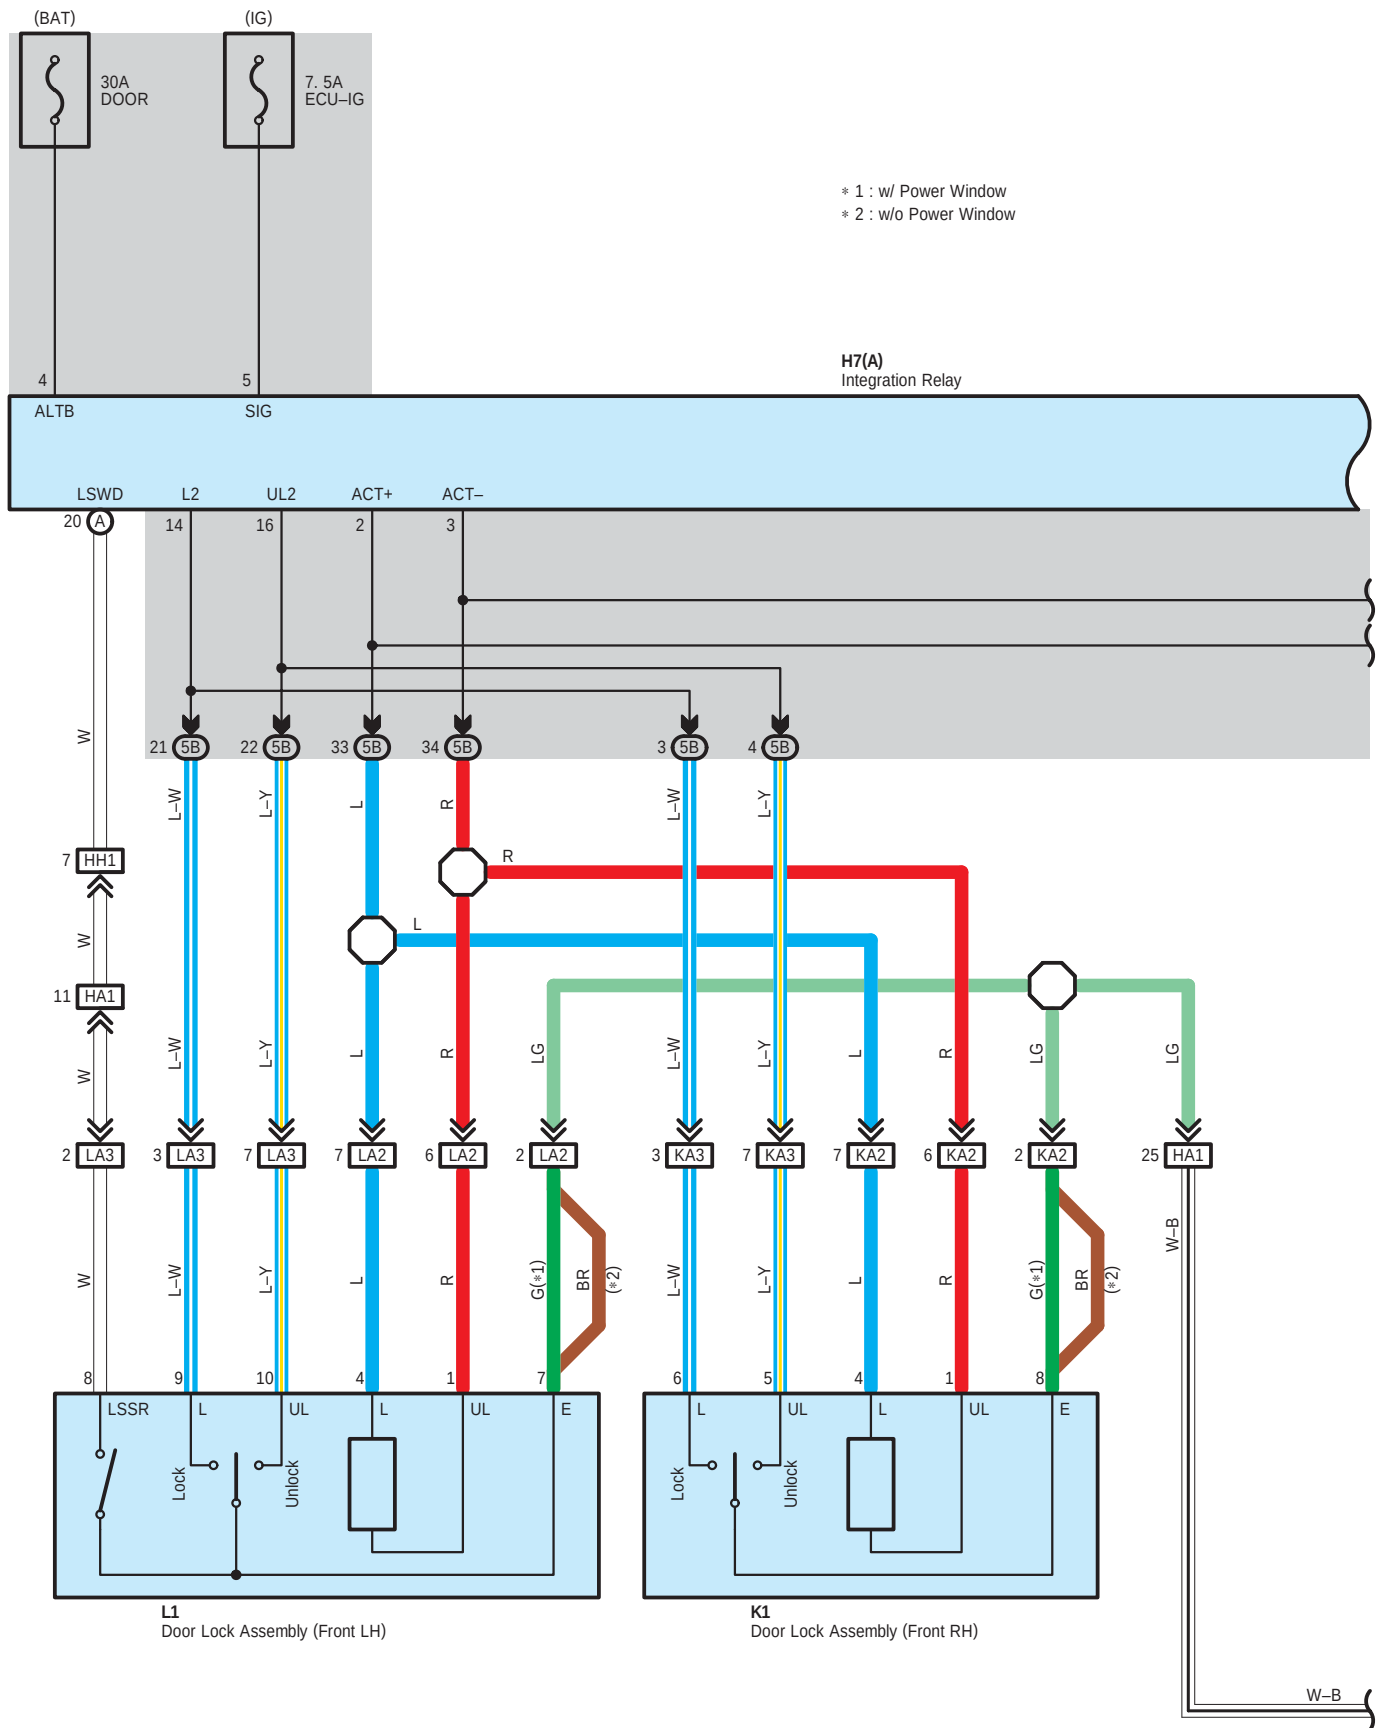


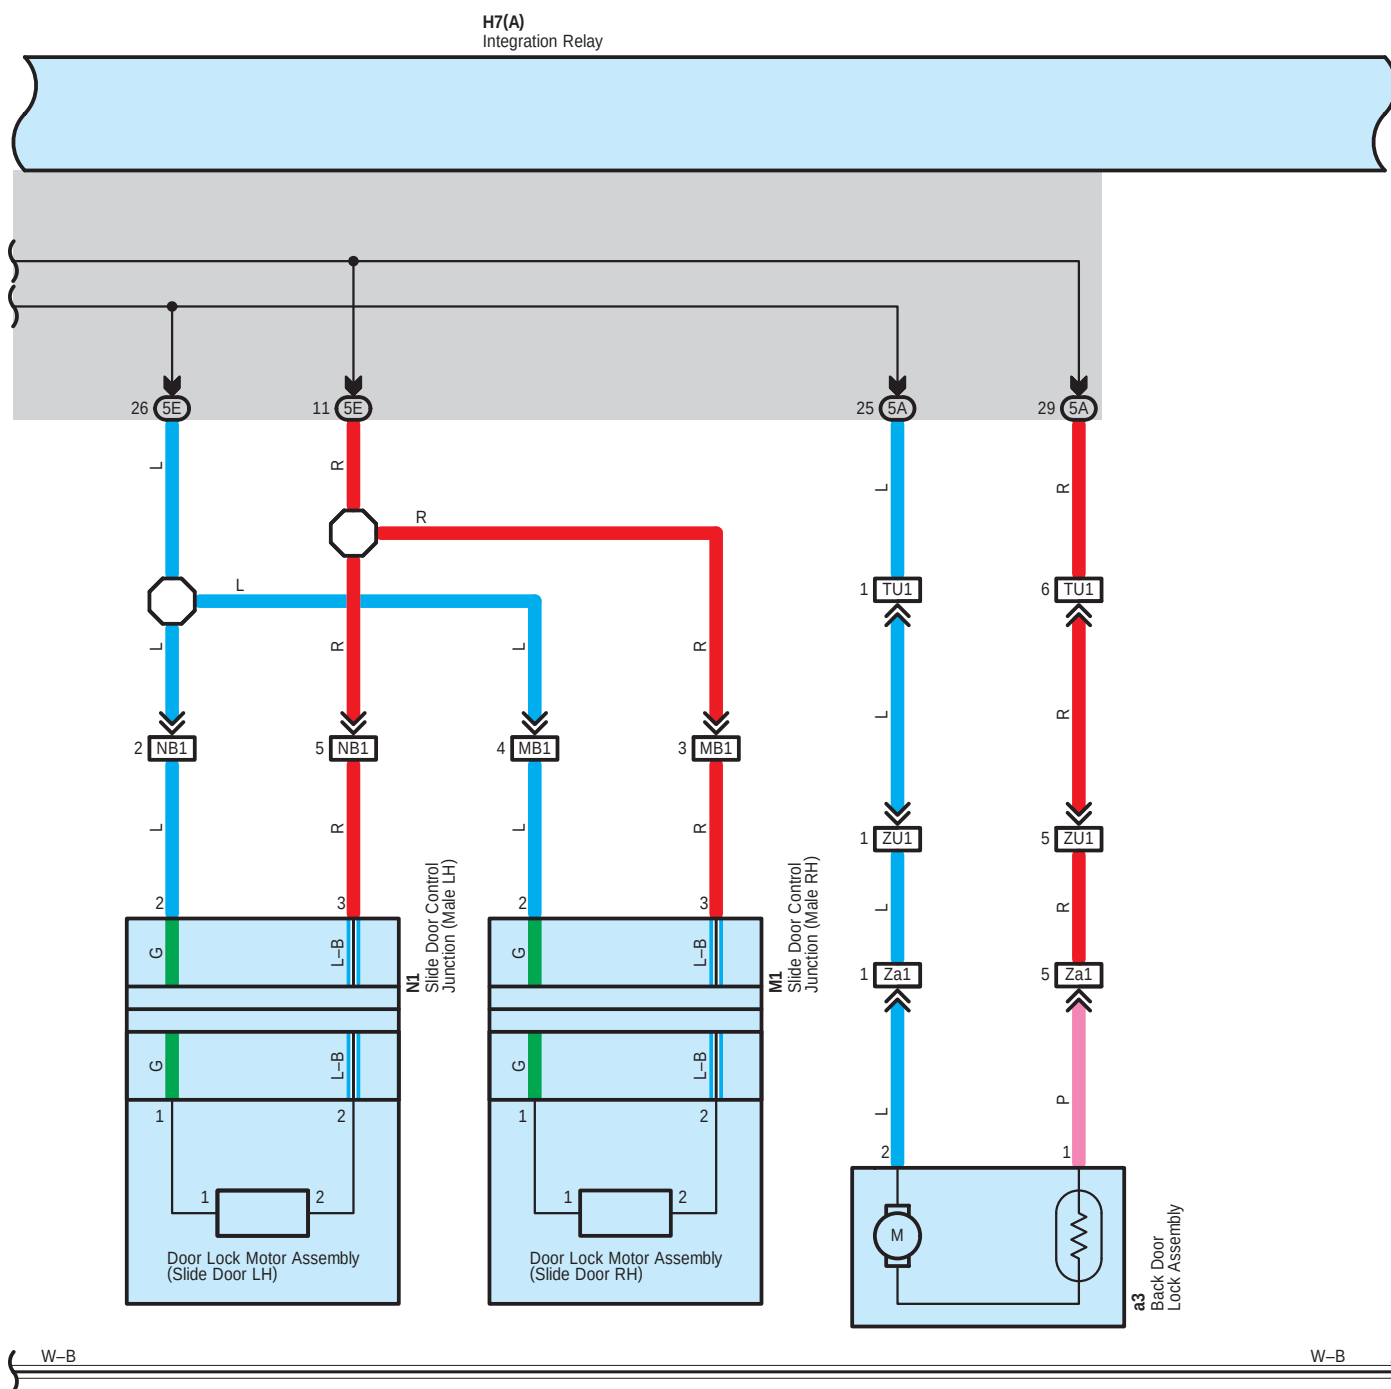

Wireless Door Lock Control (LHD)

* 3 : 6 Speaker
* 4 : Except *3

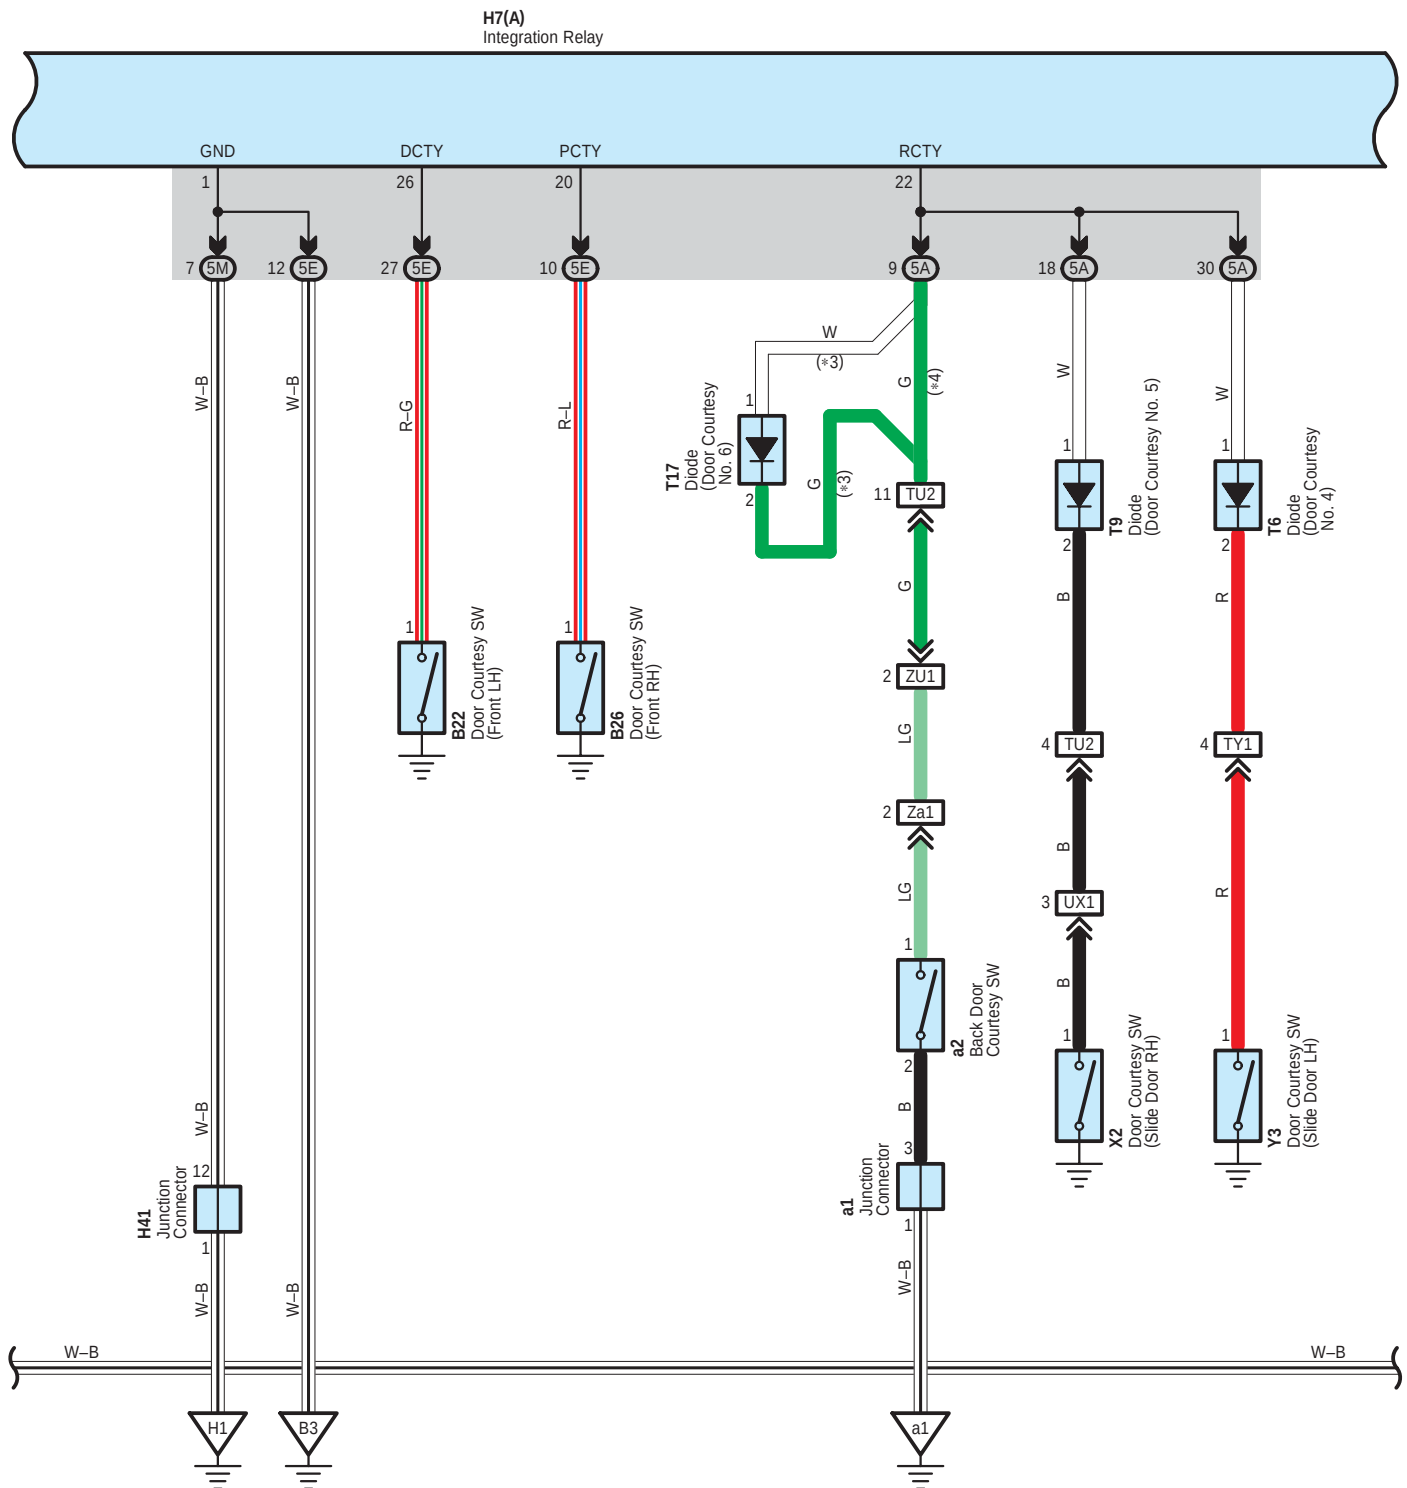

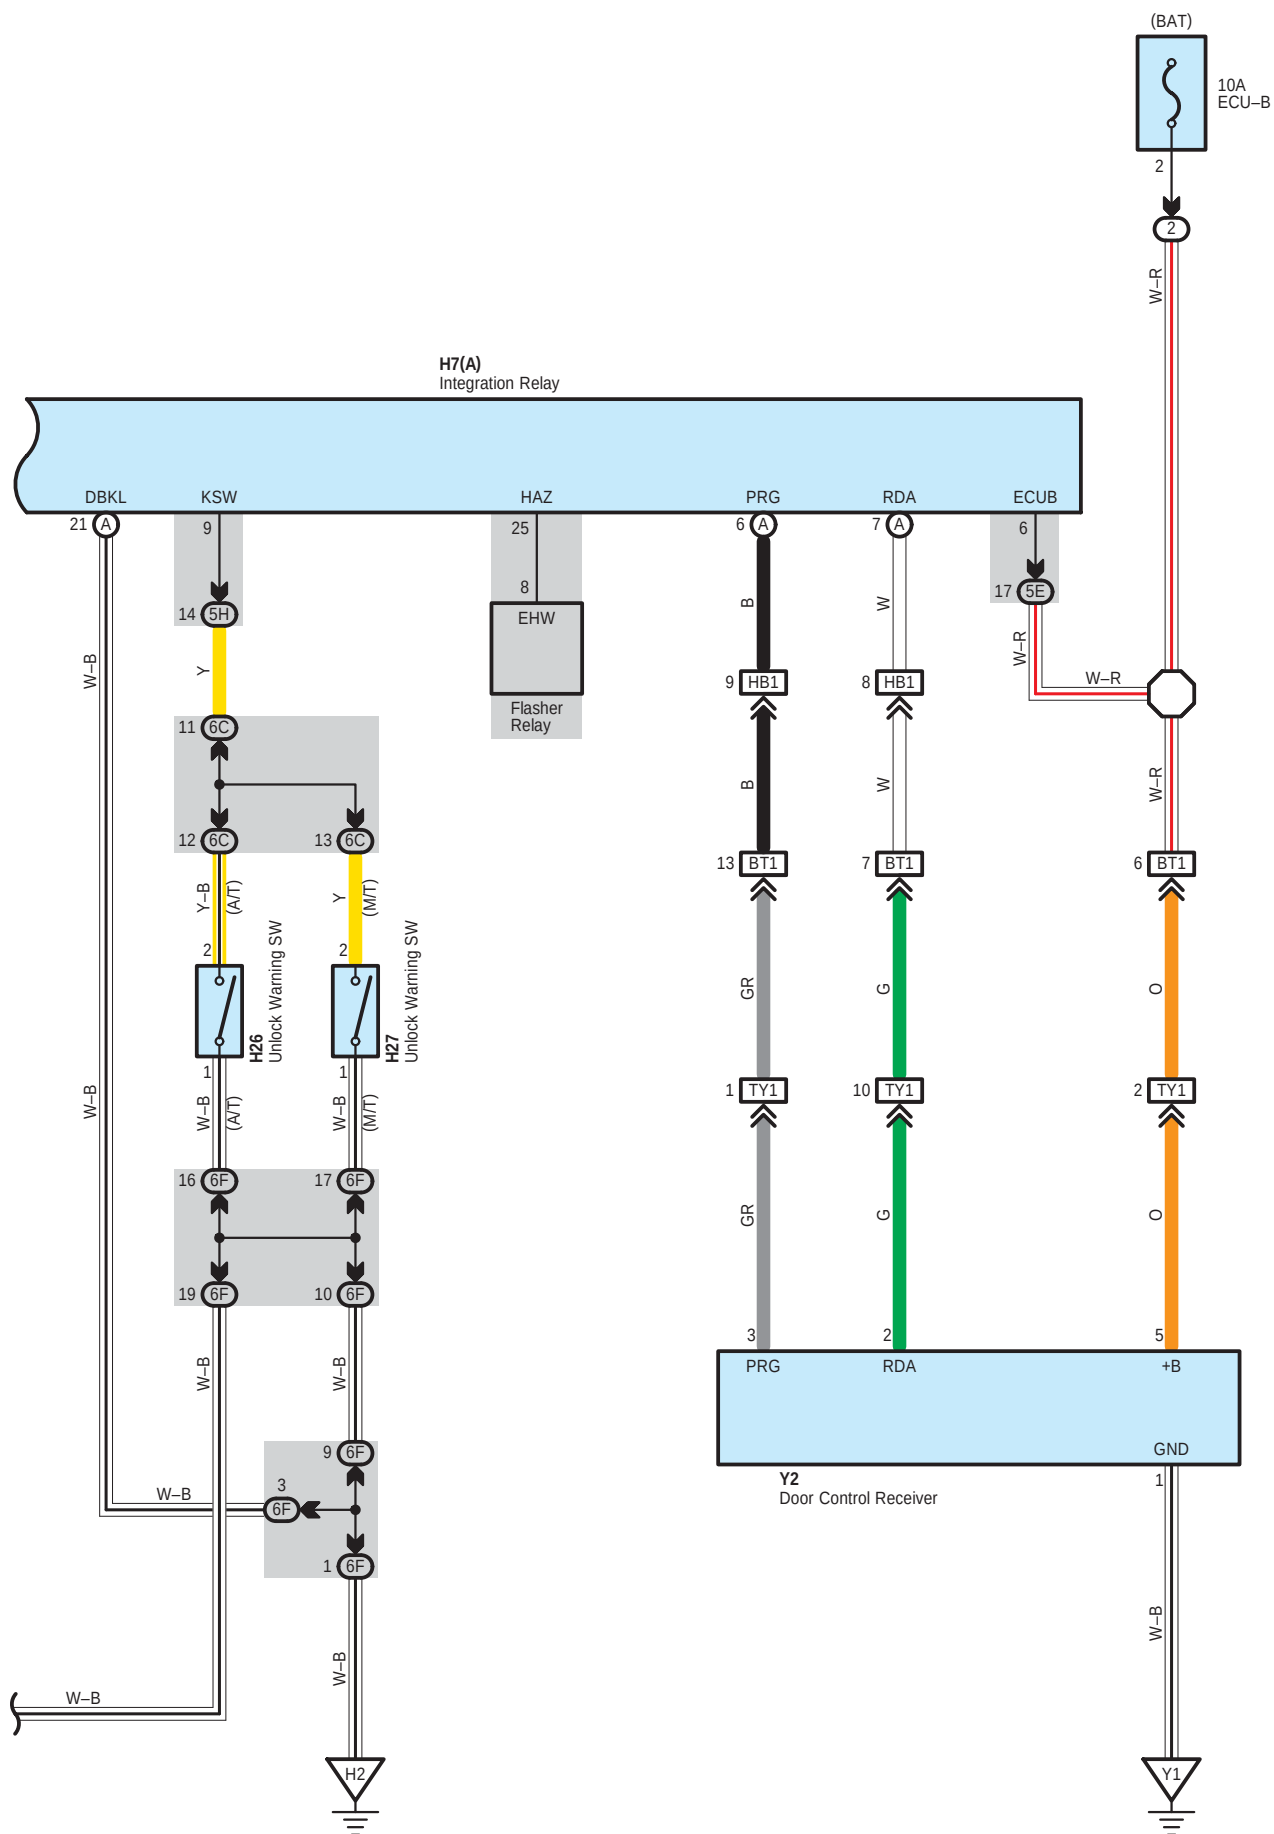

Wireless Door Lock Control (LHD)

System Outline

Door lock control (Lock and unlock) is performed by remote control, without the ignition key inserted in the door key cylinder, using low-power electrical waves emitted by a transmitter.

1. Normal Operation

* Lock operation

When the lock button on the transmitter is pressed, all the doors are locked.

* Unlock operation

When the unlock button on the transmitter is pressed, all the doors are unlocked.

2. Visual Confirmation of Lock or Unlock

If all doors indicate that they are locked after the lock command, hazard lights will flash once. If any door indicates that it is open after the unlock command, hazard lights will flash twice.

3. Automatic Lock Operation

All the doors are automatically relocked unless any door is opened within 30 seconds after pushing the button (Transmitter) to unlock all the doors under conditions that the ignition key is not inserted into the ignition key cylinder (Unlock warning SW off), ignition SW is at OFF and all the doors are completely closed.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B22	50 (LHD)	L1	50 (LHD)	Y2	51 (LHD)
B26	50 (LHD)	M1	50 (LHD)	Y3	51 (LHD)
H7	A	N1	50 (LHD)	a1	51 (LHD)
H26	49 (LHD)	T6	50 (LHD)	a2	51 (LHD)
H27	49 (LHD)	T9	50 (LHD)	a3	51 (LHD)
H41	49 (LHD)	T17	50 (LHD)		
K1	50 (LHD)	X2	51 (LHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5A	30	Roof Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5B	30	Cowl to Head Lamp Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
6C	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
6F		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BT1	64 (LHD)	Engine Room Main Wire and Roof Wire (Cowl Side Panel LH)
HA1	64 (LHD)	Instrument Panel Wire and Cowl to Head Lamp Wire (Under the Instrument Panel J/B)
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
HH1	64 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Near the Steering Column)
KA2	65 (LHD)	Front Door RH Wire and Cowl to Head Lamp Wire (Right Kick Panel)
KA3		
LA2	65 (LHD)	Front Door LH Wire and Cowl to Head Lamp Wire (Left Kick Panel)
LA3		
MB1	60 (*1)	Pillar No.1 Wire and Engine Room Main Wire (RH Side Battery Room)
	61 (*2)	
NB1	60 (*1)	Pillar No.2 Wire and Engine Room Main Wire (LH Side Battery Room)
	61 (*2)	
TU1	66 (LHD)	Roof Wire and Roof No.2 Wire (Rear of the Left Side of the Roof Panel)
TU2		
TY1	66 (LHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
UX1	66 (LHD)	Roof No.2 Wire and Luggage Room No.2 Wire (Right Quarter Panel)
ZU1	66 (LHD)	Back Door No.1 Wire and Roof No.2 Wire (Rear of the Right Side of the Roof Panel)
Za1	66 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Right Side of Back Door)

 : Ground Points

Code	See Page	Ground Points Location
B3	60 (*1)	Front Floor Panel Left
	61 (*2)	
H1	64 (LHD)	Instrument Panel Reinforcement
H2		
Y1	66 (LHD)	Left Quarter Panel
a1	66 (LHD)	Back Door Right

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
* 8 : 2KD-FTV, 5L-E