


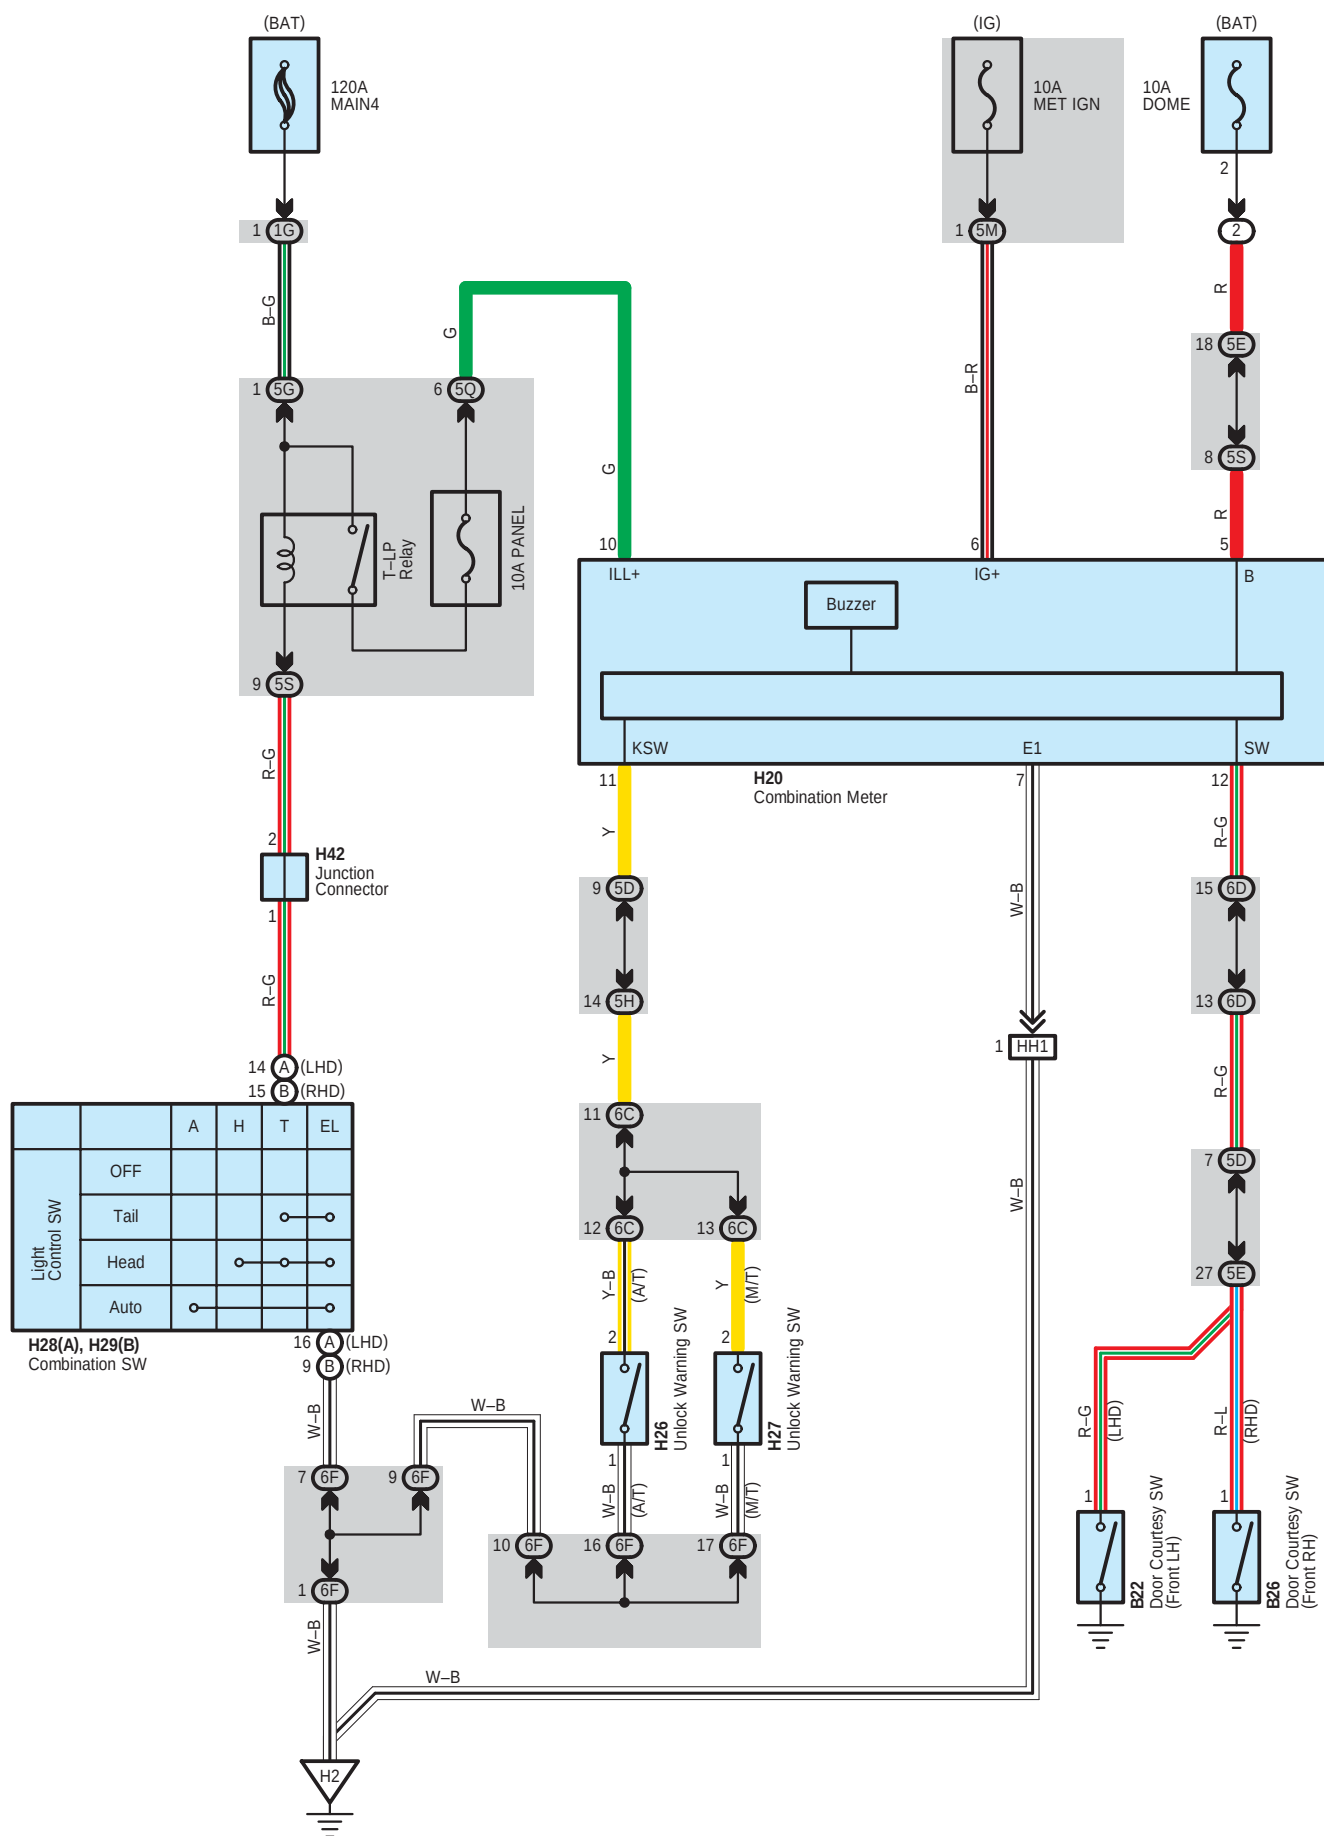

System Outline

The current is applied at all times to TERMINAL 5 of the combination meter through the DOME fuse.

When the ignition SW is turned to ON position, the current flows to TERMINAL 6 of the combination meter through the MET IGN fuse. When the light control SW is turned to TAIL or HEAD position, current is applied to TERMINAL 10 of the combination meter through the PANEL fuse.

1. Key Reminder System

When the driver door is opened with the ignition SW off and ignition key remaining in the key cylinder (Unlock warning SW on), a signal is input from the unlock warning SW to TERMINAL 11 of the combination meter, and from the door courtesy SW (Driver's side) to TERMINAL 12 of the combination meter. As a result, the buzzer in the combination meter goes on and warns the driver that the key is remaining in the key cylinder.

2. Light Reminder System

When the light control SW is in TAIL or HEAD position, the ignition SW turned to OFF from ON position, ignition key is not in the key cylinder and the driver's door opened (Door courtesy SW on), the current flows to TERMINAL 6 of the combination meter stops. As a result, the combination meter is activated and current flows from TERMINAL 5 of the combination meter, the buzzer in the combination meter goes on to remind the light is lighting up.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B22	50 (LHD)	H26	49 (LHD)	H28	A
B26	58 (RHD)		57 (RHD)	H29	B
H20	49 (LHD)	H27	49 (LHD)	H42	49 (LHD)
	57 (RHD)		57 (RHD)		57 (RHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
5D	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5G		
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
5Q		
5S		
6C	38 (LHD)	
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6D	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6F	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HH1	64 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Near the Steering Column)
	72 (RHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)

▽ : Ground Points

Code	See Page	Ground Points Location
H2	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	