


Seat Belt Warning

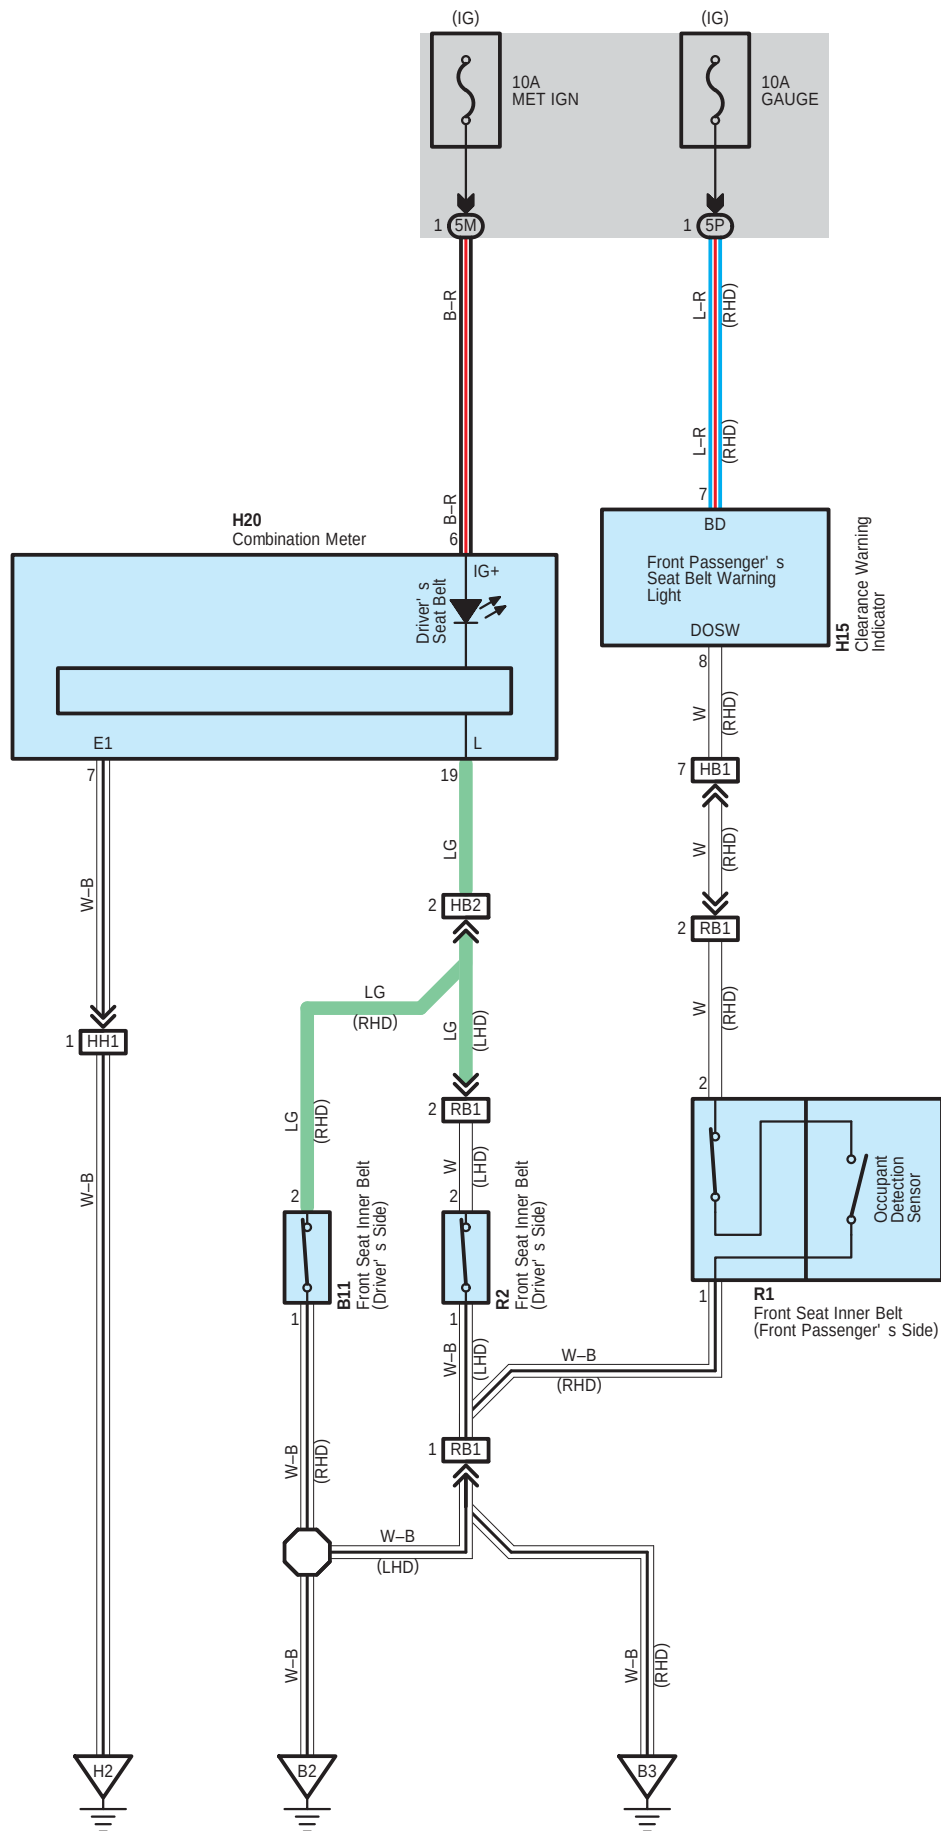

System Outline

When the ignition SW is turned to ON position, the current from the MET IGN fuse flows to TERMINAL 6 of the combination meter.

Seat Belt Warning System

When the ignition SW turned on, a signal is input to the combination meter. To determine whether the driver has fastened the seat belt, a signal is input from the front seat inner belt (Driver's side) to TERMINAL 19 of the combination meter. When the seat belt is not fastened, the driver's seat belt warning light in the combination meter blinks.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B11	52 (*4)	H20	49 (LHD)	R2	50 (LHD)
	53 (*5)		57 (RHD)		
H15	57 (RHD)	R1	58 (RHD)		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5M	31	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5P		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB2	64 (LHD)	
	72 (RHD)	
HH1	64 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Near the Steering Column)
	72 (RHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
RB1	66 (LHD)	Seat No.2 Wire and Engine Room Main Wire (Center Pillar LH)
	74 (RHD)	

▽ : Ground Points

Code	See Page	Ground Points Location
B2	60 (*1)	Front Floor Panel Right
	61 (*2)	
	68 (*4)	
	69 (*5)	
B3	68 (*4)	Front Floor Panel Left
	69 (*5)	
H2	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E