


Remote Control Mirror

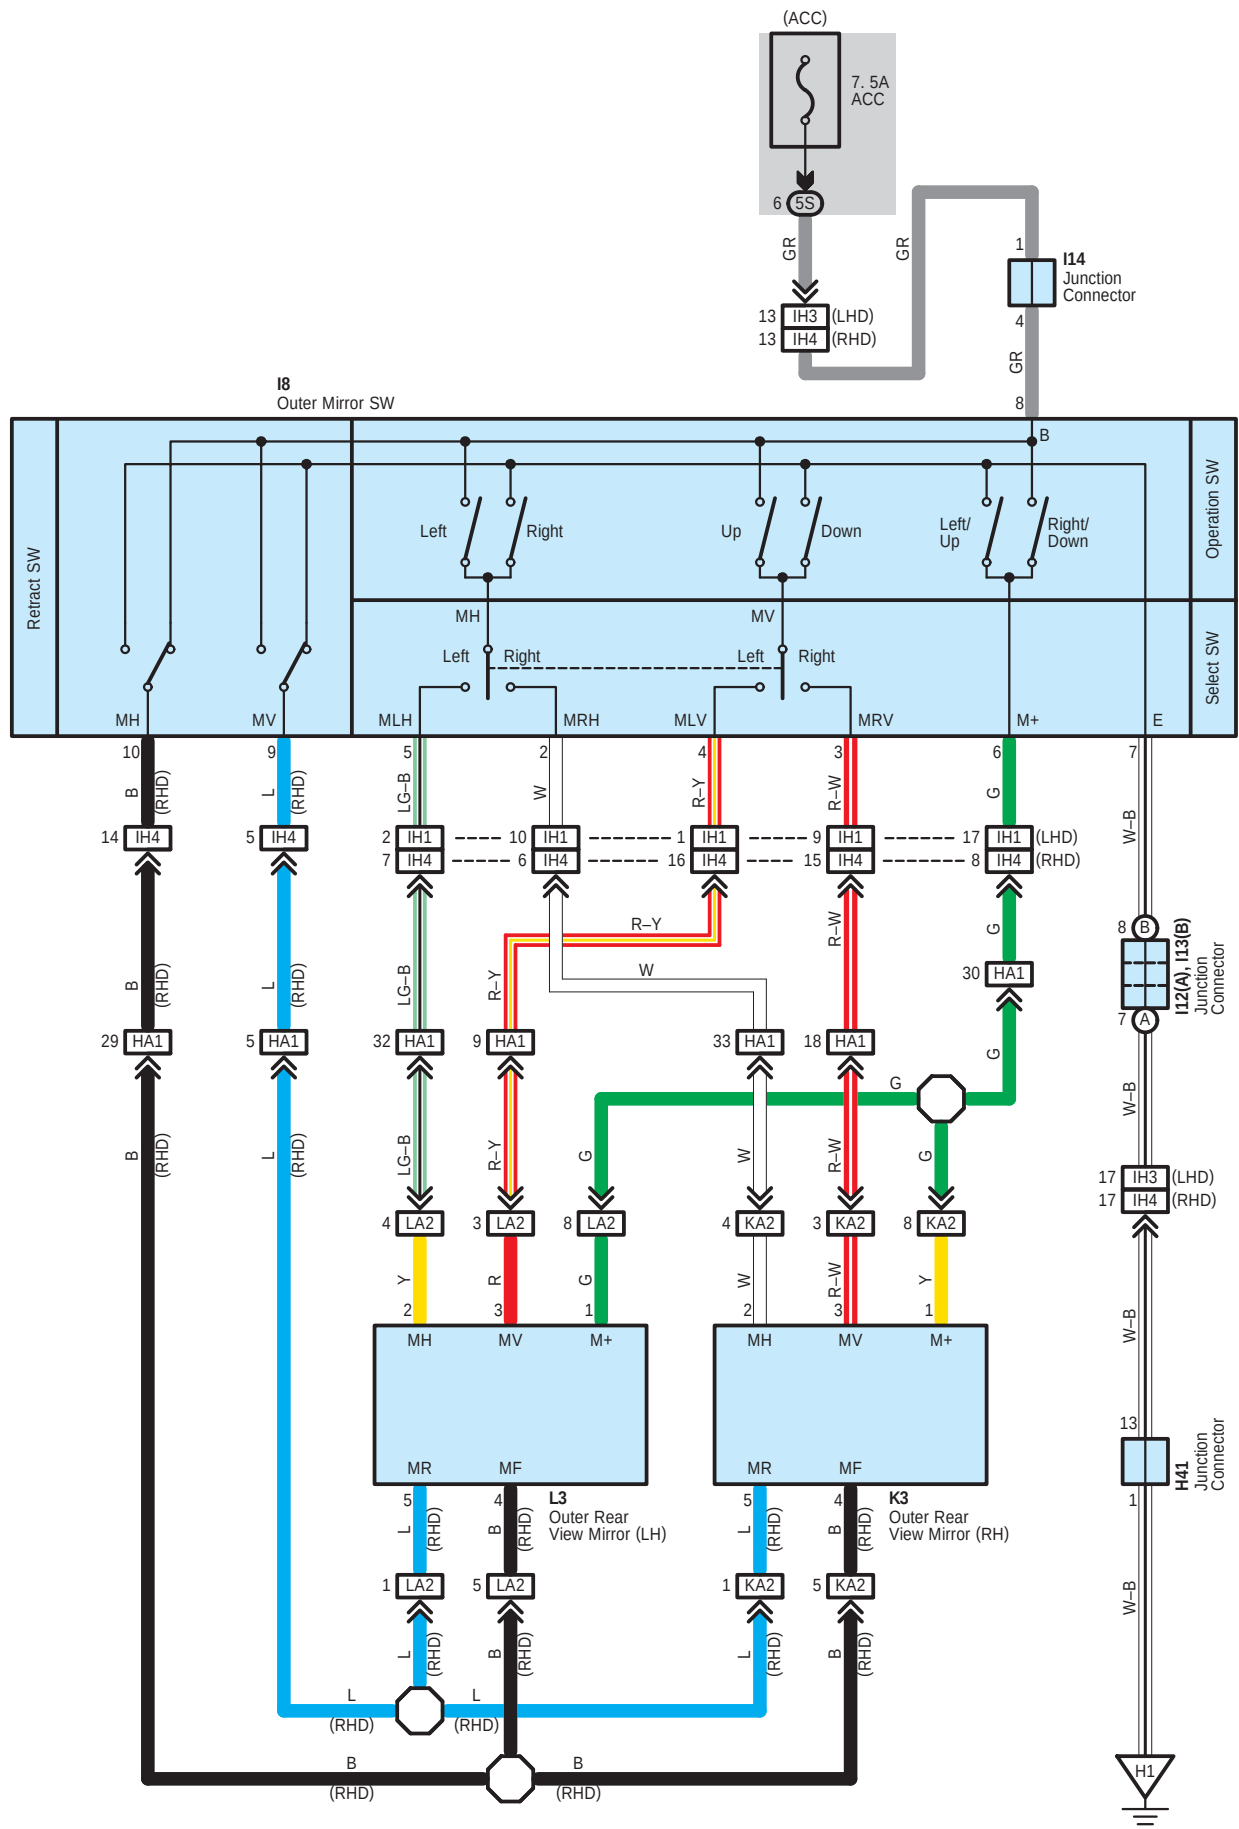

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
H41	49 (LHD)	I12	A	56 (RHD)	K3
	57 (RHD)	I13	B	48 (LHD)	
I8	48 (LHD)			56 (RHD)	L3
	56 (RHD)	I14		48 (LHD)	
I12	A			56 (RHD)	

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5S	31	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HA1	64 (LHD)	Instrument Panel Wire and Cowl to Head Lamp Wire (Under the Instrument Panel J/B)
	72 (RHD)	
IH1	64 (LHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IH3	64 (LHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IH4	72 (RHD)	
KA2	65 (LHD)	Front Door RH Wire and Cowl to Head Lamp Wire (Right Kick Panel)
	73 (RHD)	
LA2	65 (LHD)	Front Door LH Wire and Cowl to Head Lamp Wire (Left Kick Panel)
	73 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
H1	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	