


Rear Window Defogger

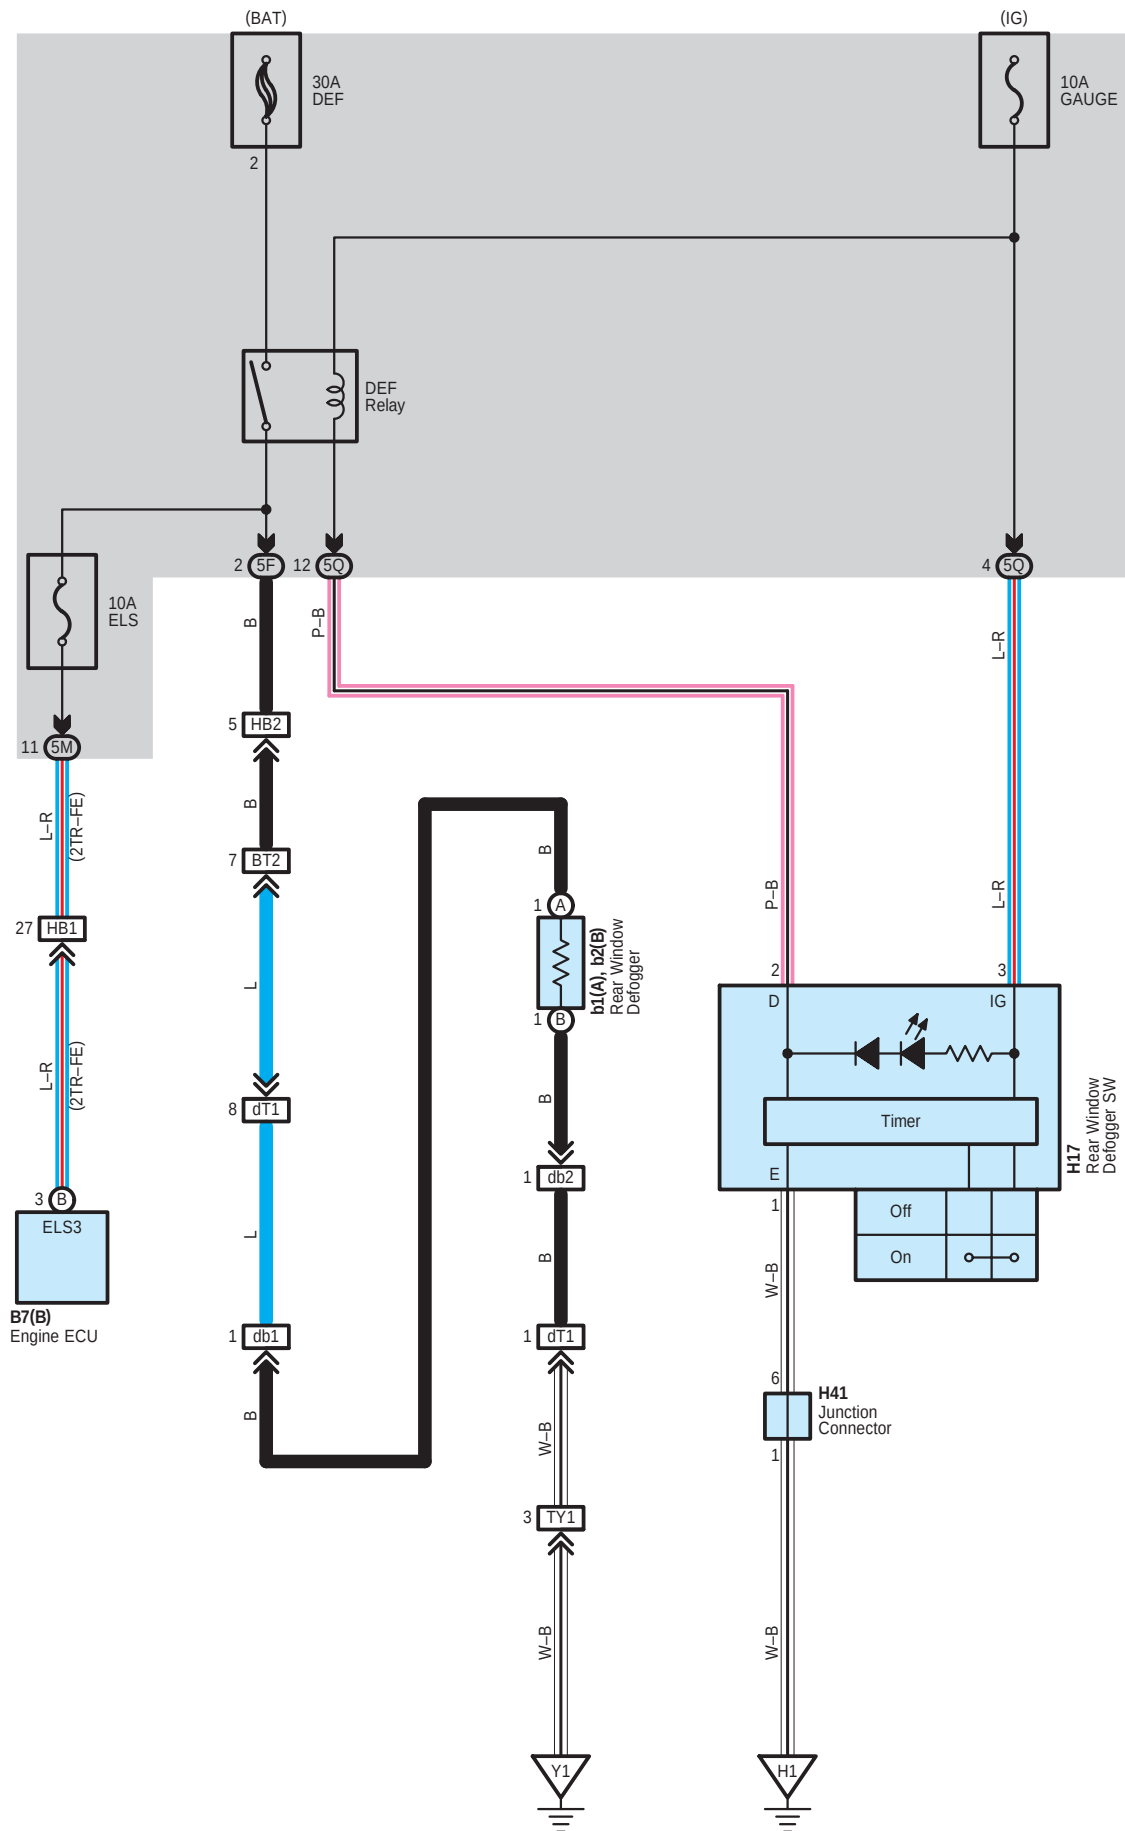

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
B7	B	44 (*1)	H41		49 (LHD)	b2	B	51 (LHD)
		52 (*4)			57 (RHD)			59 (RHD)
H17		49 (LHD)	b1	A	51 (LHD)			
		57 (RHD)			59 (RHD)			

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5F	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
5Q		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BT2	64 (LHD)	Engine Room Main Wire and Roof Wire (Cowl Side Panel LH)
	72 (RHD)	
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB2	64 (LHD)	
	72 (RHD)	
TY1	66 (LHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
	74 (RHD)	
dT1	66 (LHD)	Back Door No.3 Wire and Roof Wire (Rear of the Left Side of the Roof Panel)
	74 (RHD)	
db1	66 (LHD)	Back Door No.3 Wire and Rear Window No.1 Wire (Near the Center Stop Lamp)
	74 (RHD)	
db2	66 (LHD)	Back Door No.3 Wire and Rear Window No.1 Wire (Near the Rear Wiper Motor)
	74 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
H1	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	
Y1	66 (LHD)	Left Quarter Panel
	74 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E