



 : Parts Location

Code		See Page	Code	See Page	Code	See Page
I1	B	48 (LHD)	I14	48 (LHD)	T10	50 (LHD)
		56 (RHD)		56 (RHD)	T11	50 (LHD)
I2	A	48 (LHD)	K2	50 (LHD)	X1	51 (LHD)
		56 (RHD)		58 (RHD)		59 (RHD)
I11		48 (LHD)	L2	50 (LHD)	Y1	51 (LHD)
		56 (RHD)		58 (RHD)		59 (RHD)

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5S	31	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BT2	64 (LHD)	Engine Room Main Wire and Roof Wire (Cowl Side Panel LH)
	72 (RHD)	
HA2	64 (LHD)	Instrument Panel Wire and Cowl to Head Lamp Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
IH1	64 (LHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
	72 (RHD)	
IH3	64 (LHD)	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IH4	72 (RHD)	
KA3	65 (LHD)	Front Door RH Wire and Cowl to Head Lamp Wire (Right Kick Panel)
	73 (RHD)	
LA3	65 (LHD)	Front Door LH Wire and Cowl to Head Lamp Wire (Left Kick Panel)
	73 (RHD)	
TU2	66 (LHD)	Roof Wire and Roof No.2 Wire (Rear of the Left Side of the Roof Panel)
	74 (RHD)	
TY1	66 (LHD)	Roof Wire and Luggage Room No.3 Wire (Left Quarter Panel)
	74 (RHD)	
UX1	66 (LHD)	Roof No.2 Wire and Luggage Room No.2 Wire (Right Quarter Panel)
	74 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
H2	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	