




Combination Meter and Clock

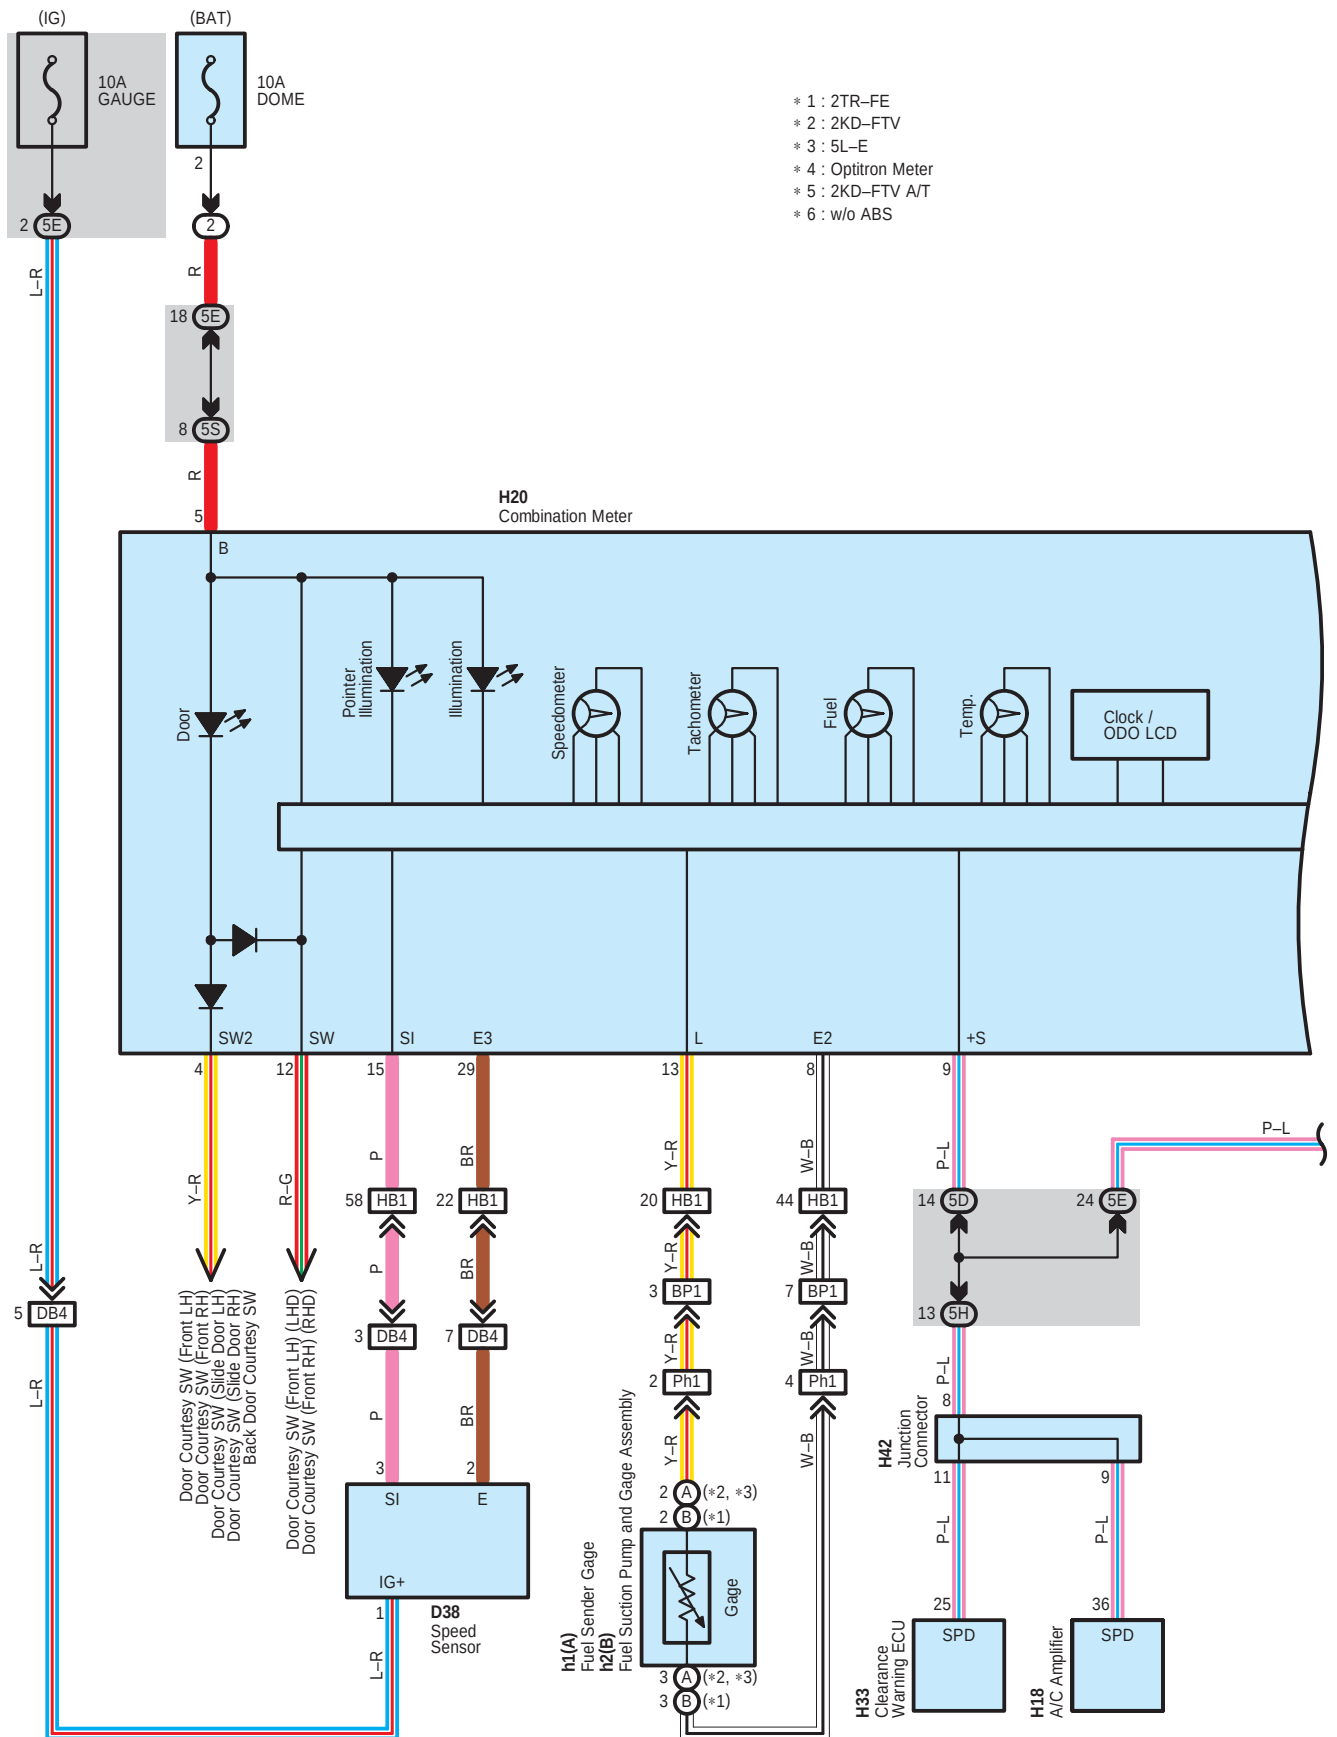

- * 1 : 2TR-FE
- * 2 : 2KD-FTV
- * 3 : 5L-E
- * 6 : w/o ABS

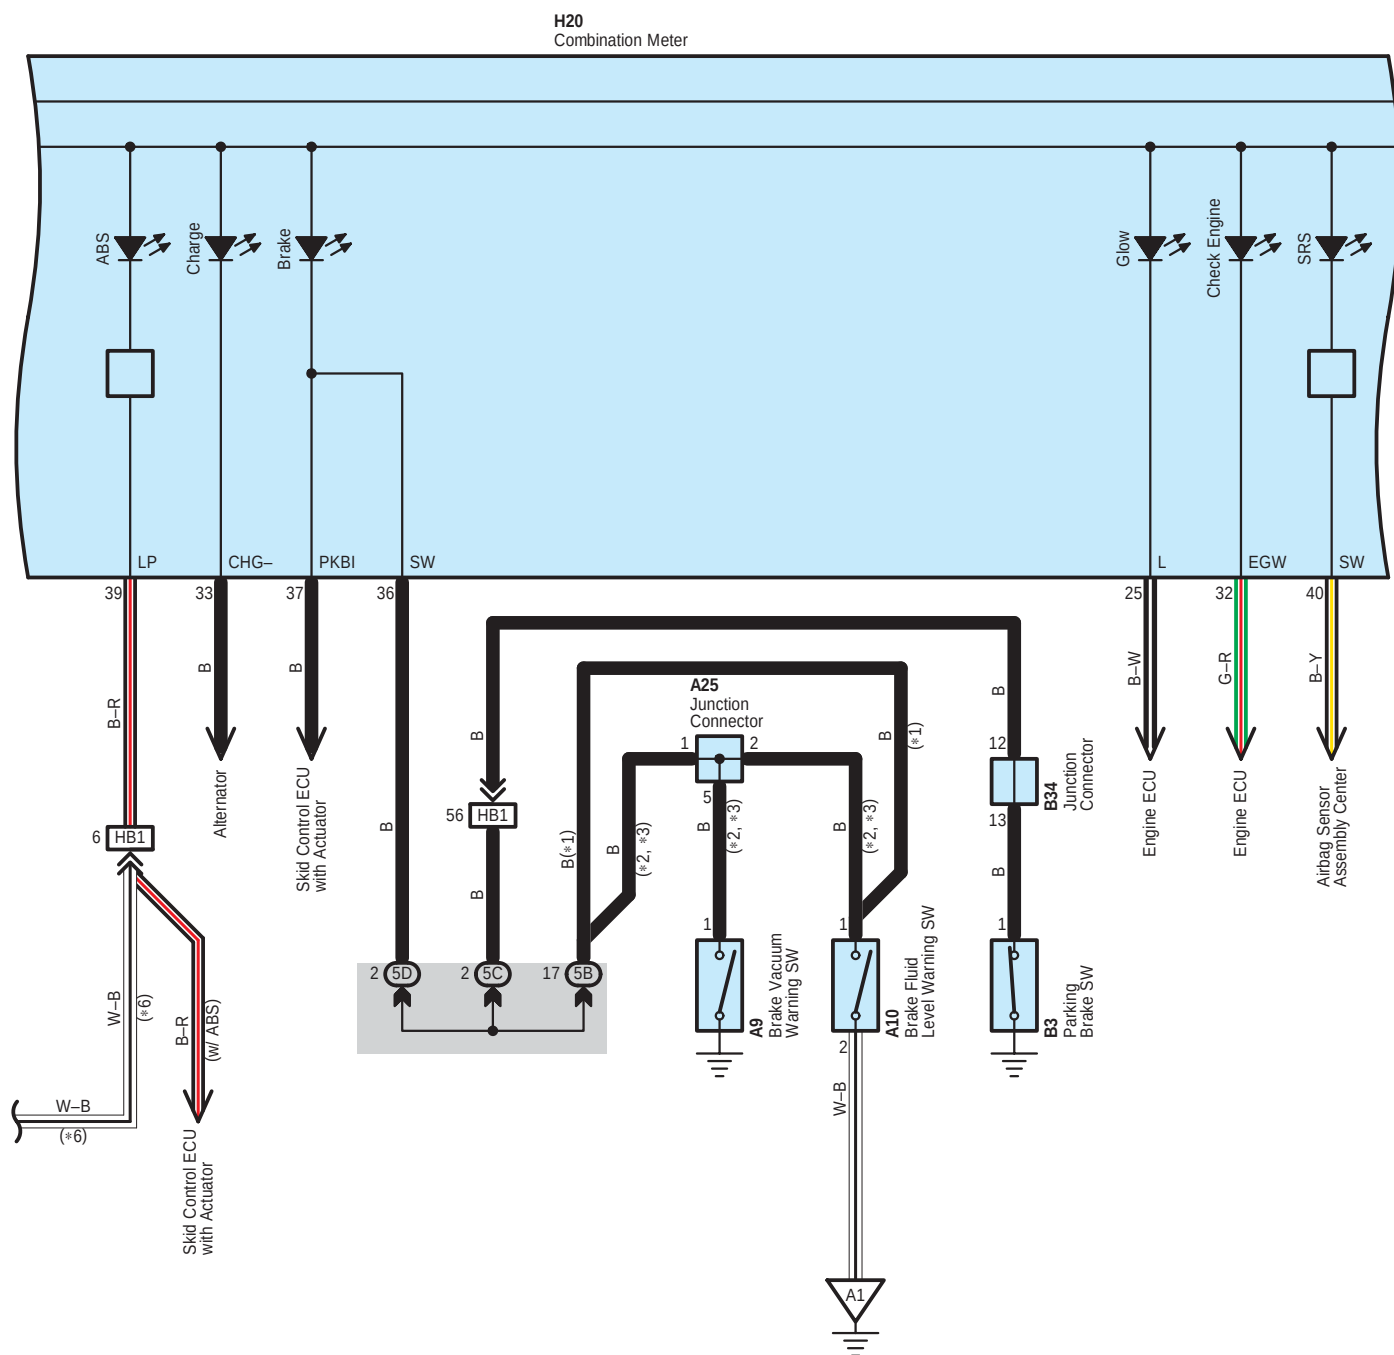

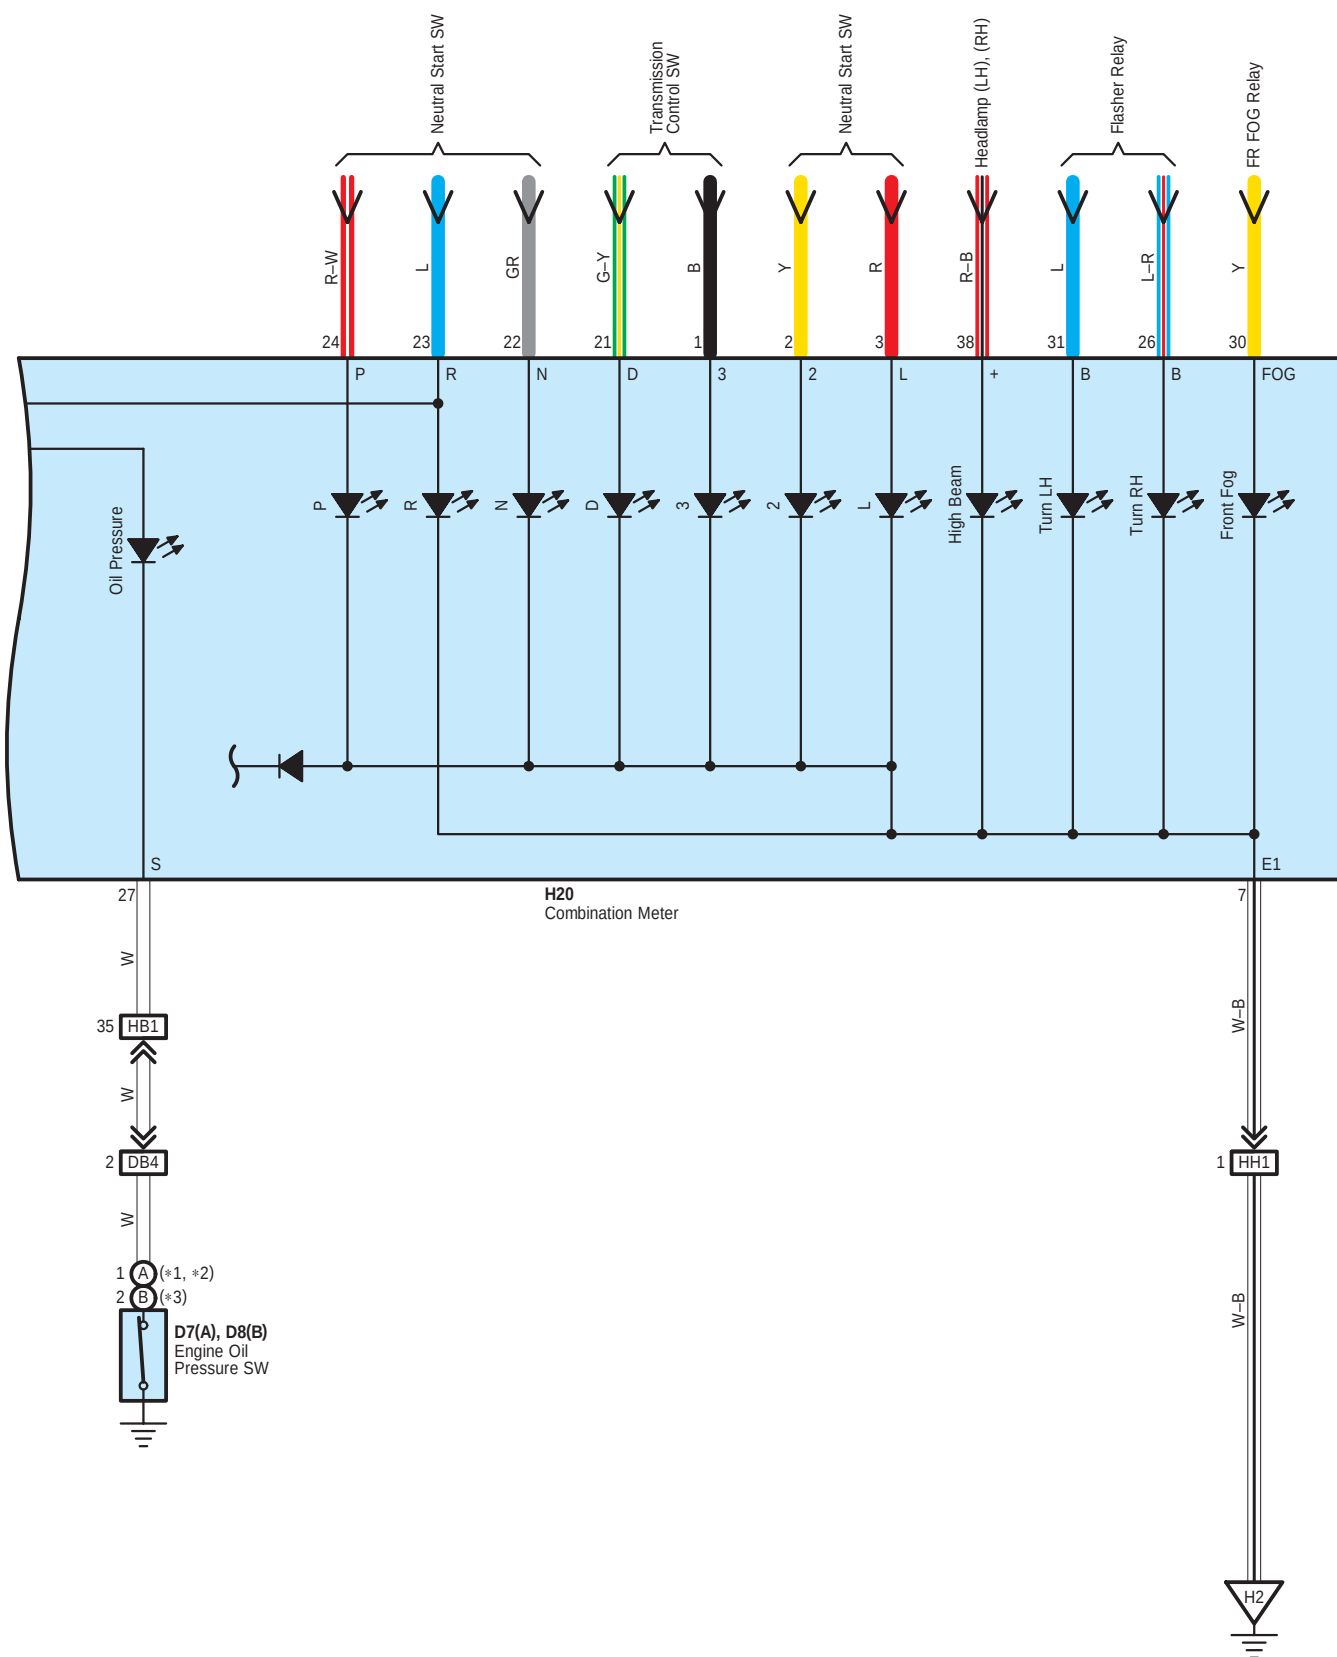

Combination Meter and Clock

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A9		48 (LHD)	B30		53 (*5)	D12	B	53 (*5)
		56 (RHD)			54 (*6)			54 (*6)
A10		48 (LHD)	B34		48 (LHD)	D38		44 (*1)
		56 (RHD)			56 (RHD)			45 (*2)
A25		48 (LHD)	B35		44 (*1)			46 (*3)
		56 (RHD)			45 (*2)			52 (*4)
B3		48 (LHD)			46 (*3)			53 (*5)
		56 (RHD)			52 (*4)			54 (*6)
B7	B	44 (*1)			53 (*5)	H18		49 (LHD)
		45 (*2)			54 (*6)			57 (RHD)
		52 (*4)	B36		45 (*2)	H20		49 (LHD)
		53 (*5)			46 (*3)			57 (RHD)
B8	F	46 (*3)			53 (*5)	H33		49 (LHD)
		54 (*6)			54 (*6)			57 (RHD)
B9	A	45 (*2)	D7	A	44 (*1)	H42		49 (LHD)
		53 (*5)			45 (*2)			57 (RHD)
B10	E	46 (*3)			52 (*4)	O3	A	48 (LHD)
		54 (*6)			53 (*5)			56 (RHD)
B21		45 (*2)	D8	B	46 (*3)	h1	A	51 (LHD)
		46 (*3)			54 (*6)			59 (RHD)
		53 (*5)	D11	A	44 (*1)	h2	B	51 (LHD)
		54 (*6)			52 (*4)			59 (RHD)
B30		45 (*2)	D12	B	45 (*2)			
		46 (*3)			46 (*3)			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
5B	30	Cowl to Head Lamp Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5C	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5D		
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5G		
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	
5Q		
5S		
6C	38 (LHD)	
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BP1	66 (LHD)	Engine Room Main Wire and Frame Wire (Under the Floor Panel)
	74 (RHD)	
DB2	61 (*2)	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B No.1)
	69 (*5)	
DB4	60 (*1)	
	61 (*2)	
	62 (*3)	
	68 (*4)	
	69 (*5)	
	70 (*6)	
DO1	61 (*2)	Engine Wire and Floor Wire (Front Floor Panel Right)
	69 (*5)	
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB2	64 (LHD)	
	72 (RHD)	
HH1	64 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Near the Steering Column)
	72 (RHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
Ph1	66 (LHD)	Frame Wire and Fuel Tank Wire (Near the Fuel Tank)
	74 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
A1	64 (LHD)	Dash Panel Right
	72 (RHD)	
B2	60 (*1)	Front Floor Panel Right
	61 (*2)	
	62 (*3)	
	68 (*4)	
	69 (*5)	
	70 (*6)	
B3	60 (*1)	Front Floor Panel Left
	61 (*2)	
	62 (*3)	
	68 (*4)	
	69 (*5)	
	70 (*6)	
H2	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
* 8 : 2KD-FTV, 5L-E