




PTC Heater (2KD-FTV)

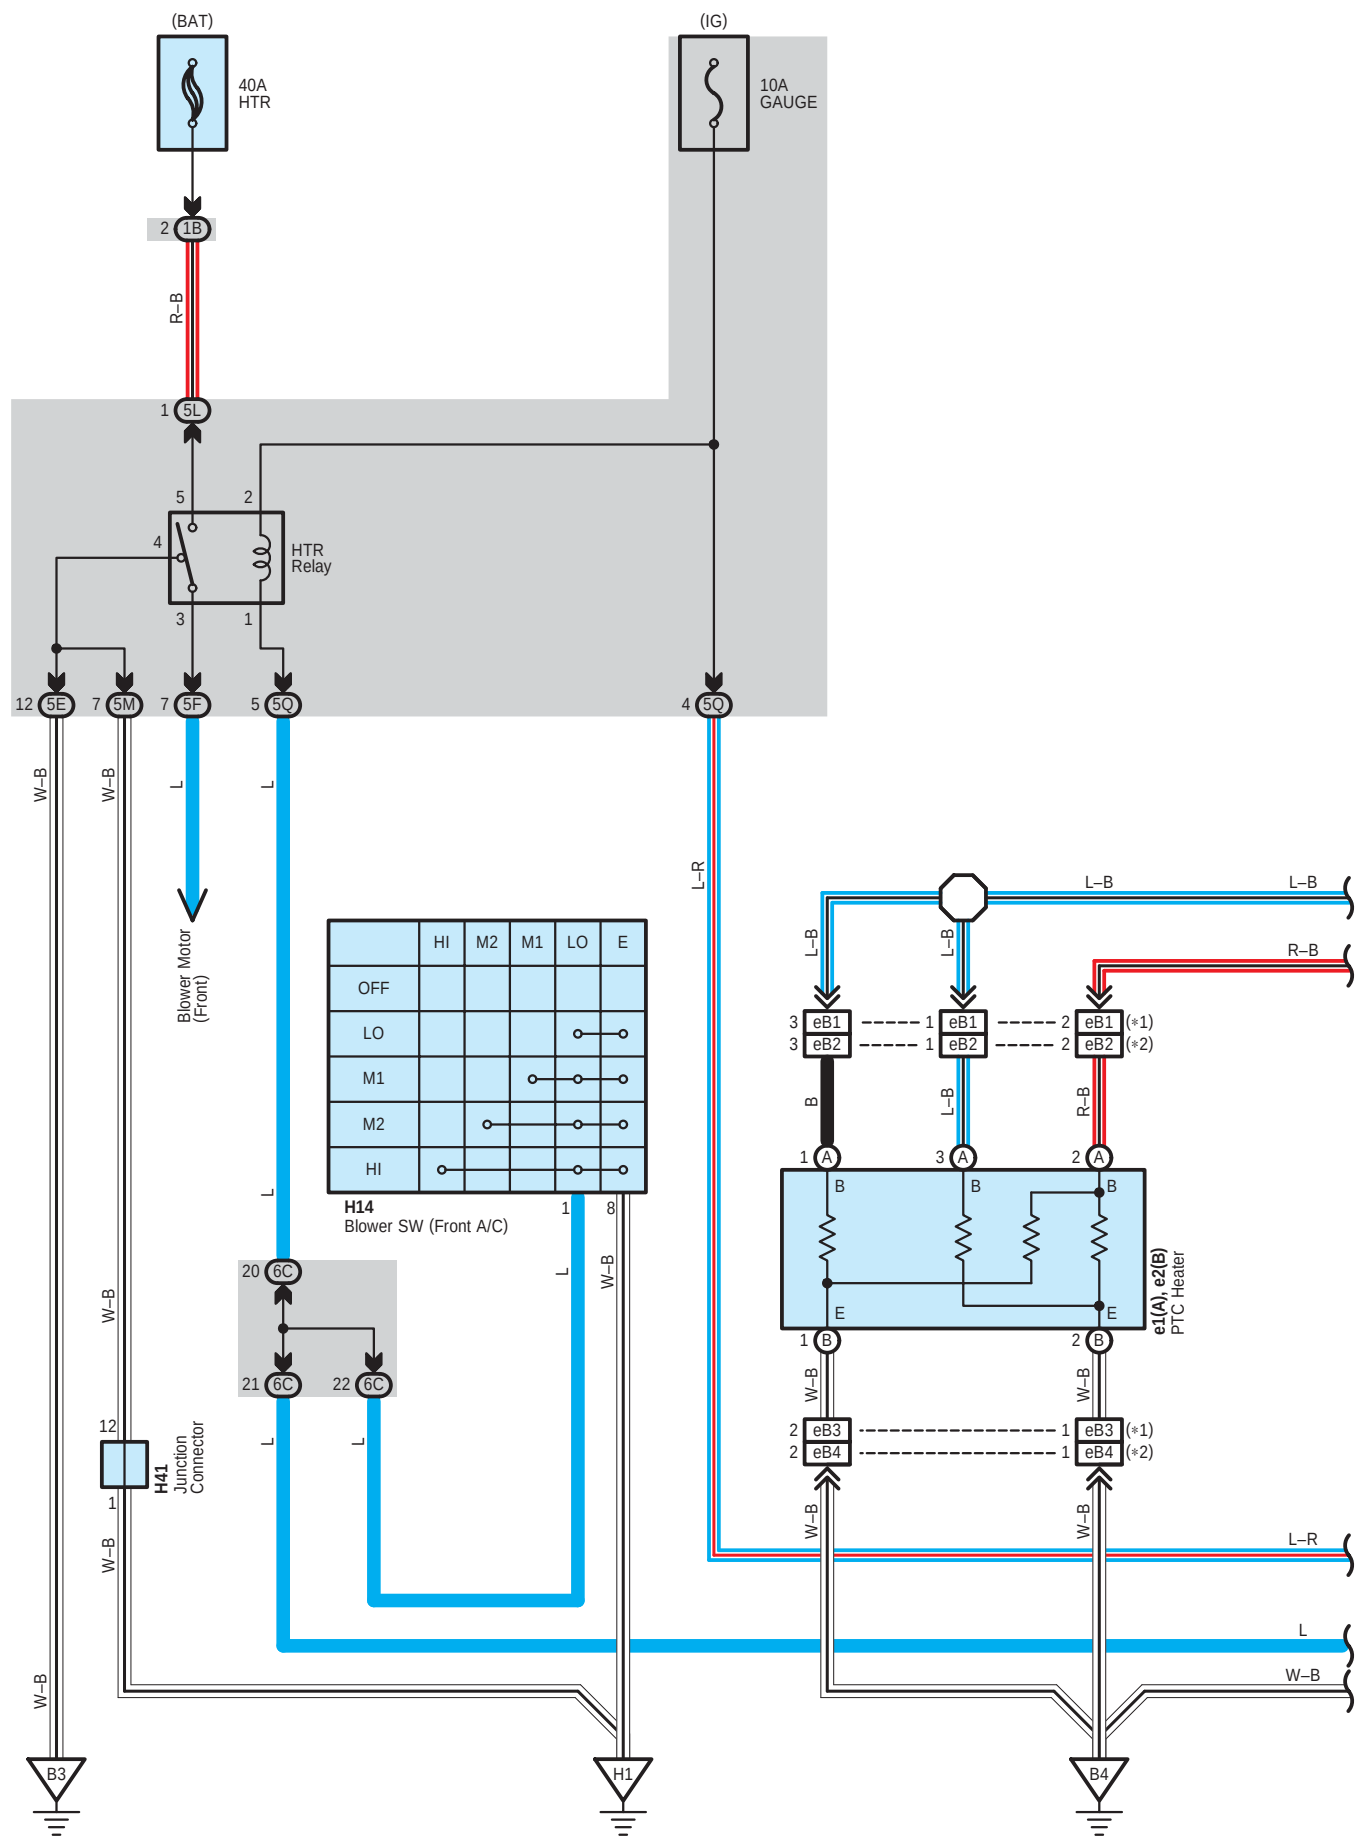

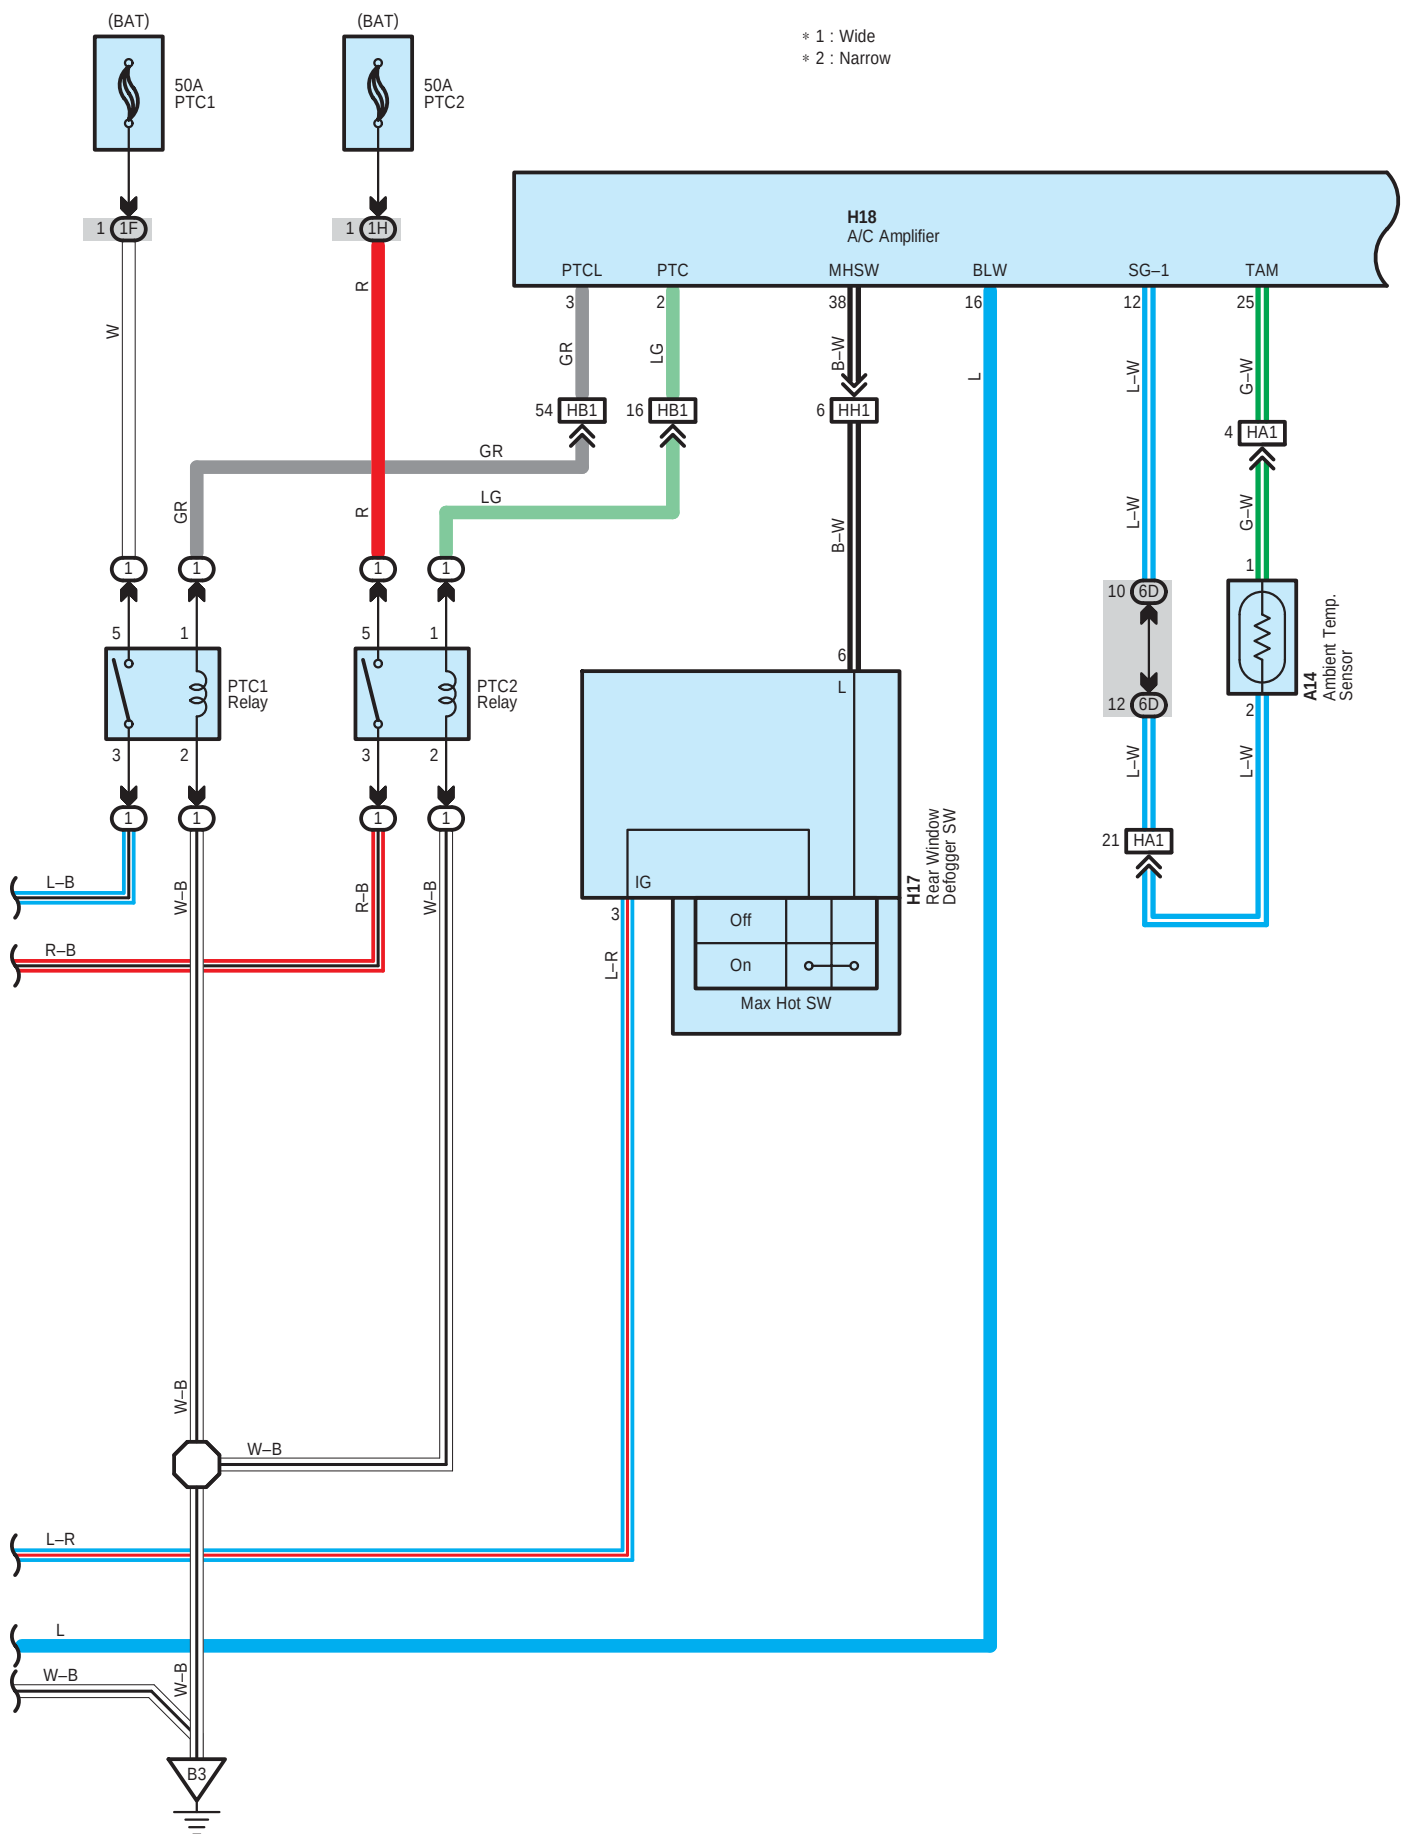

PTC Heater (2KD-FTV)

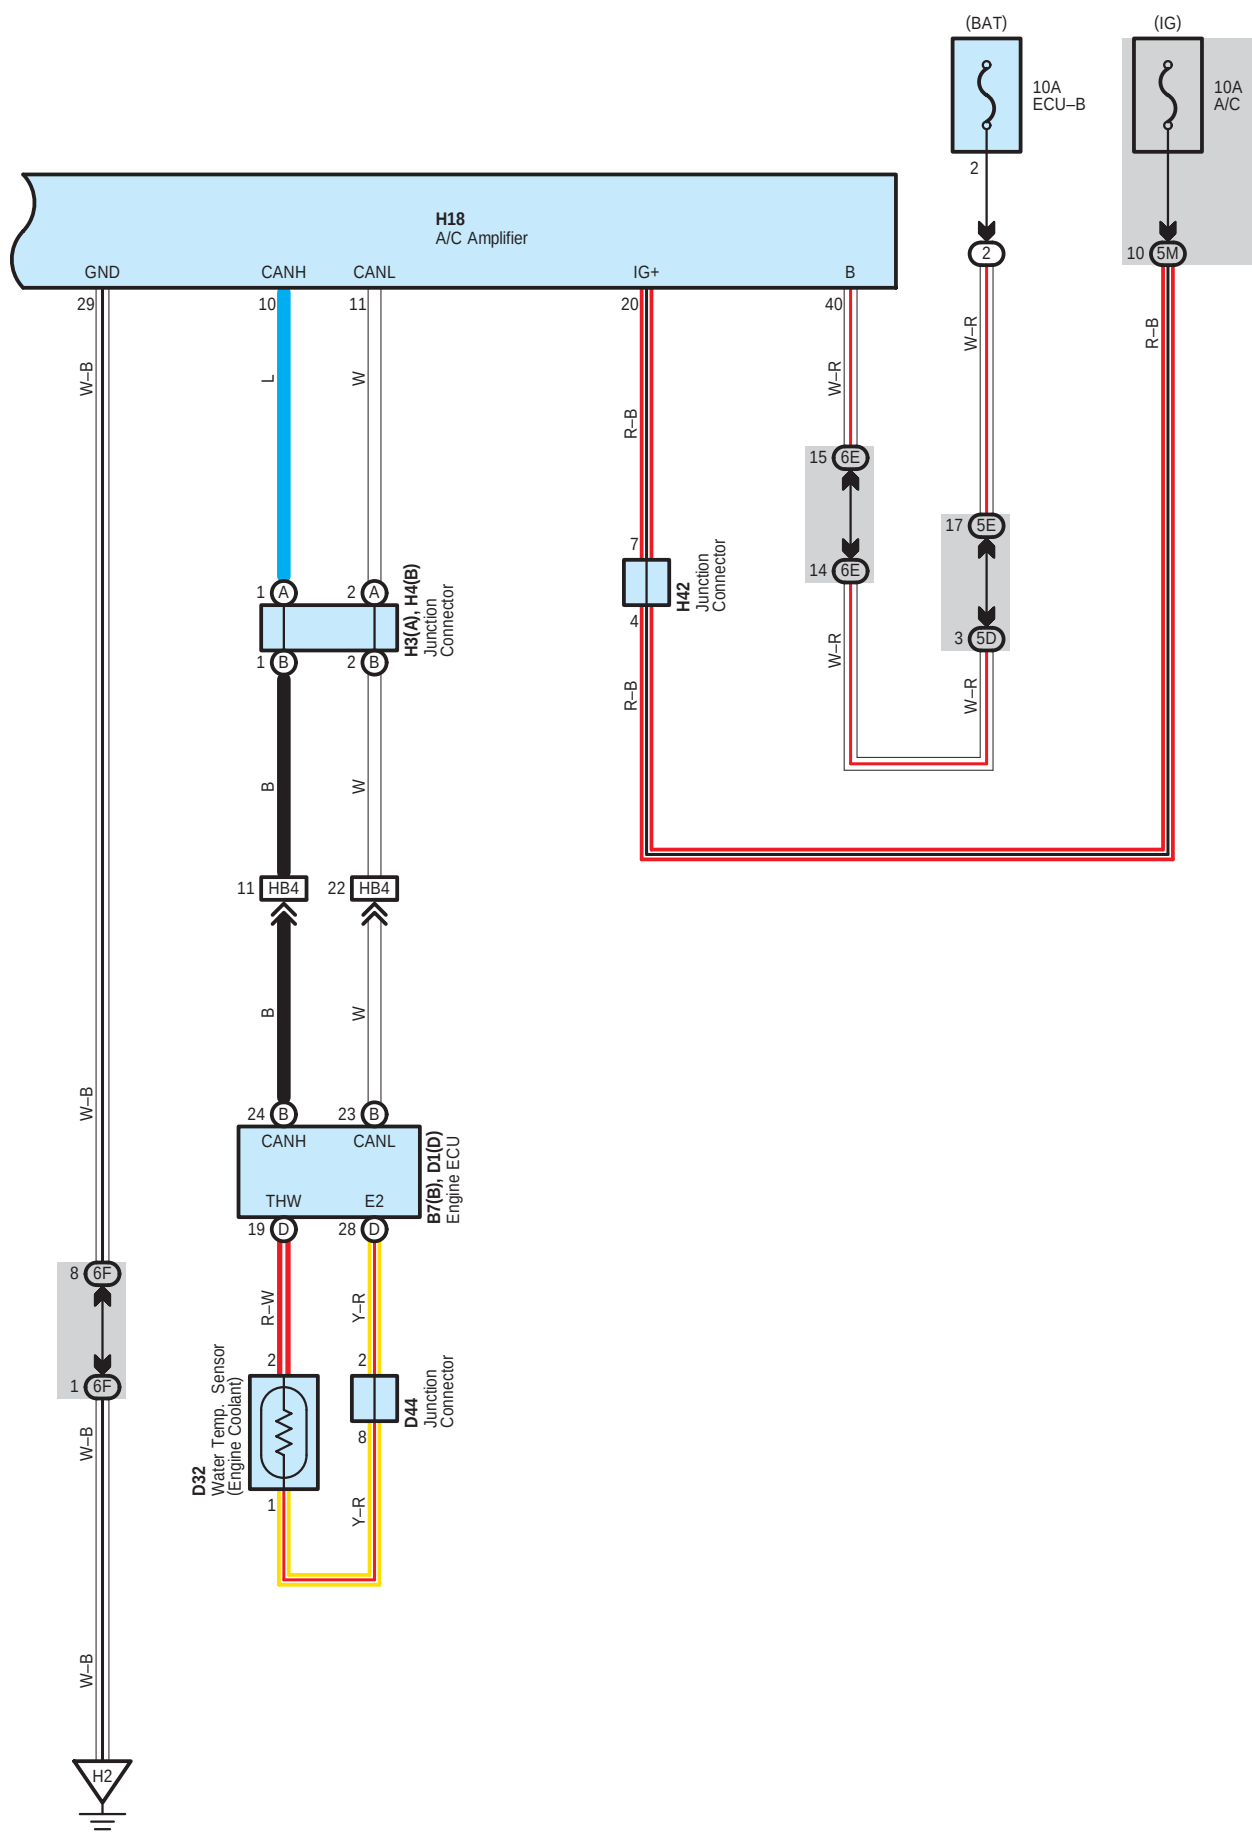

 : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A14		48 (LHD)		H3	A	42, 49 (LHD)		H41		49 (LHD)	
		56 (RHD)				42, 57 (RHD)				57 (RHD)	
B7	B	45 (*2)		H4	B	42, 49 (LHD)		H42		49 (LHD)	
		53 (*5)				42, 57 (RHD)				57 (RHD)	
D1	D	45 (*2)		H14		49 (LHD)		e1	A	48 (LHD)	
		53 (*5)				57 (RHD)				56 (RHD)	
D32		45 (*2)		H17		49 (LHD)		e2	B	48 (LHD)	
		53 (*5)				57 (RHD)				56 (RHD)	
D44		45 (*2)		H18		49 (LHD)					
		53 (*5)				57 (RHD)					

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23 (*8)	Engine Room R/B No.1 (Engine Compartment Front)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
1F		
1H		
5D	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5F	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5L	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5Q		
6C	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6D	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6E	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6F	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E

PTC Heater (2KD-FTV)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HA1	64 (LHD)	Instrument Panel Wire and Cowl to Head Lamp Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB4	64 (LHD)	
	72 (RHD)	
HH1	64 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Near the Steering Column)
	72 (RHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
eB1	65 (LHD)	Heater Wire and Engine Room Main Wire (Near the A/C Unit)
	73 (RHD)	
eB2	65 (LHD)	
	73 (RHD)	
eB3	65 (LHD)	
	73 (RHD)	
eB4	65 (LHD)	
	73 (RHD)	

: Ground Points

Code	See Page	Ground Points Location
B3	61 (*2)	Front Floor Panel Left
	69 (*5)	
B4	64 (LHD)	Cowl Side Panel LH
	72 (RHD)	
H1	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	
H2	64 (LHD)	
	72 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E

