


Charging (2TR-FE, 2KD-FTV)

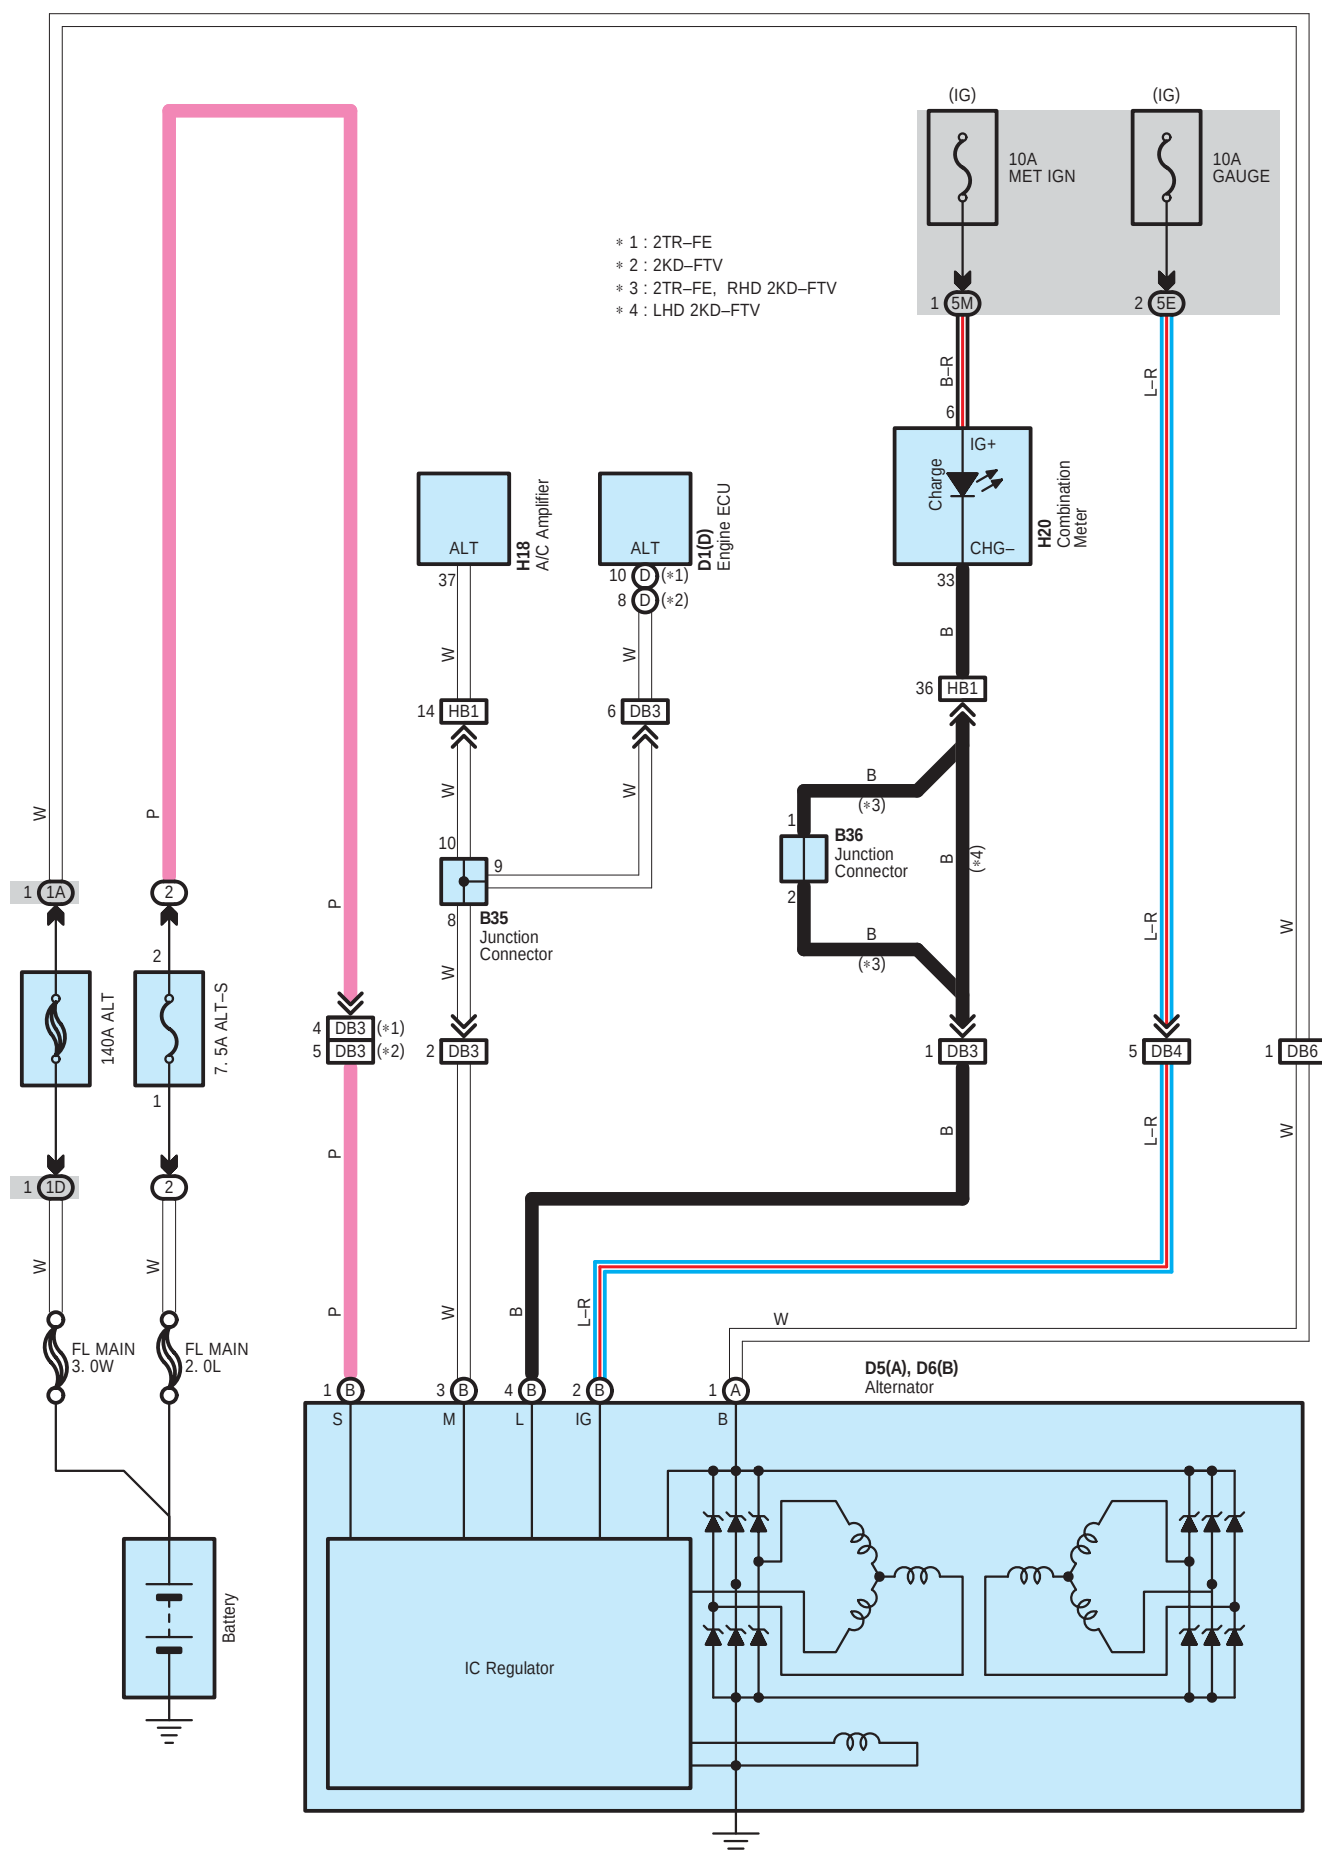

☐ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
B35		44 (*1)		D1	D	45 (*2)		D6	B	45 (*2)	
		45 (*2)				52 (*4)				52 (*4)	
		52 (*4)				53 (*5)				53 (*5)	
		53 (*5)									
B36		44 (*1)		D5	A	44 (*1)		H18		49 (LHD)	
		45 (*2)				57 (RHD)					
		52 (*4)				52 (*4)		H20		49 (LHD)	
		53 (*5)				53 (*5)				57 (RHD)	
D1	D	44 (*1)		D6	B	44 (*1)					

☐ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

☐ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
1D		
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)

☐ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
DB3	60 (*1)	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B No.1)
	61 (*2)	
	68 (*4)	
	69 (*5)	
DB4	60 (*1)	
	61 (*2)	
	68 (*4)	
	69 (*5)	
DB6	60 (*1)	
	61 (*2)	
	68 (*4)	
	69 (*5)	
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
* 8 : 2KD-FTV, 5L-E